



Electrical system

PARTS LIST

Parts list		Parts list		Parts list	
Ref.	Description	Ref.	Description	Ref.	Description
1	CPU	16	Solenoid	32	Instrument panel
2	Number plate light	17-18	Injectors	33	Air temperature/pressure sensor
3	Right indicator	19-20		21	34
4	Left indicator	21	Butterfly potentiometer	35	Horn
5	Diagnostic connector	22	Water temperature sensor – CPU	36	Water temperature sensor for instrument thermometer
6	Rear stop light	23	Oil switch	37	Light switch
7	Neutral switch	24	Electric fan	38	Frame/CPU earth
8-9	Battery	25	Fuses	39	Battery recharge
10	Fuel probe – pump	26	Side stand switch	40	Clutch switch
11	R.p.m. sensor	27	Rear stop switch	41	Starter motor
12	Coil	28	Ignition switch	42	Frame earth
13	Coil	29	Safety and Front stop switch	43	Engine earth
14	Alternator	30	Right indicator		
15	Speed sensor	31	Front headlight		

E

Wiring colour code	
Letter(s)	Colour
R	Red
Y	Yellow
B	Blue
G	Green
W	White
Bk	Black
P	Pink
V	Violet
Sb	Sky blue
Gr	Grey
O	Orange
Br	Brown

In combined colors, background and marking colors have been pointed out. E.g. : Br/Bk.

Fuses list		
Ref.	Amps (A)	Use
F1	5	Instrument panel warning light
F2	5	Side lights
F3	5	Speed sensor
F4	5	Right direction indicator
F5	5	Left direction indicator
F6	15	Electric cooling fan
F7	5	Rear headlight/stop light
F8	15	Latch relay
F9	7.5	Starter switch
F10	15	Dipped beam headlight
F11	5	Instrument panel clock
F12	15	Main beam headlight
F13	15	Injectors-Fuel pump-Coils
F14	40	Battery recharge
F15	40	Spare for battery recharge