

Eliminator Next Gen

Quick Start Guide

1.) Power

Press and hold the Right “STAGE” button to **turn on** the *Eliminator Next Gen*. From the Main Menu, press and hold the Right and Left “STAGE” buttons to **turn off** the *Eliminator Next Gen*. See Figure 1.

2.) Navigate Menus

Each multi-page menu in the *Eliminator Next Gen* is denoted by dots at the bottom of the screen. The number of dots indicates the number of pages in the menu. The “white” dot indicates which page of the menu is currently displayed. To change pages, **swipe** your finger across the screen from left to right or right to left. See Figure 2.



Figure 2 - Eliminator Next Gen Menu



Figure 1 - Eliminator Next Gen STAGE Buttons

3.) Quick Settings

From the Practice screen, press the “Left Lane” Settings or “Right Lane” Settings button to change: **Tree Type**, **Delay Box**, and **Roll Out**. Delay Box can also be changed by tapping the black box with green text at the bottom of the Practice screen.

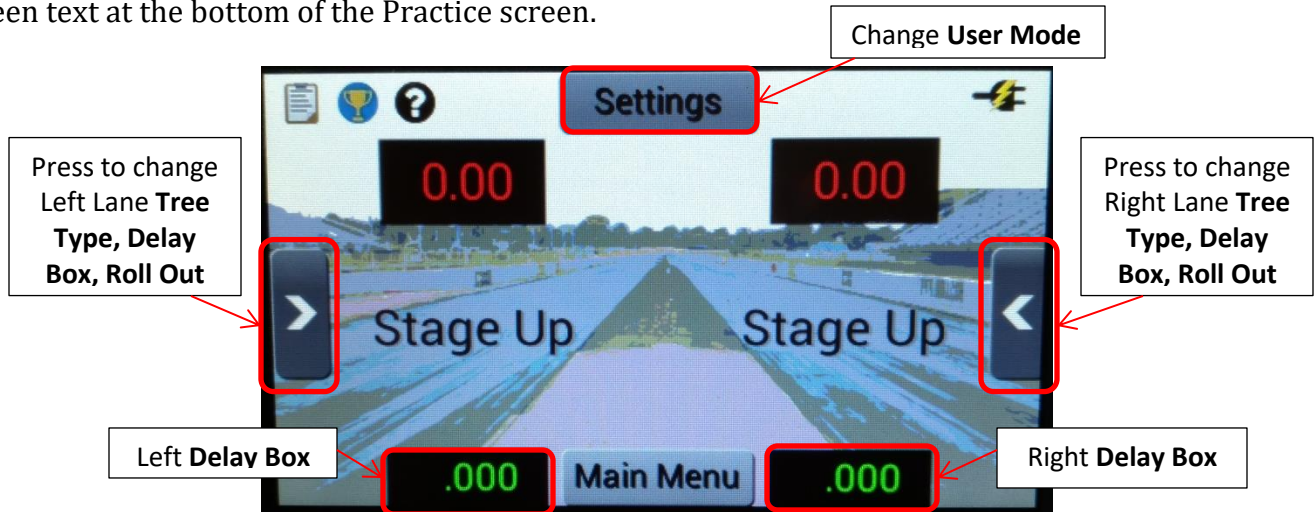


Figure 3 - Practice Mode Settings

From the Practice screen, press the “Settings” Button and swipe to page 2 to change between Dual and Single **User Mode**.

4.) Practice

In Practice Mode, press and hold the hand switches or STAGE buttons on the front of the Eliminator. Release after tree sequence to capture reaction time.