Wiring Diagram (ZX1200-B1 ~ B2: U.S.A. and Canada)

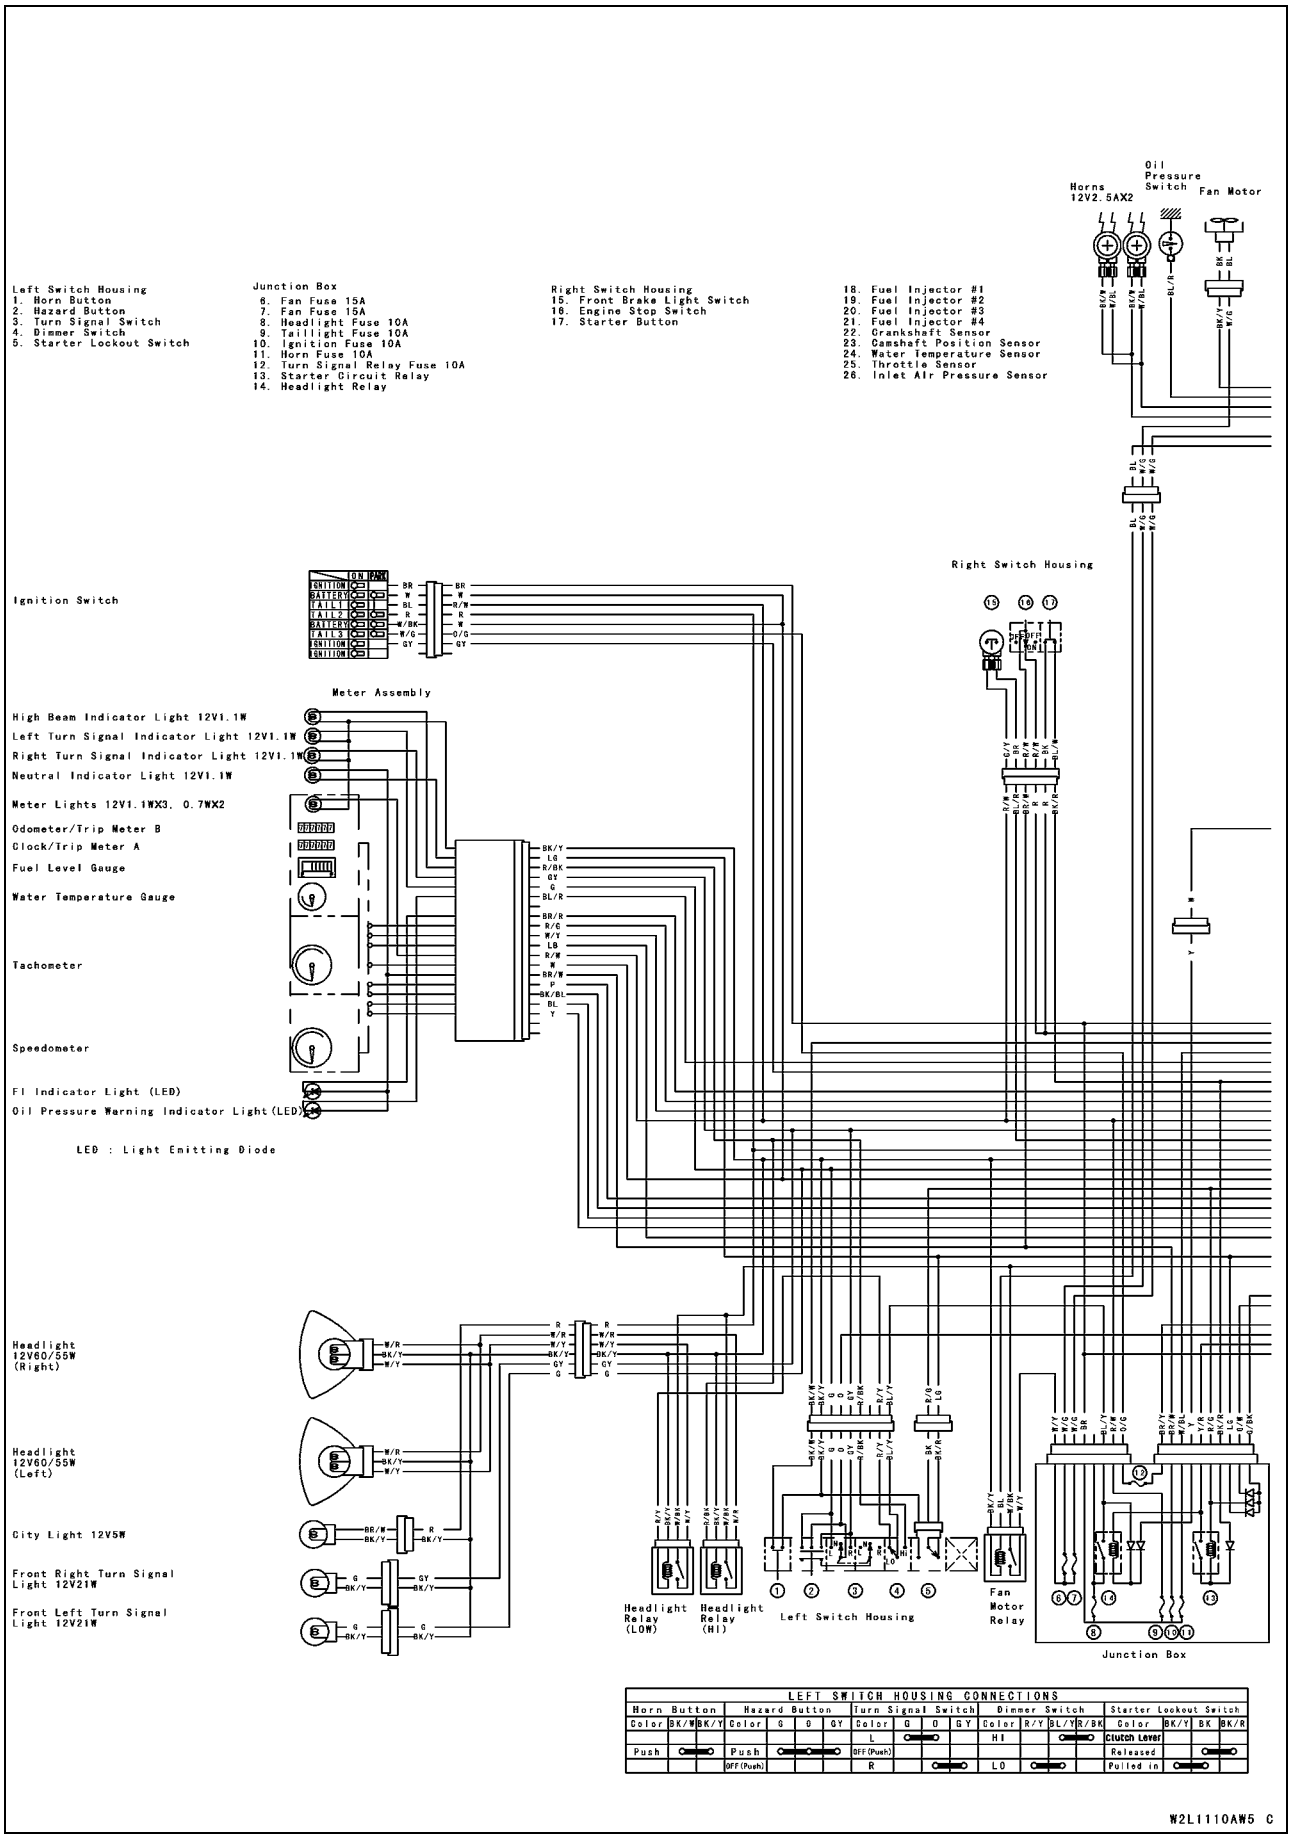

LEFT SWITCH HOUSING CONNECTIONS

Horn Button			Hazard Button				Turn Signal Switch				Dimmer Switch				Starter Lockout Switch			
Color	BK/W	BK/Y	Color	G	O	GY	Color	G	O	GY	Color	R/Y	BL/Y	R/BK	Color	BK/Y	BK	BK/R
							L	●			HI		●		Clutch Lever			
Push	●		Push	●	●	●	OFF (Push)								Released		●	
			OFF (Push)				R		●		LO	●			Pulled in	●		