

# 1. GENERAL INFORMATION


SERVICE RULES	1-1	LUBRICATION & SEAL POINTS	1-19
MODEL IDENTIFICATION	1-1	CABLE & HARNESS ROUTING	1-23
SPECIFICATIONS	1-3	EMISSION CONTROL SYSTEMS	1-40
TORQUE VALUES	1-12	EMISSION CONTROL INFORMATION LABELS (U.S.A. ONLY)	1-43
TOOLS	1-17		

1

## SERVICE RULES


1. Use genuine HONDA or HONDA-recommended parts and lubricants or their equivalents. Parts that don't meet HONDA's design specifications may cause damage to the motorcycle.
2. Use the special tools designed for this product to avoid damage and incorrect assembly.
3. Use only metric tools when servicing the motorcycle. Metric bolts, nuts and screws are not interchangeable with English fasteners.
4. Install new gaskets, O-rings, cotter pins, and lock plates when reassembling.
5. When tightening bolts or nuts, begin with the larger diameter or inner bolt first. Then tighten to the specified torque diagonally in incremental steps unless a particular sequence is specified.
6. Clean parts in cleaning solvent upon disassembly. Lubricate any sliding surfaces before reassembly.
7. After reassembly, check all parts for proper installation and operation.
8. Route all electrical wires as show on pages 1-23 through 1-39, Cable and Harness Routing.

## MODEL IDENTIFICATION

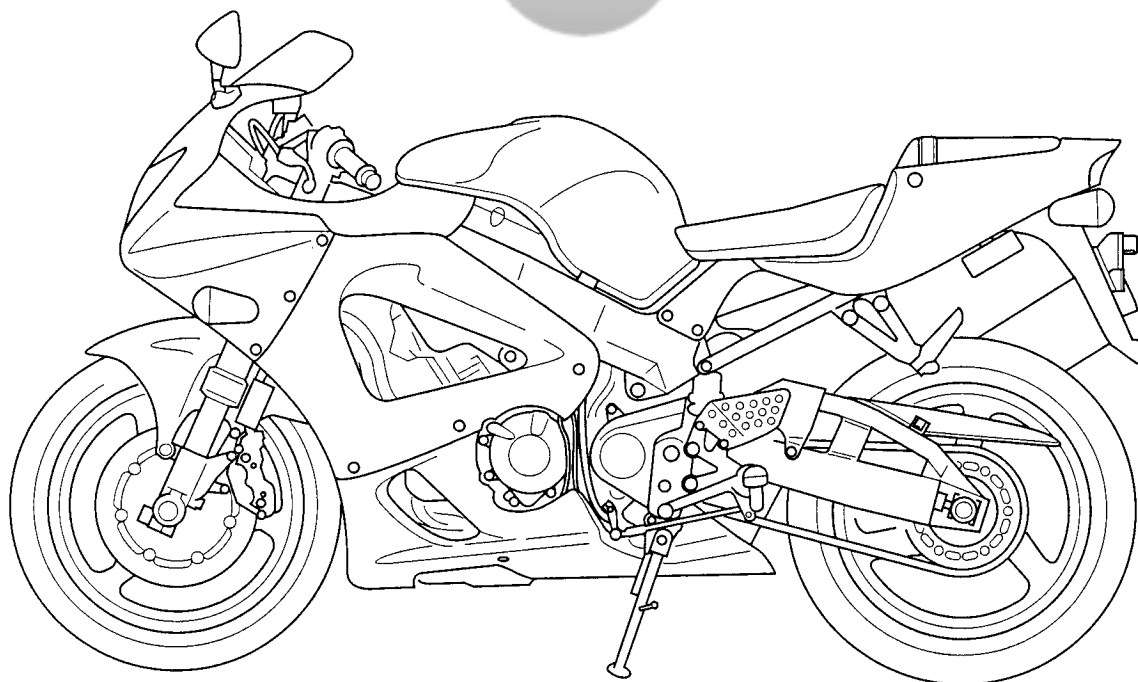


# MOTOMATRIX


## GENERAL INFORMATION

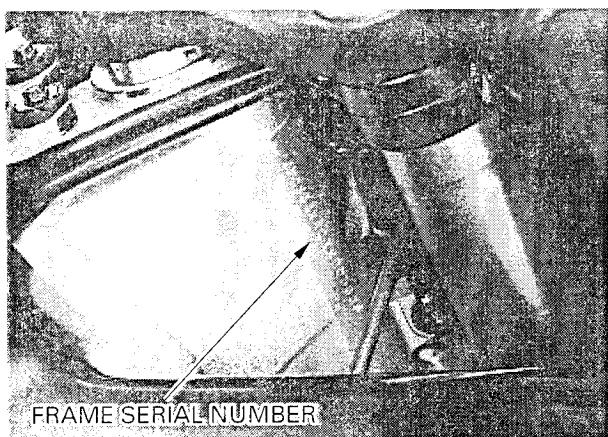


- (1) The frame serial number is stamped on the right side of the steering head.

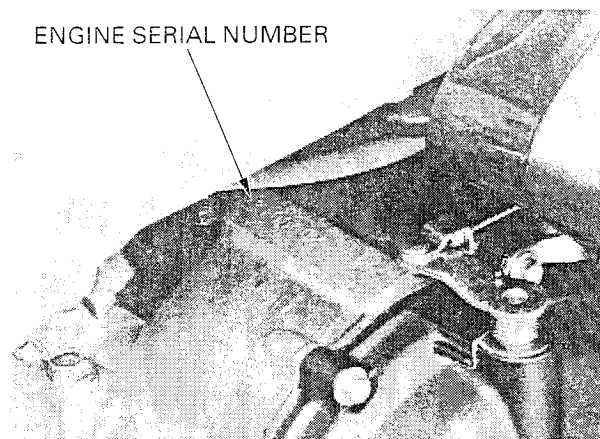


- (2) The engine serial number is stamped on the right side of the upper crankcase.

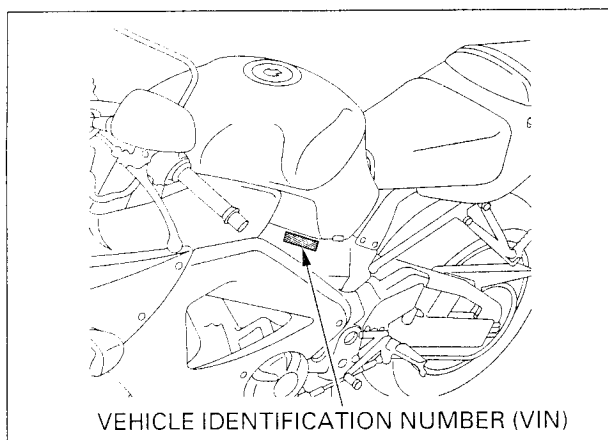

- (3) The Vehicle Identification Number (VIN) is located on left side of the main frame on the Safety Certification Label.

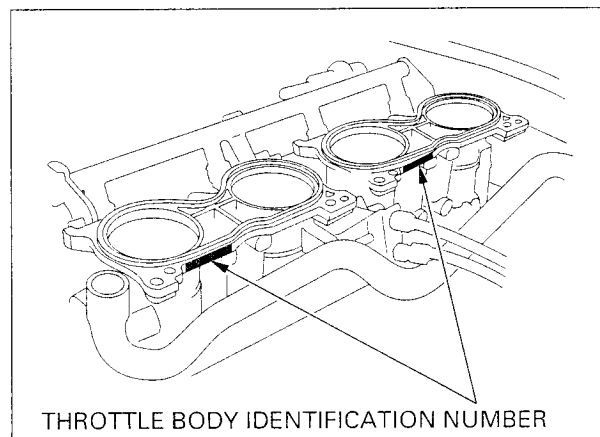

- (4) The throttle body identification number is stamped on the intake side of the throttle body as shown.

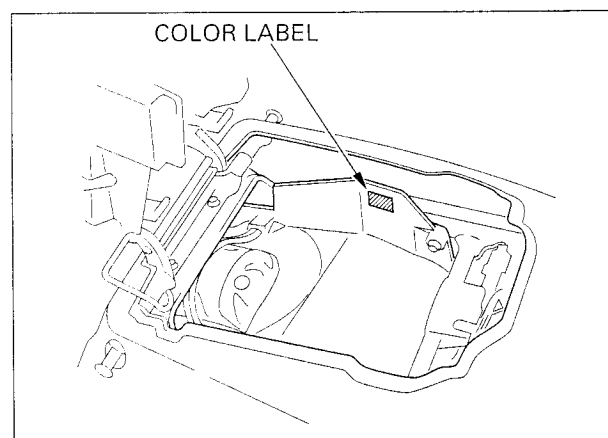

- (5) The color label is attached as shown. When ordering color-coded parts, always specify the designated color code.



## SPECIFICATIONS

GENERAL		
	ITEM	SPECIFICATIONS
DIMENSIONS	Overall length	2,065 mm (81.3 in)
	Overall width	680 mm (26.8 in)
	Overall height	1,125 mm (44.3 in)
	Wheelbase	1,395 mm (54.9 in)
	Seat height	820 mm (32.3 in)
	Footpeg height	384 mm (15.1 in)
	Ground clearance	130 mm (5.1 in)
	Dry weight	
	49 states, Canada type	172 kg (379 lbs)
	California type	174 kg (384 lbs)
	Curb weight	
	49 states, Canada type	197 kg (434 lbs)
	California type	199 kg (439 lbs)
	Maximum weight capacity	
	49 states, Canada type	160 kg (353 lbs)
	California type	164 kg (362 lbs)
FRAME	Frame type	Diamond
	Front suspension	Inverted telescopic fork
	Front wheel travel	110 mm (4.3 in)
	Rear suspension	Swingarm
	Rear wheel travel	135 mm (5.3 in)
	Rear damper	Nitrogen gas filled damper
	Front tire size	120/70 ZR17 (58W) /Radial
	Rear tire size	190/50 ZR17 (73W) /Radial
	Tire brand	
	Bridgestone	Front: BT010F /Rear: BT010R
	Michelin	Front: Pilot SPORT E /Rear: Pilot SPORT E
	Front brake	Hydraulic double disc brake with 4 pot caliper
	Rear brake	Hydraulic single disc brake with 1 pot caliper
	Caster angle	23°45'
	Trail length	97 mm (3.8 in)
	Fuel tank capacity	18.0 l (4.76 US gal, 3.96 Imp gal)
ENGINE	Bore and stroke	74.0 × 54.0 mm (2.91 × 2.13 in)
	Displacement	929 cm <sup>3</sup> (56.7 cu-in)
	Compression ratio	11.3 : 1
	Valve train	Chain drive and DOHC
	Intake valve	opens — at 1 mm
		closes — (0.04 in) lift
	Exhaust valve	opens —
		closes —
	Lubrication system	Forced pressure and wet sump
	Oil pump type	Trochoid
	Cooling system	Liquid cooled
	Air filtration	Paper filter
	Crankshaft type	Unit type
	Engine dry weight	62.1 kg (136.9 lbs)
	Cylinder arrangement	Four cylinder, inline 30° inclined from vertical
	Firing Order	1-2-4-3

**GENERAL INFORMATION**

<b>GENERAL (Cont'd)</b>		
	<b>ITEM</b>	<b>SPECIFICATIONS</b>
CARBURETION	Type	PGM-FI (Programmed Fuel Injection)
	Throttle bore	40 mm (1.6 in)
DRIVE TRAIN	Clutch system	Multi-plate, wet
	Clutch operation system	Cable operated type
	Transmission	Constant mesh, 6-speed
	Primary reduction	1.521 (73/48)
	Final reduction	2.687 (43/16)
	Gear ratio 1st	2.692 (35/13)
	2nd	1.933 (29/15)
	3rd	1.600 (32/20)
	4th	1.400 (28/20)
	5th	1.286 (27/21)
	6th	1.190 (25/21)
	Gearshift pattern	Left foot operated return system, 1—N—2—3—4—5—6
ELECTRICAL	Ignition system	Computer-controlled digital transistorized with electronic advance
	Starting system	Electric starter motor
	Charging system	Triple phase output alternator
	Regulator/rectifier	SCR shorted/triple phase, full wave rectification
	Lighting system	Battery

**GENERAL INFORMATION**

Unit: mm (in)

<b>LUBRICATION SYSTEM</b>		<b>STANDARD</b>	<b>SERVICE LIMIT</b>
<b>ITEM</b>			
Engine oil capacity	At draining	3.5 ℓ (3.7 US qt , 3.1 Imp qt)	
	At disassembly	4.0 ℓ (4.2 US qt , 3.5 Imp qt)	
	At oil filter change	3.7 ℓ (3.9 US qt , 3.3 Imp qt)	
Recommended engine oil		Pro Honda GN4 or HP4 4-stroke oil (U.S.A & Canada) or Honda 4-stroke oil (Canada only), or equivalent motor oil API service classification SF or SG Viscosity: SAE 10W – 40	
Oil pressure at oil pressure switch		490 kPa (5.0 kgf/cm <sup>2</sup> , 71 psi) at 5,400 rpm (80°C/176°F)	
Oil pump rotor	Tip clearance	0.15 (0.006) max.	0.20 (0.008)
	Body clearance	0.15 – 0.22 (0.006 – 0.009)	0.35 (0.014)
	Side clearance	0.02 – 0.07 (0.001 – 0.003)	0.10 (0.004)

<b>FUEL SYSTEM (Programmed Fuel Injection)</b>		<b>SPECIFICATIONS</b>
<b>ITEM</b>		
Throttle body identification number	49 states, Canada type	GQ60C
	California type	GQ60B
Starter valve vacuum difference		20 mm Hg
Base throttle valve for synchronization		No.1
Idle speed		1,200 ± 100 rpm
Throttle grip free play		2 – 6 mm (1/16 – 1/4 in)
Intake air temperature sensor resistance (at 20°C/68°F)		1 – 4 kΩ
Engine coolant temperature sensor resistance (at 20°C/68°F)		2.3 – 2.6 kΩ
Fuel injector resistance (at 20°C/68°F)		11.1 – 12.3 Ω
PAIR solenoid valve resistance (at 20°C/68°F)		20 – 24 kΩ
Purge control solenoid valve resistance (at 20°C/68°F)		30 – 34 kΩ
Cam pulse generator peak voltage (at 20°C/68°F)		0.7 V minimum
Ignition pulse generator peak voltage (at 20°C/68°F)		0.7 V minimum
Manifold absolute pressure at idle		150 – 250 mm Hg
Fuel pressure at idle		343 kPa (3.5 kgf/cm <sup>2</sup> , 50 psi)
Fuel pump flow (at 12 V)		188 cm <sup>3</sup> (6.4 US oz , 6.6 Imp oz) minimum/10 seconds

## GENERAL INFORMATION

COOLING SYSTEM ITEM		SPECIFICATIONS
Coolant capacity	Radiator and engine	3.2 ℓ (3.4 US qt, 2.8 Imp qt)
	Reserve tank	0.4 ℓ (0.4 US qt, 0.4 Imp qt)
Radiator cap relief pressure		108 – 137 kPa (1.1 – 1.4 kgf/cm <sup>2</sup> , 16 – 20 psi)
Thermostat	Begin to open	80.5 – 83.5 °C (177 – 182 °F)
	Fully open	95 °C (203 °F)
	Valve lift	8 mm (0.3 in) minimum
Recommended antifreeze		High quality ethylene glycol antifreeze containing corrosion protection inhibitors
Standard coolant concentration		50 % mixture with soft water

CYLINDER HEAD/VALVES ITEM			STANDARD	SERVICE LIMIT
Cylinder compression			1,226 kPa (12.5 kgf/cm <sup>2</sup> , 178 psi) at 350 rpm	_____
Cylinder head warpage			_____	0.10 (0.004)
Valve, valve guide	Valve clearance	IN	0.16 ± 0.03 (0.006 ± 0.001)	_____
		EX	0.27 ± 0.03 (0.011 ± 0.001)	_____
	Valve stem O.D.	IN	4.475 – 4.490 (0.1762 – 0.1768)	4.465 (0.1758)
		EX	4.465 – 4.480 (0.1758 – 0.1764)	4.455 (0.1754)
	Valve guide I.D.	IN	4.500 – 4.512 (0.1772 – 0.1776)	4.540 (0.1787)
		EX	4.500 – 4.512 (0.1772 – 0.1776)	4.540 (0.1787)
	Stem-to-guide clearance	IN	0.010 – 0.037 (0.0004 – 0.0015)	_____
		EX	0.020 – 0.047 (0.0008 – 0.0019)	_____
	Valve guide projection above cylinder head	IN	14.3 – 14.6 (0.56 – 0.57)	_____
		EX	12.4 – 12.7 (0.49 – 0.50)	_____
Valve spring free length	Valve seat width	IN/EX	0.90 – 1.10 (0.035 – 0.043)	1.5 (0.06)
	Inner	IN/EX	34.80 (1.370)	34.1 (1.34)
Valve lifter	Outer	IN/EX	37.97 (1.495)	37.2 (1.46)
	Valve lifter O.D.	IN/EX	25.978 – 25.993 (1.0228 – 1.0233)	25.97 (1.022)
Camshaft	Valve lifter bore I.D.	IN/EX	26.010 – 26.026 (1.0240 – 1.0246)	26.04 (1.025)
	Cam lobe height	IN	36.48 – 36.72 (1.436 – 1.446)	36.45 (1.435)
		EX	36.08 – 36.32 (1.420 – 1.430)	36.50 (1.437)
	Runout	_____	_____	0.05 (0.002)
Oil clearance			0.020 – 0.062 (0.0008 – 0.0024)	0.10 (0.004)

Unit: mm (in)



**GENERAL INFORMATION**

Unit: mm (in)

<b>CLUTCH/GEARSHIFT LINKAGE</b>			
ITEM		STANDARD	SERVICE LIMIT
Clutch lever free play		10 – 20 (3/8 – 13/16)	
Clutch spring free length		48.8 (1.92)	47.4 (1.87)
Clutch disc thickness	Green color	2.92 – 3.08 (0.115 – 0.121)	2.6 (0.10)
	Purple color	2.92 – 3.08 (0.115 – 0.121)	2.6 (0.10)
Clutch plate warpage			0.30 (0.012)
Clutch outer guide	I.D.	25.000 – 25.021 (0.9843 – 0.9851)	25.03 (0.985)
	O.D.	34.975 – 34.991 (1.3770 – 1.3776)	34.97 (1.377)
Mainshaft O.D. at clutch outer guide		24.980 – 24.993 (0.9835 – 0.9840)	24.96 (0.983)
Shift fork, fork shaft	Fork	I.D.	12.000 – 12.018 (0.4724 – 0.4731)
		Claw thickness	5.93 – 6.00 (0.233 – 0.236)
	Fork shaft O.D.		11.957 – 11.968 (0.4707 – 0.4712)
			11.95 (0.470)

Unit: mm (in)

<b>ALTERNATOR/STARTER CLUTCH</b>			
ITEM		STANDARD	SERVICE LIMIT
Starter driven gear boss O.D.		51.699 – 51.718 (2.0354 – 2.0361)	51.684 (2.0348)

Unit: mm (in)

Unit: mm (in)

CRANKCASE/PISTON/CYLINDER				
ITEM		STANDARD	SERVICE LIMIT	
Cylinder	I.D.	74.005 – 74.020 (2.9136 – 2.9142)	74.15 (2.919)	
	Out of round	_____	0.10 (0.004)	
	Taper	_____	0.10 (0.004)	
	Warpage	_____	0.05 (0.002)	
Piston, piston rings	Piston mark direction		“IN” mark facing toward the intake side	
	Piston O.D.		73.965 – 73.985 (2.9120 – 2.9128)	
	Piston O.D. measurement point		13 mm (0.5 in) from bottom of skirt	
	Piston pin bore I.D.		17.002 – 17.008 (0.6694 – 0.6696)	
	Piston pin O.D.		16.994 – 17.000 (0.6691 – 0.6693)	
	Piston-to-piston pin clearance		0.002 – 0.014 (0.0001 – 0.0006)	
	Piston ring-to-ring groove clearance	Top	0.030 – 0.065 (0.0012 – 0.0026)	0.08 (0.003)
		Second	0.015 – 0.045 (0.0006 – 0.0018)	0.06 (0.002)
	Piston ring end gap	Top	0.28 – 0.38 (0.011 – 0.015)	0.5 (0.02)
		Second	0.40 – 0.55 (0.016 – 0.022)	0.7 (0.03)
	Oil (side rail)	0.2 – 0.7 (0.01 – 0.03)	0.9 (0.04)	
Cylinder-to-piston clearance		0.020 – 0.055 (0.0008 – 0.0022)	_____	
Connecting rod small end I.D.		17.016 – 17.034 (0.6699 – 0.6706)	17.04 (0.671)	
Connecting rod-to-piston pin clearance		0.016 – 0.040 (0.0006 – 0.0016)	_____	
Crankpin oil clearance		0.030 – 0.052 (0.0012 – 0.0020)	0.062 (0.0024)	

**GENERAL INFORMATION**

Unit: mm (in)

<b>CRANKSHAFT/TRANSMISSION</b>			<b>STANDARD</b>	<b>SERVICE LIMIT</b>
<b>ITEM</b>				
Crankshaft	Side clearance		0.05 – 0.20 (0.002 – 0.008)	0.30 (0.012)
	Runout			0.30 (0.012)
	Main journal oil clearance	No. 1 and No. 5	0.017 – 0.035 (0.0007 – 0.0014)	0.045 (0.0018)
		No. 2 to No. 4	0.027 – 0.045 (0.0011 – 0.0018)	0.055 (0.0022)
Transmission	Gear I.D.	M5, M6	31.000 – 31.025 (1.2205 – 1.2215)	31.04 (1.222)
		C1	26.000 – 26.021 (1.0236 – 1.0244)	26.04 (1.025)
		C2, 3, 4	33.000 – 33.025 (1.2992 – 1.3002)	33.04 (1.301)
	Bushing O.D.	M5, M6	30.950 – 30.975 (1.2185 – 1.2195)	30.93 (1.218)
		C3	32.950 – 32.975 (1.2972 – 1.2982)	32.93 (1.296)
		C4	32.950 – 32.975 (1.2972 – 1.2982)	32.93 (1.296)
	Bushing I.D.	M5	27.985 – 28.006 (1.1018 – 1.1026)	28.02 (1.103)
		C2	29.985 – 30.006 (1.1805 – 1.1813)	30.02 (1.182)
	Gear-to-bushing clearance	M5, M6	0.025 – 0.075 (0.0010 – 0.0030)	0.11 (0.004)
		C3	0.025 – 0.075 (0.0010 – 0.0030)	0.11 (0.004)
	Mainshaft O.D.	M5	27.967 – 27.980 (1.1011 – 1.1016)	27.957 (1.1007)
		Clutch outer guide	24.980 – 24.993 (0.9835 – 0.9840)	24.96 (0.983)
	Countershaft O.D.	C2	29.967 – 29.980 (1.1798 – 1.1803)	29.96 (1.180)
	Bushing-to-shaft clearance	M5	0.005 – 0.039 (0.0002 – 0.0015)	0.08 (0.003)
		C2	0.005 – 0.039 (0.0002 – 0.0015)	0.08 (0.003)

**GENERAL INFORMATION**

Unit: mm (in)

<b>FRONT WHEEL/SUSPENSION/STEERING</b>		<b>ITEM</b>	<b>STANDARD</b>	<b>SERVICE LIMIT</b>
		Minimum tire tread depth		1.5 (0.06)
Cold tire pressure	Up to 90 kg (200 lb) load		250 kPa (2.50 kgf/cm <sup>2</sup> , 36 psi)	
	Up to maximum weight capacity		250 kPa (2.50 kgf/cm <sup>2</sup> , 36 psi)	
Axle runout				0.20 (0.008)
Wheel rim runout	Radial			2.0 (0.08)
	Axial			2.0 (0.08)
Fork	Spring free length		230.5 (9.07)	225.9 (8.89)
	Spring direction		With the tapered end facing up	
	Tube runout			0.20 (0.008)
	Recommended fork fluid		Pro Honda Suspension Fluid SS-8	
	Fluid level		90 (3.5)	
	Fluid capacity		488 ± 2.5 cm <sup>3</sup> (16.5 ± 0.08 US oz, 17.2 ± 0.09 Imp oz)	
	Pre-load adjuster initial setting		18 mm (0.7 in) from top of fork bolt	
	Tension adjuster initial setting		1 turn from full hard	
	Compression adjuster initial setting		1-1/2 turns from full hard	
Steering head bearing pre-load			10 – 15 N (1.0 – 1.5 kgf)	

Unit: mm (in)

<b>REAR WHEEL/SUSPENSION</b>		<b>ITEM</b>	<b>STANDARD</b>	<b>SERVICE LIMIT</b>
		Minimum tire thread depth		2.0 (0.08)
Cold tire pressure	Up to 90 kg (200 lb) load		290 kPa (2.90 kgf/cm <sup>2</sup> , 42 psi)	
	Up to maximum weight capacity		290 kPa (2.90 kgf/cm <sup>2</sup> , 42 psi)	
Axle runout				0.20 (0.008)
Wheel rim runout	Radial			2.0 (0.08)
	Axial			2.0 (0.08)
Drive chain	Size/link	DID	D.I.D. 50VA8 C1	
		RK	RK GB50HFOZ5	
	Slack		40 – 50 (1.6 – 2.0)	50 (2.0)
Shock absorber	Spring adjuster standard position		4th groove	
	Tension adjuster initial setting		2 turns from full hard	
	Compression adjuster initial setting		1 turn from full hard	

**GENERAL INFORMATION**

Unit: mm (in)

<b>HYDRAULIC BRAKE</b>			
<b>ITEM</b>		<b>STANDARD</b>	<b>SERVICE LIMIT</b>
Front	Specified brake fluid	Honda DOT 4 Brake Fluid	
	Brake disc thickness	4.5 (0.18)	3.5 (0.14)
	Brake disc runout		0.30 (0.012)
	Master cylinder I.D.	19.050 – 19.093 (0.7500 – 0.7517)	19.105 (0.7522)
	Master piston O.D.	19.018 – 19.034 (0.7487 – 0.7494)	19.006 (0.7483)
	Caliper cylinder I.D.	Upper 33.960 – 34.010 (1.3370 – 1.3390)	34.02 (1.339)
		Lower 30.250 – 30.280 (1.1909 – 1.1921)	30.29 (1.193)
	Caliper piston O.D.	Upper 33.802 – 33.835 (1.3308 – 1.3321)	33.794 (1.3305)
Rear		Lower 30.082 – 30.115 (1.1843 – 1.1856)	30.074 (1.1840)
	Specified brake fluid	DOT 4	
	Brake pedal height	75 (3.0)	
	Brake disc thickness	5.0 (0.20)	4.0 (0.16)
	Brake disc runout		0.30 (0.012)
	Master cylinder I.D.	15.870 – 15.913 (0.6248 – 0.6265)	15.925 (0.6270)
	Master piston O.D.	15.827 – 15.854 (0.6231 – 0.6242)	15.815 (0.6226)
	Caliper cylinder I.D.	38.180 – 38.230 (1.5031 – 1.5051)	38.24 (1.506)
	Caliper piston O.D.	38.098 – 38.148 (1.4999 – 1.5019)	38.090 (1.4996)

<b>BATTERY/CHARGING SYSTEM</b>			
<b>ITEM</b>		<b>SPECIFICATIONS</b>	
Battery	Capacity	12V-8.6 Ah	
	Current leakage	0.2 mA max.	
	Voltage (20°C/68°F)	Fully charged	13.0 – 13.2 V
		Needs charging	Below 12.3 V
	Charging current	Normal	0.9 A/5 – 10 h
		Quick	4.0 A/0.5 h
Alternator	Capacity	0.421 kW/5,000 rpm	
	Charging coil resistance (20°C/68°F)	0.1 – 1.0 $\Omega$	

<b>IGNITION SYSTEM</b>			
<b>ITEM</b>		<b>SPECIFICATIONS</b>	
Spark plug	Standard	IUH27D (DENSO)	
	Optional	IUH24D (DENSO)	
Spark plug gap		0.80 – 0.90 mm (0.031 – 0.035 in)	
Ignition coil peak voltage		100 V minimum	
Ignition pulse generator peak voltage		0.7 V minimum	
Ignition timing ("F" mark)		15° BTDC at idle	



**GENERAL INFORMATION**

Unit: mm (in)

<b>ELECTRIC STARTER</b>		
ITEM	STANDARD	SERVICE LIMIT
Starter motor brush length	12.0 – 13.0 (0.47 – 0.51)	4.5 (0.18)

LIGHTS/METERS/SWITCHES			
ITEM			SPECIFICATIONS
Bulbs	Headlight	Hi	12V-55W × 2
		Lo	12V-55W
	Brake/tail light		12V-21/5W × 2
	Front turn signal/running light		12V-32/3 cp (23/8 W) × 2
	Rear turn signal light		12V-21W × 2
	Licence light		12V-5W
	Instrument light		LED
	Turn signal indicator		LED × 2
	High beam indicator		LED
	Neutral indicator		LED
	Oil pressure indicator		LED
	Malfunction indicator lamp		LED
	Fuel reserve indicator		LED
Fuse	Main fuse		30A
	PGM-FI fuse		20A
	Sub fuse		20A × 1, 10A × 5
Tachometer peak voltage			10.5 V minimum
Thermo sensor resistance	80°C		2.1 – 2.6 kΩ
	120°C		0.65 – 0.73 kΩ
Fan motor switch	Start to close (ON)		98 – 102 °C (208 – 216 °F)
	Stop to open		93 – 97 °C (199 – 207 °F)

## GENERAL INFORMATION

## TORQUE VALUES

FASTENER TYPE	TORQUE N.m (kgf-m, lbf-ft)	FASTENER TYPE	TORQUE N.m (kgf-m, lbf-ft)
5 mm hex bolt and nut	5 (0.5 , 3.6)	5 mm screw	4 (0.4 , 2.9)
6 mm hex bolt and nut	10 (1.0 , 7)	6 mm screw	9 (0.9 , 6.5)
8 mm hex bolt and nut	22 (2.2 , 16)	6 mm flange bolt (8 mm head)	9 (0.9 , 6.5)
10 mm hex bolt and nut	34 (3.5 , 25)	6 mm flange bolt (10 mm head) and nut	12 (1.2 , 9)
12 mm hex bolt and nut	54 (5.5 , 40)	8 mm flange bolt and nut	26 (2.7 , 20)
		10 mm flange bolt and nut	39 (4.0 , 29)

- Torque specifications listed below are for important fasteners.
- Others should be tightened to standard torque values listed above.

NOTES: 1. Apply sealant to the threads.  
 2. Apply a locking agent to the threads.  
 3. Apply grease to the threads.  
 4. Stake.  
 5. Apply oil to the threads and flange surface.  
 6. Apply clean engine oil to the O-ring.  
 7. U-nut  
 8. ALOC bolt: replace with a new one.  
 9. CT bolt  
 10. Apply molybdenum disulfide oil to the threads and seating surface (after removing anti-rust oil additive)

ENGINE	ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N.m (kgf-m, lbf-ft)	REMARKS
	<b>MAINTENANCE:</b>				
	Spark plug	4	10	12 (1.2 , 9)	
	Timing hole cap	1	45	18 (1.8 , 13)	NOTE 3
	<b>LUBRICATION SYSTEM:</b>				
	Oil drain bolt	1	12	29 (3.0 , 22)	
	Oil cooler mounting bolt	1	20	74 (7.5 , 54)	
	Oil pump assembly flange bolt	1	6	8 (0.8 , 5.8)	NOTE 9
	Oil pump driven sprocket bolt	1	6	15 (1.5 , 11)	NOTE 2
	Oil filter cartridge	1	20	26 (2.7 , 20)	NOTE 6
	Oil pressure switch	1	PT 1/8	12 (1.2 , 9)	NOTE 1
	Oil pressure switch wire terminal screw	1	4	2 (0.2 , 1.4)	
	<b>FUEL SYSTEM (Programmed Fuel injection):</b>				
	ECT (Engine Coolant Temperature)/thermosensor	1	12	23 (2.3 , 17)	
	Throttle body insulator band screw	8	5	See page 1-14	
	Throttle cable bracket mounting bolt	2	5	3 (0.35 , 2.5)	
	Fuel pipe mounting bolt	3	6	10 (1.0 , 7)	
	Pressure regulator mounting bolt	2	6	10 (1.0 , 7)	
	Starter valve synchronization plate screw	4	3	1 (0.09 , 0.7)	
	Fast idle wax unit link plate screw	1	3	1 (0.09 , 0.7)	
	Fast idle wax unit mounting screw	2	6	5 (0.5 , 3.6)	
	Starter valve lock nut	4	10	2 (0.18 , 1.3)	
	Vacuum joint plug bolt for synchronization	4	5	3 (0.3 , 2.2)	
	<b>COOLING SYSTEM:</b>				
	Water pump cover flange bolt	2	6	12 (1.2 , 9)	NOTE 9
	Thermostat cover flange bolt	2	6	12 (1.2 , 9)	NOTE 9
	<b>ENGINE MOUNTING:</b>				
	Drive sprocket special bolt	1	10	54 (5.5 , 40)	




## GENERAL INFORMATION

## ENGINE (Cont'd)

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N-m (kgf-m, lbf-ft)	REMARKS
<b>CYLINDER HEAD/VALVES:</b>				
Cylinder head cover bolt	4	6	10 (1.0 , 7)	
PAIR reed valve cover flange bolt	4	6	12 (1.2 , 9)	NOTE 2
Breather plate flange bolt	3	6	12 (1.2 , 9)	NOTE 2
Camshaft holder flange bolt	10	6	12 (1.2 , 9)	NOTE 5
Cylinder head sealing bolt	1	18	27 (2.8 , 20)	NOTE 2
Cylinder head mounting bolt	2	8	24 (2.4 , 17)	NOTE 5
Cylinder head mounting socket bolt/washer	10	9	51 (5.2 , 38)	NOTE 10
Cam sprocket bolt	4	7	20 (2.0 , 14)	NOTE 2
Cam pulse generator rotor dowel bolt	2	6	12 (1.2 , 9)	NOTE 2
Cam chain tensioner pivot socket bolt	1	6	10 (1.0 , 7)	NOTE 2
Cam chain guide mounting socket bolt	1	6	12 (1.2 , 9)	NOTE 2
Cylinder head stud bolt (exhaust pipe stud bolt)	8	8	See page 1-14	
<b>CLUTCH/GEARSHIFT LINKAGE:</b>				
Clutch center lock nut	1	22	127 (13.0 , 94)	NOTE 4, 5
Clutch spring bolt/washer	5	6	12 (1.2 , 9)	
Shift drum center socket bolt	1	8	23 (2.3 , 17)	NOTE 2
Shift drum stopper arm pivot bolt	1	6	12 (1.2 , 9)	
Gearshift return spring pin	1	8	23 (2.3 , 17)	
Shift drum bearing/shift fork retaining bolt/washer	2	6	12 (1.2 , 9)	NOTE 2
<b>ALTERNATOR/STARTER CLUTCH:</b>				
Alternator wire clamp socket bolt	1	6	12 (1.2 , 9)	NOTE 9
Flywheel flange bolt	1	10	103 (10.5 , 76)	NOTE 5
Stator mounting socket bolt	4	6	12 (1.2 , 9)	
Starter one-way clutch socket bolt	6	6	16 (1.6 , 12)	NOTE 2
<b>CRANKCASE/PISTON/CYLINDER:</b>				
Mainshaft bearing set plate bolt	2	6	12 (1.2 , 9)	NOTE 2
Crankcase bolt, 10 mm	1	10	39 (4.0 , 29)	
9 mm (main journal bolt)	10	9	35 (3.6 , 26)	NOTE 5
8 mm	12	8	24 (2.4 , 17)	
Connecting rod nut	8	8	35 (3.6 , 26)	NOTE 5
Upper crankcase sealing bolt	1	8	22 (2.2 , 16)	NOTE 2
Lower crankcase sealing bolt, 20 mm	1	20	30 (3.1 , 22)	NOTE 2
10 mm	1	10	12 (1.2 , 9)	NOTE 2


**GENERAL INFORMATION****ENGINE (Cont'd)**

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
<b>IGNITION SYSTEM:</b> Ignition pulse generator rotor mounting bolt	1	10	59 (6.0 , 43)	NOTE 5
<b>ELECTRIC STARTER:</b> Starter motor terminal nut	1	6	12 (1.2 , 9)	
<b>LIGHTS/METERS/SWITCHES:</b> Neutral switch	1	10	12 (1.2 , 9)	

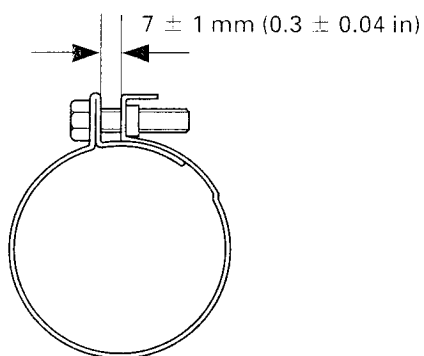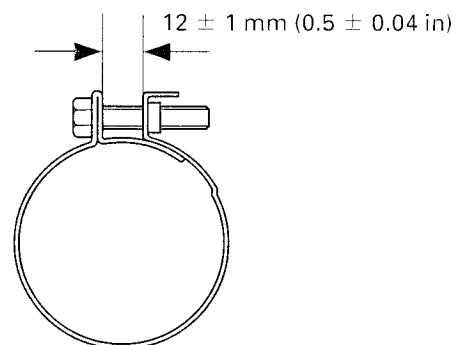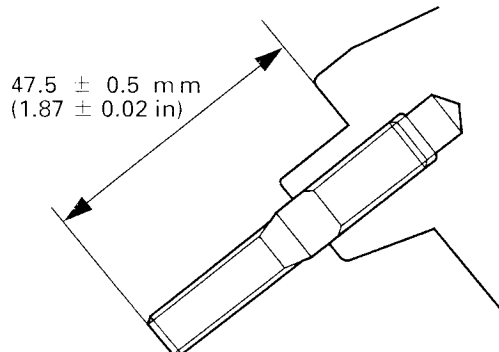**Insulator clamp (Throttle body side):****Insulator clamp (Cylinder head side):****Exhaust pipe stud bolt:**



## GENERAL INFORMATION

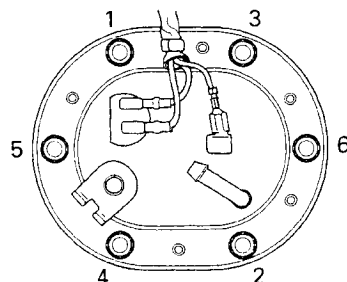FRAME	ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS	
FRAME BODY PANELS/EXHAUST SYSTEM:						
	Upper cowl stay mounting bolt	2	8	26 (2.7 , 20)	NOTE 7	
	Middle cowl pan screw	14	5	1 (0.15 , 1.1)		
	Lower cowl pan screw	2	5	1 (0.15 , 1.1)		
	Inner panel pan screw	2	5	1 (0.15 , 1.1)		
	Inner middle cowl pan screw	2	5	1 (0.15 , 1.1)		
	Rear cowl truss screw	2	5	1 (0.15 , 1.1)		
	Pillion seat bracket mounting bolt/nut	2	6	12 (1.2 , 9)		
	Pillion seat mounting nut	2	6	10 (1.05 , 8)		
	Seat rail mounting bolt, 8 mm	4	8	39 (4.0 , 29)		
	10 mm	2	10	39 (4.0 , 29)		
	Pillion footpeg mounting socket bolt	4	8	39 (4.0 , 29)		
	Exhaust pipe joint flange nut	8	7	12 (1.2 , 9)		
FUEL SYSTEM (Programmed Fuel Injection):						
	Fuel filler cap bolt	3	4	2 (0.2 , 1.4)	NOTE 8	
	Fuel tube banjo bolt (fuel tank side)	1	12	22 (2.2 , 16)		
	Fuel tube sealing nut (throttle body side)	1	12	22 (2.2 , 16)		
	Fuel pump mounting nut	6	6	12 (1.2 , 9)		
	(see tightening sequence below)					
						
	Exhaust valve mounting bolt (front)	4	6	14 (1.4 , 10)		
	(rear)	4	6	14 (1.4 , 10)		
	Exhaust valve cover mounting bolt	4	6	12 (1.2 , 9)		
	Exhaust valve pulley nut	1	7	12 (1.2 , 9)		
	Exhaust valve pulley cover mounting bolt (lower)	1	6	12 (1.2 , 9)		
	O <sub>2</sub> sensor	1	12	25 (2.6 , 19)		
COOLING SYSTEM:						
	Cooling fan nut	1	5	3 (0.27 , 2.0)	NOTE 8	
	Fan motor nut	3	6	5 (0.5 , 3.6)		
ENGINE MOUNTING:						
	Main footpeg bracket mounting socket bolt	4	8	39 (4.0 , 29)		
	Main footpeg mounting bolt	2	10	44 (4.5 , 33)		
	Bank sensor	2	8	12 (1.2 , 9)		
	Lower bracket mounting nut	1	10	42 (4.3 , 31)		
	Lower bracket mounting pinch bolt	1	8	26 (2.7 , 20)		
	Engine hanger nut (front)	2	10	39 (4.0 , 29)		
	Engine hanger nut (middle)	1	12	54 (5.5 , 40)		
	Engine hanger nut (rear)	1	12	54 (5.5 , 40)		
	Rear engine hanger pinch bolt	1	8	26 (2.7 , 20)		
	Side stand bracket bolt	2	10	44 (4.5 , 33)	NOTE 8	
	Side stand pivot bolt	1	10	10 (1.0 , 7)	NOTE 7	
	Side stand pivot lock nut	1	10	29 (3.0 , 22)		
CLUTCH/GEARSHIFT LINKAGE:						
	Gearshift pedal link pinch bolt	1	6	10 (1.0 , 7)		

**GENERAL INFORMATION**

FRAME (Cont'd)					
ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS	
FRONT WHEEL/SUSPENSION/STEERING:					
Handlebar pinch bolt	2	8	26 (2.7 , 20)	NOTE 8 See page 13-31	
Handlebar weight mounting screw	2	6	10 (1.0 , 7)		
Steering stem nut	1	24	103 (10.5 , 76)		
Top thread A	1	26	29 (3.0 , 22)		
Top thread B	1	26			
Fork top bridge pinch bolt	2	8	22 (2.2 , 16)	NOTE 8	
Fork bottom bridge pinch bolt	4	8	26 (2.7 , 20)		
Front axle bolt	1	18	78 (8.0 , 58)		
Front axle holder pinch bolt	4	8	22 (2.2 , 16)		
Front brake disc mounting bolt	12	6	20 (2.0 , 14)		
Fork bolt	2	42	22 (2.2 , 16)		
Fork center bolt	2	10	34 (3.5 , 25)		
REAR WHEEL/SUSPENSION:					
Rear axle nut	1	22	113 (11.5 , 83)	NOTE 7	
Rear brake disc mounting bolt	4	8	42 (4.3 , 31)	NOTE 8	
Driven sprocket nut	5	10	64 (6.5 , 47)	NOTE 7	
Rear shock absorber upper mounting nut	1	10	44 (4.5 , 33)	NOTE 7	
Shock arm plate nut	3	10	44 (4.5 , 33)	NOTE 7	
Shock link nut (frame side)	1	10	44 (4.5 , 33)	NOTE 7	
Swingarm pivot nut	1	24	118 (12.0 , 87)	NOTE 7	
Swingarm pivot pinch bolt	2	8	26 (2.7 , 20)	NOTE 8	
Drive chain slider bolt	3	6	9 (0.9 , 6.5)		
HYDRAULIC BRAKE:					
Front brake master cylinder cup mounting nut	1	6	6 (0.6 , 4.3)	NOTE 7	
Brake lever pivot bolt	1	6	10 (1.0 , 7)	NOTE 8	
Brake lever pivot nut	1	6	6 (0.6 , 4.3)		
Front brake switch screw	1	4	1 (0.12 , 0.9)	NOTE 8	
Front brake caliper mounting bolt	4	8	30 (3.1 , 22)		
Caliper body assembly torx bolt	8	8	23 (2.3 , 17)	NOTE 8	
Pad pin	3	10	18 (1.8 , 13)	NOTE 8	
Pad pin plug	1	10	2 (0.25 , 1.8)		
Brake caliper bleeder	3	8	6 (0.6 , 4.3)	NOTE 8	
Rear brake hose clamp screw	4	5	4 (0.4 , 2.9)		
Rear master cylinder push rod nut	1	8	18 (1.8 , 13)	NOTE 2	
Rear master cylinder hose joint screw	1	4	1 (0.15 , 1.1)		
Rear brake caliper pin bolt (main)	1	12	27 (2.8 , 20)	NOTE 2	
Rear brake caliper pin bolt (sub)	1	8	22 (2.2 , 16)	NOTE 2	
Brake hose oil bolt	5	10	34 (3.5 , 25)	NOTE 1	
LIGHTS/METERS/SWITCHES:					
Ignition switch mounting one-way bolt	2	8	26 (2.7 , 20)		
Side stand switch mounting bolt	1	6	10 (1.0 , 7)		
Fan motor switch	1	16	18 (1.8 , 13)		

## TOOLS

- NOTES: 1. Equivalent commercially available in U.S.A.  
 2. Not available in U.S.A.  
 3. Alternative tool.  
 4. Newly provided tool.  
 5. Newly designed tool.







DESCRIPTION	TOOL NUMBER	REMARKS	REF. SEC.
Fuel pressure gauge	07406-0040002		5
Oil pressure gauge set	07506-3000000		4
Oil pressure gauge attachment	07510-MA70000		4
Clutch center holder	07724-0050002		9
Flywheel holder	07725-0040000	NOTE 1	10
Flywheel puller	07733-0020001		10
Attachment, 42 × 47 mm	07746-0010300		9, 13, 14
Attachment, 52 × 55 mm	07746-0010400		14
Attachment, 24 × 26 mm	07746-0010700		14
Attachment, 22 × 24 mm	07746-0010800		14
Attachment, 40 × 42 mm	07746-0010900	NOTE 5	14
Driver, 40 mm I.D.	07746-0030100		12
Attachment, 30 mm I.D.	07746-0030300		12
Pilot, 17 mm	07746-0040400		14
Pilot, 25 mm	07746-0040600		13, 14
Pilot, 35 mm	07746-0040800		9
Bearing remover shaft	07746-0050100		13, 14
Bearing remover head, 25 mm	07746-0050800		13, 14
Driver	07749-0010000		13, 14
Valve spring compressor	07757-0010000		8
Valve seat cutter		NOTE 1	8
Seat cutter, 24.5 mm (45° EX)	07780-0010100		
Seat cutter, 29 mm (45° IN)	07780-0010300		
Flat cutter, 25 mm (32° EX)	07780-0012000		
Flat cutter, 33 mm (32° IN)	07780-0012900		
Interior cutter, 26 mm (60° EX)	07780-0014500		
Interior cutter, 30 mm (60° IN)	07780-0014000		
Cutter holder, 4.5 mm	07781-0010600		
Snap ring pliers	07914-SA50001	NOTE 3: 07914-3230001	15
Steering stem socket	07916-3710101	NOTE 3: 07916-3710100	13
Ball race remover set	07946-KM90001	NOTE 3:	13
— Driver attachment, A	07946-KM90100	Can be used with the	
— Driver attachment, B	07946-KM90200	following combination	
— Driver shaft assembly	07946-KM90300	(U.S.A only):	
— Bearing remover, A	07946-KM90401	07VMF-MAT0100	
— Bearing remover, B	07946-KM90500	07VMF-MAT0200	
— Assembly base	07946-KM90600	07VMF-KZ30200	
		07VMF-MAT0300	
		07VMF-MAT0400	
		07947-KA50100	
		07965-MA60000	
		07946-ME90200	
Steering stem driver	07946-MB00000		13
Driver shaft	07946-MJ00100		14
Driver attachment handle	07949-3710001		14
Valve spring compressor attachment	07959-KM30101		8
Oil filter wrench	07HAA-PJ70100		3
Peak voltage adaptor	07HGJ-0020100	NOTE 3: Peak voltage tester (U.S.A. only)	5, 17, 19

**GENERAL INFORMATION**



DESCRIPTION	TOOL NUMBER	REMARKS	REF. SEC.
Tappet hole protector	07HMG-MR70002	NOTE 2	8
Valve guide driver	07HMD-ML00101		8
Valve guide driver, 4.508 mm	07HMH-ML00101	NOTE 3: 07HMH-ML0010A (U.S.A. only)	8
Drive chain tool set	07HMH-MR10103	NOTE 3: 07HMH-MR1010B (U.S.A. only)	3
Needle bearing remover	07LMC-KV30100		14
Driver pilot, 32 × 50 mm	07MAD-PR90200		14
Compression gauge attachment	07RMJ-MY50100		8
Fork damper holder	07YMB-MCF0101		13
Oil seal driver	07YMD-MCF0100	NOTE 3: 07KMD-KZ30100 with 07NMD-KZ30101 (except U.S.A.) 07NMD-KZ3010A (U.S.A. only)	13
Driver attachment, 25 × 38.5 mm	07YMD-MCJ0100	NOTE 5	14
Installer shaft guide	07YMF-MCJ0100	NOTE 5	5
Installer shaft	07YMF-MCJ0200	NOTE 5	5
Installer shaft, 14 × 30 mm	07YMF-MCJ0300	NOTE 5	5
Remover, 14 × 16 mm	07YMF-MCJ0400	NOTE 5	5
ECU test harness	07YMZ-0010100	NOTE 4	5



## LUBRICATION &amp; SEAL POINTS

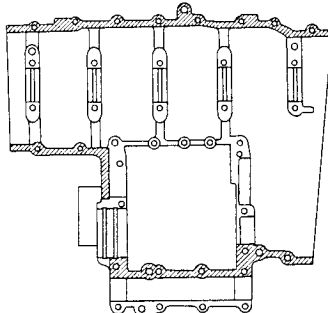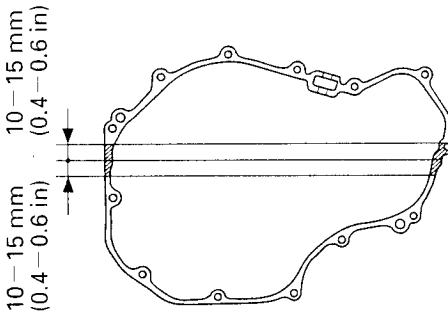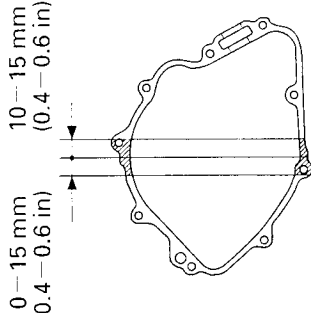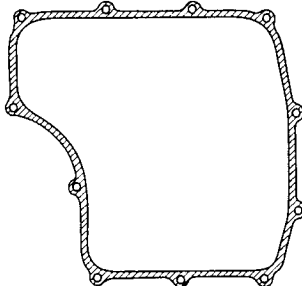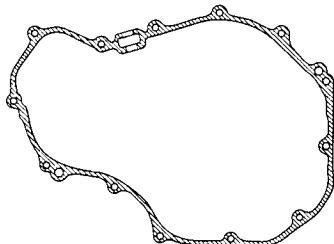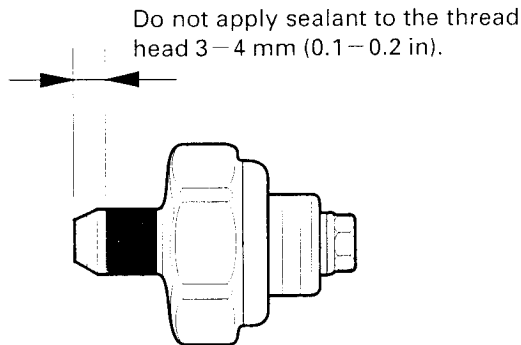ENGINE	LOCATION	MATERIAL	REMARKS
	Crankcase mating surface	Liquid sealant (Three Bond 1207B or equivalent)	
			
	Oil pan mating surface		
			
	Right crankcase cover mating surface		
			
	Oil pressure switch threads		
	 <p>Do not apply sealant to the thread head 3—4 mm (0.1—0.2 in).</p>		

**GENERAL INFORMATION**

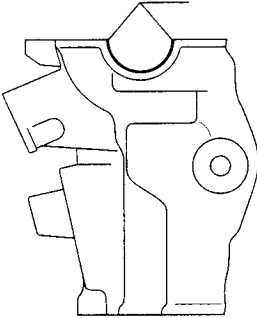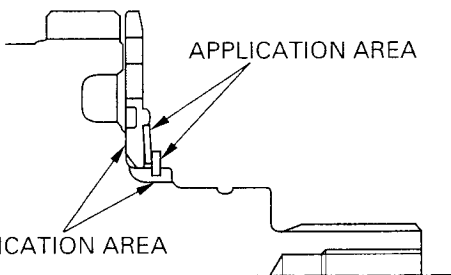ENGINE (Cont'd) LOCATION	MATERIAL	REMARKS
Cylinder head semi-circular cut-out  	Sealant	
Main journal bearing surface Piston pin sliding surface Connecting rod bearing surface Connecting rod small end inner surface Crankshaft thrust surface Camshaft lobes/journals and thrust surface Valve stem (valve guide sliding surface) Valve lifter outer sliding surface Clutch outer/primary driven gear sliding surface Clutch outer guide sliding surface M3/4, C5, C6, shifter gear (shift fork grooves) Starter reduction gear shaft outer surface Primary sub-gear friction spring sliding surface  	Molybdenum disulfide oil (a mixture of 1/2 engine oil and 1/2 molybdenum disulfide grease)	
Piston ring sliding area Oil strainer packing Clutch disc surface Starter one-way clutch sliding surface Connecting rod nut threads Flywheel bolt threads and seating surface Main journal 9 mm bolt threads and seating surface (after removing anti-rust oil additive) Cylinder head special bolt (after removing anti-rust oil additive) Clutch center lock nut threads Oil filter cartridge threads and O-ring Camshaft holder bolt threads and seating surface Oil cooler center bolt threads Each gear teeth and rotating surface Each bearing Each O-ring Other rotating area and sliding surface	Engine oil	


**GENERAL INFORMATION**

<b>ENGINE (Cont'd)</b>		
<b>LOCATION</b>	<b>MATERIAL</b>	<b>REMARKS</b>
Timing hole cap threads Oil seal lips	Multi-purpose grease	
Upper crankcase sealing bolt threads Lower crankcase sealing bolt threads Cam chain guide A mounting bolt threads Cam pulse generator rotor bolt threads Cylinder head sealing bolt threads Cylinder head cover breather joint threads Starter one-way clutch outer bolt threads Oil pump driven sprocket bolt threads Shift drum bearing set plate bolt threads Mainshaft bearing set plate bolt threads Cam sprocket bolt threads Cylinder head cover breather plate bolt threads Shift drum center bolt threads Cam chain tensioner pivot bolt threads Cam chain guide pivot bolt threads Gearshift return spring pin	Locking agent	Coating width: $6.5 \pm 1$ mm


**GENERAL INFORMATION**


FRAME		
LOCATION	MATERIAL	REMARKS
Front wheel dust seal lips Rear wheel dust seal lips Footpeg sliding area Pillion footpeg sliding area Rear brake pedal pivot sliding area Gearshift pedal pivot sliding area Clutch lever pivot bolt sliding area Throttle pipe sliding area Pillion seat pivot sliding area Pillion seat catch hook Pillion seat spring sliding area Pillion seat spring cross plate contact area	Multi-purpose grease	
Steering head bearing sliding surface Steering head dust seal lips Swingarm pivot bearing Swingarm pivot dust seal lips Shock absorber needle bearing Shock absorber dust seal lips	Multi-purpose grease (Shell Alvania EP2 or equivalent)	
Side stand pivot surface	Molybdenum disulfide grease	
Throttle pipe cable sliding surface	Molybdenum paste	
Shock absorber spring adjuster cam surface	Liquid sealant	
Radiator fan motor switch threads	Engine oil	
Steering stem top thread Throttle cable casing inner Brake pipe joint threads	Cable lubricant	
Throttle cable A, B casing inner Clutch cable casing inner Variable intake valve cable inner Variable exhaust valve cable A, B casing inner	DOT 4 brake fluid	
Brake master cylinder cups Brake caliper piston seals	Silicon grease	
Brake caliper dust seals Front brake lever pivot and piston tips Rear master cylinder boot inside and push rod tips Rear brake caliper slide pin surface	Locking agent	
Rear brake caliper slide pin threads Rear master cylinder hose joint screw threads Driven sprocket stud bolt threads	Honda Bond A	
Handle grip rubber inside	Fork fluid	
Fork cap O-ring Fork oil seal lips		

## CABLE & HARNESS ROUTING

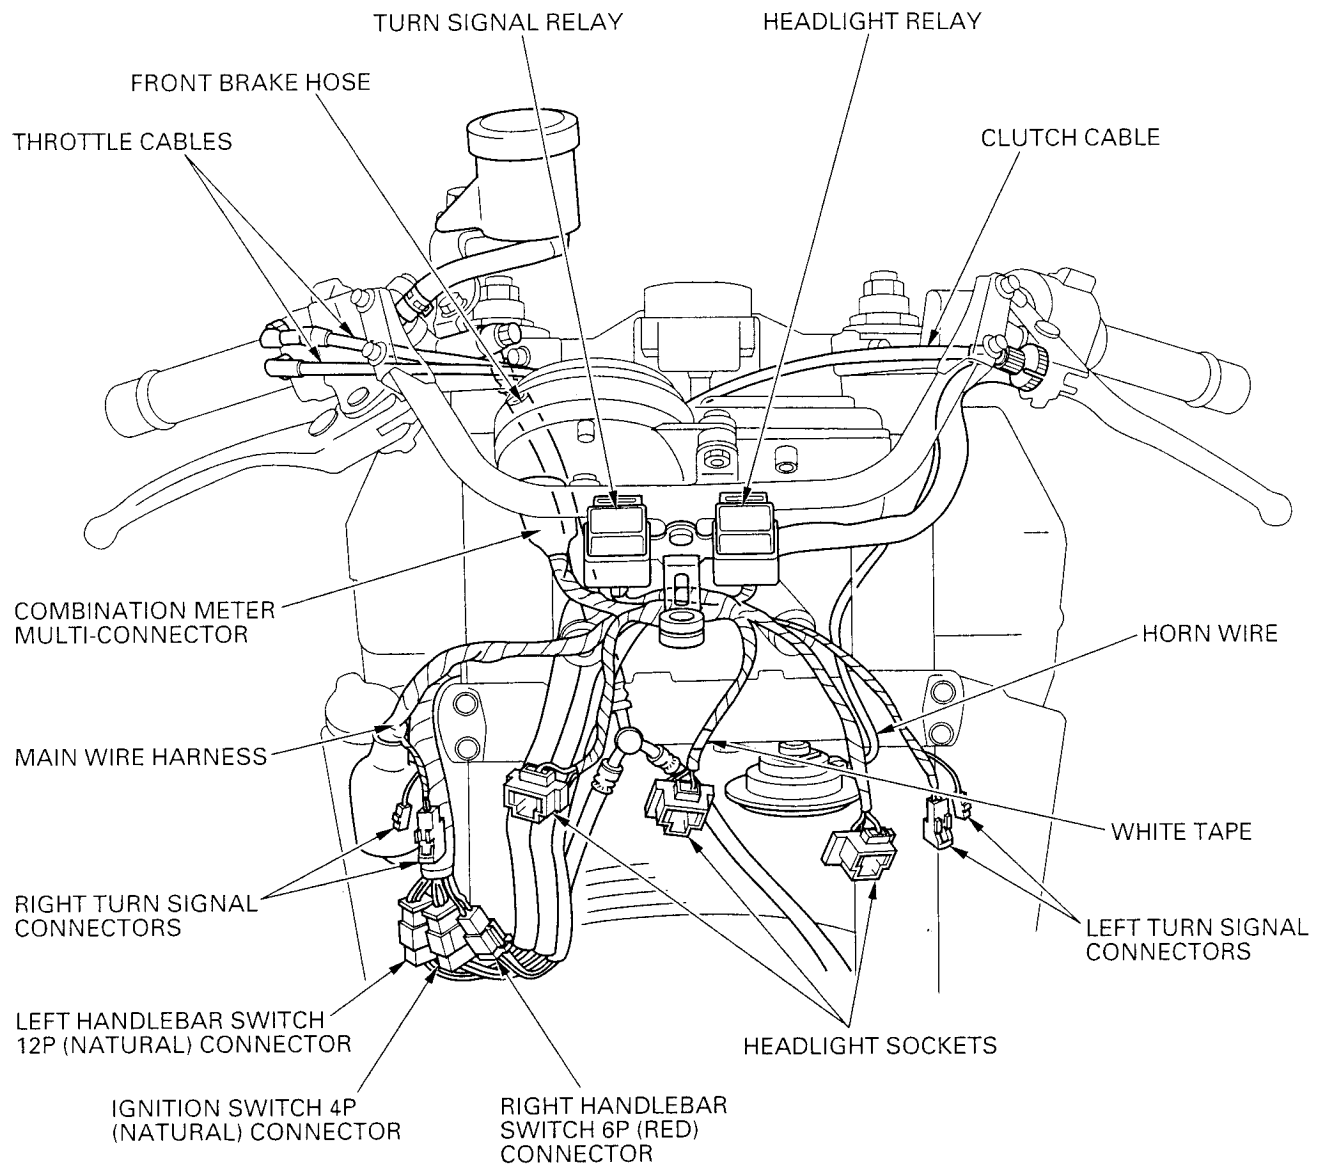

## GENERAL INFORMATION


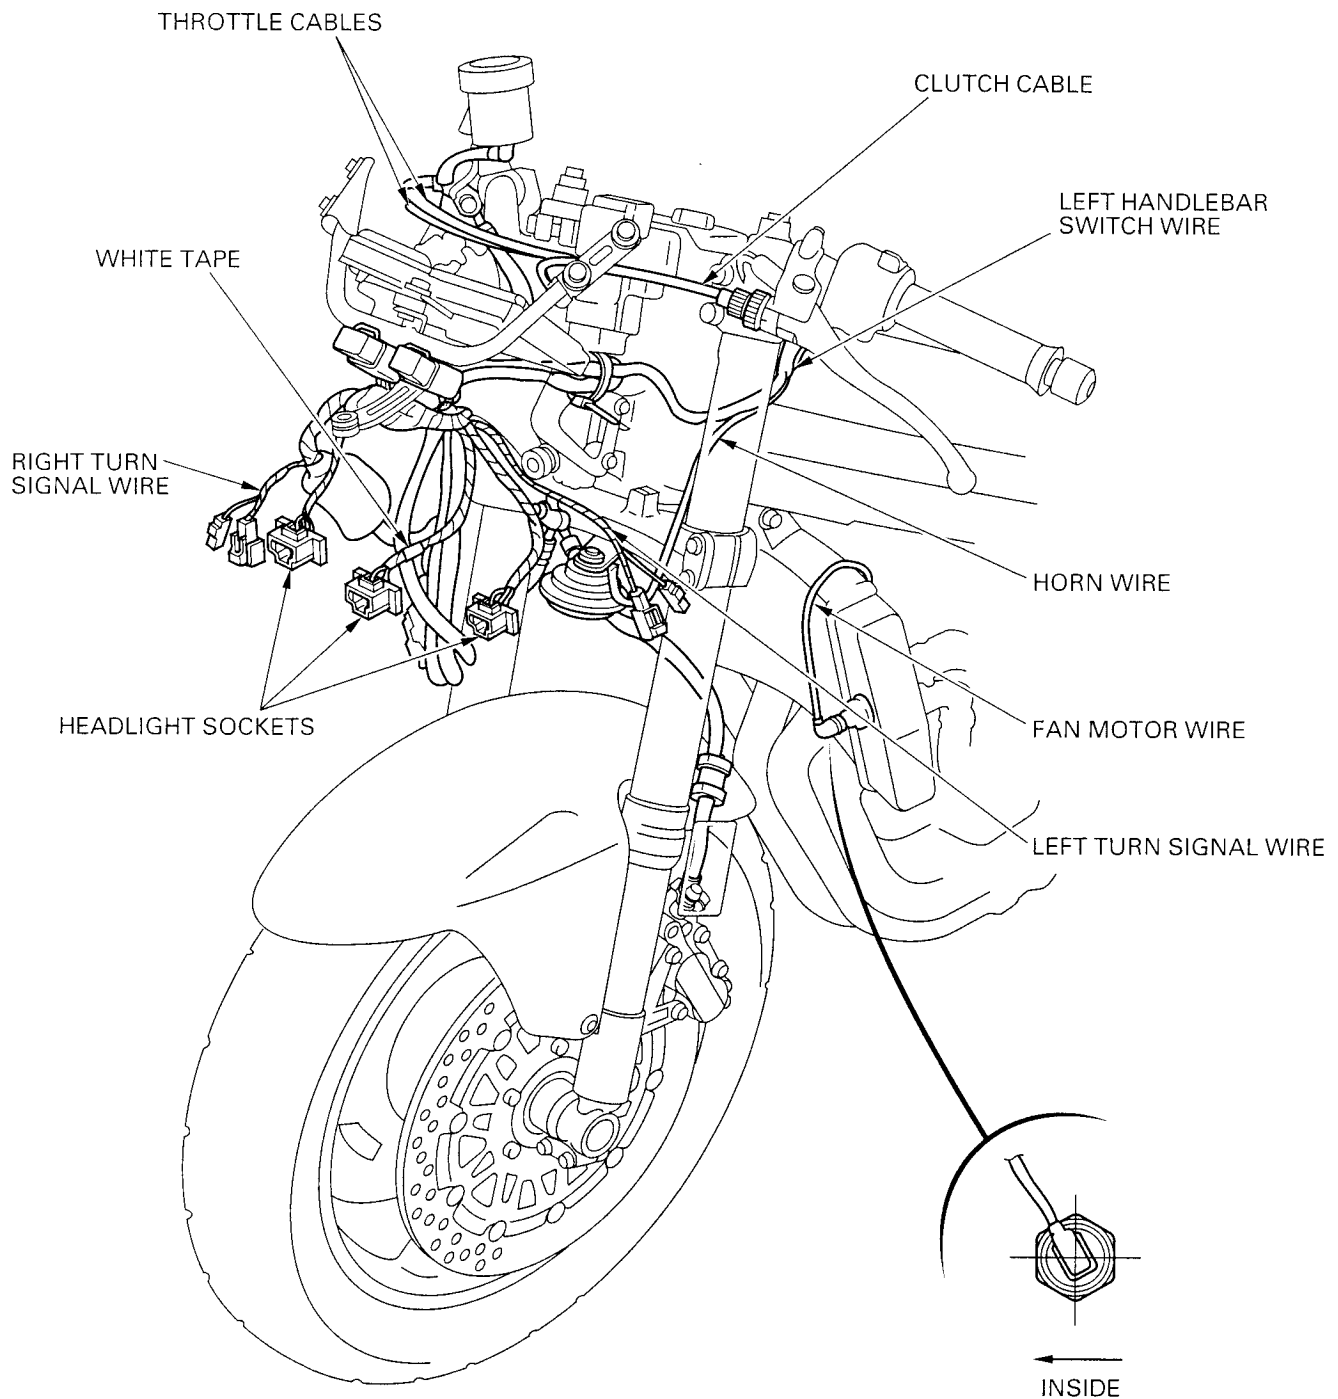


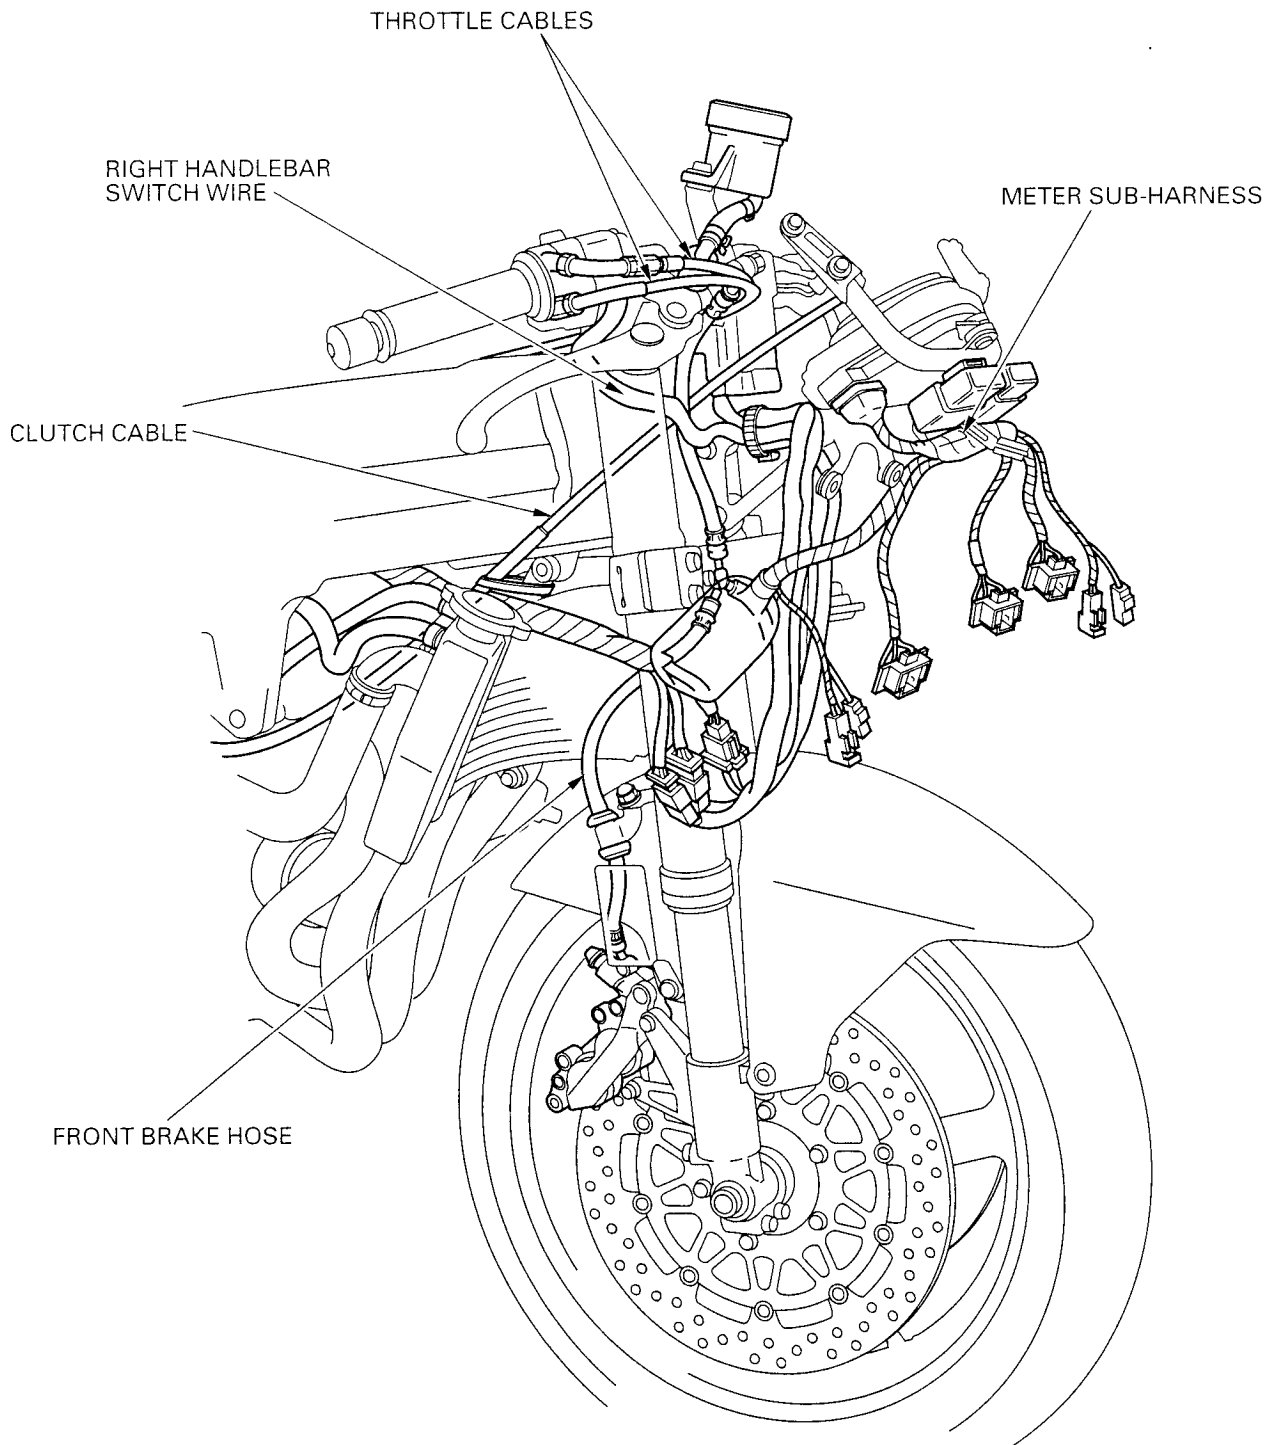




## GENERAL INFORMATION

---

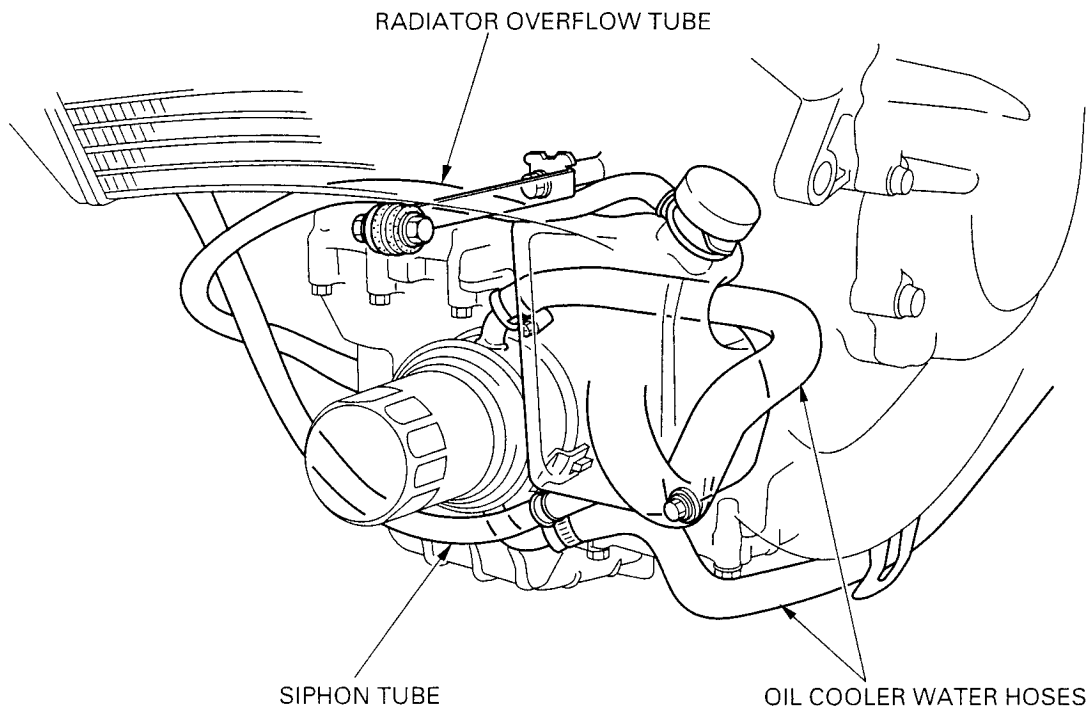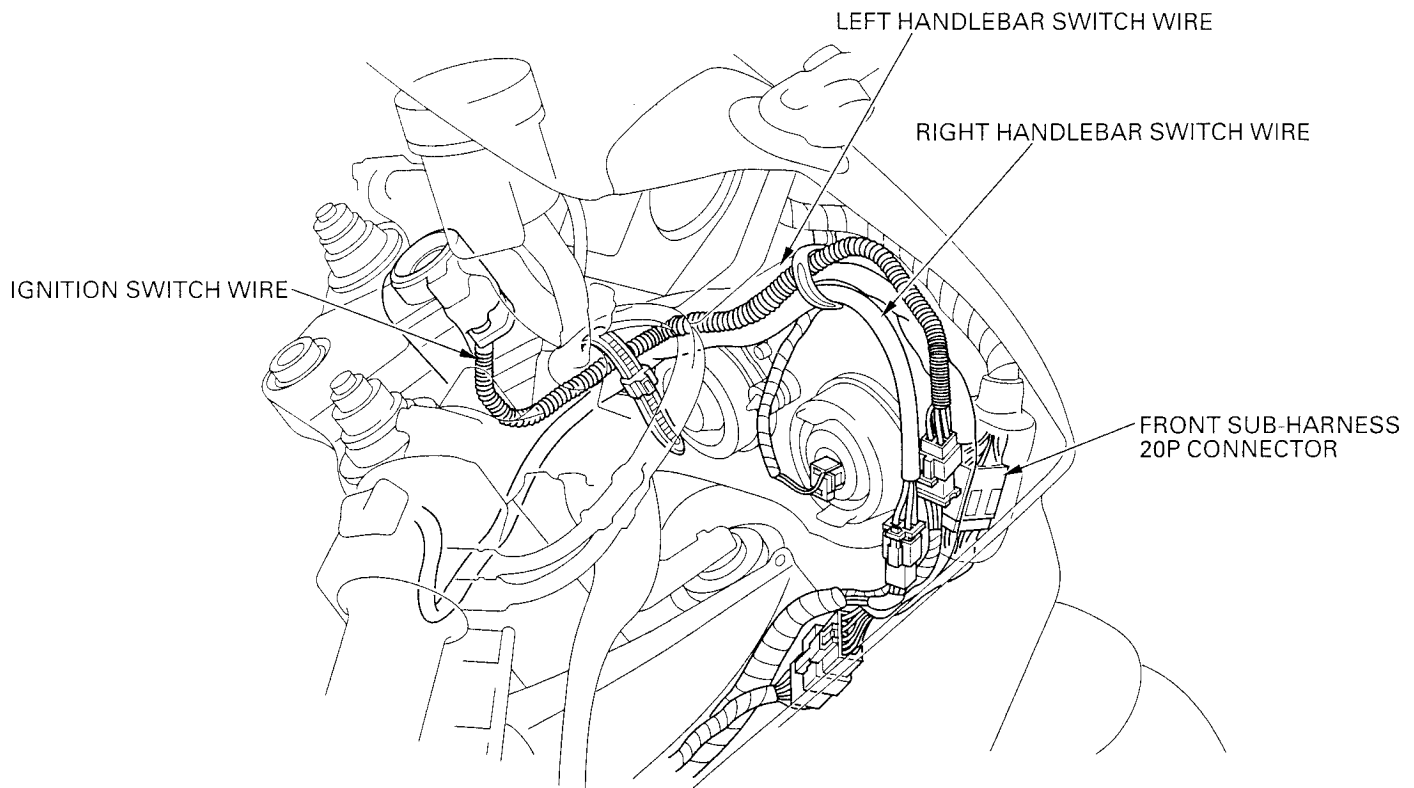



## GENERAL INFORMATION

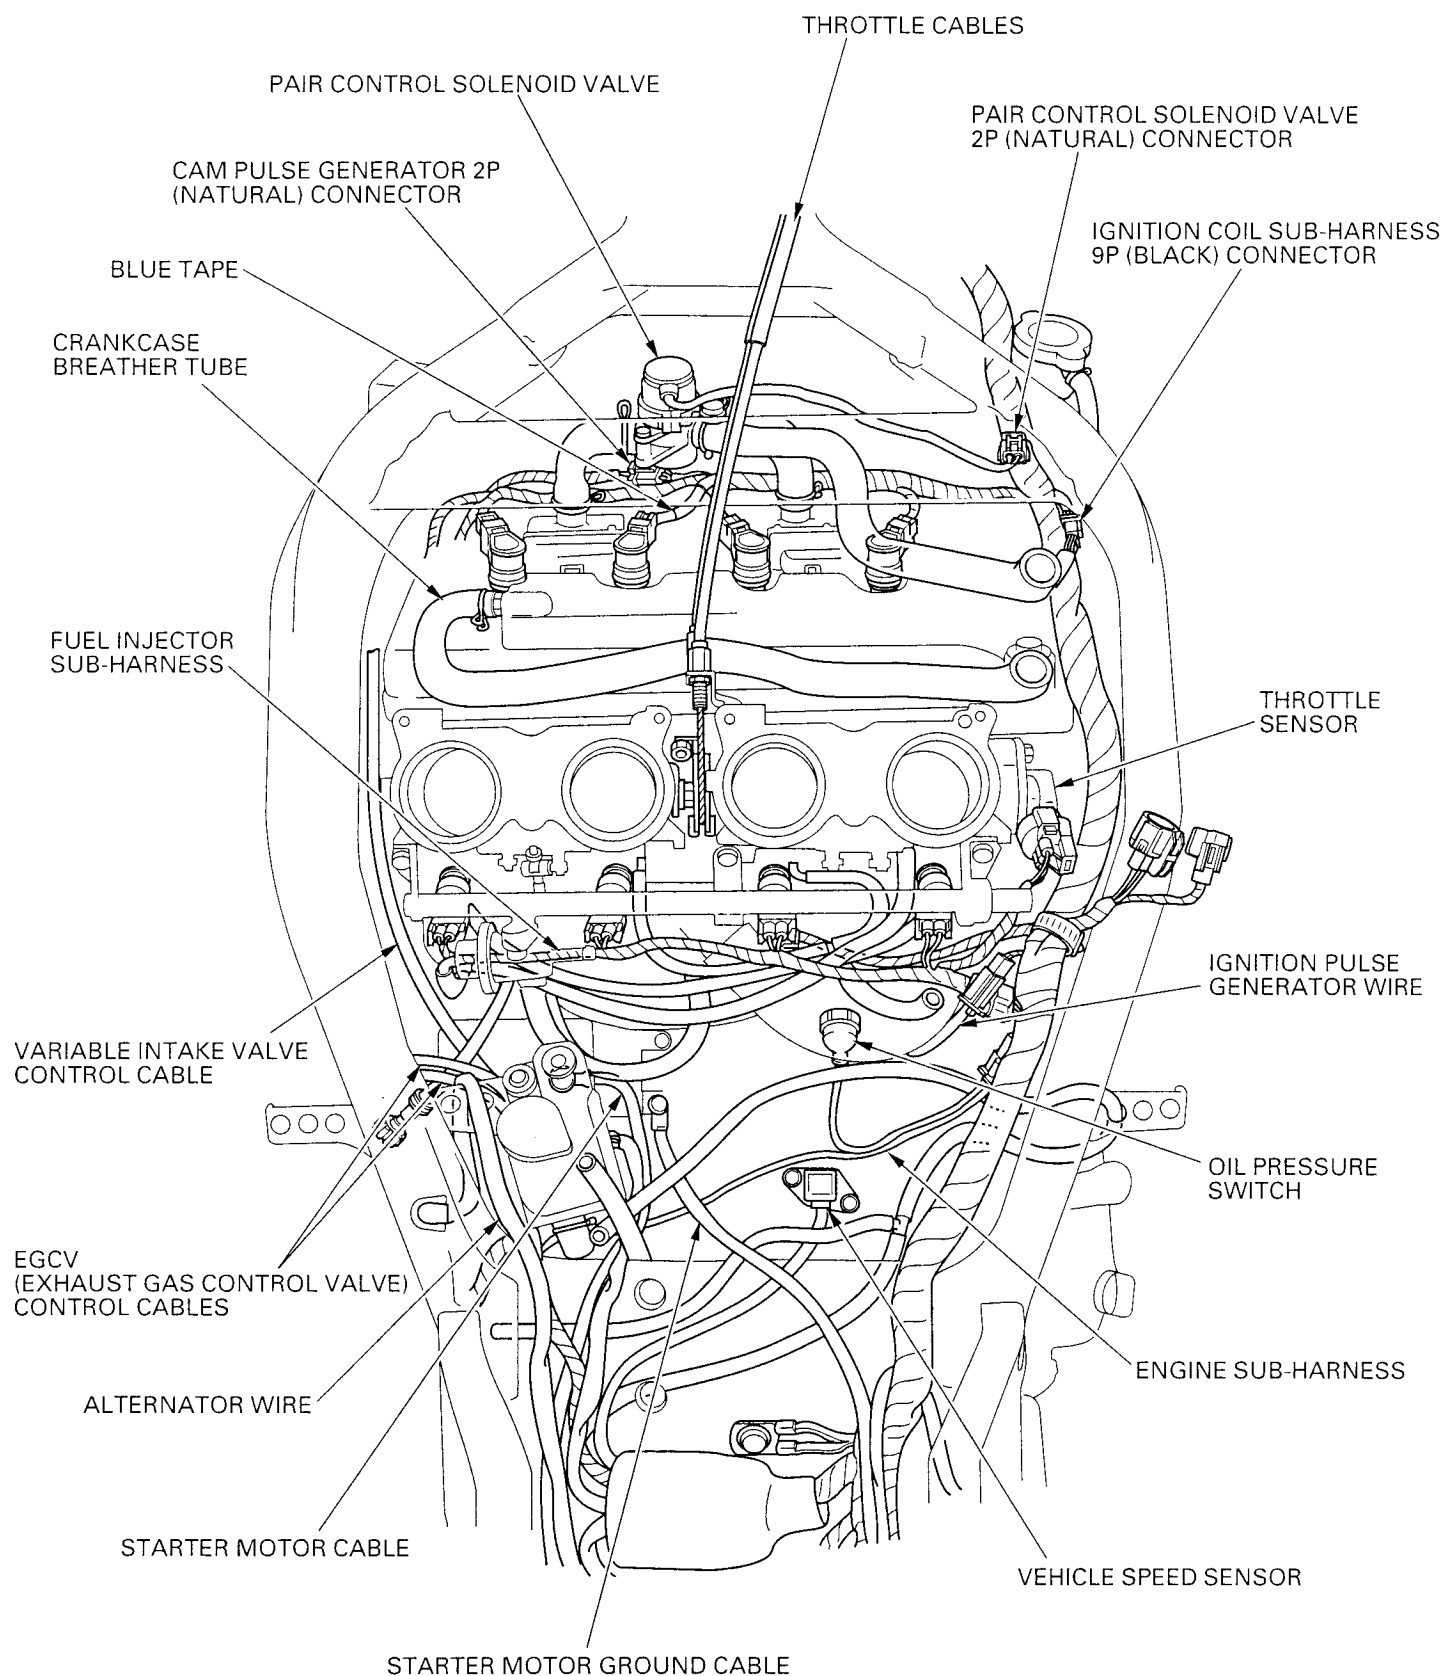

## GENERAL INFORMATION


---

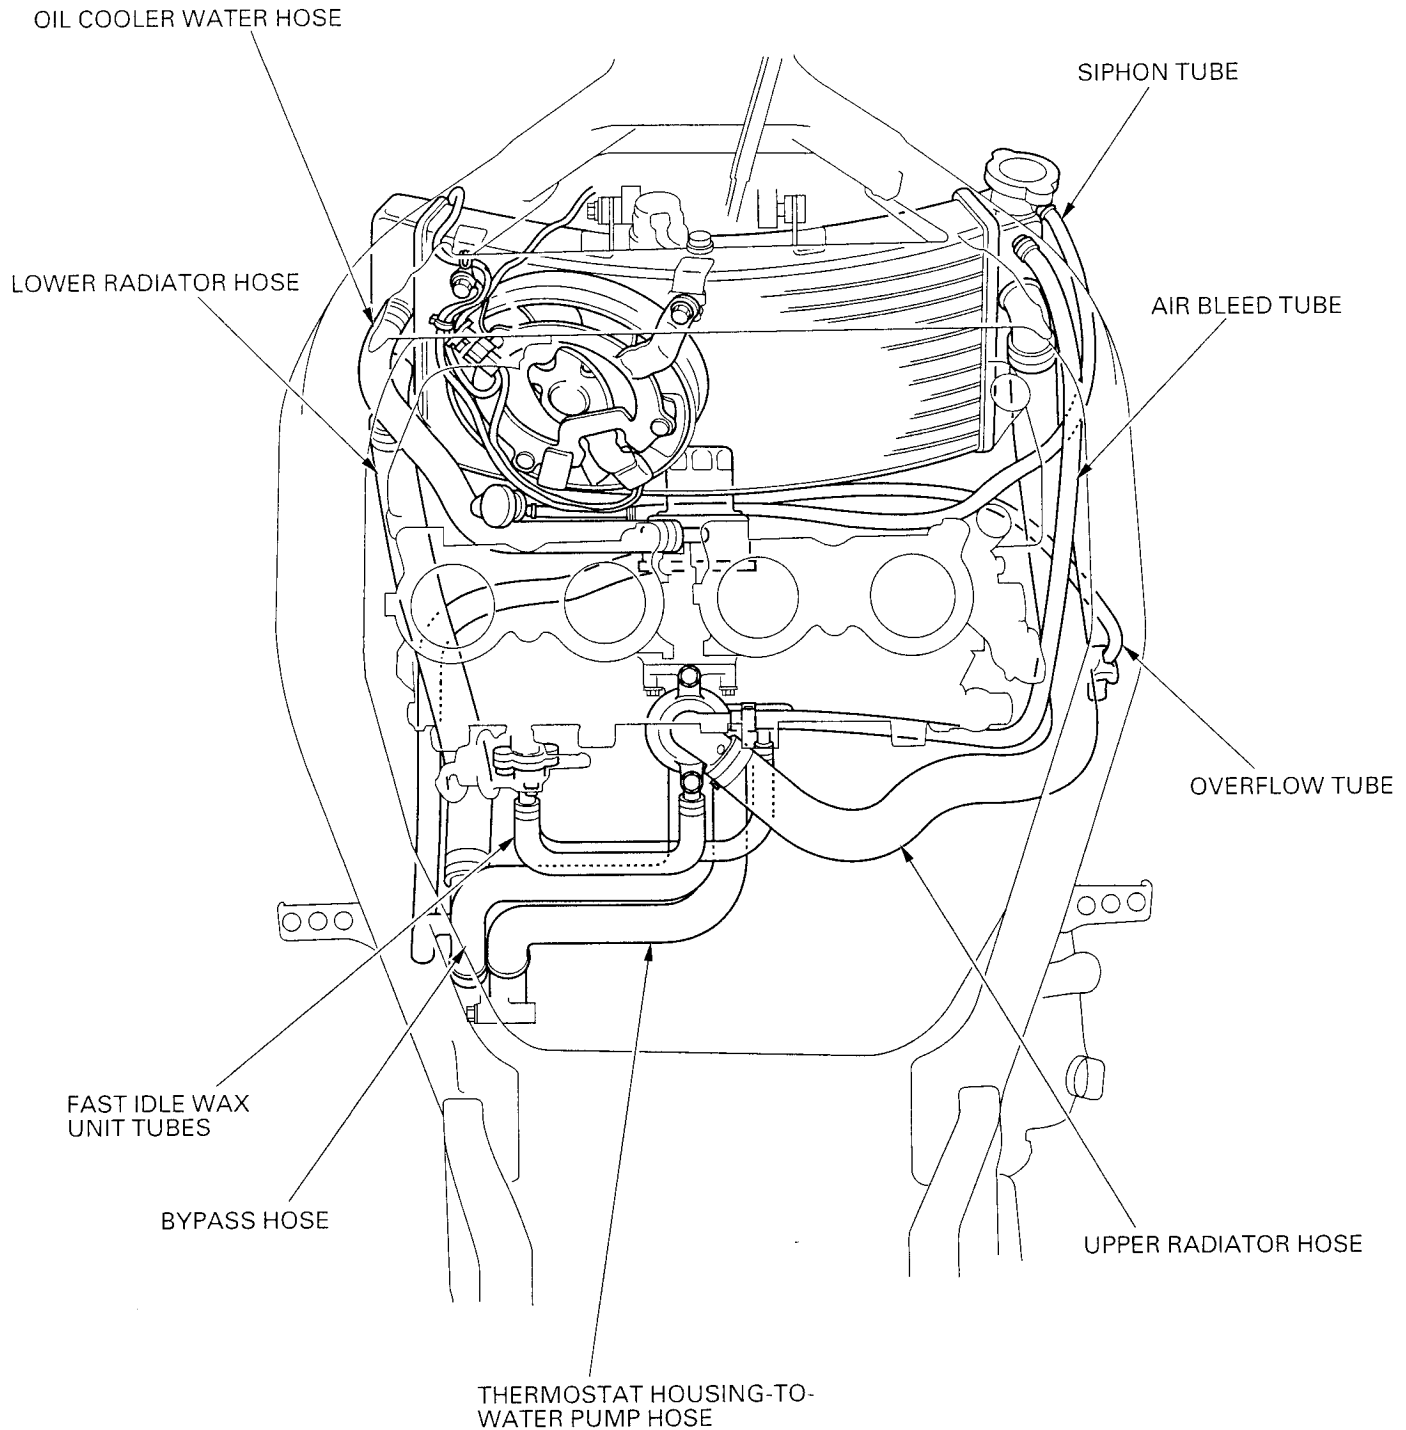

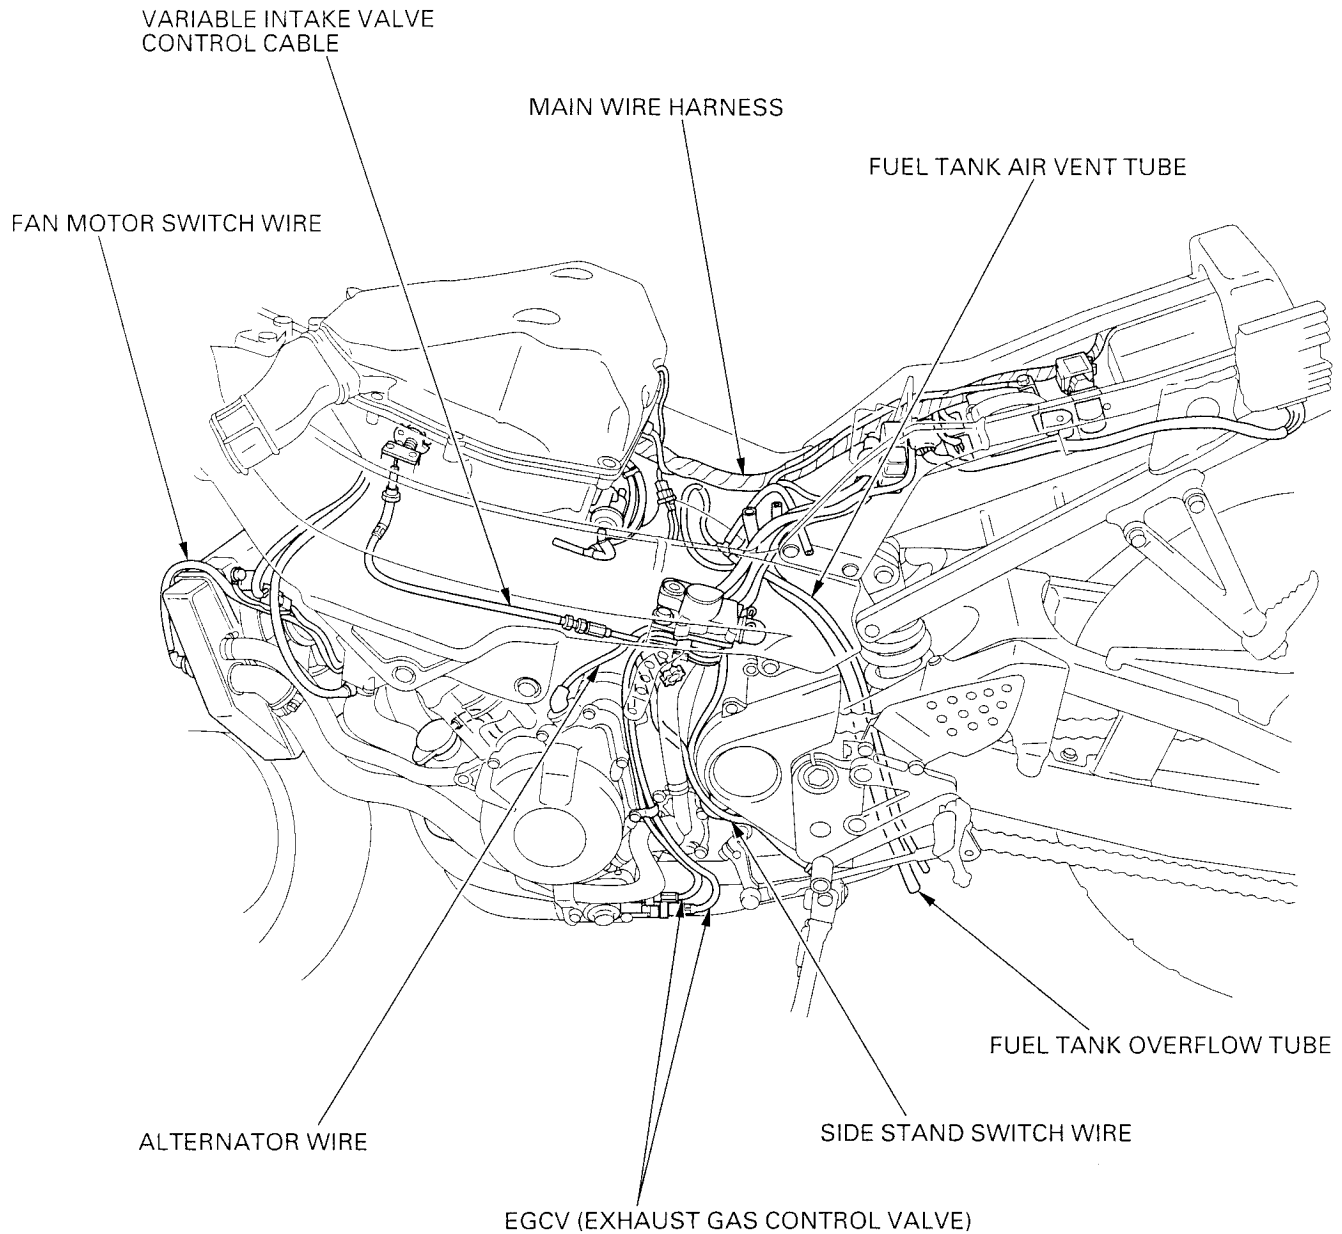


## GENERAL INFORMATION

---

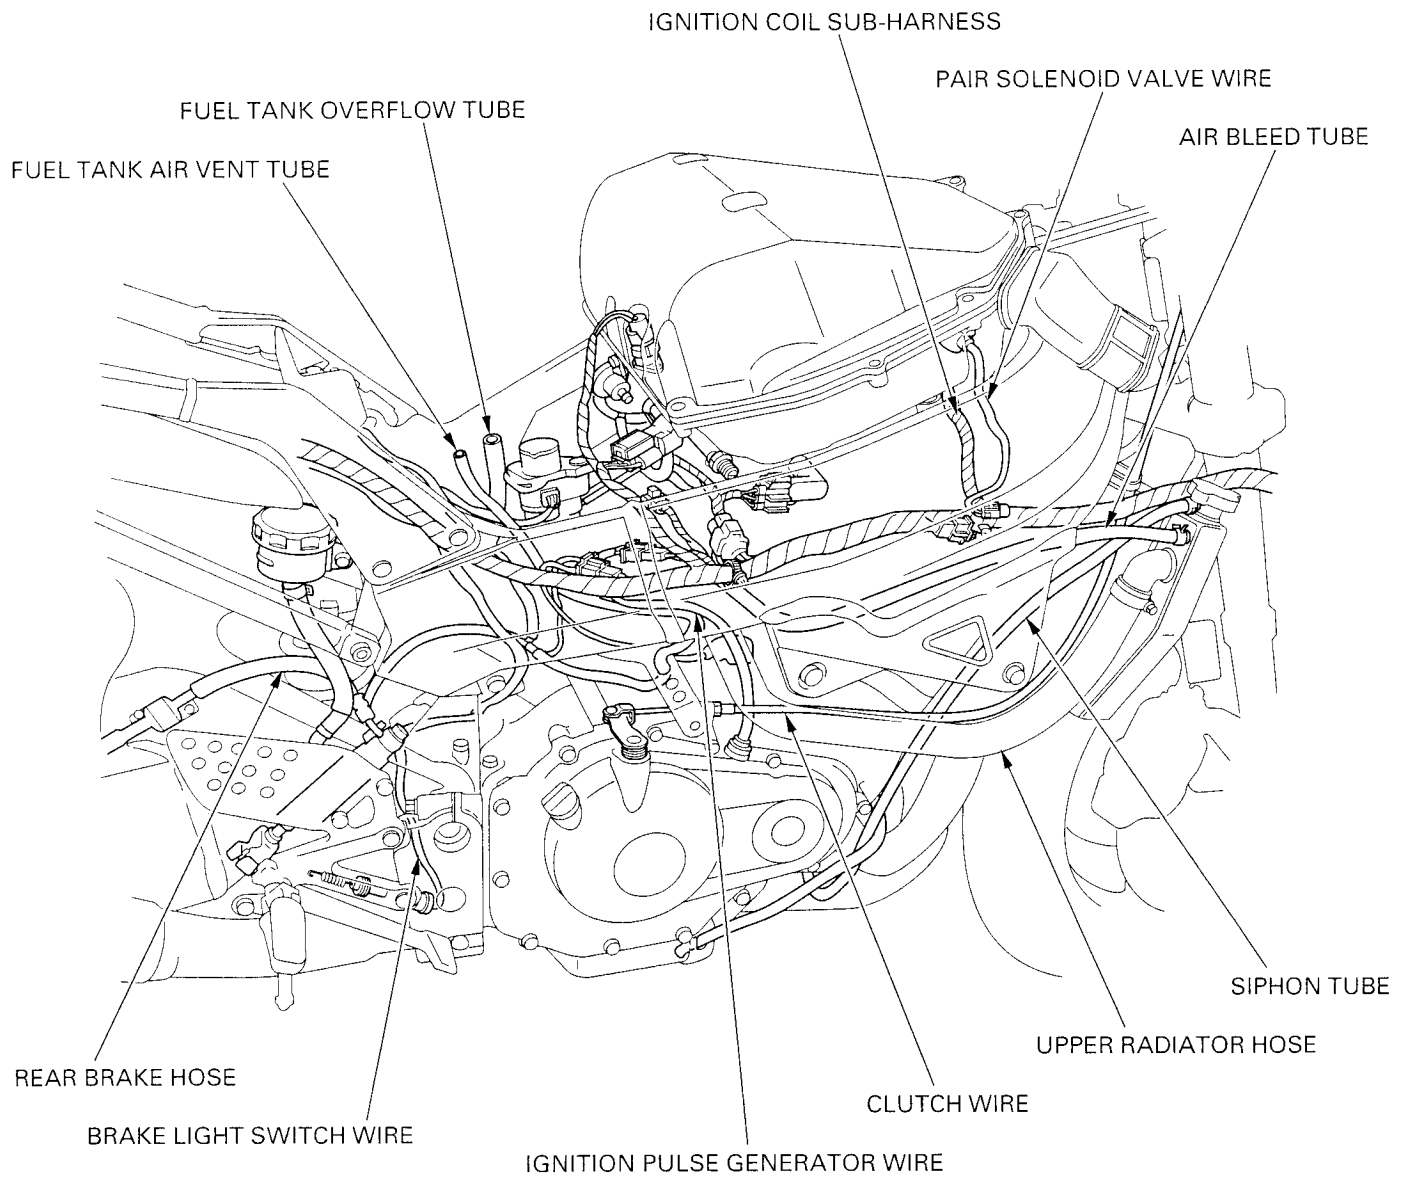


## GENERAL INFORMATION

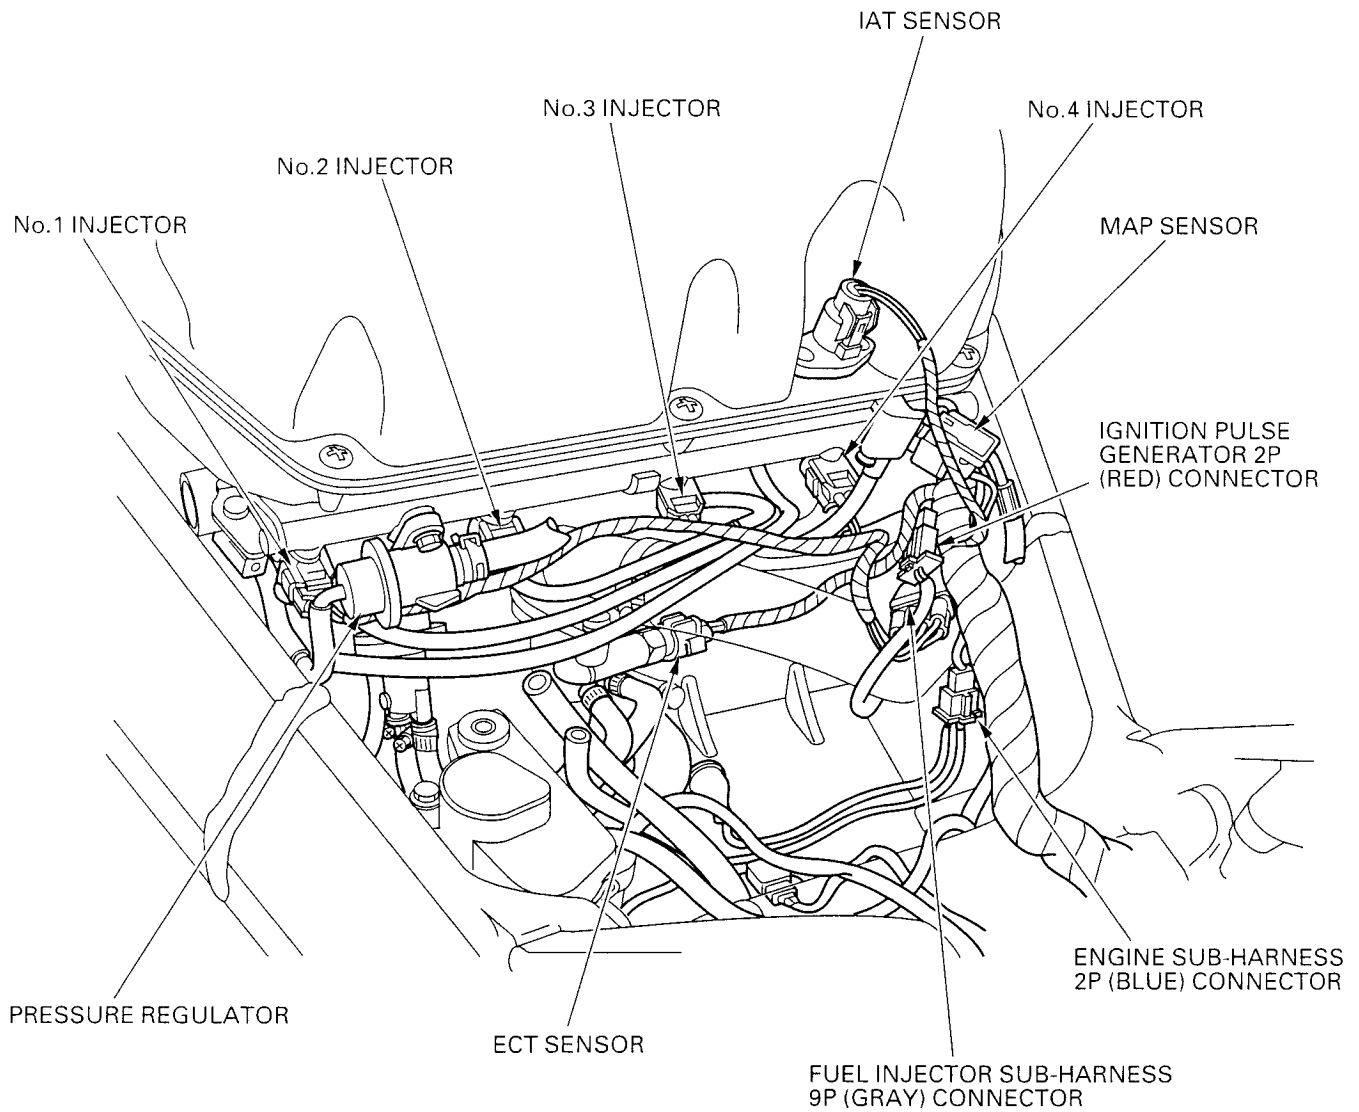


## GENERAL INFORMATION

---

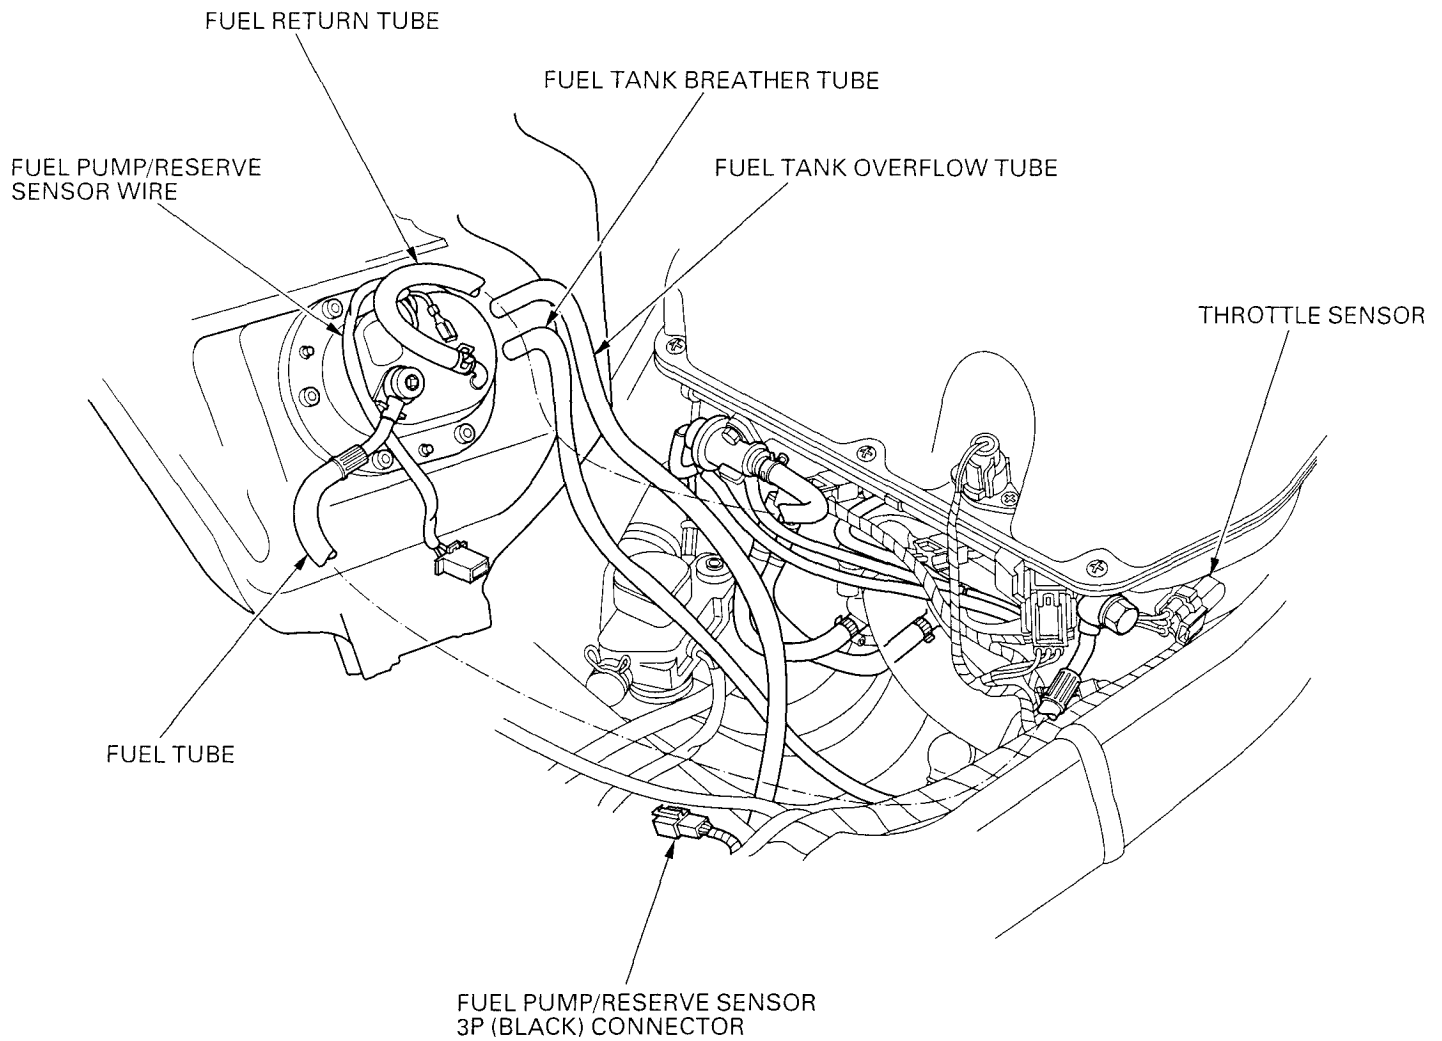




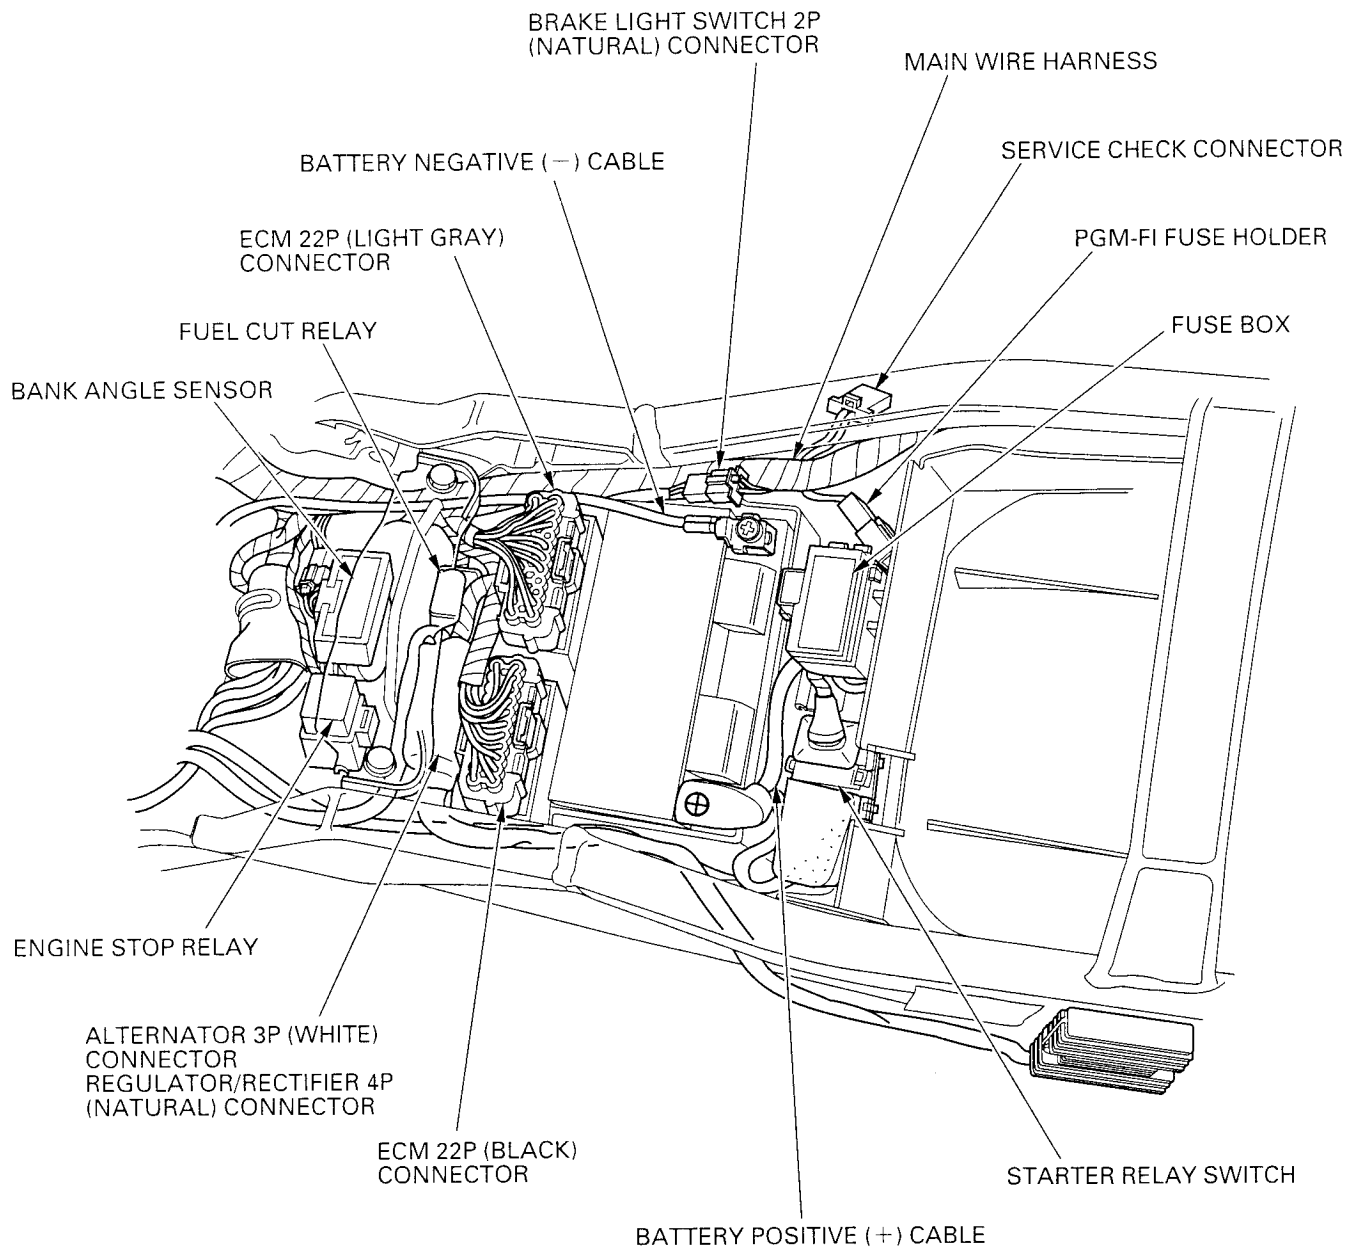




## GENERAL INFORMATION

---

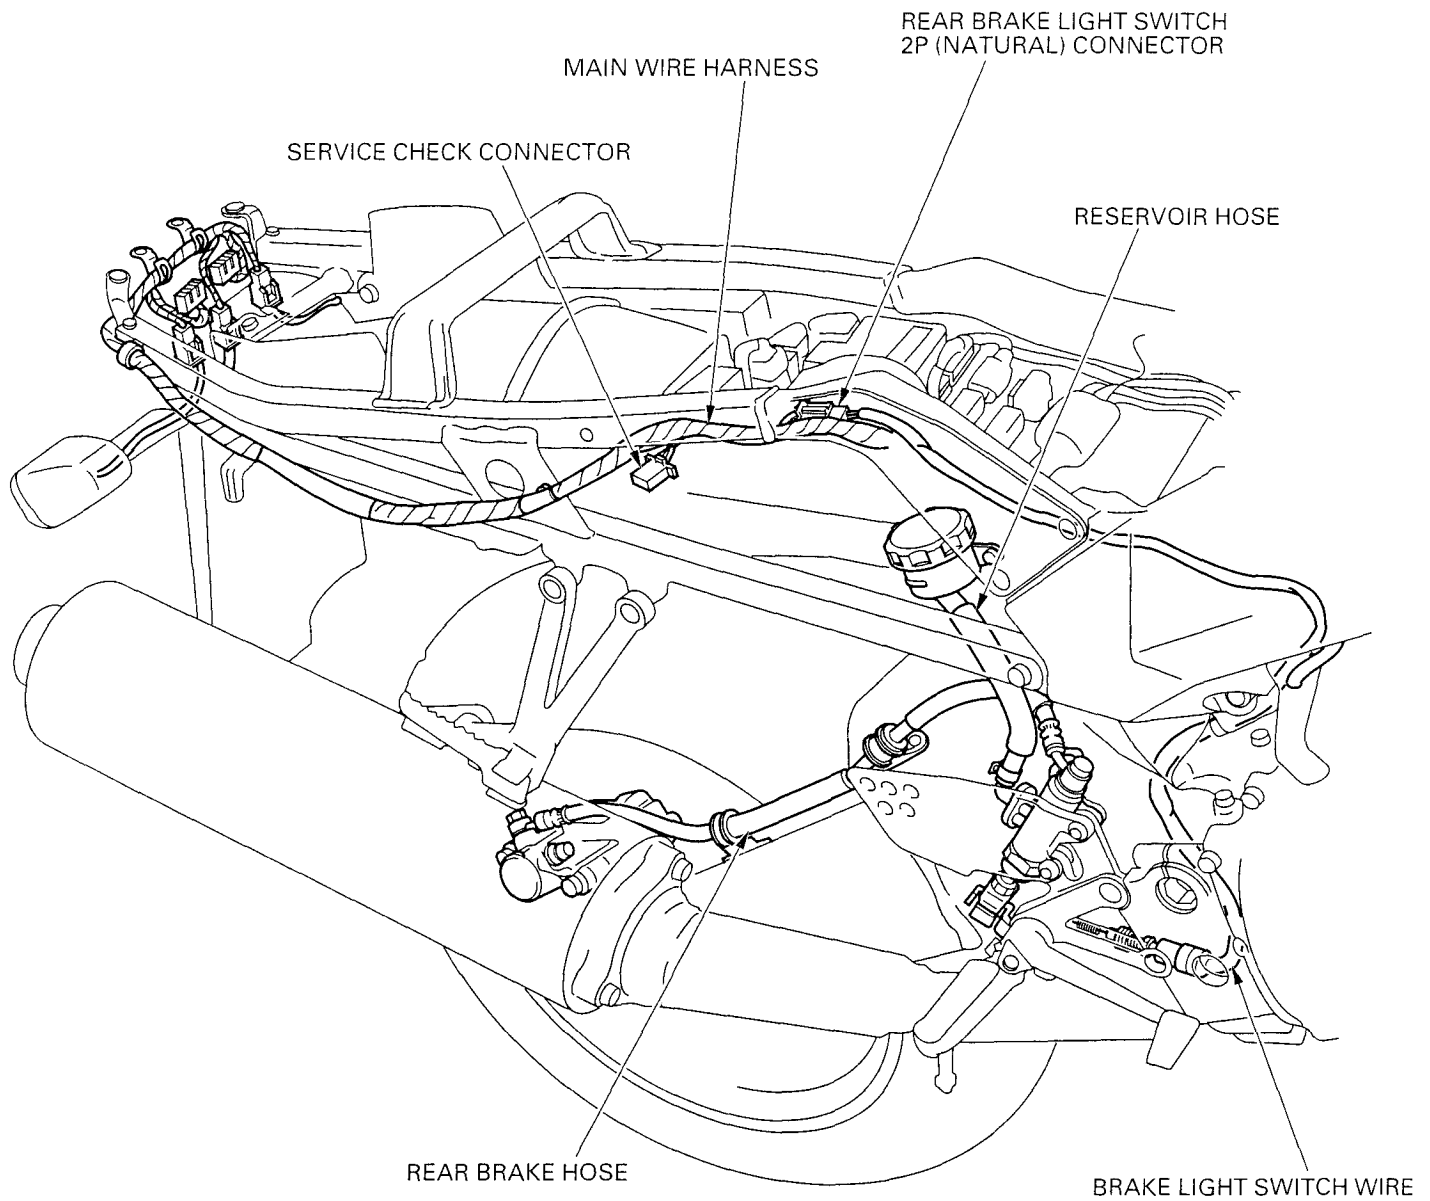



CALIFORNIA TYPE:

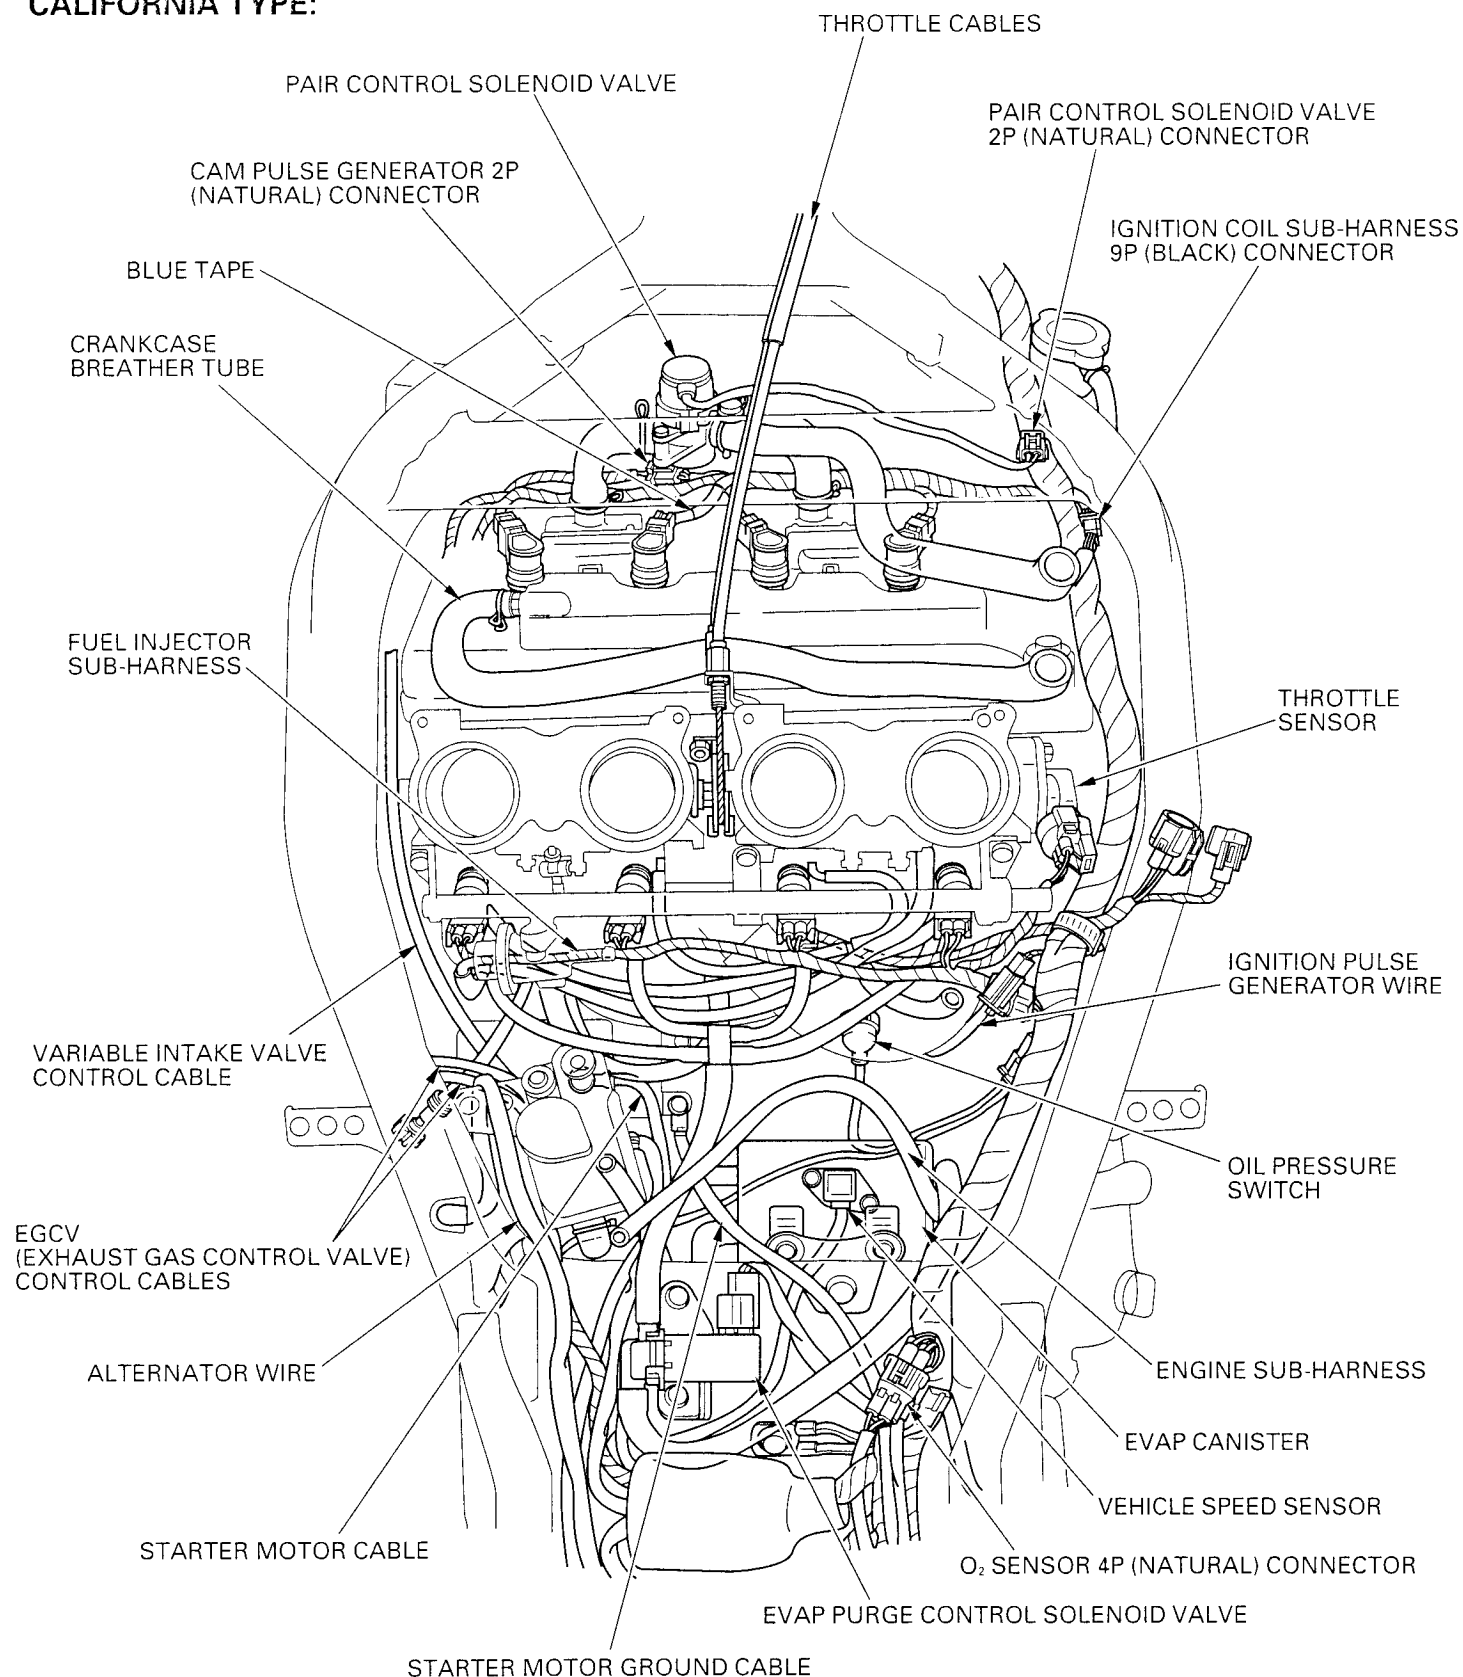


## GENERAL INFORMATION

---

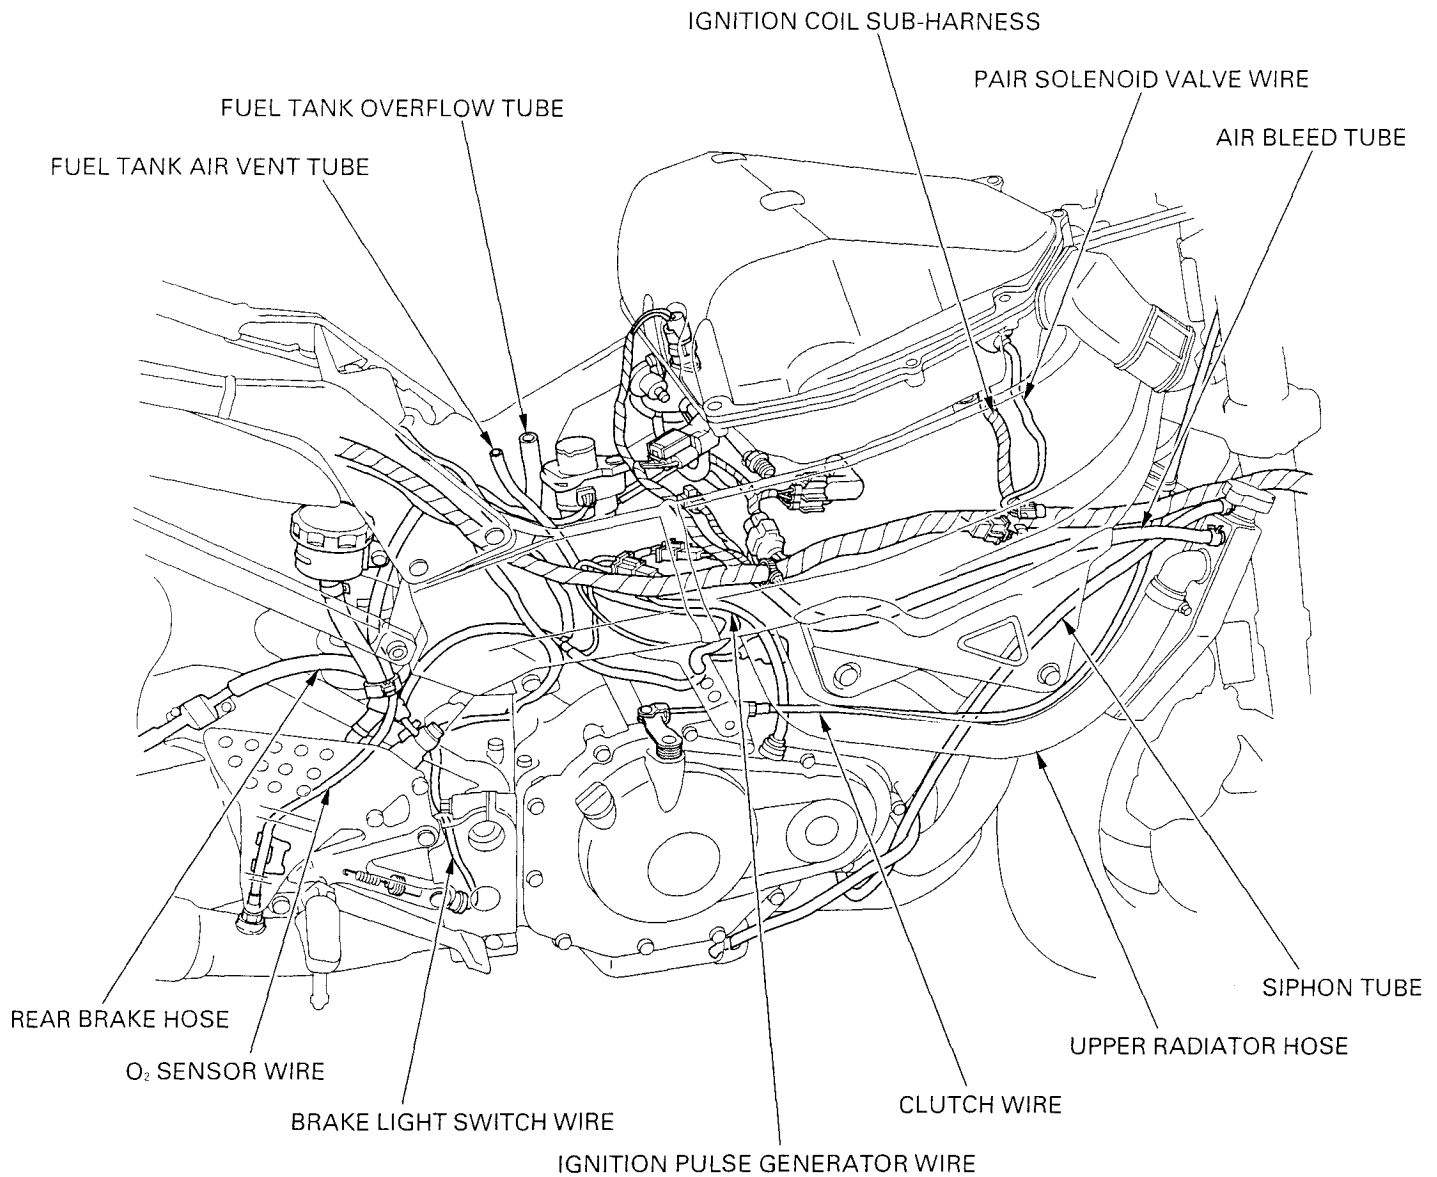


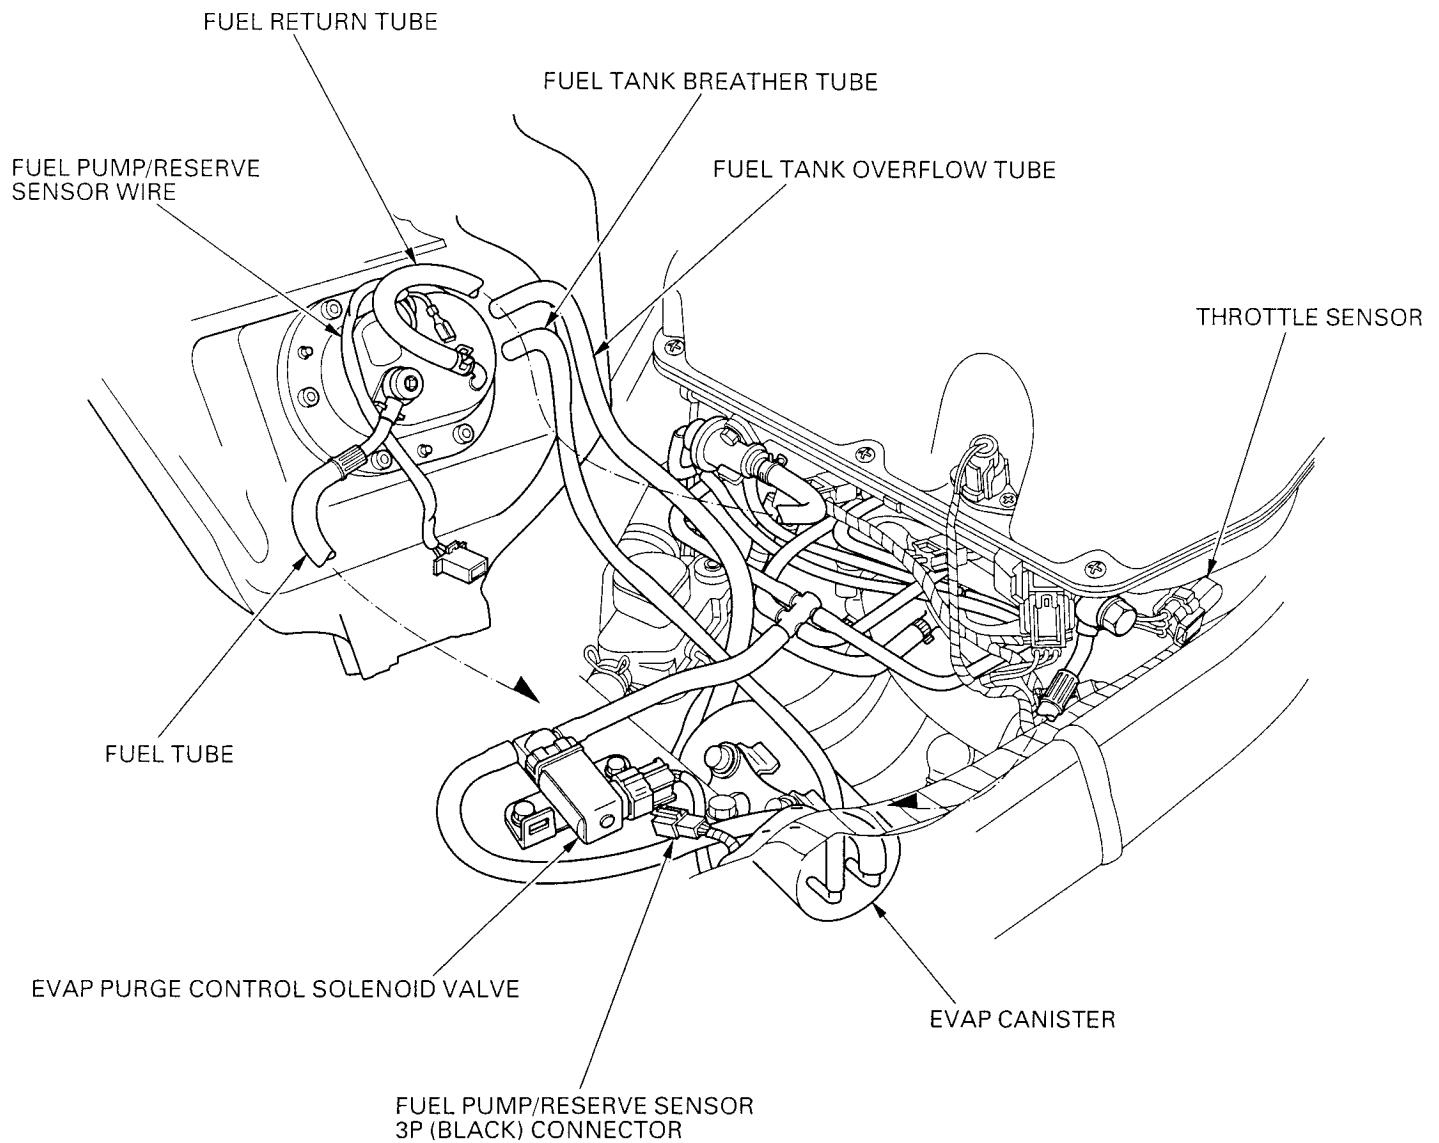

## GENERAL INFORMATION

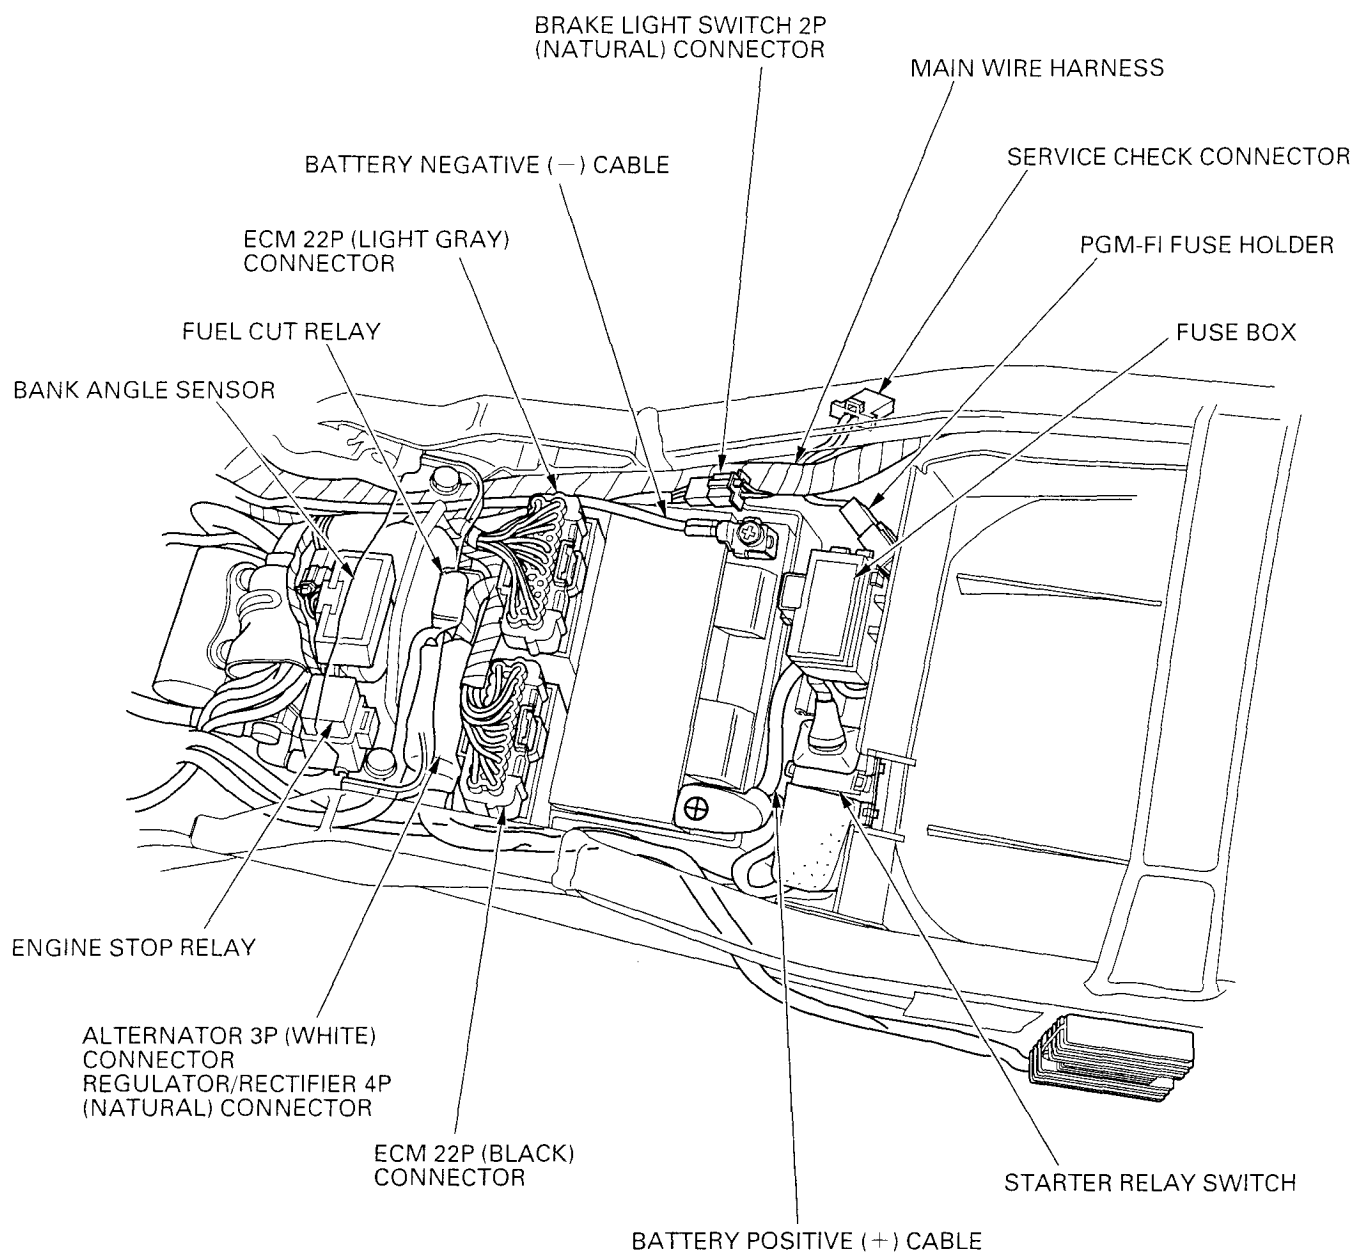

## GENERAL INFORMATION

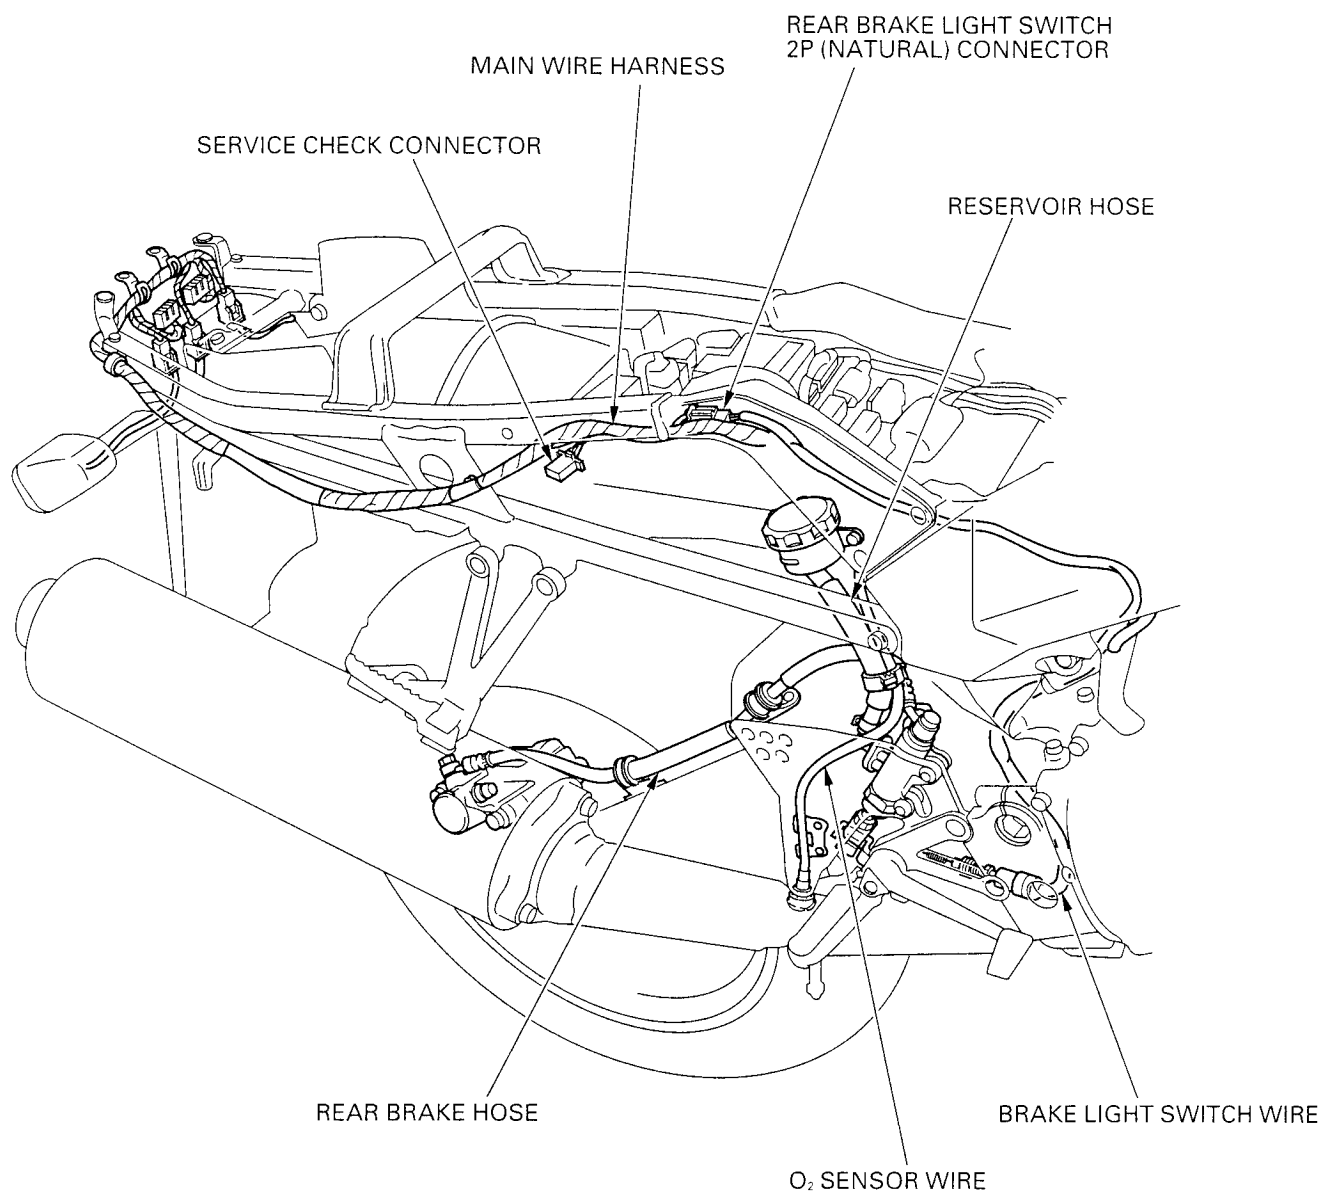

## GENERAL INFORMATION

---

### EMISSION CONTROL SYSTEMS

The U.S. Environmental Protection Agency, California Air Resources Board (CARB) and Transport Canada require manufacturers to certify that their motorcycles comply with applicable exhaust emissions standards during their useful life, when operated and maintained according to the instructions provided, and that motorcycles built after January 1, 1983 comply with applicable noise emission standards for one year or 6,000 km (3,730 miles) after the time of sale to the ultimate purchaser, when operated and maintained according to the instructions provided. Compliance with the terms of the Distributor's Limited Warranty for Honda Motorcycles Emission Control System is necessary in order to keep the emissions system warranty in effect.


#### SOURCE OF EMISSIONS

The combustion process produces carbon monoxide and hydrocarbons. Control of hydrocarbons is very important because, under certain conditions, they react to form photochemical smog when subjected to sunlight. Carbon monoxide does not react in the same way, but it is toxic.

Honda Motor Co., Ltd. utilizes lean injection settings as well as other systems, to reduce carbon monoxide and hydrocarbons.

#### CRANKCASE EMISSION CONTROL SYSTEM

The engine is equipped with a closed crankcase system to prevent discharging crankcase emissions into the atmosphere. Blow-by gas is returned to the combustion chamber through the air cleaner and throttle body.

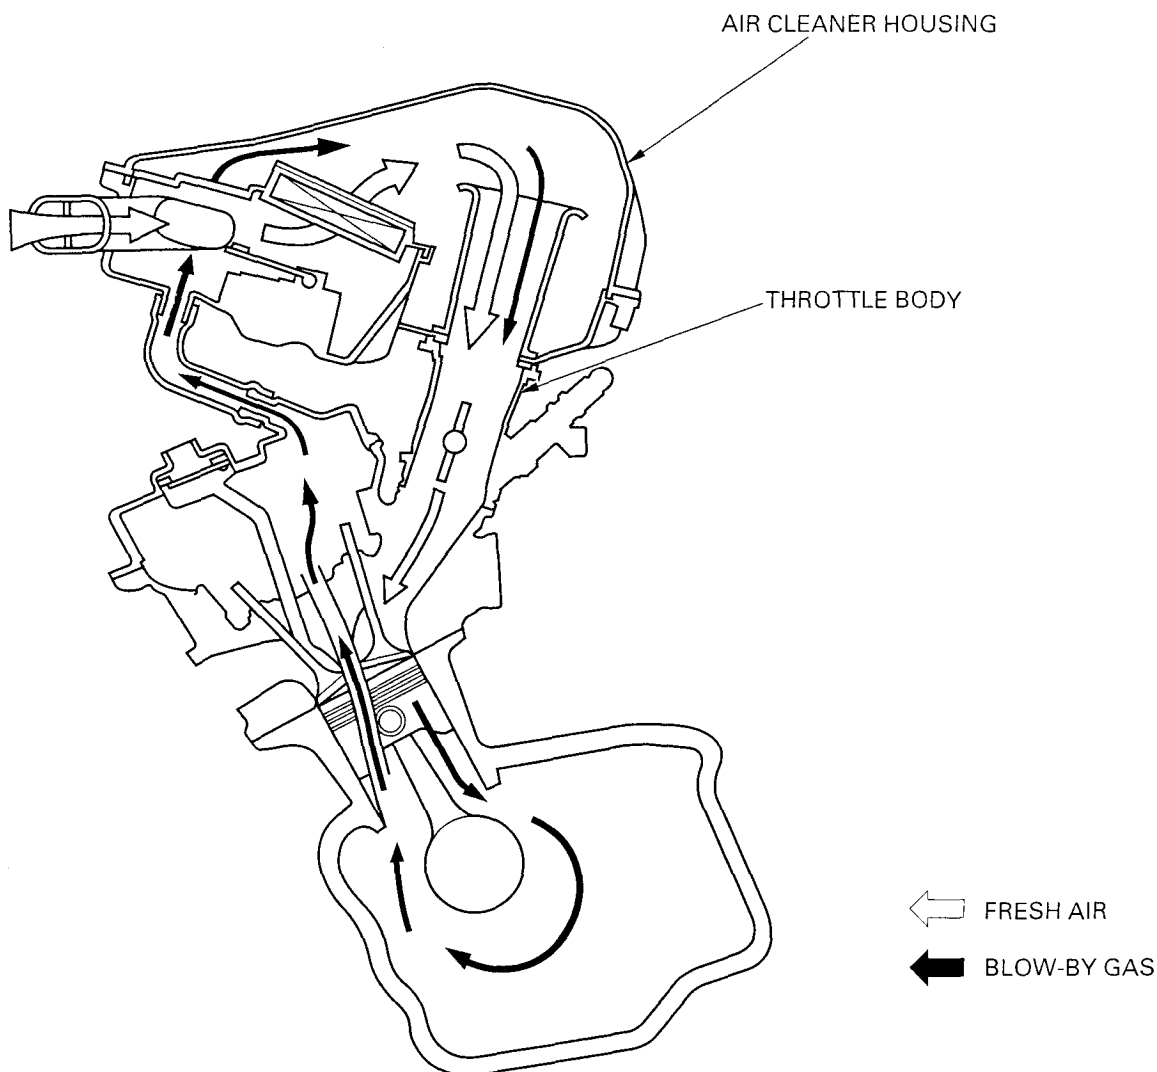



**EXHAUST EMISSION CONTROL SYSTEM (SECONDARY AIR SUPPLY SYSTEM)**


The exhaust emission control system is composed of a lean fuel injection setting, and no adjustments should be made except idle speed adjustment with the throttle stop screw. The exhaust emission control system is separate from the crankcase emission control system.

The exhaust emission control system consists of a secondary air supply system which introduces filtered air into the exhaust gases in the exhaust port. Fresh air is drawn into the exhaust port by the function of the PAIR (Pulse Secondary Air Injection) control valve.

This charge of fresh air promotes burning of the unburned exhaust gases and changes a considerable amount of hydrocarbons and carbon monoxide into relatively harmless carbon dioxide and water vapor.

The reed valve prevents reverse air flow through the system. The PAIR control valve is operated by the solenoid valve. The solenoid valve is controlled by the PGM-FI unit, and the fresh air passage is opened/closed according the running condition (ECT/IAT/TP/MAP sensor and engine revolution).

No adjustments to the secondary air supply system should be made, although periodic inspection of the components is recommended.

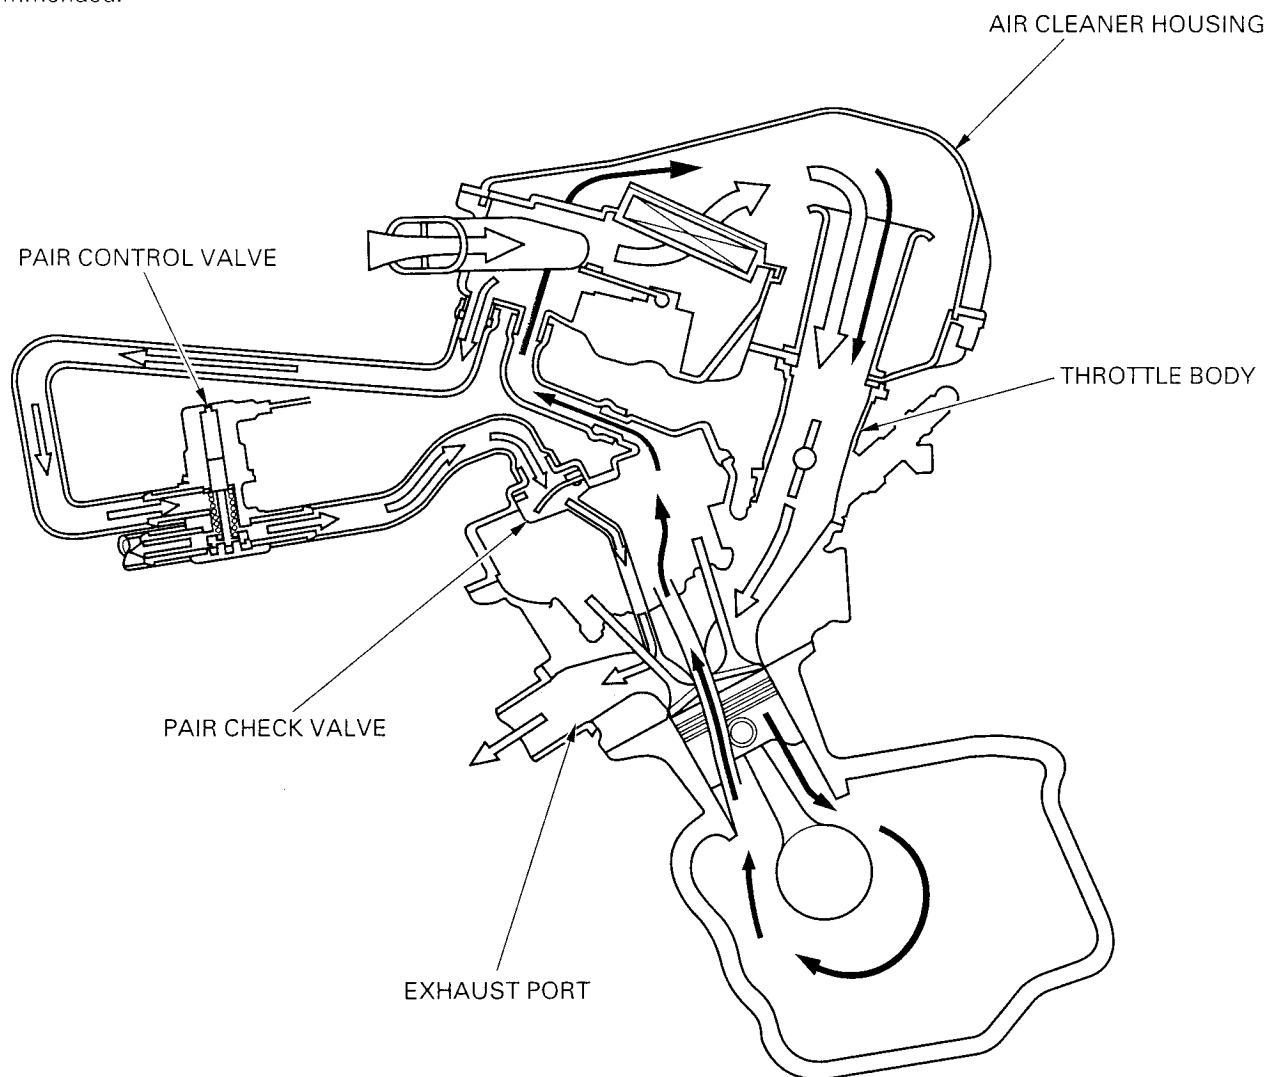**California type:**

The California type also equipped two three-way warm-up catalytic converters, a three-way catalytic converter, and a heated oxygen sensor.

The three-way catalytic converters are in the exhaust system. Through chemical reactions, they convert HC, CO, and NOx in the engine's exhaust to carbon dioxide (CO<sub>2</sub>), dinitrogen (N<sub>2</sub>), and water vapor.

No adjustment to these systems should be made although periodic inspection of the components is recommended.




## GENERAL INFORMATION

### EVAPORATIVE EMISSION CONTROL SYSTEM (CALIFORNIA TYPE ONLY)

This model complies with California Air Resources Board evaporative emission requirements.

Fuel vapor from the fuel tank is routed into the evaporative emission (EVAP) canister where it is absorbed and stored while the engine is stopped. When the engine is running and the evaporative emission (EVAP) purge control solenoid valve is open, fuel vapor in the EVAP canister is drawn into the engine through the throttle body.

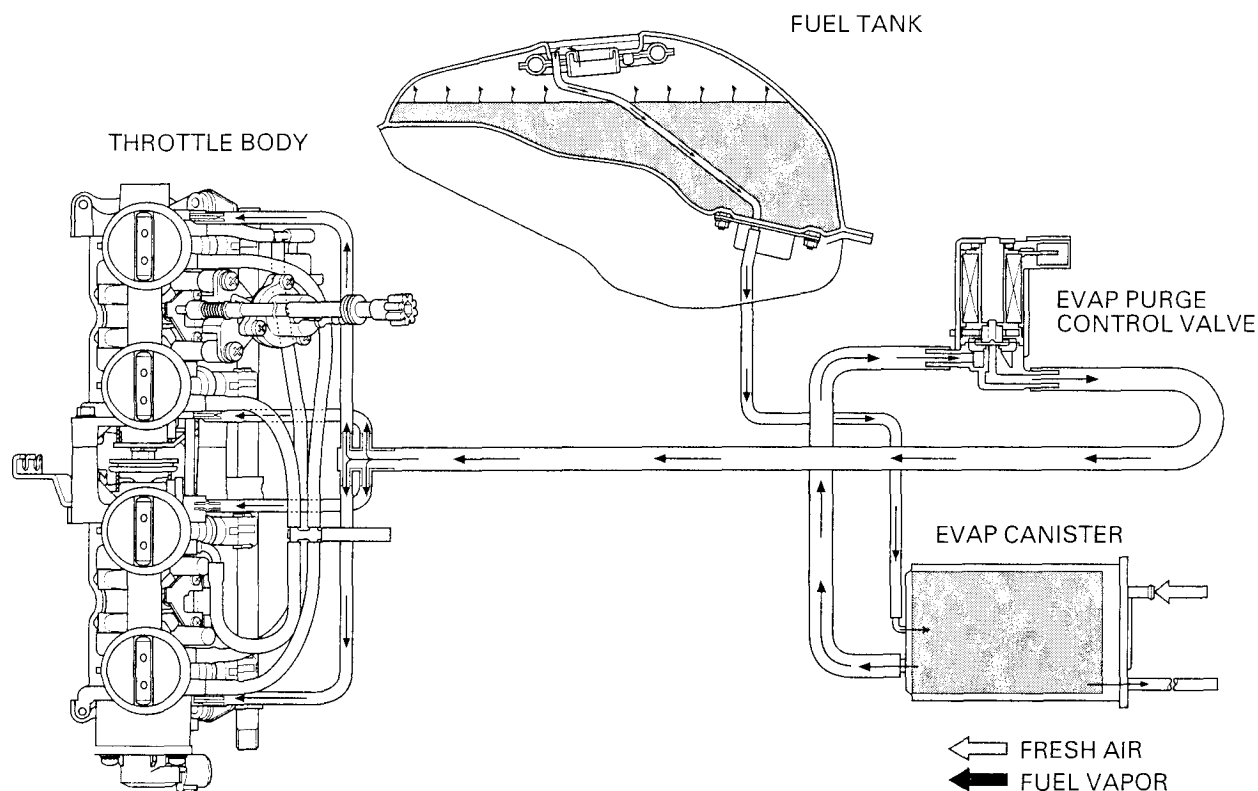

### NOISE EMISSION CONTROL SYSTEM

**TAMPERING WITH THE NOISE CONTROL SYSTEM IS PROHIBITED:** Local law prohibits the following acts or the causing thereof: (1) The removal or rendering inoperative by any person, other than for purposes of maintenance, repair or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use; (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.


#### AMONG THOSE ACTS PRESUMED TO CONSTITUTE TAMPERING ARE THE ACTS LISTED BELOW:

1. Removal of, or puncturing of the muffler, baffles, header pipes or any other component which conducts exhaust gases.
2. Removal of, or puncturing of any part of the intake system.
3. Lack of proper maintenance.
4. Replacing any moving parts of the vehicle, or parts of the exhaust or intake system, with parts other than those specified by the manufacturer.

## GENERAL INFORMATION



### EMISSION CONTROL INFORMATION LABELS (U. S. A. ONLY)

An Emission Control Information Label is located on the storage compartment as shown.  
The seat must be removed to read it.  
It gives base tune-up specifications.

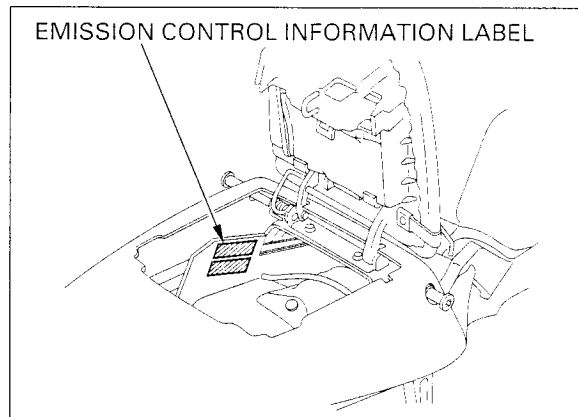



### VACUUM HOSE ROUTING DIAGRAM LABEL (CALIFORNIA TYPE ONLY)

The Vacuum Hose Routing Diagram Label is on the air cleaner housing cover as shown.  
The fuel tank must be opened to read it. Refer to page 3-4 for fuel tank opening.

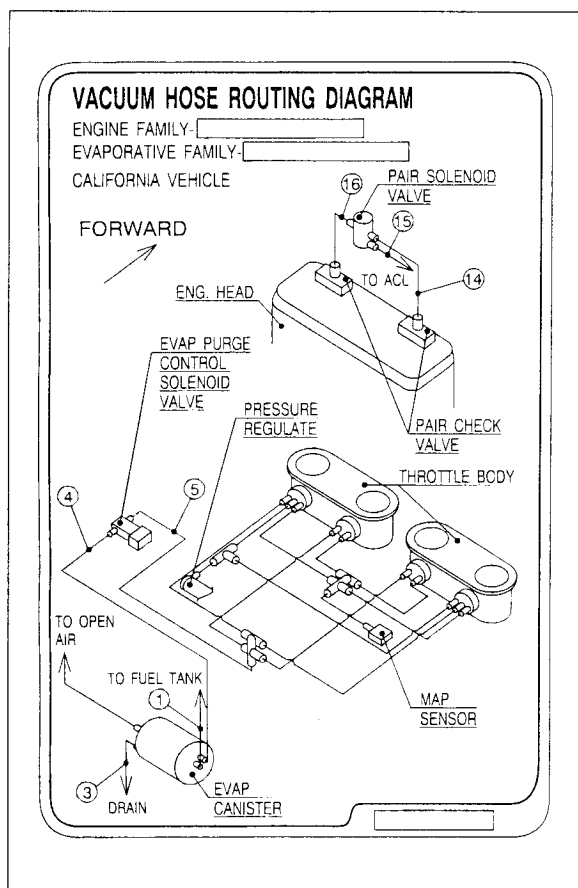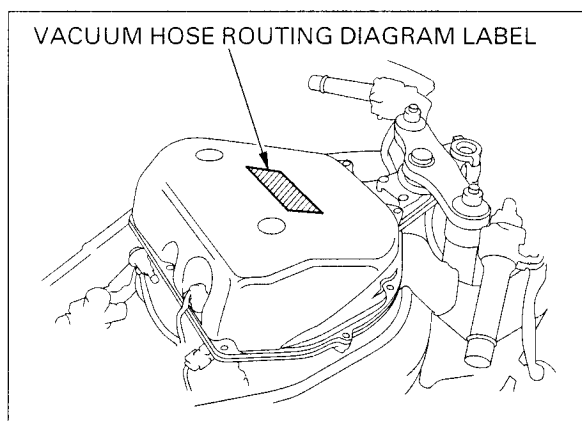

## FRAME/BODY PANELS/EXHAUST SYSTEM

### BODY PANEL LOCATIONS

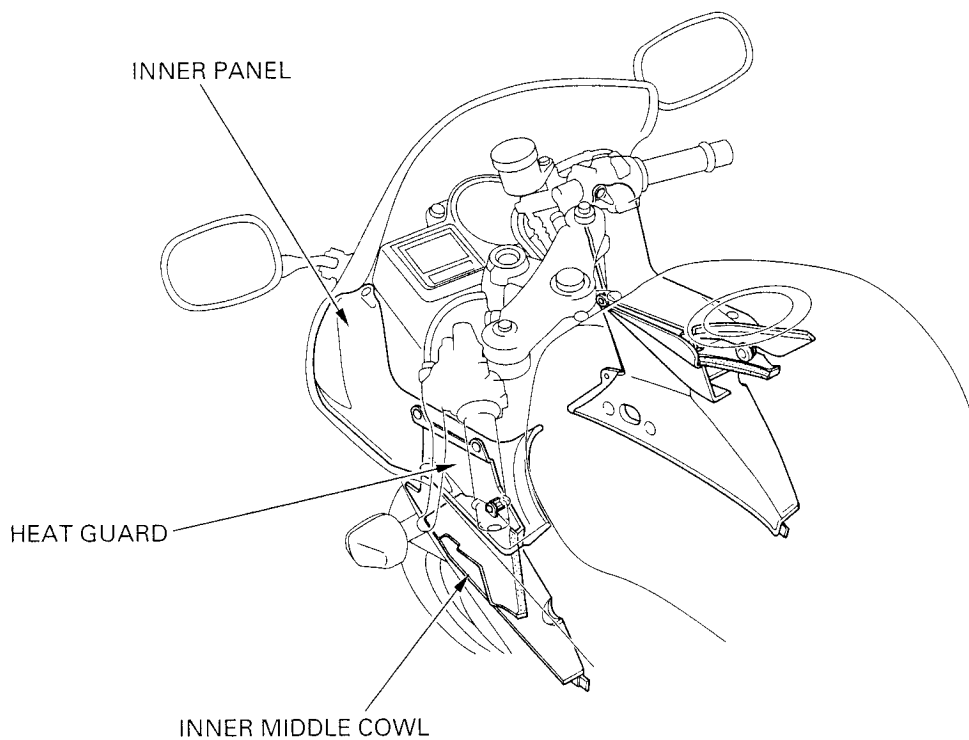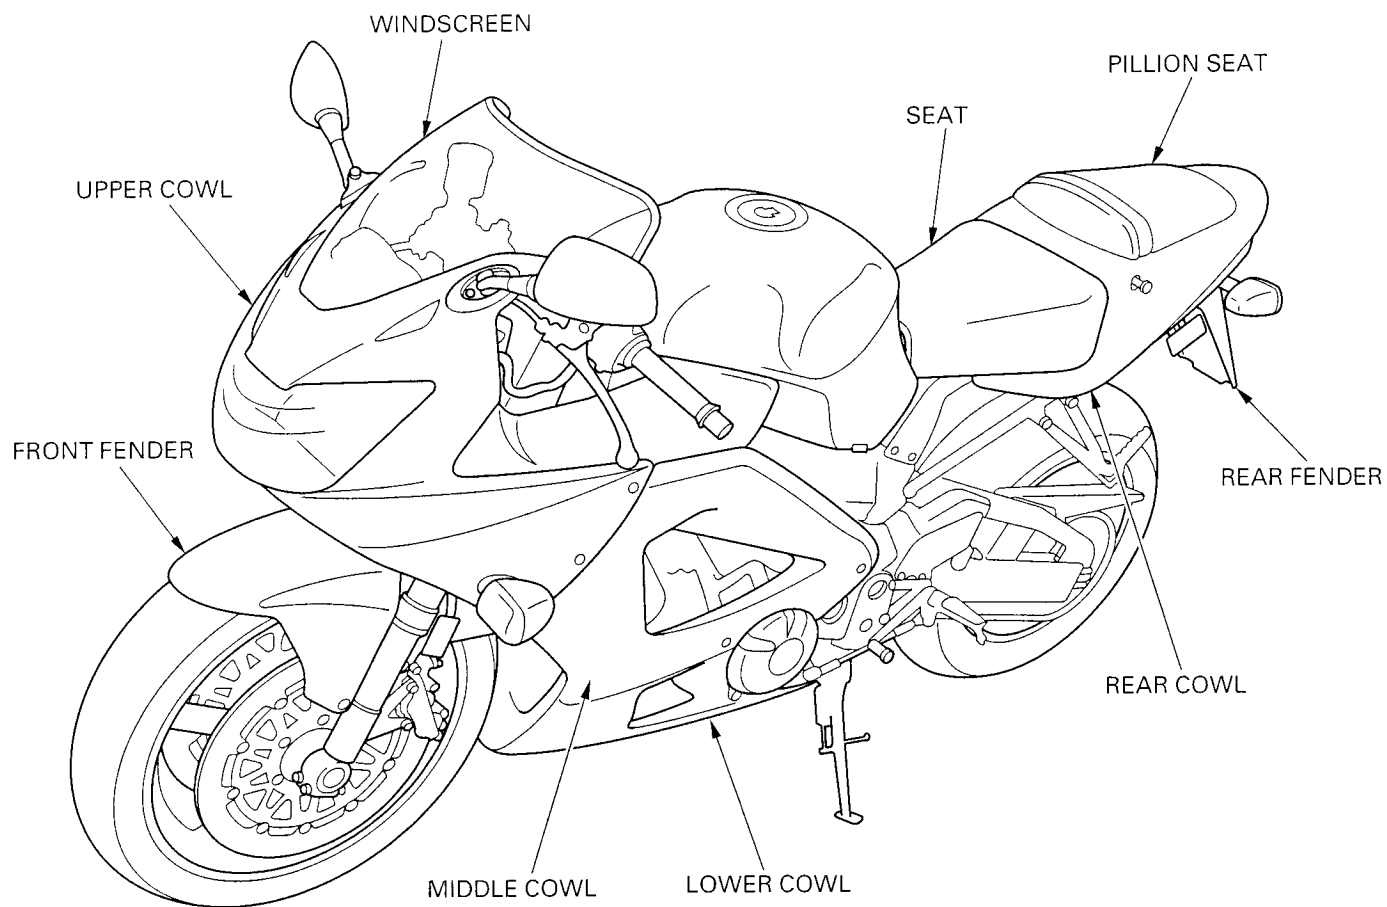

# 2. FRAME/BODY PANELS/EXHAUST SYSTEM

BODY PANEL LOCATIONS	2-0	UPPER COWL	2-9
SERVICE INFORMATION	2-1	FRONT FENDER	2-14
TROUBLESHOOTING	2-1	REAR FENDER	2-14
SEAT	2-2	SEAT RAIL	2-17
PILLION SEAT/REAR COWL	2-2	MUFFLER/EXHAUST PIPE	2-19
MIDDLE/LOWER COWL	2-5		

2

## SERVICE INFORMATION

### GENERAL

- This section covers removal and installation of the body panels and exhaust system.
- Always replace the exhaust pipe gaskets after removing the exhaust pipe from the engine.
- When installing the exhaust system, loosely install all of the exhaust pipe fasteners. Always tighten the exhaust clamps first, then tighten the mounting fasteners. If you tighten the mounting fasteners first, the exhaust pipe may not seat properly.
- Always inspect the exhaust system for leaks after installation.

### TORQUE VALUES

Upper cowl stay mounting bolt	26 N·m (2.7 kgf·m , 20 lbf·ft)	
Middle cowl pan screw	1 N·m (0.15 kgf·m , 1.1 lbf·ft)	
Lower cowl pan screw	1 N·m (0.15 kgf·m , 1.1 lbf·ft)	
Inner panel pan screw	1 N·m (0.15 kgf·m , 1.1 lbf·ft)	
Inner middle cowl pan screw	1 N·m (0.15 kgf·m , 1.1 lbf·ft)	
Rear cowl truss screw	1 N·m (0.15 kgf·m , 1.1 lbf·ft)	
Pillion seat bracket mounting bolt/unt	12 N·m (1.2 kgf·m , 9 lbf·ft)	
Pillion seat mounting nut	10 N·m (1.05 kgf·m , 8 lbf·ft)	U-nut
Seat rail mounting bolt, 8 mm	39 N·m (4.0 kgf·m , 29 lbf·ft)	
Seat rail mounting bolt, 10 mm	39 N·m (4.0 kgf·m , 29 lbf·ft)	
Pillion step mounting socket bolt	39 N·m (4.0 kgf·m , 29 lbf·ft)	
Exhaust pipe joint flange nut	12 N·m (1.2 kgf·m , 9 lbf·ft)	
Exhaust valve cover mounting bolt	12 N·m (1.2 kgf·m , 9 lbf·ft)	
Exhaust valve pulley cover mounting bolt	12 N·m (1.2 kgf·m , 9 lbf·ft)	

## TROUBLESHOOTING

### Excessive exhaust noise

- Broken exhaust system
- Exhaust gas leak

### Poor performance

- Deformed exhaust system
- Exhaust gas leak
- Clogged muffler


## FRAME/BODY PANELS/EXHAUST SYSTEM

### SEAT

#### REMOVAL

Remove the two seat mounting socket bolts behind the seat.

Slide the seat back and then off.  
Remove the mounting collars.

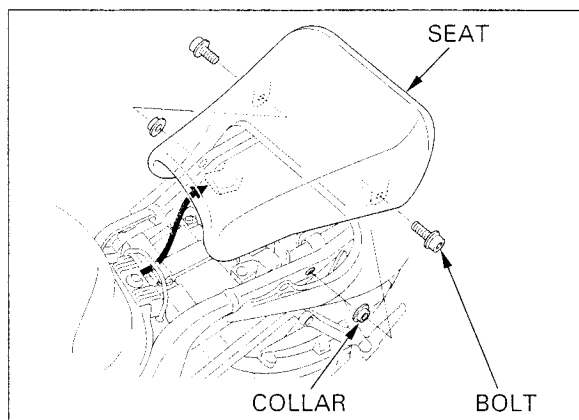


#### INSTALLATION

Install the mounting collars into the seat brackets as shown.

Align the seat hook with the fuel tank rear bracket and install the seat.

Install and tighten the socket bolts securely.

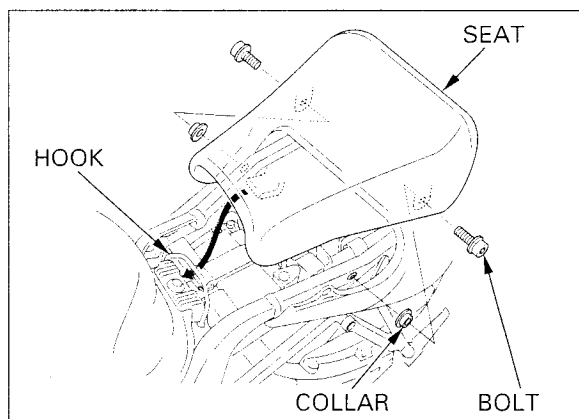


### PILLION SEAT/REAR COWL


#### REMOVAL

Remove the seat (see above).

Open the pillion seat using the ignition key.

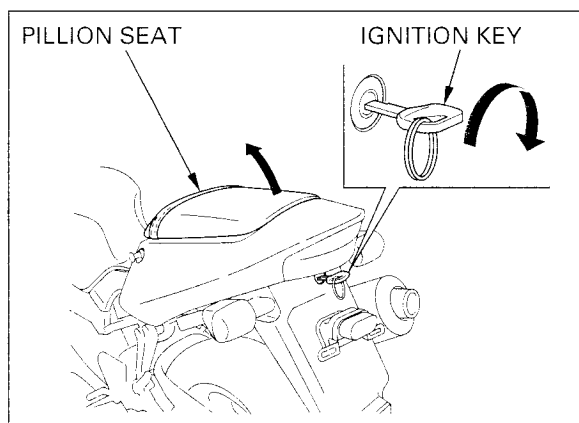


Remove the rear cowl setting bolts, collars and spacers.

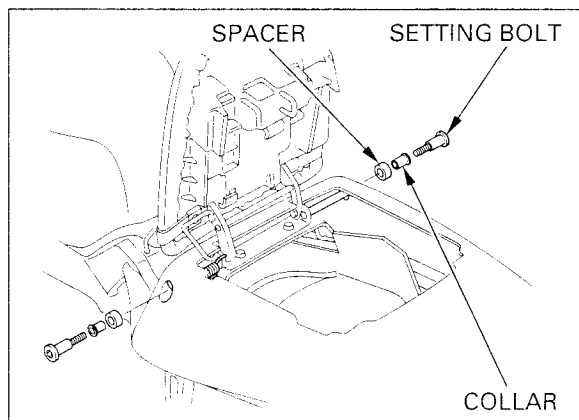


## FRAME/BODY PANELS/EXHAUST SYSTEM


Remove the pillion seat bracket mounting bolts/nuts, then remove the pillion seat/bracket as an assembly.

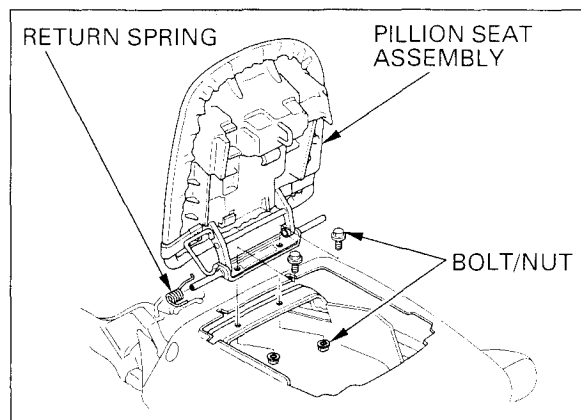

Disconnect the rear brake/tail light connectors.

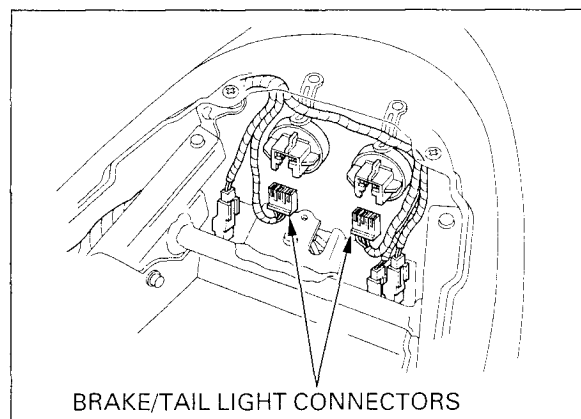


Remove the two trim clips under the rear cowl.

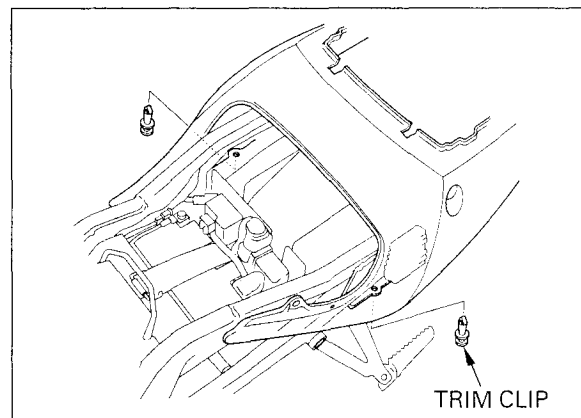

*Note that these trim clips are slightly different than those removed in the previous step.*


Remove the two trim clips and two retaining screws.

Carefully spread the bottom of both sides of the rear cowl, then remove it from the seat rail.

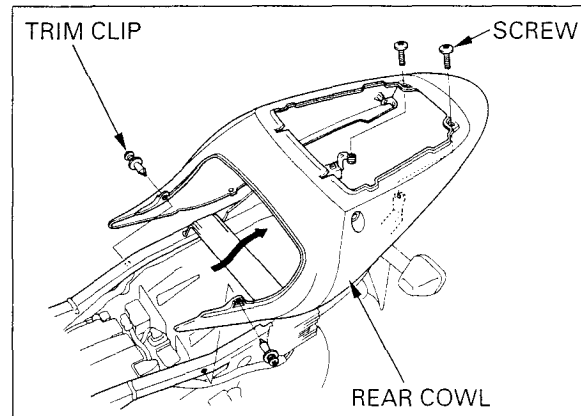

## FRAME/BODY PANELS/EXHAUST SYSTEM

### INSTALLATION

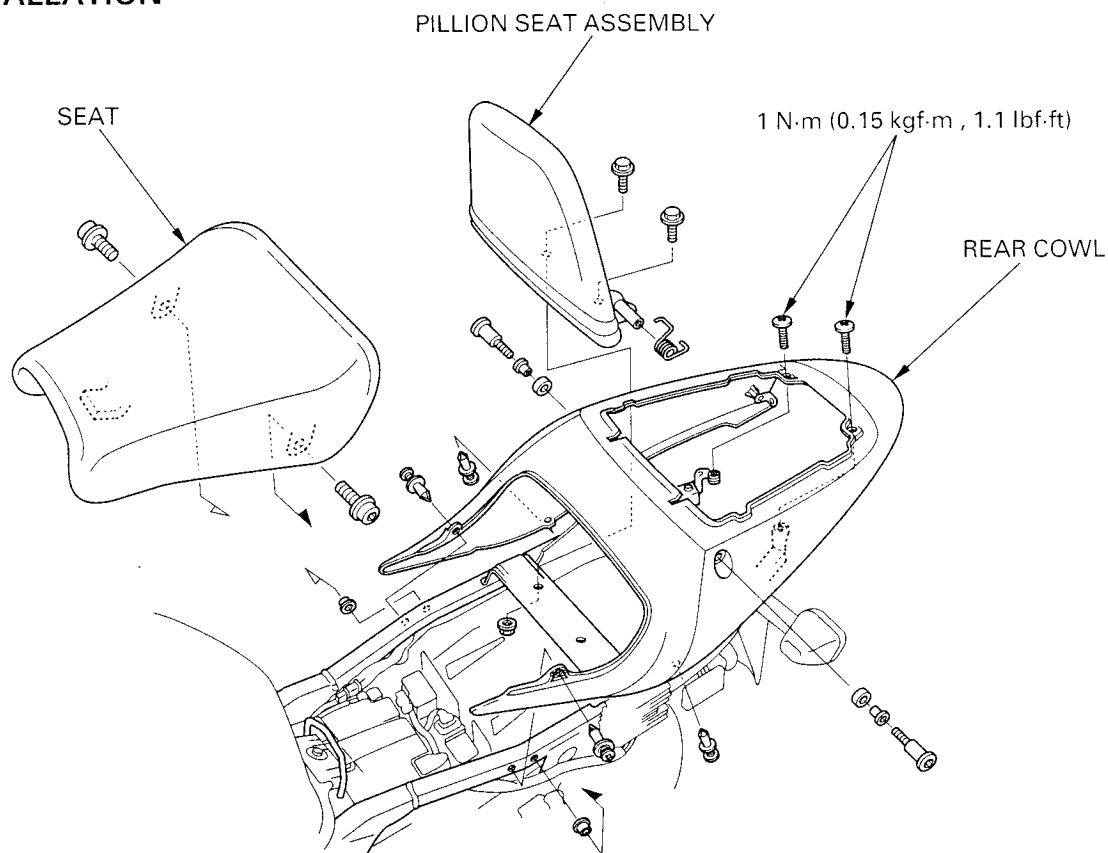


*Gently spread the sides to fit over the regulator/rectifier.*


Install the rear cowl over the side rail being careful not to damage the wire harness.

Install the two trim clips.  
Install and tighten the mounting screws to the specified torque.

**TORQUE:** 1 N·m (0.15 kgf·m, 1.1 lbf·ft)

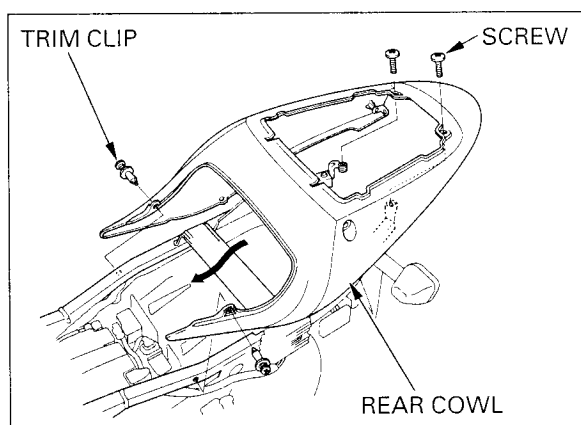

Install the lower trim clips.

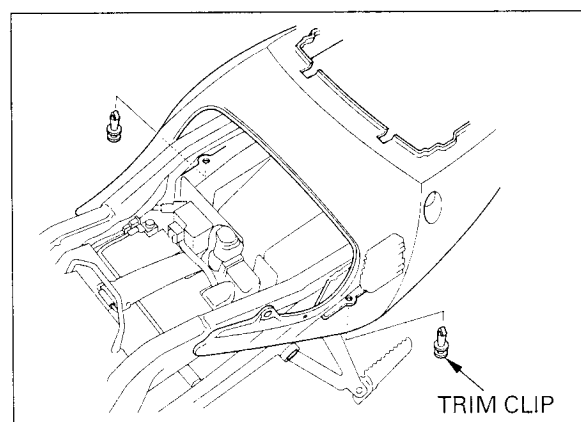




## FRAME/BODY PANELS/EXHAUST SYSTEM

Route the wire harness and clamp it as shown.

Connect the rear brake/tail light connectors.

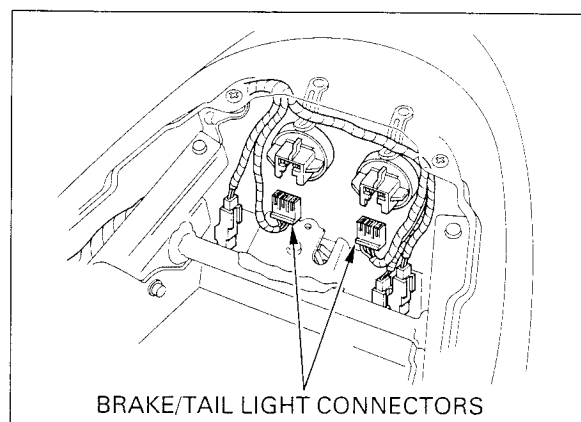


Install the pillion seat/bracket assembly onto the seat rail.


Check the return spring hook position, then install the bracket mounting bolts/nuts.

Hold the bolt and tighten the nut to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

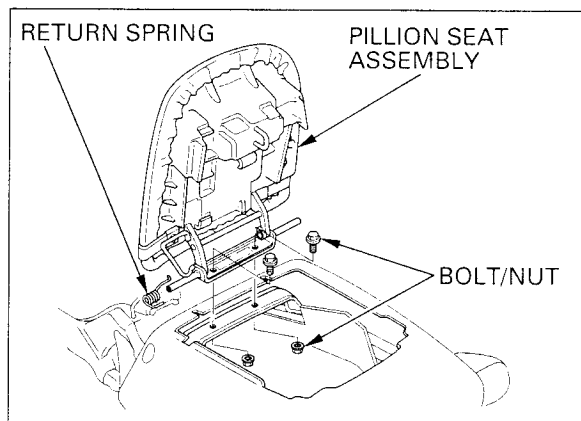


Install the spacers, setting collars and setting bolts, then tighten the bolts securely.

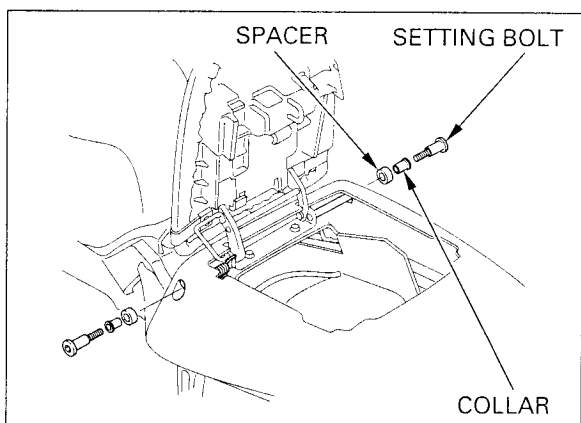

## MIDDLE/LOWER COWL REMOVAL


Remove the trim clips from the inner middle cowl.

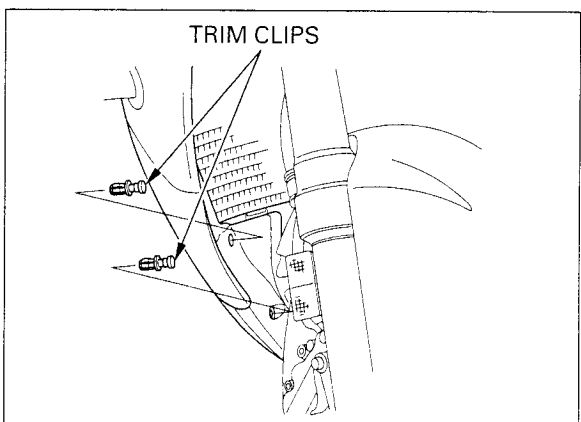




## FRAME/BODY PANELS/EXHAUST SYSTEM


Remove the six screws and special bolt.

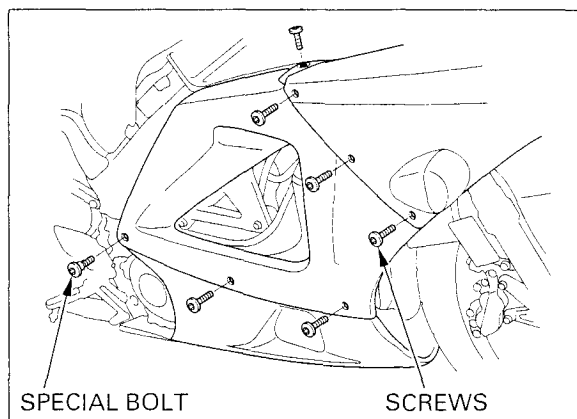


Release the middle cowl boss from the inner panel grommet, then remove the middle cowl.

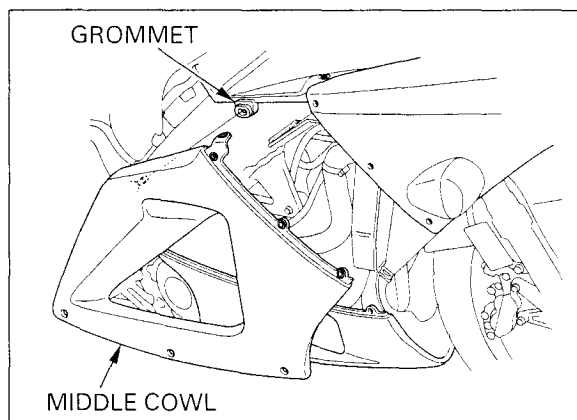


Remove the four special bolts.  
Remove the lower cowl assembly from the right side.

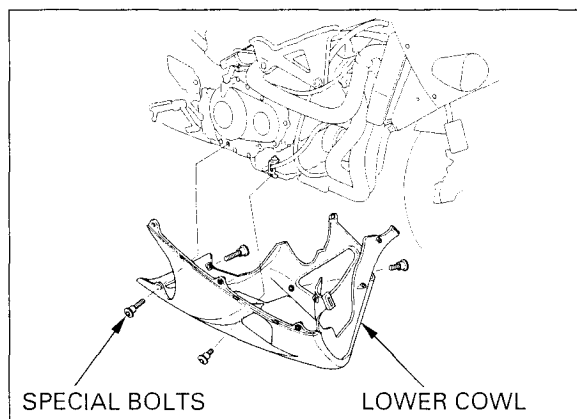

Remove the two screws, special bolt and inner lower cowl.  
Remove the two trim clips and separate the right and left lower cowls.

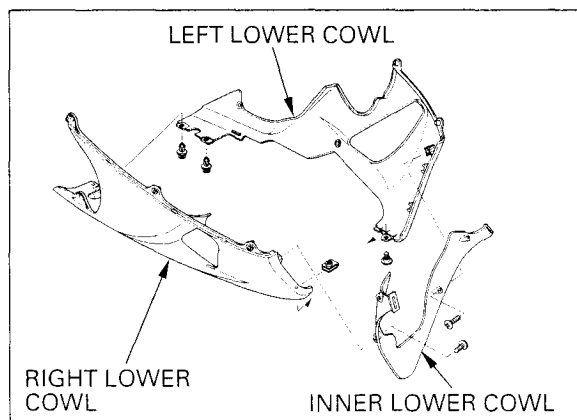


## INSTALLATION

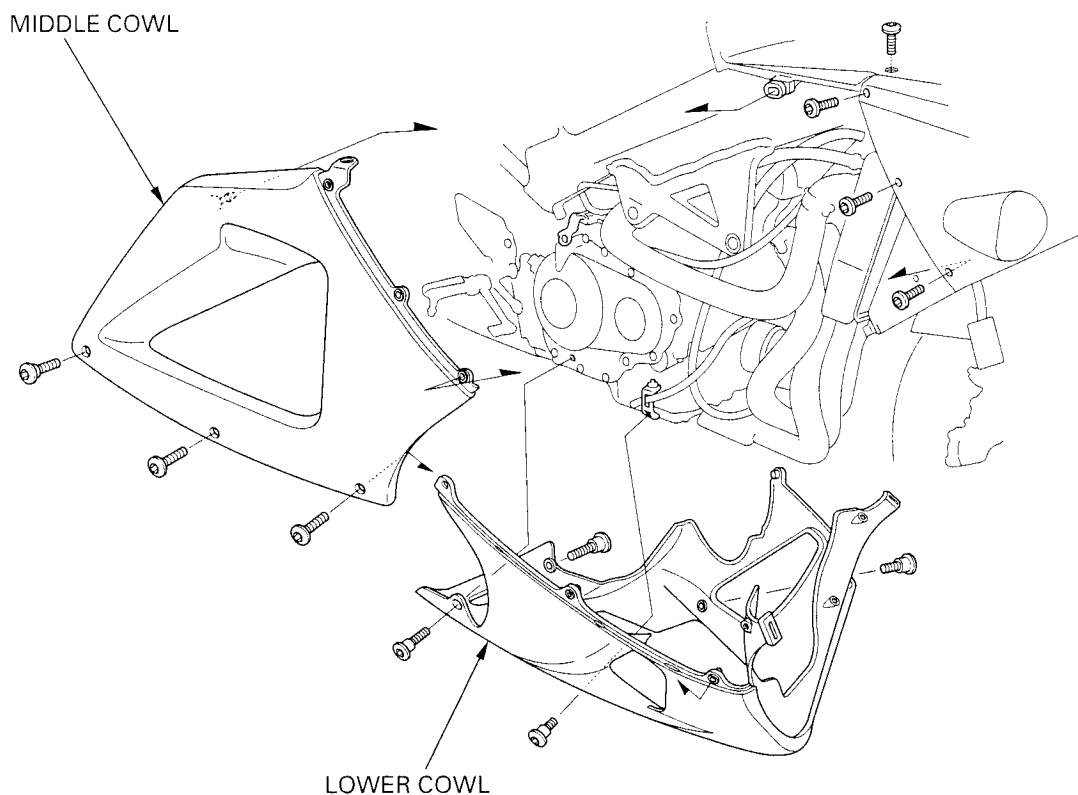

Assemble the inner lower cowl, right and left lower cowl.


Install the two trim clips and special bolt.  
Install and tighten the inner lower cowl screw to the specified torque.

**TORQUE:** 1 N·m (0.15 kgf·m , 1.1 lbf·ft)

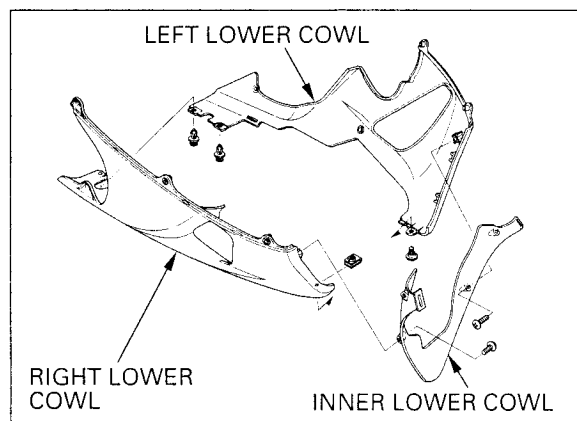


*Install bottom ends of the inner middle cowl into the inner lower cowl grooves.*

Install the lower cowl onto the frame from the right side.

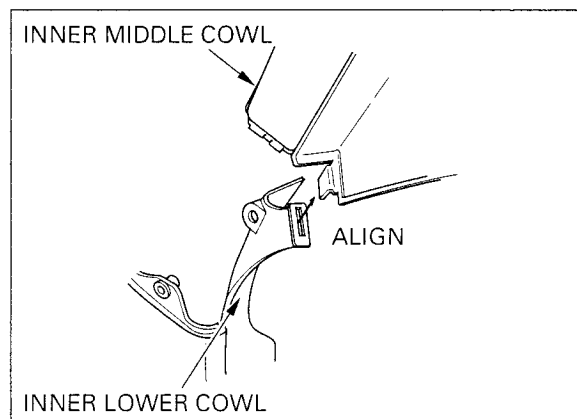


## FRAME/BODY PANELS/EXHAUST SYSTEM

Install and tighten the special bolts.

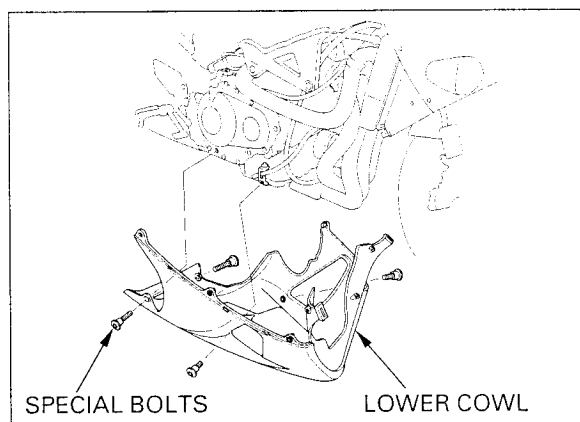


Install the middle cowl while aligning its boss with the inner panel grommet.

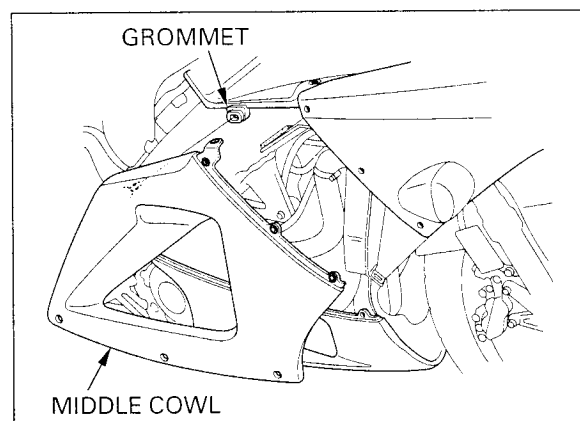


Install the special bolt and screws.  
Tighten the screws to the specified torque.

**TORQUE:** 1 N·m (0.15 kgf·m , 1.1 lbf·ft)

Tighten the special bolt.

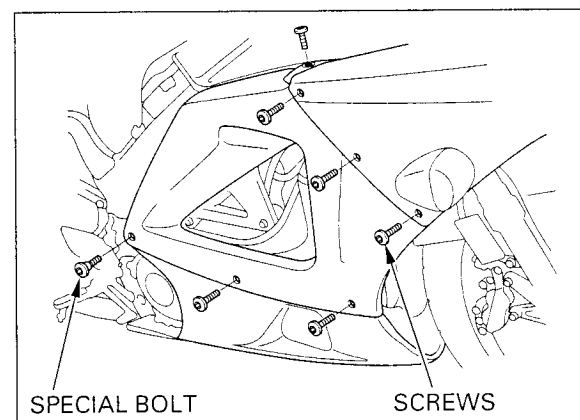

Secure the inner lower cowl and middle cowl using four trim clips.

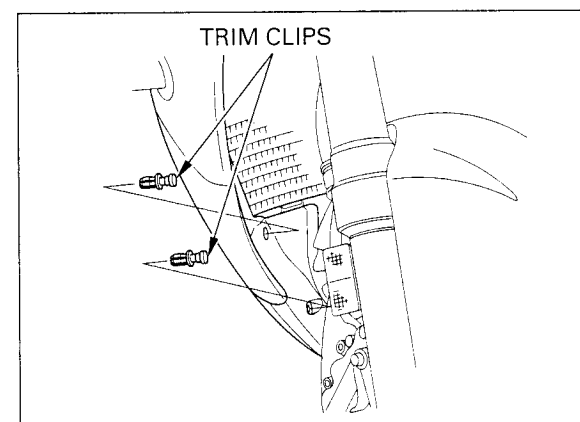


## UPPER COWL


### REMOVAL

Remove the middle cowl (page 2-5).


Remove the two trim clips from the inner panel.  
Remove the screw and then remove the inner panel from the upper cowl.

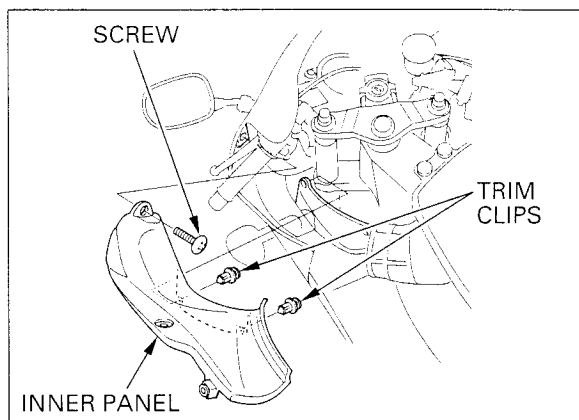


Remove the screw and heat guard on both side.

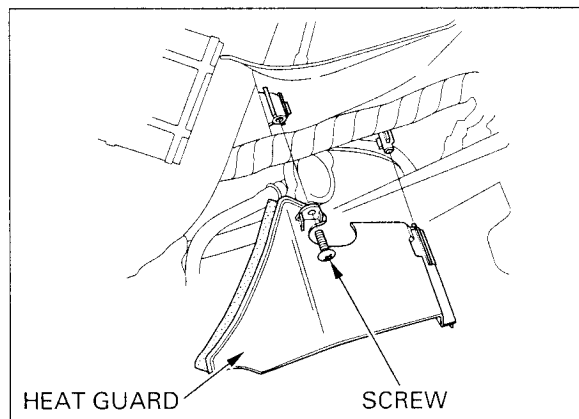

Remove the rearview mirror mounting socket bolts and rearview mirror.

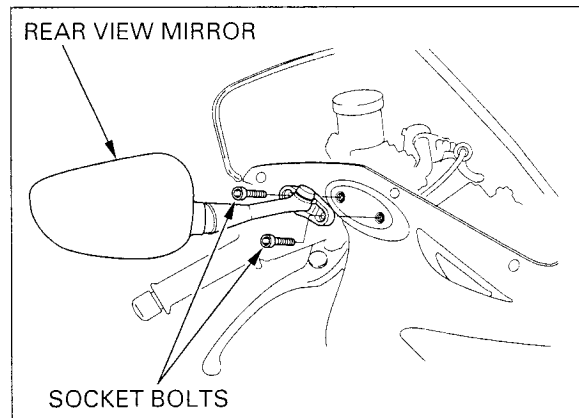


Remove the screws, washers and windscreen.

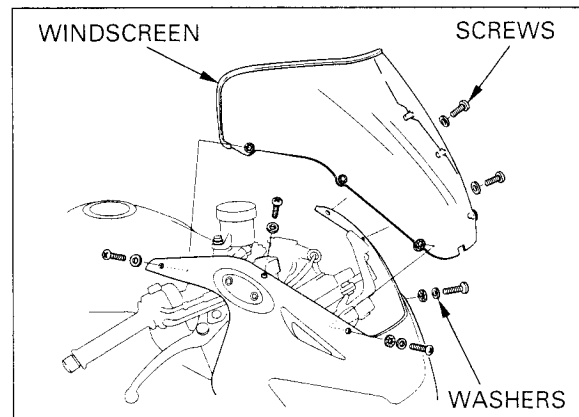


## FRAME/BODY PANELS/EXHAUST SYSTEM

Remove the upper cowl mounting bolt and washer.

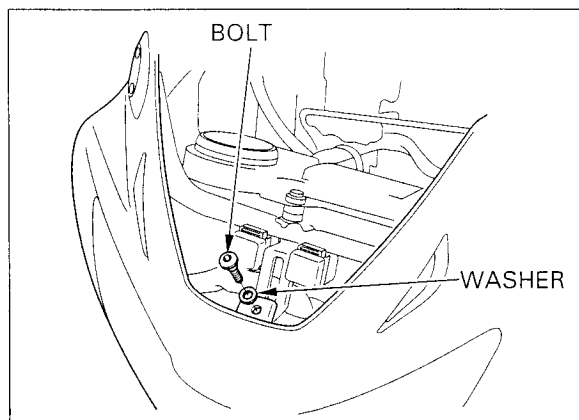


Pull the upper cowl forward.


Disconnect the headlight sockets and turn signal connectors, then remove the upper cowl.

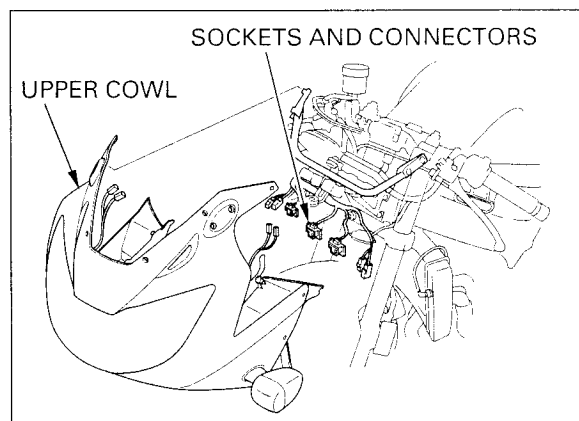

Remove the screws and air guard.

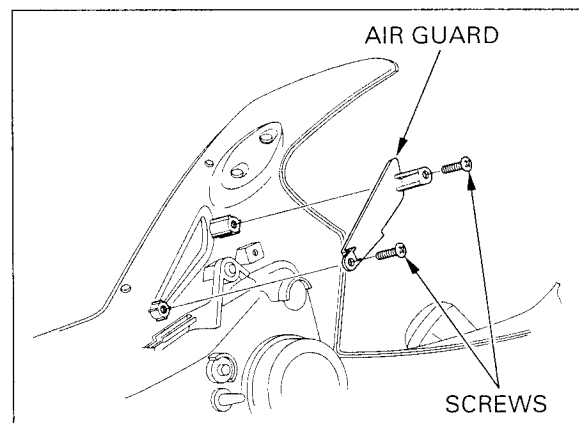

Remove the nut and setting plate, then remove the front turn signal unit.

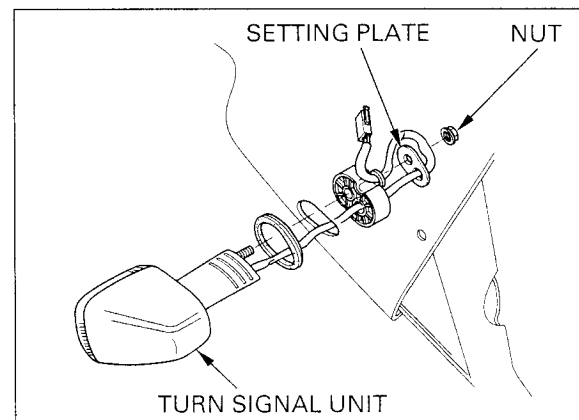


## FRAME/BODY PANELS/EXHAUST SYSTEM


Remove the trim clips and then remove the inner middle cowl from the upper cowl.

**NOTE:**


Refer to page 19-5 for headlight unit removal.

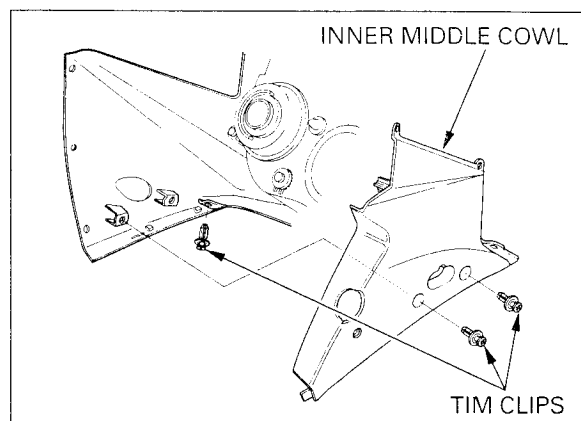

### INSTALLATION

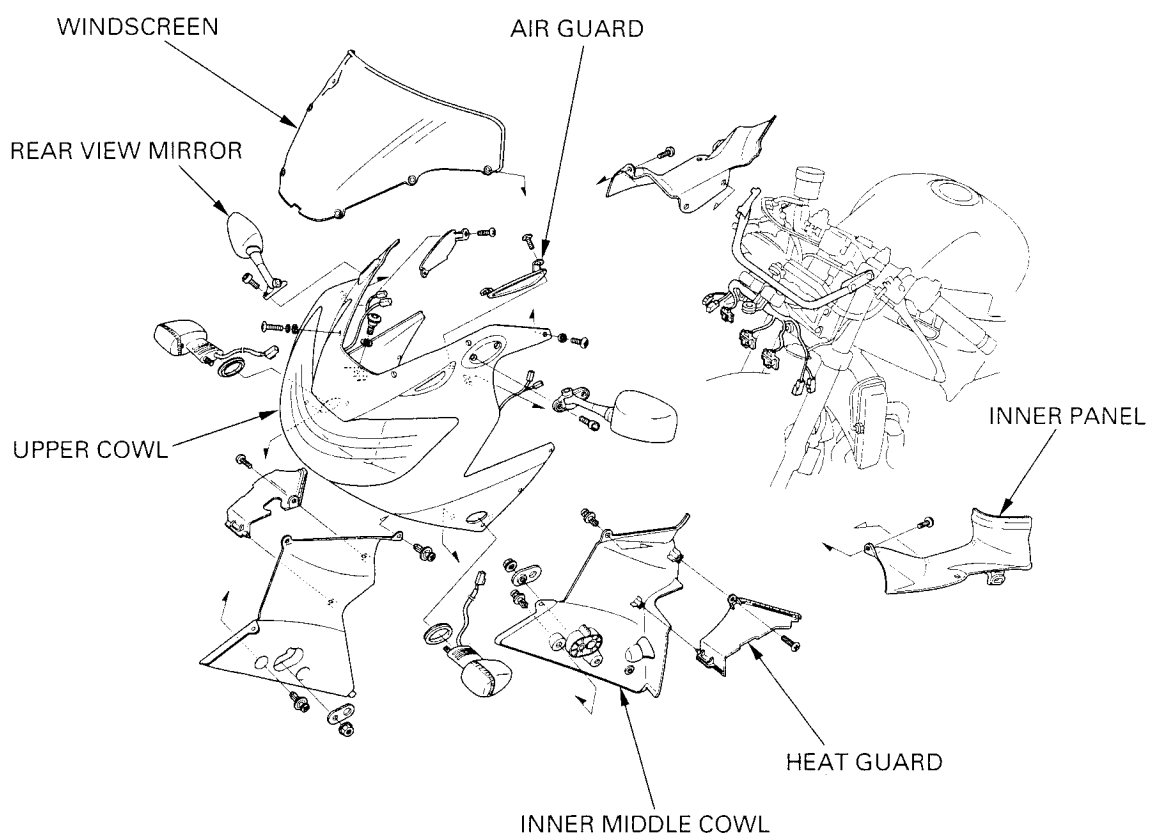


Install the inner middle cowl into the upper cowl and secure it with trim clips.

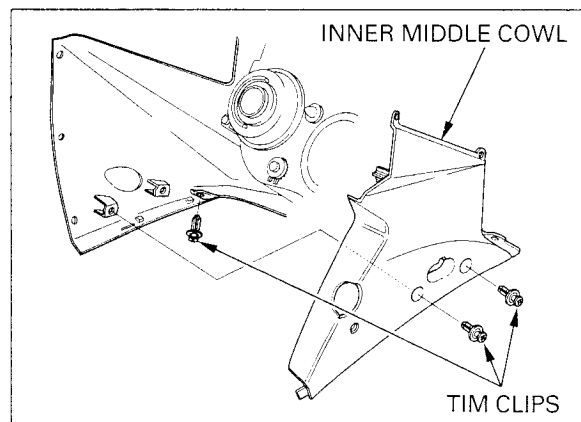


## FRAME/BODY PANELS/EXHAUST SYSTEM


Route the turn signal wire into the upper cowl, inner middle cowl and setting plate. Install and tighten the nut securely. Route the turn signal wire into the inner middle groove as shown.

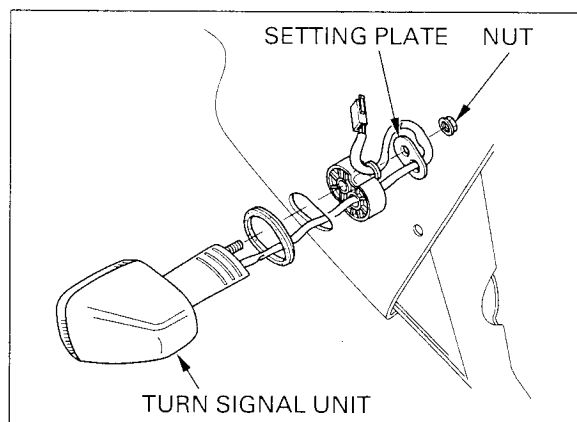

Install the air guard and tighten two screws.

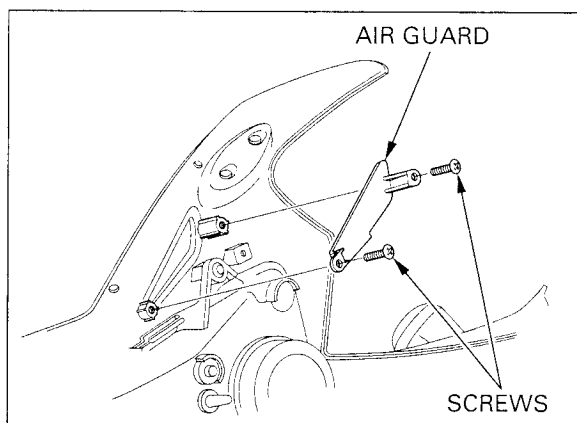


Place the upper cowl onto the upper cowl stay, connect the headlight connectors, position light connector and turn signal connectors.

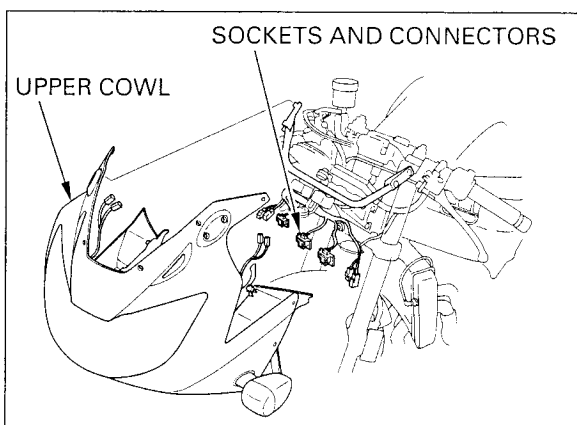


*Route the harness and wires properly (page 1-23).*

Install the upper cowl onto the upper cowl stay while aligning the headlight unit bosses with the upper cowl stay grommets.

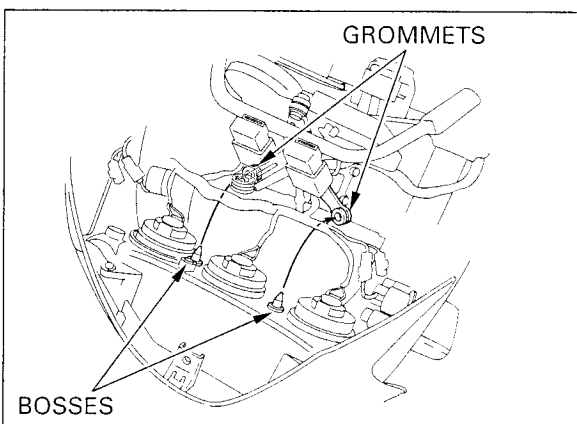


## FRAME/BODY PANELS/EXHAUST SYSTEM


Install the washer and upper cowl mounting bolt.  
Tighten the upper cowl mounting bolt securely.

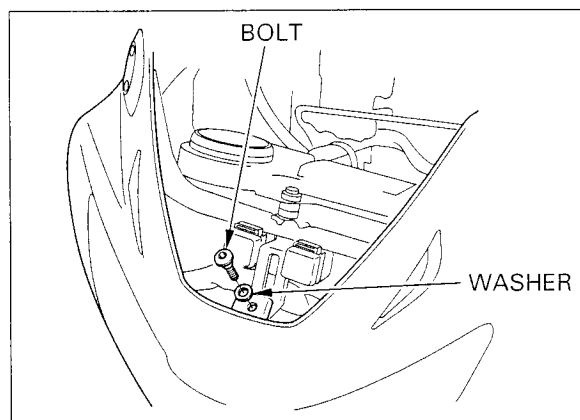

Install the windscreen and washers, then secure it with screws.

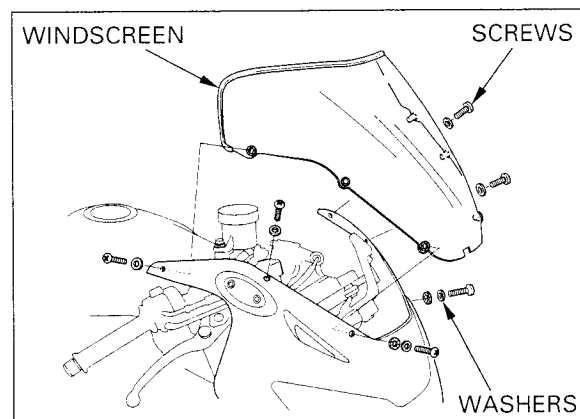


Install the rearview mirror and tighten the socket bolts.

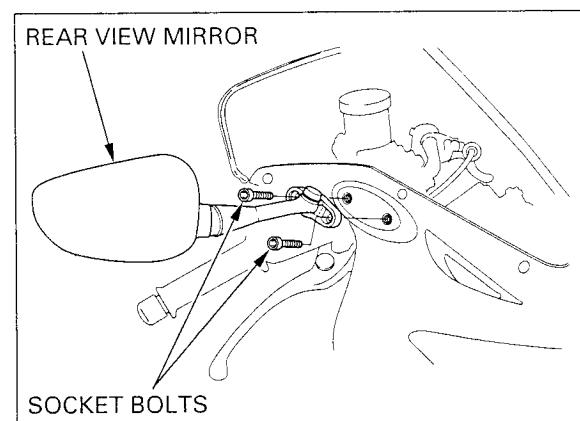

Install the heat guard onto the inner middle cowl aligning its tab with the hole in the inner middle cowl.

Install and tighten the screw to the specified torque.

**TORQUE:** 1 N·m (0.15 kgf·m , 1.1 lbf·ft)

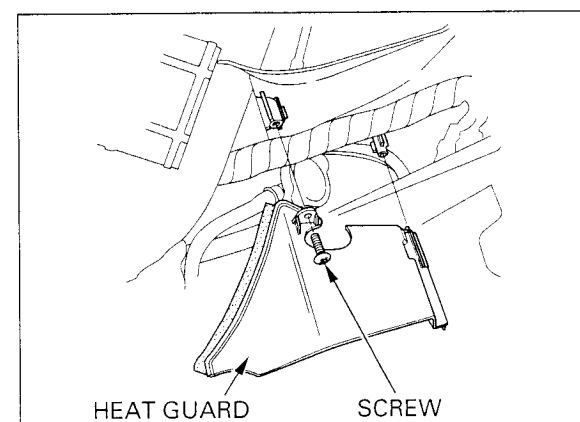




## FRAME/BODY PANELS/EXHAUST SYSTEM

Install the inner panel onto the upper cowl and inner middle cowl.

Secure the inner panel and inner middle cowl with two trim clips.

Install and tighten the inner panel mounting screw to the specified torque.


**TORQUE:** 1 N·m (0.15 kgf·m , 1.1 lbf·ft)

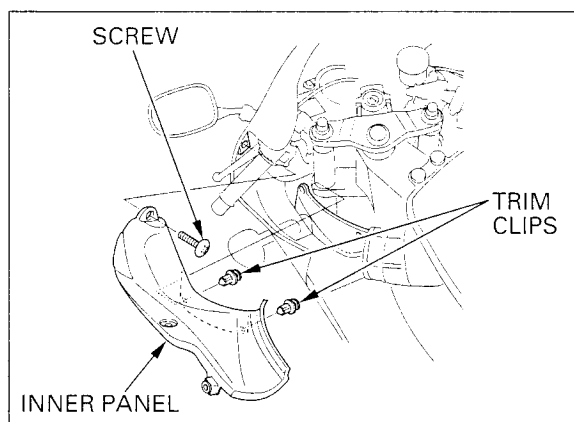

## FRONT FENDER

### REMOVAL


Remove the brake hose clamp mounting nuts.  
Remove the front fender mounting special bolts and reflectors.

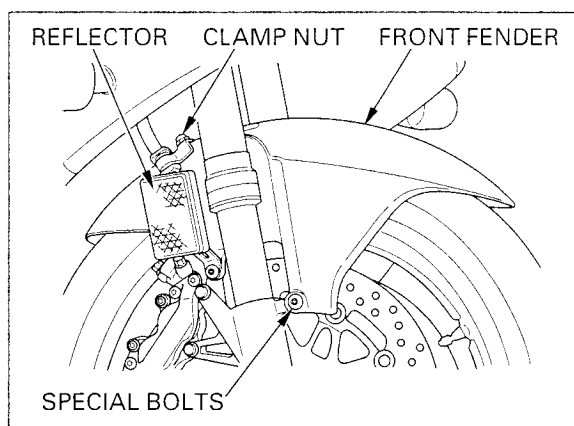

Remove the front fender forward.

### INSTALLATION

Installation is in the reverse order of removal.

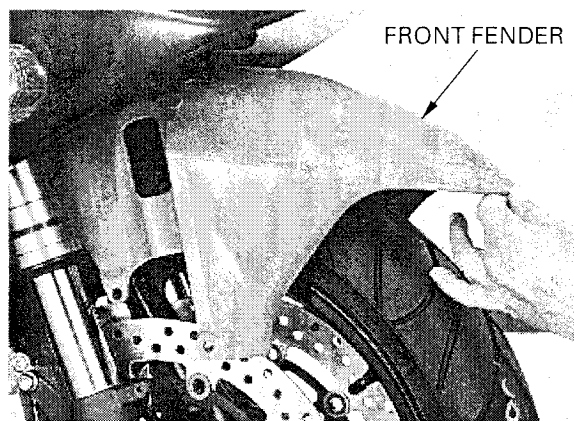


## REAR FENDER

### REMOVAL

Remove the following:


- Rear cowl (page 2-2)
- Battery (page 16-5)

Disconnect the turn signal connectors and license light connector.

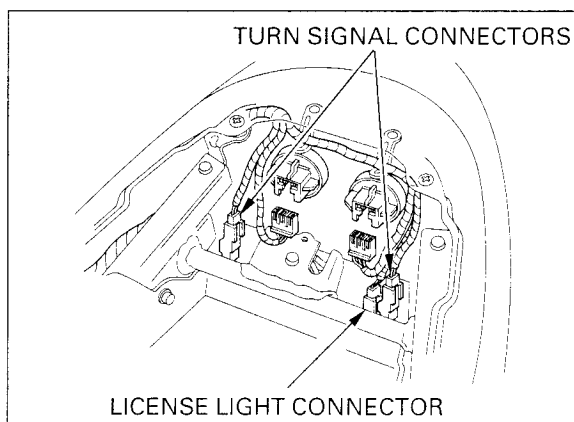


## FRAME/BODY PANELS/EXHAUST SYSTEM

Unhook the retaining tab and remove the fuse box.  
Remove the starter relay switch from the rear fender.  
Disconnect the rear brake light switch 2P (Natural) connector.

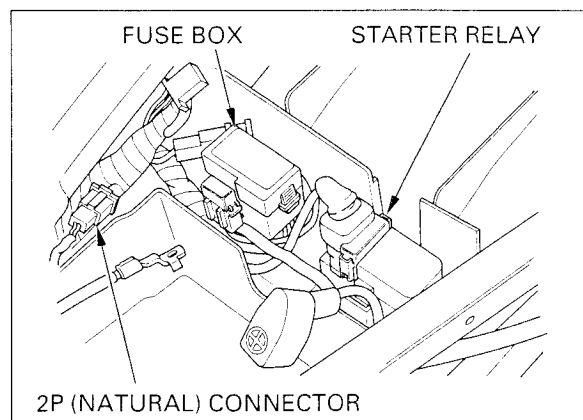


Disconnect the ECM (Engine Control Module) multi-connectors, then remove the ECM (page 5-89).


Disconnect the alternator 3P (Natural) connector and regulator/rectifier 4P (Natural) connector.  
Remove the fuel cut relay from the rear fender.

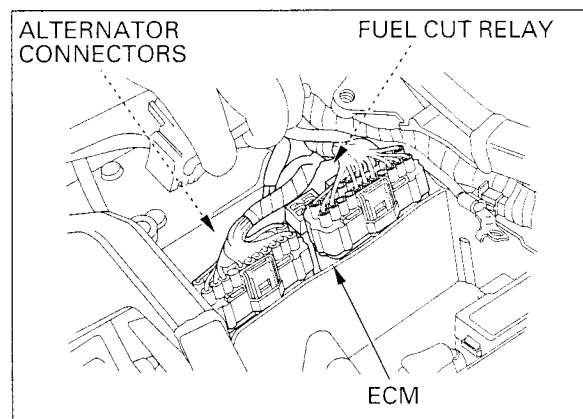

Release the regulator/rectifier wire and main wire harness from the seat rail and rear fender.

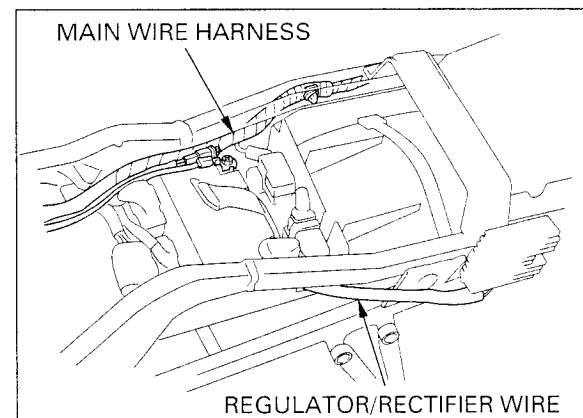


Remove the two rear fender mounting bolts and collars.

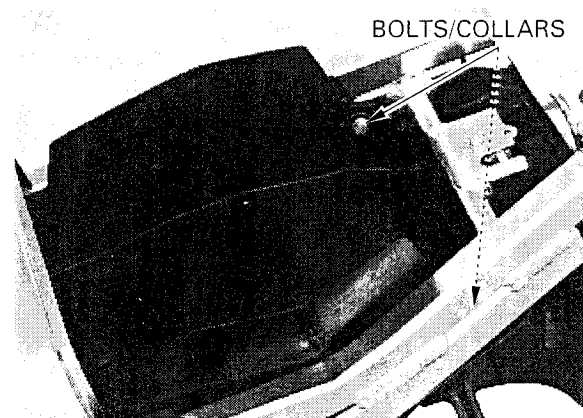


## FRAME/BODY PANELS/EXHAUST SYSTEM

Unhook the rear fender from the seat rail brace, then remove the rear fender backward.

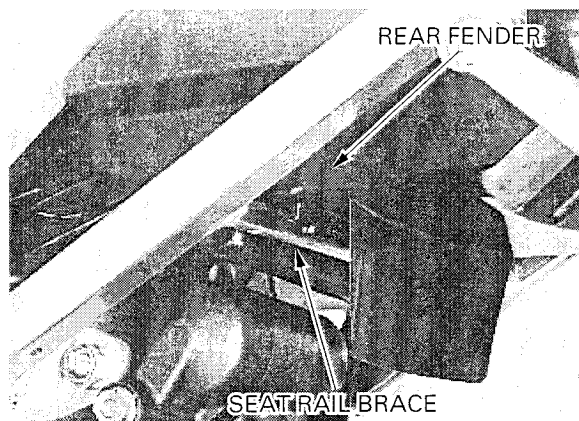


## INSTALLATION

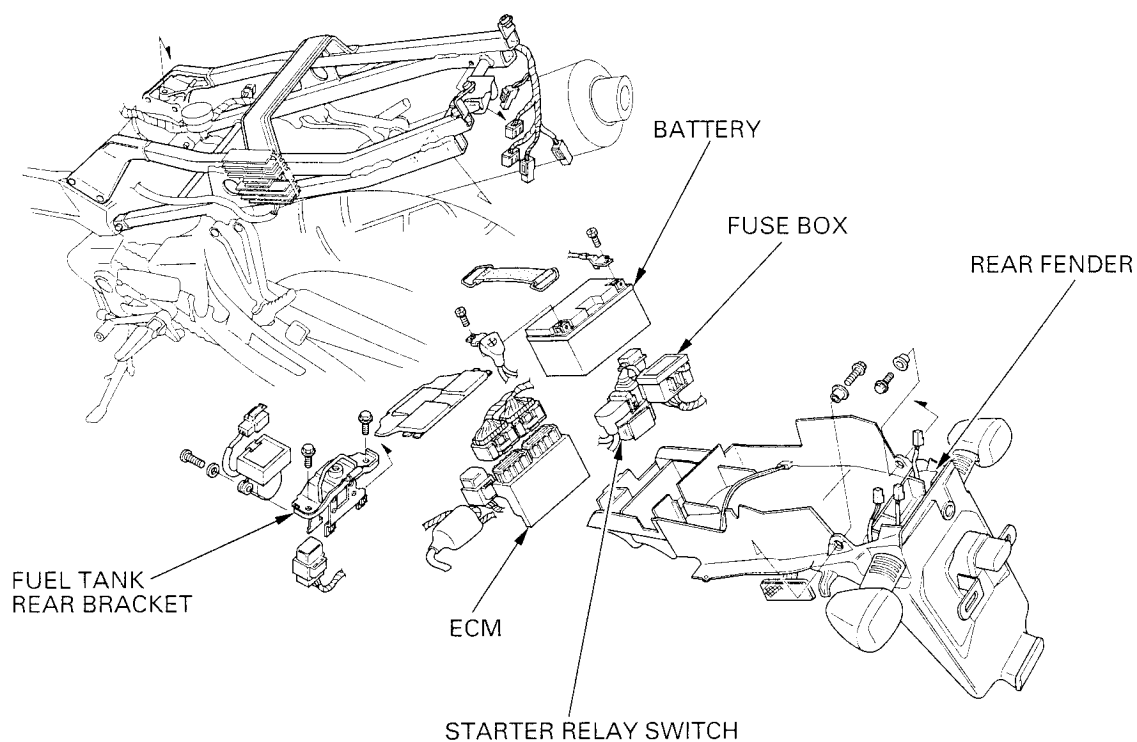

*While installing the rear fender, route the wire harness properly (page 1-23).*

Install the rear fender by aligning its lower groove with the seat rail brace.

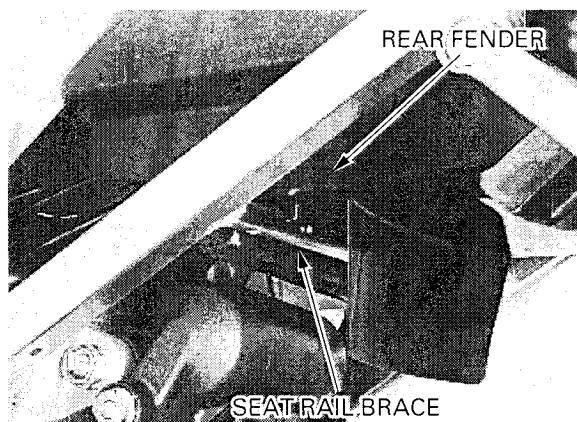


## FRAME/BODY PANELS/EXHAUST SYSTEM

Connect the license light connector and turn signal connectors.

*Route the wires properly (page 1-23).*

Install the removed parts in the reverse order of removal.

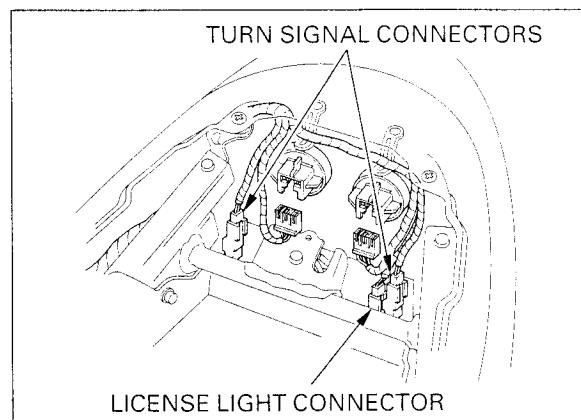


## SEAT RAIL

### REMOVAL


Remove the rear fender (page 2-14).  
Remove the rear brake reservoir mounting bolt (page 15-4).

Remove the muffler mounting bolt/nut.  
Remove the socket bolts and right pillion footpeg bracket.

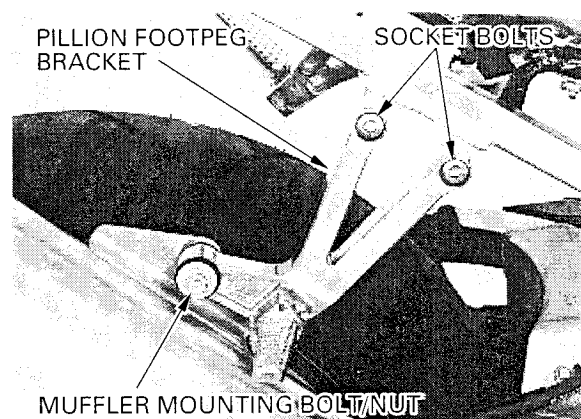


Remove the socket bolts and left pillion footpeg bracket.

Remove the bolts and regulator/rectifier.

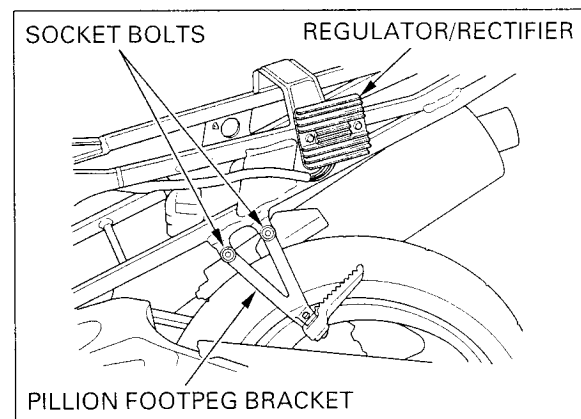


Remove the seat rail mounting 8 mm bolts, 10 mm bolts/nuts and seat rail.

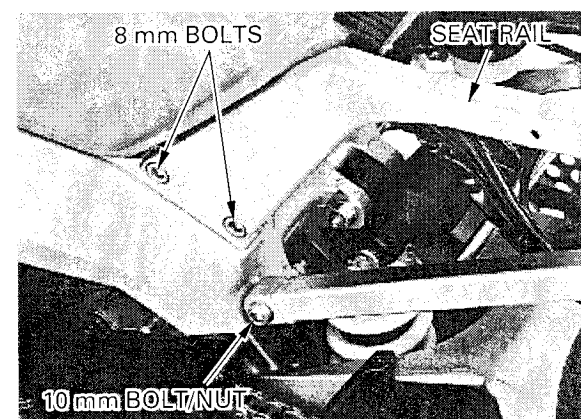



## FRAME/BODY PANELS/EXHAUST SYSTEM


### INSTALLATION

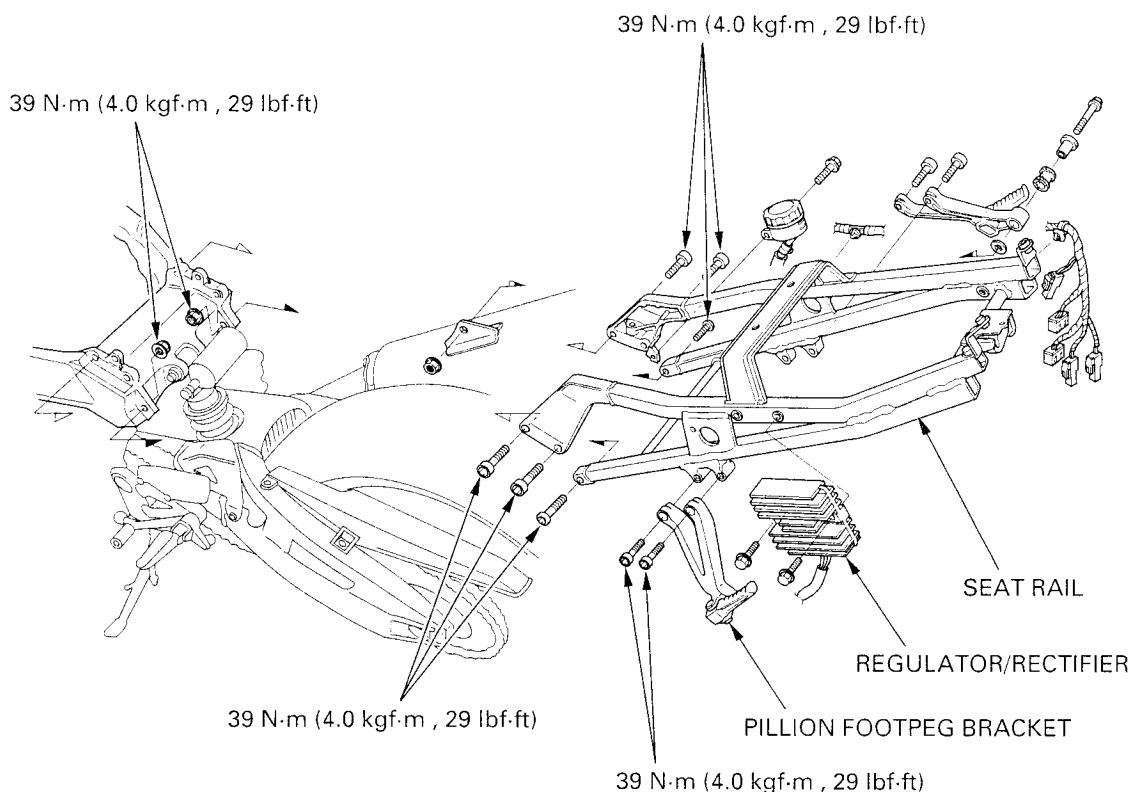

Install the seat rail and tighten the mounting bolts and nuts to the specified torque.

#### TORQUE:


8 mm bolt: 39 N·m (4.0 kgf·m, 29 lbf·ft)  
 10 mm bolt/nut: 39 N·m (4.0 kgf·m, 29 lbf·ft)

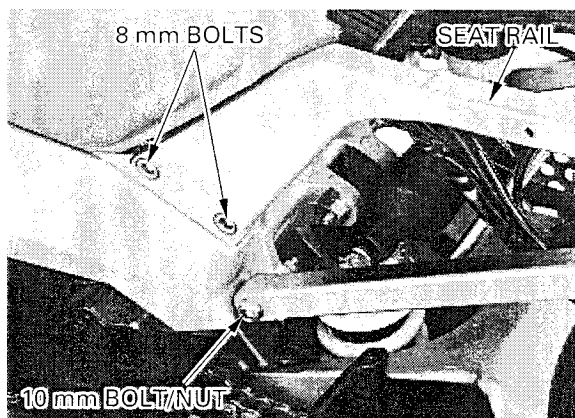

Install the regulator/rectifier, tighten the bolts.

Install the left pillion footpeg bracket and tighten the socket bolts to the specified torque.

**TORQUE:** 39 N·m (4.0 kgf·m, 29 lbf·ft)

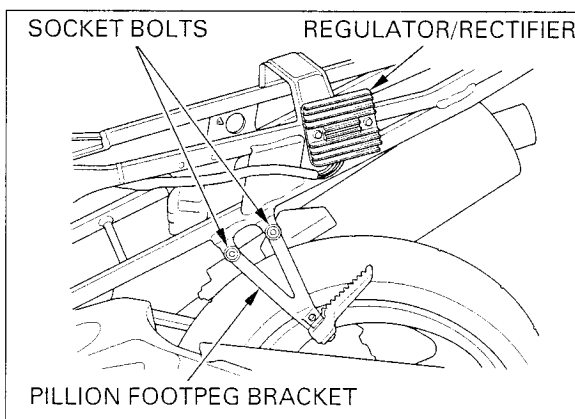


## FRAME/BODY PANELS/EXHAUST SYSTEM

Install the left pillion footpeg bracket and tighten the socket bolts to the specified torque.

**TORQUE:** 39 N·m (4.0 kgf·m , 29 lbf·ft)

Install the muffler mounting bolt, washer and nut, tighten the nut securely.

Install the removed parts in the reverse order of removal.

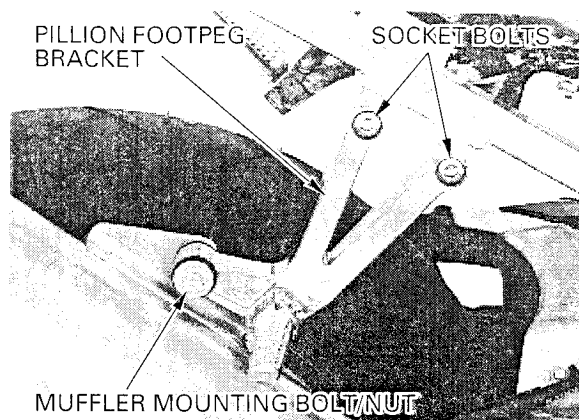

## MUFFLER/EXHAUST PIPE


### REMOVAL

Do not service the exhaust system while it is hot.


Remove the middle/lower cowl (page 2-7).

Remove the exhaust pipe-to-muffler mounting bolts.


Remove the muffler mounting bolt/nut and washer, then remove the muffler.

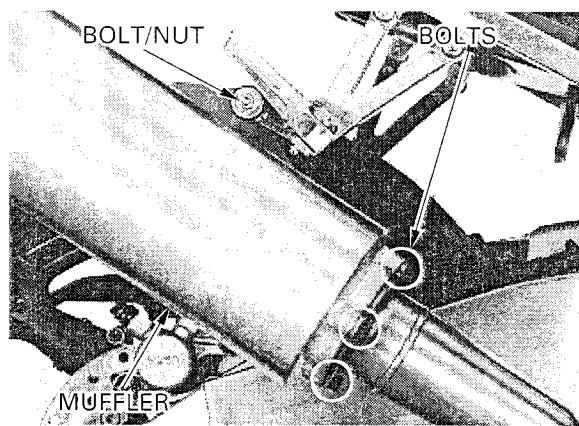

Remove the gasket.

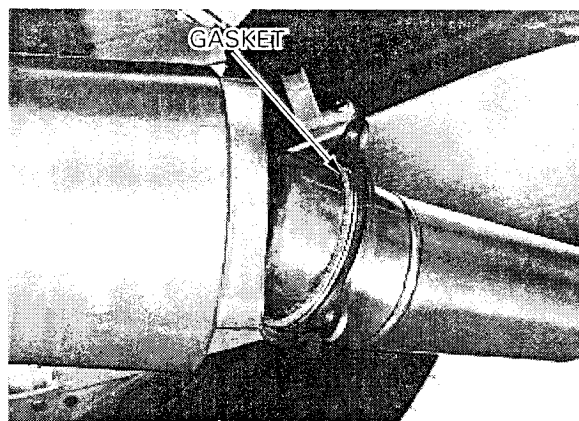


*California type only:* Disconnect the O<sub>2</sub> sensor 4P (Natural) connector.  
Remove the O<sub>2</sub> sensor wire from the frame.

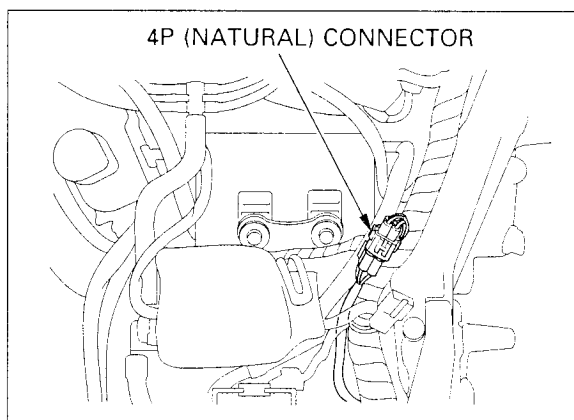


## FRAME/BODY PANELS/EXHAUST SYSTEM


Remove the O<sub>2</sub> sensor wire clamp.  
Remove the right step guard mounting bolts.

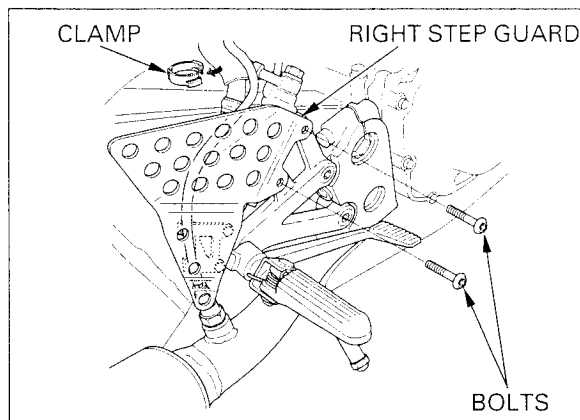


Release the O<sub>2</sub> sensor wire from the right step guard.

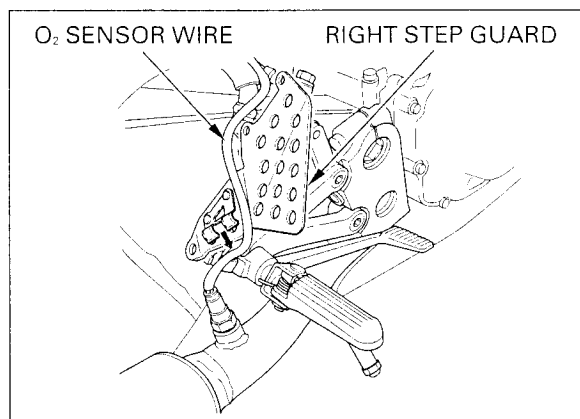

Remove the two bolts and EGCV (Exhaust Gas Control Valve) pulley cover.

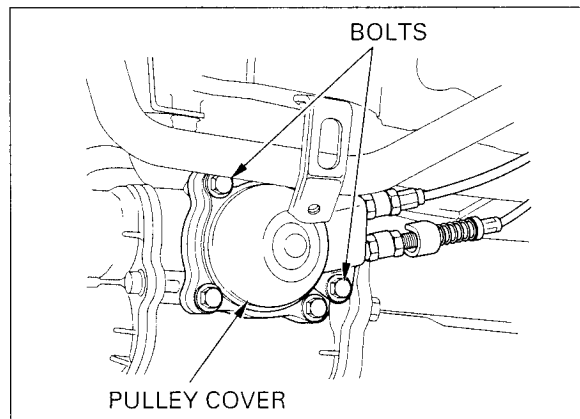


Disconnect the EGCV control cables from the pulley.

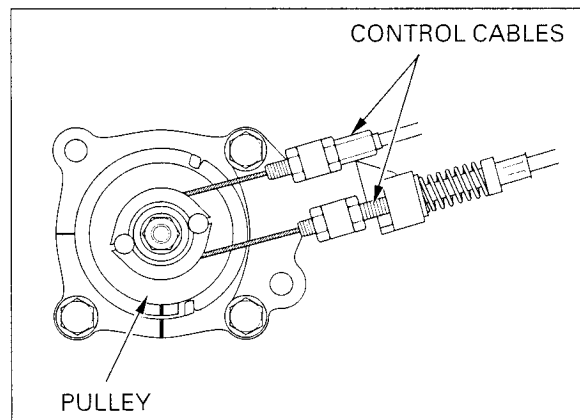


## FRAME/BODY PANELS/EXHAUST SYSTEM

Remove the radiator lower mounting bolt/nut, then move the radiator forward.

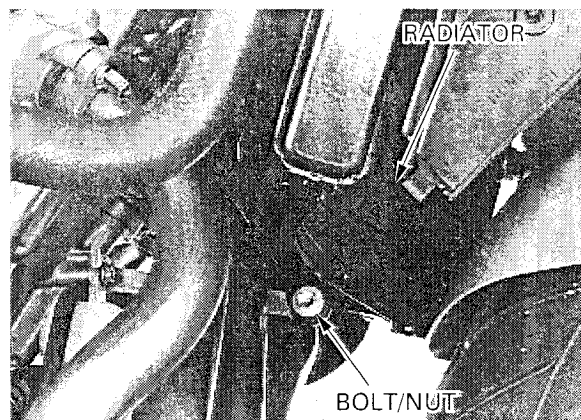


Remove the exhaust pipe joint nuts.

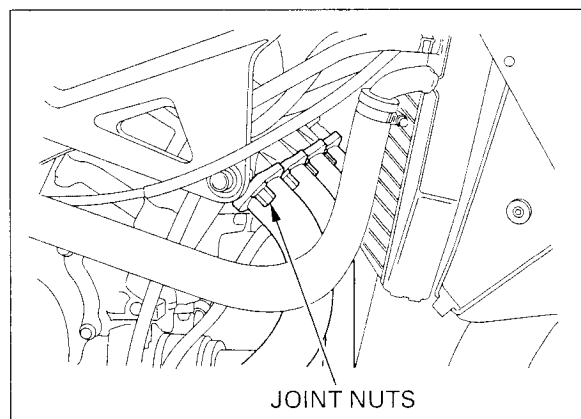

Remove the following:

- Exhaust pipe mounting bolt/nut
- Washer
- Collar
- Exhaust pipe
- Exhaust pipe gaskets

See page 5-100 for exhaust valve removal/disassembly.

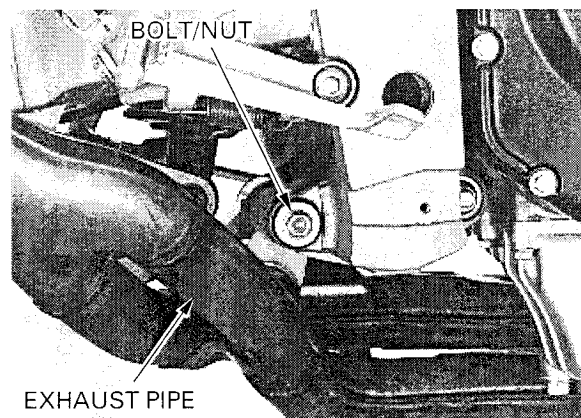





## FRAME/BODY PANELS/EXHAUST SYSTEM

### INSTALLATION

Except California type:

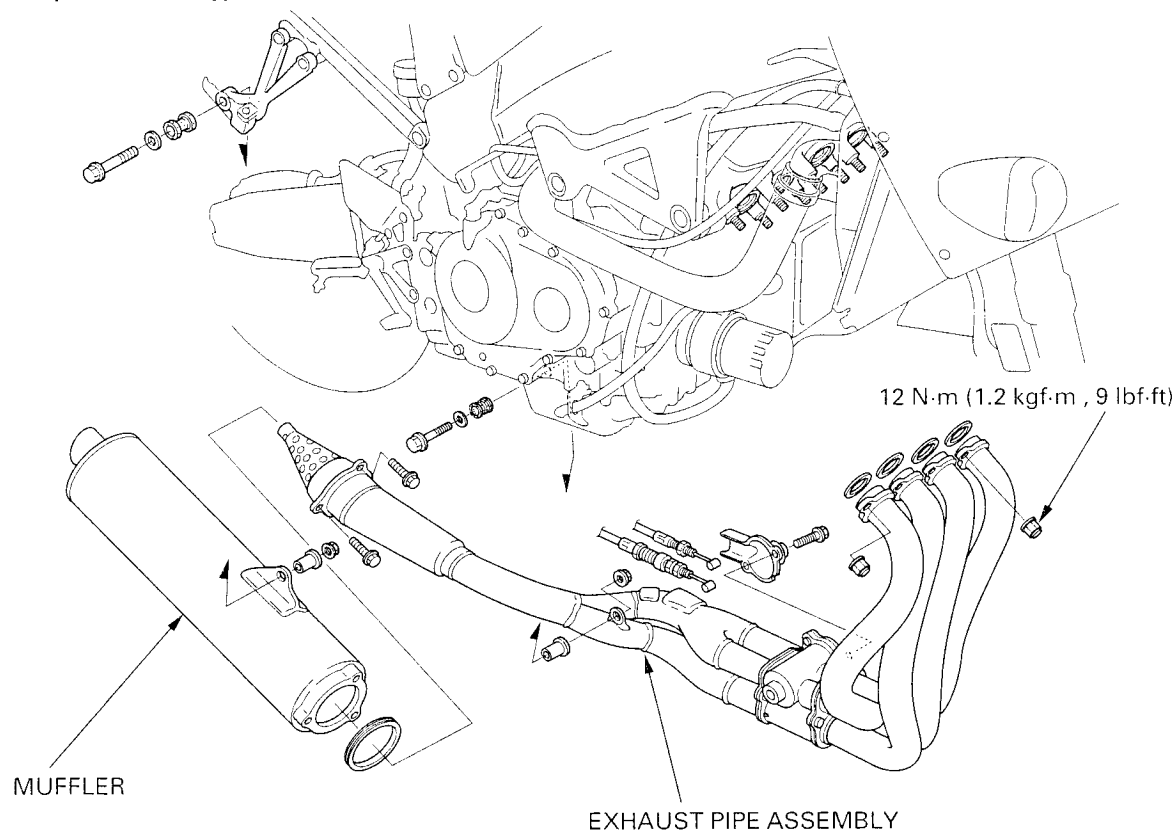


California type:

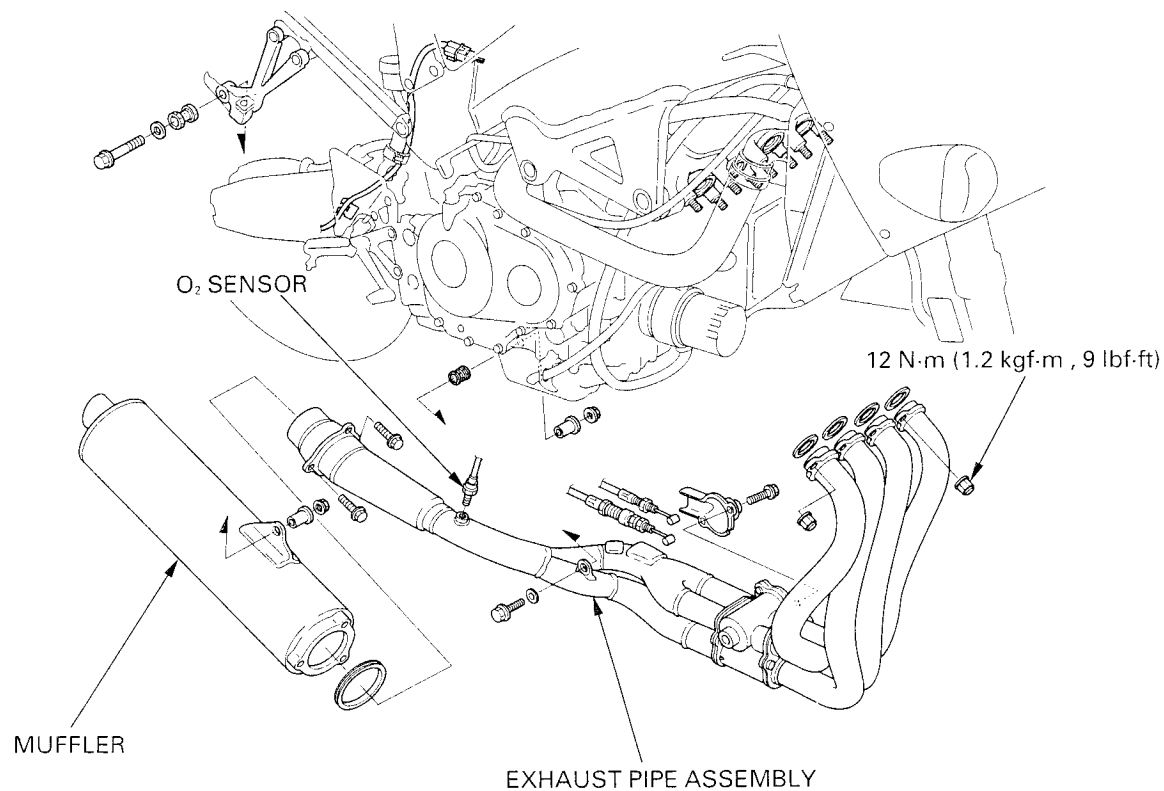


## FRAME/BODY PANELS/EXHAUST SYSTEM

Install the exhaust pipe mounting bushing and collar into the lower bracket hole.

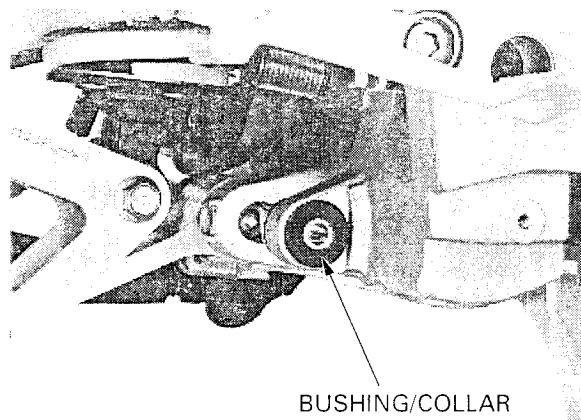

*Always replace the exhaust pipe gaskets with new ones.*

Install the new exhaust pipe gaskets onto the exhaust ports of the cylinder head.

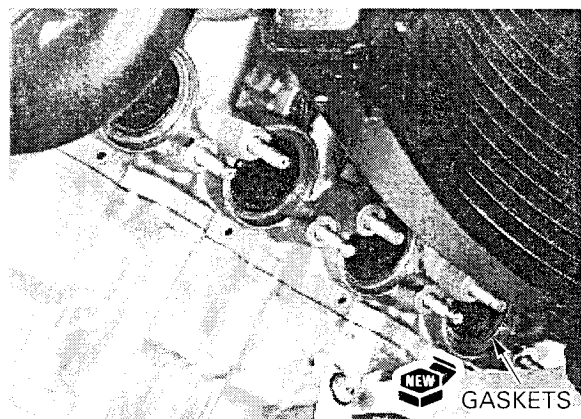


*Install the washer, bolt and nut properly.*


Install the exhaust pipe, temporarily install the exhaust pipe joint nuts and mounting bolt/nut.

First tighten the exhaust pipe joint nuts to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

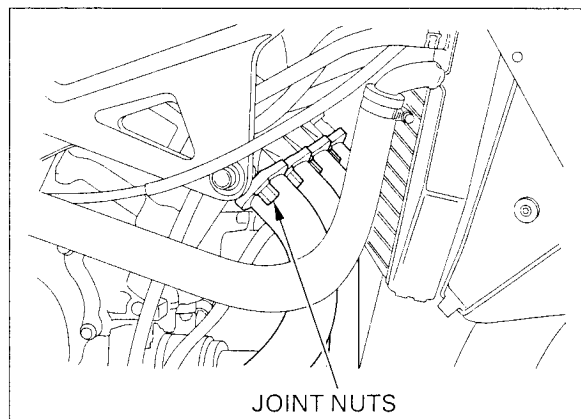


Tighten the exhaust pipe mounting bolt/nut.

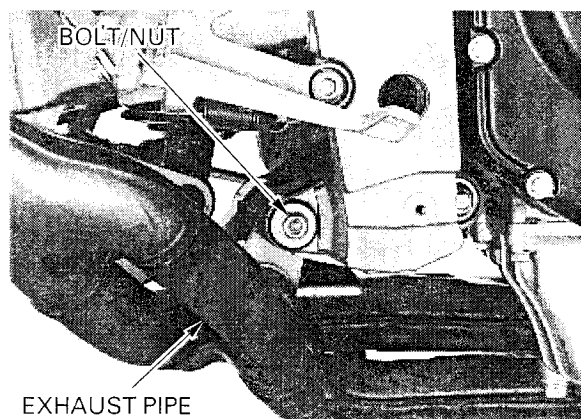

## FRAME/BODY PANELS/EXHAUST SYSTEM

Connect the EGCV control cables to the exhaust valve pulley.

Adjust the control cables (page 5-95).

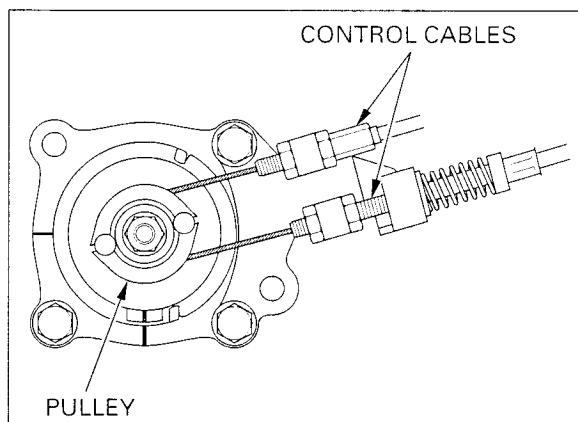


Install the EGCV pulley cover and tighten the bolts to the specified torque.


### TORQUE:

**Upper mounting bolt:** 12 N·m (1.2 kgf·m , 9 lbf·ft)


**Lower mounting bolt:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

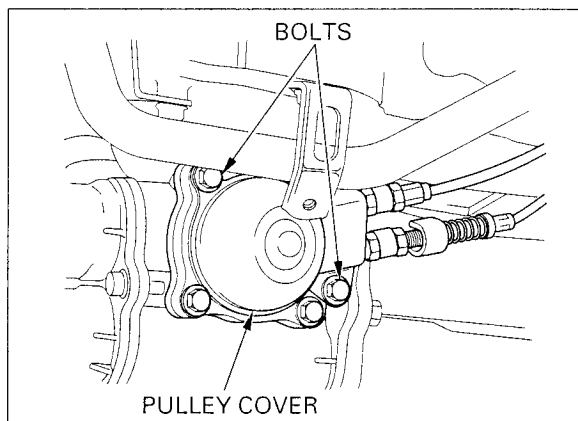

Install the radiator lower mounting bolt/nut and tighten the nut.

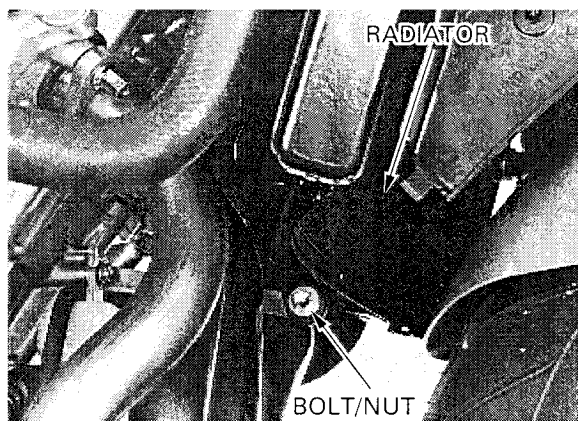


*California type only:* Clamp the O<sub>2</sub> sensor wire to the right step guard.

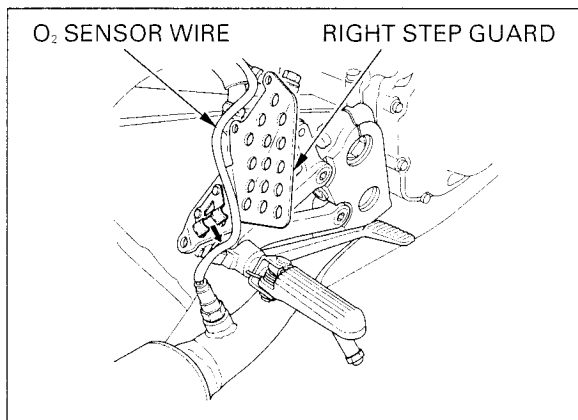


## FRAME/BODY PANELS/EXHAUST SYSTEM

Install the right step guard and rear master cylinder, then tighten the mounting bolts.  
Clamp the O<sub>2</sub> sensor wire with the rear brake reservoir hose using the hose clamp.

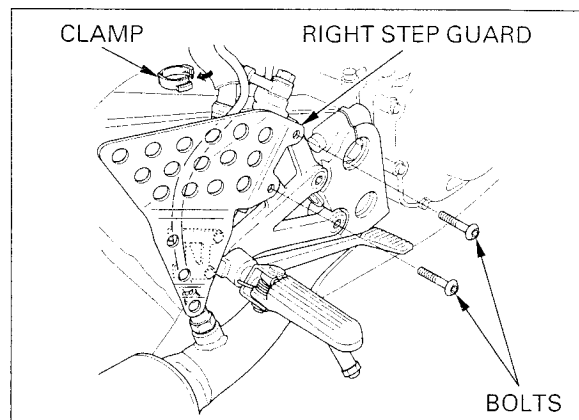


Route the O<sub>2</sub> sensor wire into the frame.  
Connect the O<sub>2</sub> sensor 4P (Natural) connector.

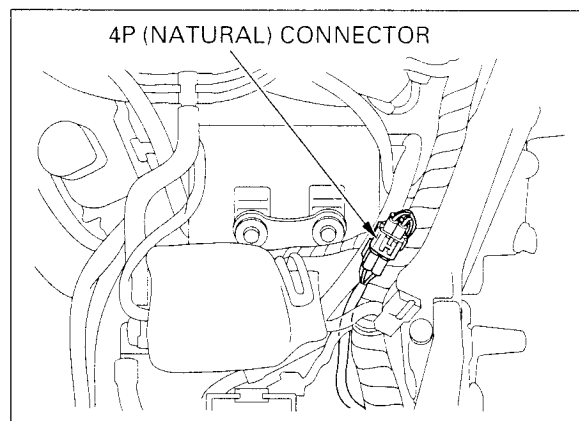

Install the new gasket onto the exhaust pipe as shown.

Install the muffler.

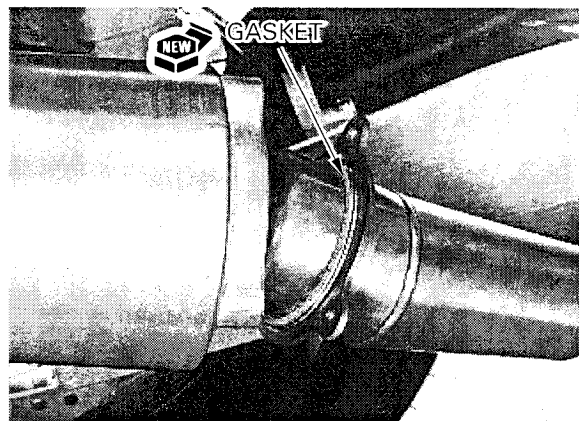


Temporarily install the muffler mounting bolt/nut.

Tighten the muffler/exhaust pipe mounting bolts securely.

Tighten the muffler mounting bolt/nut securely.

Install the middle/lower cowl (page 2-7).

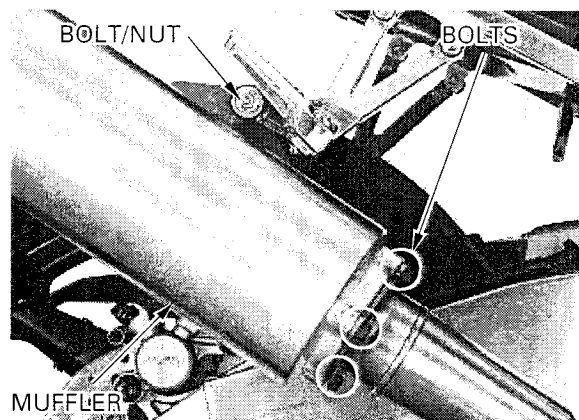



# 3. MAINTENANCE

3

SERVICE INFORMATION	3-1	DRIVE CHAIN	3-20
MAINTENANCE SCHEDULE	3-3	BRAKE FLUID	3-25
FUEL LINE	3-4	BRAKE PAD WEAR	3-25
THROTTLE OPERATION	3-5	BRAKE SYSTEM	3-26
AIR CLEANER	3-5	BRAKE LIGHT SWITCH	3-26
SPARK PLUG	3-6	HEADLIGHT AIM	3-27
VALVE CLEARANCE	3-10	CLUTCH SYSTEM	3-27
ENGINE OIL/OIL FILTER	3-15	SIDE STAND	3-28
ENGINE IDLE SPEED	3-18	SUSPENSION	3-28
RADIATOR COOLANT	3-18	NUTS, BOLTS, FASTENERS	3-31
COOLING SYSTEM	3-18	WHEELS/TIRES	3-32
SECONDARY AIR SUPPLY SYSTEM	3-19	STEERING HEAD BEARINGS	3-32
EVAPORATIVE EMISSION CONTROL SYSTEM (CALIFORNIA TYPE ONLY)	3-20		

## SERVICE INFORMATION

### GENERAL

- Place the motorcycle on a level ground before starting any work.
- Gasoline is extremely flammable and is explosive under certain conditions.
- Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where the gasoline is stored can cause a fire or explosion.
- If the engine must be running to do some work, make sure the area is well ventilated. Never run the engine in an enclosed area.
- The exhaust contains poisonous carbon monoxide gas that may cause loss of consciousness and may lead to death. Run the engine in an open area or with an exhaust evacuation system in and enclosed area.

**MAINTENANCE****SPECIFICATIONS**

ITEM		SPECIFICATIONS	
Throttle grip free play		2 – 6 mm (1/16 – 1/4 in)	
Spark plug	Standard	IUH27D (DENSO)	
	Optional	IUH24D (DENSO)	
Spark plug gap		0.80 – 0.90 mm (0.031 – 0.035 in)	
Valve clearance	IN	0.16 ± 0.03 mm (0.006 ± 0.001 in)	
	EX	0.27 ± 0.03 mm (0.011 ± 0.001 in)	
Engine oil capacity	At draining	3.5 ℓ (3.7 US qt, 3.1 Imp qt)	
	At oil filter change	3.7 ℓ (3.9 US qt, 3.3 Imp qt)	
Recommended engine oil		Pro Honda GN4 or HP4 4-stroke oil (U.S.A. & Canada), or Honda 4-stroke oil (Canada only), or equivalent motor oil API service classification SF or SG Viscosity: SAE 10W-40	
Engine idle speed		1,200 ± 100 rpm	
Drive chain slack		40 – 50 mm (1.6 – 2.0 in)	
Recommended brake fluid		Honda DOT 4 Brake Fluid	
Tire size		Front	120/70 ZR17 (58W)
		Rear	190/50 ZR17 (73W)
Tire brand	Bridgestone	Front	BT010F
		Rear	BT010R
	Michelin	Front	Pilot SPORT E
		Rear	Pilot SPORT E
Tire air pressure	Up to 90 kg (200 lb) load	Front	250 kPa (2.50 kgf/cm <sup>2</sup> , 36 psi)
		Rear	290 kPa (2.90 kgf/cm <sup>2</sup> , 42 psi)
	Up to maximum weight capacity	Front	250 kPa (2.50 kgf/cm <sup>2</sup> , 36 psi)
		Rear	290 kPa (2.90 kgf/cm <sup>2</sup> , 42 psi)
Minimum tire tread depth		Front	1.5 mm (0.06 in)
		Rear	2.0 mm (0.08 in)

**TORQUE VALUES**

Timing hole cap	18 N·m (1.8 kgf·m, 13 lbf·ft)	Apply grease to the threads
Spark plug	12 N·m (1.2 kgf·m, 9 lbf·ft)	
Cylinder head cover bolt	10 N·m (1.0 kgf·m, 7 lbf·ft)	
Oil drain bolt	29 N·m (3.0 kgf·m, 22 lbf·ft)	
Oil filter cartridge	26 N·m (2.7 kgf·m, 20 lbf·ft)	Apply clean engine oil to the O-ring
Rear axle nut	113 N·m (11.5 kgf·m, 83 lbf·ft)	U-nut
Drive sprocket special bolt	54 N·m (5.5 kgf·m, 40 lbf·ft)	
Driven sprocket nut	64 N·m (6.5 kgf·m, 47 lbf·ft)	
Rear master cylinder push rod nut	18 N·m (1.8 kgf·m, 13 lbf·ft)	

**TOOLS**

Oil filter wrench	07HAA-PJ70100	
Drive chain tool set	07HMH-MR10103	07HAA-MR1010A (U.S.A. only)

## MAINTENANCE SCHEDULE

Perform the Pre-ride inspection in the Owner's Manual at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean. R: Replace. A: Adjust. L: Lubricate.

The following items require some mechanical knowledge. Certain items (particularly those marked \* and \*\*) may require more technical information and tools. Consult your authorized HONDA dealer.

ITEMS	FREQUENCY	NOTE ↓	ODOMETER READING (NOTE 1)								REFER TO PAGE
			× 1,000 mi	0.6	4	8	12	16	20	24	
			× 100 km	10	64	128	192	256	320	384	
EMISSION RELATED ITEMS	* FUEL LINE					I		I		I	3-4
	* THROTTLE OPERATION					I		I		I	3-4
	AIR CLEANER	NOTE 2					R			R	3-6
	SPARK PLUG				I	R	I	R	I	R	3-7
	* VALVE CLEARANCE							I			3-9
	ENGINE OIL			R		R		R		R	3-12
	ENGINE OIL FILTER			R		R		R		R	3-12
	* ENGINE IDLE SPEED			I	I	I	I	I	I	I	3-14
	RADIATOR COOLANT	NOTE 3				I		I		R	3-15
	* COOLING SYSTEM					I		I		I	3-15
	* SECONDARY AIR SUPPLY SYSTEM					I		I		I	3-16
	* EVAPORATIVE EMISSION CONTROL SYSTEM	NOTE 4					I			I	3-16
NON-EMISSION RELATED ITEMS	** EGCV (Exhaust Gas Control Valve)										5-95
	** CONTROL CABLE										
	DRIVE CHAIN										3-17
	BRAKE FLUID	NOTE 3									
	BRAKE PAD WEAR				I	I	I	I	I	I	3-22
	BRAKE SYSTEM			I		I		I		I	3-23
	* BRAKE LIGHT SWITCH					I		I		I	3-25
	* HEADLIGHT AIM					I		I		I	3-25
	CLUTCH SYSTEM			I	I	I	I	I	I	I	3-26
	SIDE STAND					I		I		I	3-27
	* SUSPENSION					I		I		I	3-27
	* NUTS, BOLTS, FASTENERS			I		I		I		I	3-29
	** WHEELS/TIRES					I		I		I	3-29
	** STEERING HEAD BEARINGS			I		I		I		I	3-30

\* Should be serviced by an authorized HONDA dealer, unless the owner has proper tools and service data and is mechanically qualified.


\*\* In the interest of safety, we recommend these items be serviced only by an authorized HONDA dealer.

- NOTES:
1. At higher odometer reading, repeat at the frequency interval established here.
  2. Service more frequently if the motorcycle is ridden in unusually wet or dusty areas.
  3. Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.
  4. California type only.


## MAINTENANCE

### FUEL LINE


Remove the front and rear fuel tank mounting bolts.

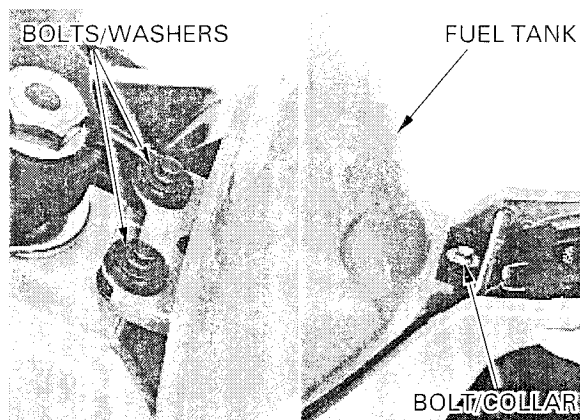

Remove the fuel tank mounting collar, temporarily install a fuel tank mounting bolt.

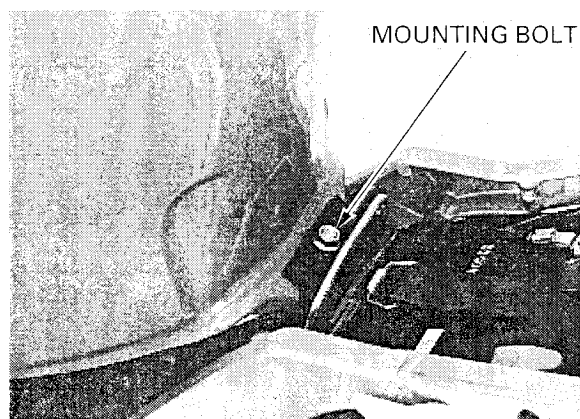


Open and support the front end of fuel tank using a suitable support as shown.

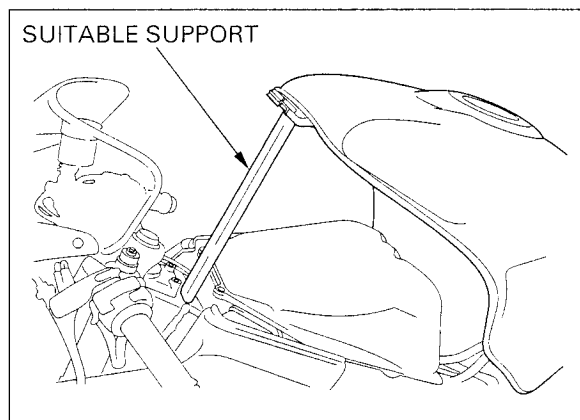

Check the fuel lines for deterioration, damage or leakage. Replace the fuel line if necessary.

Install the fuel tank in the reverse order of removal.

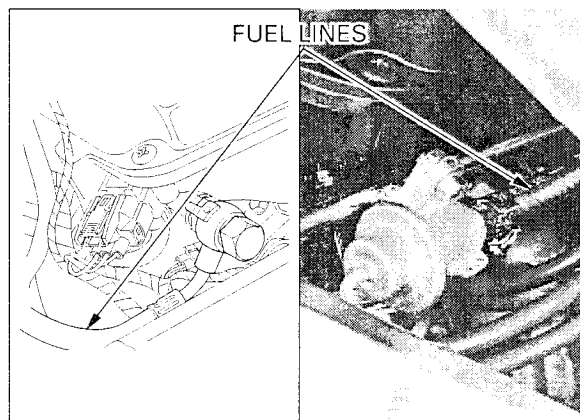




## THROTTLE OPERATION

Check for smooth throttle grip full opening and automatic full closing in all steering positions. Check the throttle cables and replace them if they are deteriorated, kinked or damaged. Lubricate the throttle cables, if throttle operation is not smooth.

Measure the free play at the throttle grip flange.


**FREE PLAY:** 2 – 6 mm (1/16 – 1/4 in)

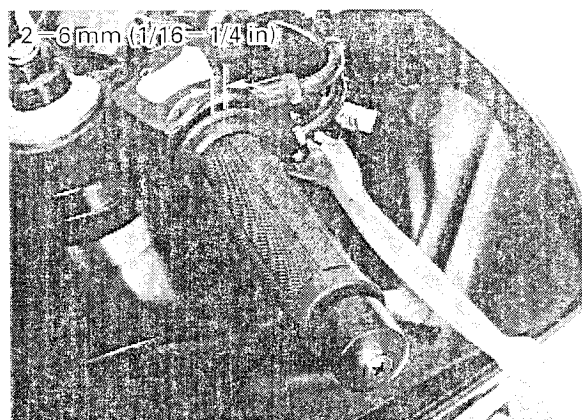

Throttle grip free play can be adjusted at either end of the throttle cable.

Minor adjustments are made with the upper adjuster.

Adjust the free play by loosening the lock nut and turning the adjuster.

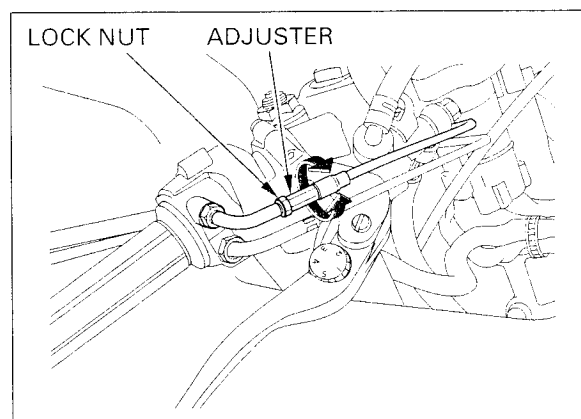

Major adjustments are made with the lower adjuster.


Remove the air cleaner housing (page 5-66).

Adjust the free play by loosening the lock nut and turning the adjuster.

After adjustment, tighten the lock nut securely.

Recheck the throttle operation.

Replace any damaged parts, if necessary.

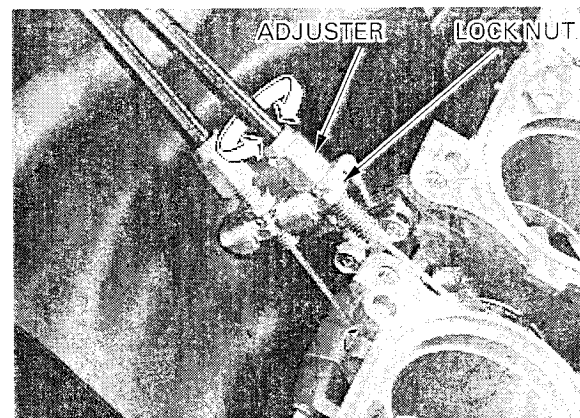


## AIR CLEANER

Open and support the front end of fuel tank (page 3-4).

Disconnect the IAT (Intake Air Temperature) sensor connector (page 5-84).

Remove the screws and air cleaner housing cover.

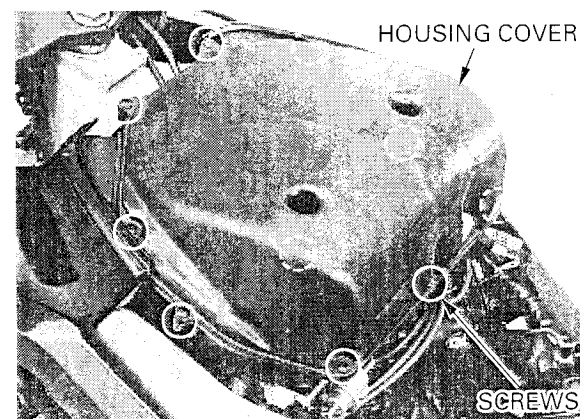


## MAINTENANCE

Remove and discard the air cleaner element in accordance with the maintenance schedule (page 3-3).

Also replace the air cleaner element any time it is excessively dirty or damaged.

Install the removed parts in the reverse order of removal.

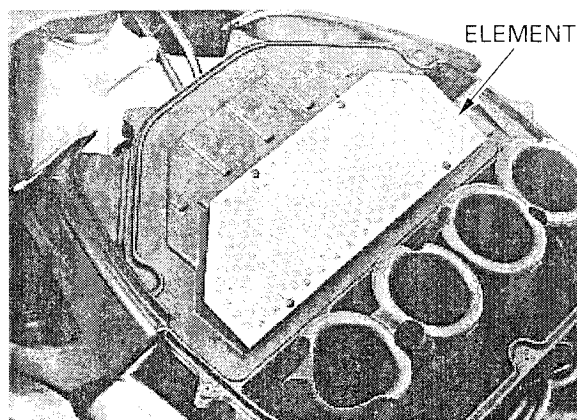


## SPARK PLUG

### REMOVAL


#### NOTICE

*Be careful not to damage the radiator fins.*


Remove the middle cowl (page 2-5).

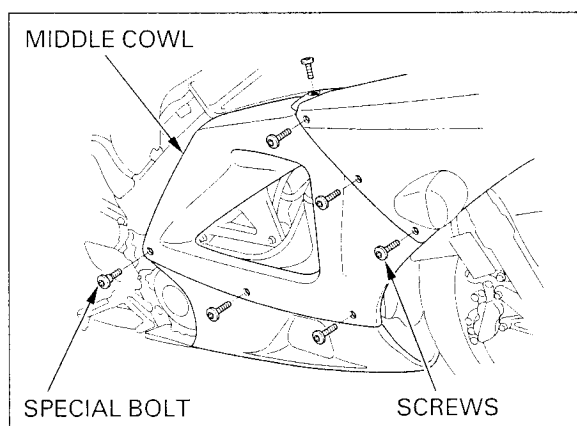

Disconnect the fan motor sub-harness 2P (Black) connector.

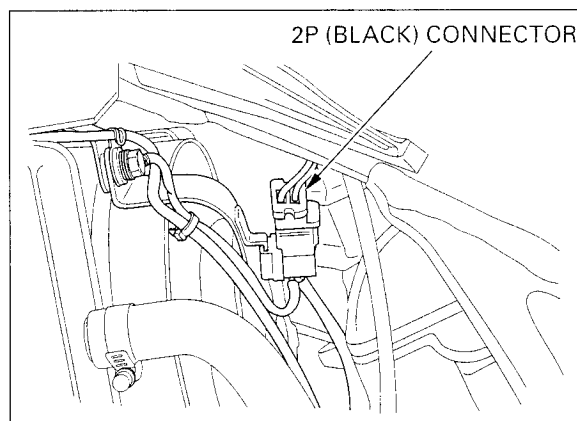


Remove the radiator lower mounting bolt/nut.

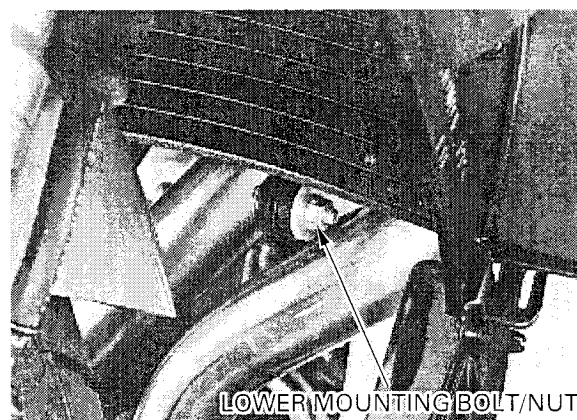




Remove the radiator upper mounting bolt and washer.

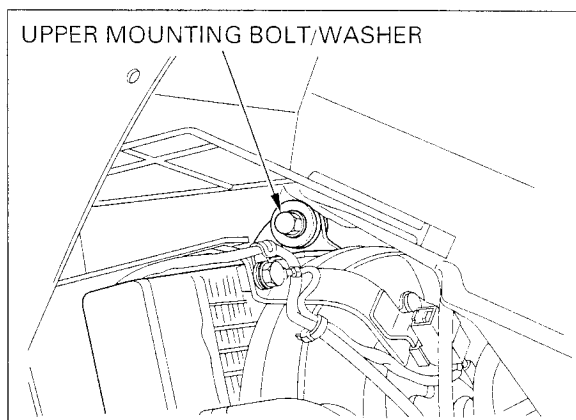


Remove the radiator grommet from the frame boss by moving it to the right, then move the radiator forward.

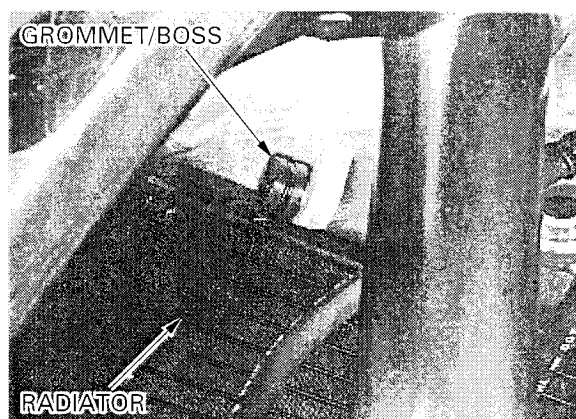


*Clean around the spark plug bases with compressed air before removing, and be sure that no debris is allowed to enter the combustion chamber.*

Disconnect the direct ignition coil connectors. Remove the direct ignition coils from the spark plug.

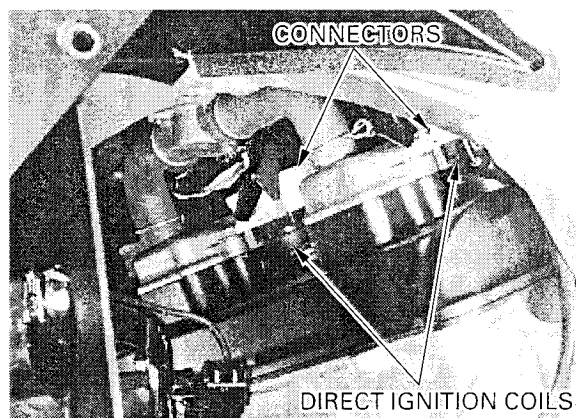

Remove the spark plug using a equipped spark plug wrench or an equivalent.

Inspect or replace as described in the maintenance schedule.

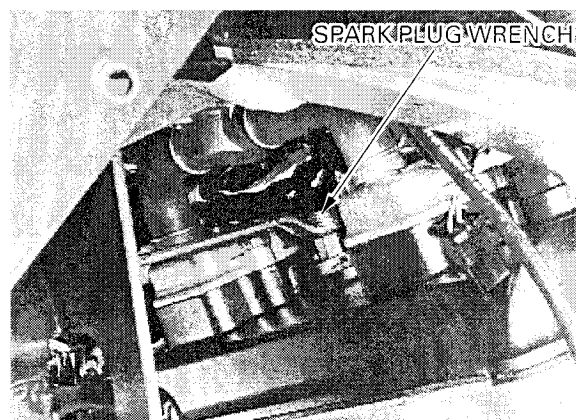

## MAINTENANCE

### INSPECTION

Check the following and replace if necessary (recommended spark plug: page 3-1)

- Insulator for damage
- Electrodes for wear
- Burning condition, coloration



*This motorcycle's spark plug equipped with iridium center electrode. Replace the spark plug if the electrodes is contaminated.*

If the electrode is contaminated with accumulated objects or dirt, replace the spark plug.

Replace the plug if the center electrode is rounded as shown in the illustration.

*Always use specified spark plugs on this motorcycle.*

**SPECIFIED SPARK PLUG:** IUH27D (DENSO)

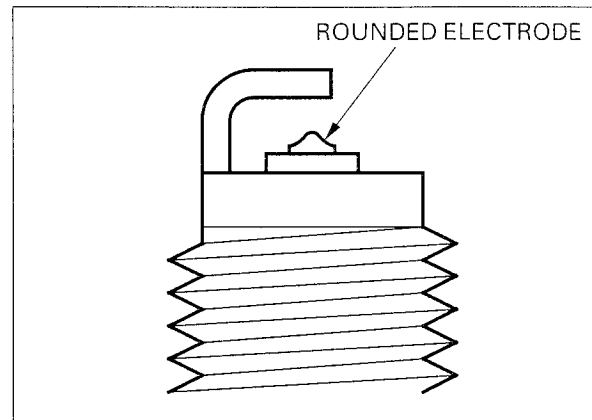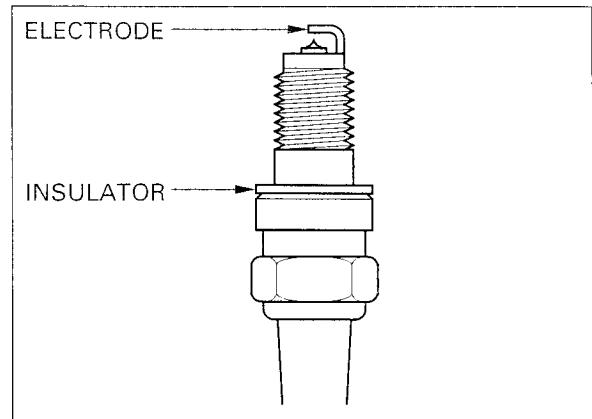


*To prevent damaging the iridium center electrode, use a wire type feeler gauge to check the spark plug gap.*

Check the gap between the center and side electrodes with a wire type feeler gauge.

*Do not adjust the spark plug gap. If the gap is out of specification, replace with a new one.*


Make sure that the  $\phi 1.0$  mm (0.04 in) plug gauge does not insert between the gap. If the gauge can be inserted into the gap, replace the plug with a new one.

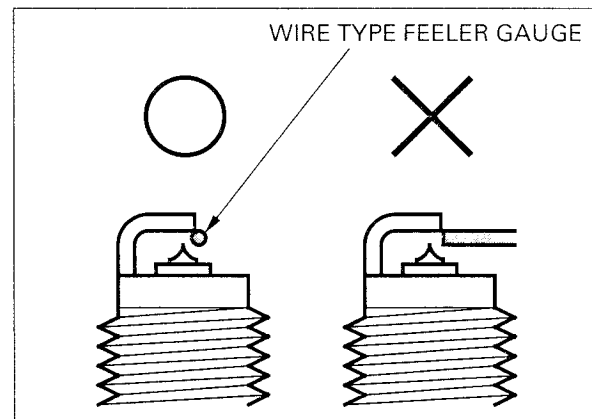


Reinstall the spark plug in the cylinder head and hand tighten, then torque to specification.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

If using the new plug, install as follows:  
Install and hand tighten the new spark plug, then tighten it about 1/2 turn after the sealing washer contacts the seat of the plug hole.

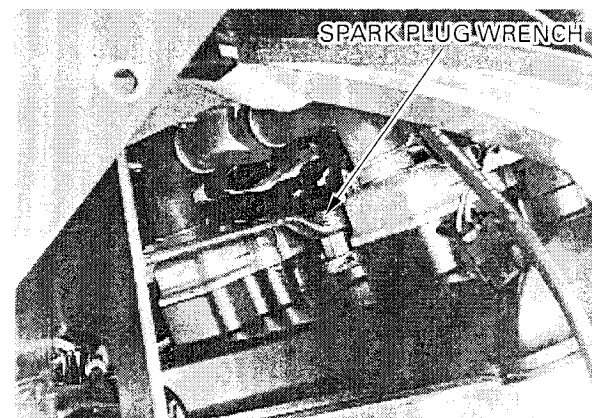


Install the direct ignition coils.  
Connect the direct ignition coil connectors.  
*Install the blue taped wire connector to the No. 2 direct ignition coil.*

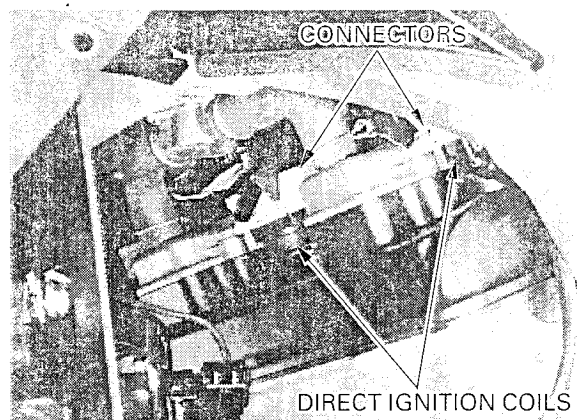


Install the radiator grommet onto the frame boss.



Install the washer and radiator upper mounting bolt, then tighten the bolt.

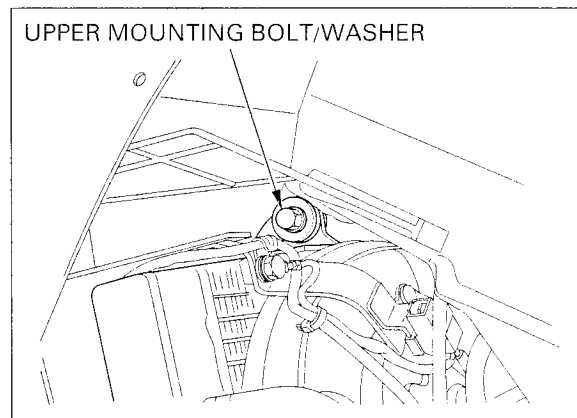


Install and tighten the radiator lower mounting bolt/nut.

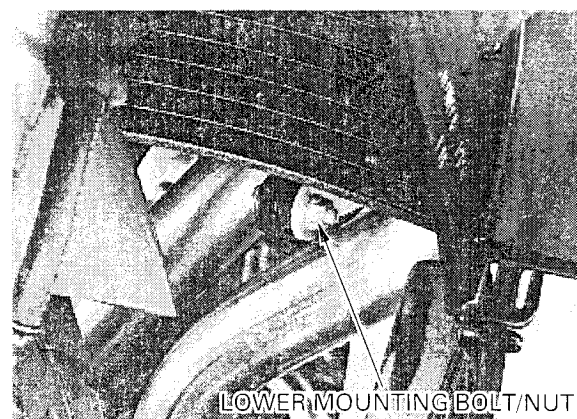




## MAINTENANCE

Connect the fan motor sub-harness 2P (Black) connector.

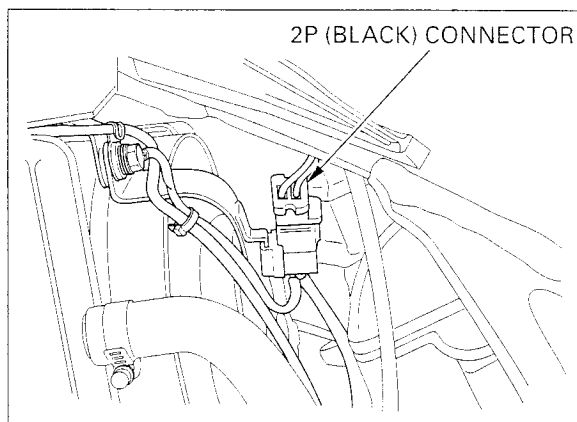

Install the middle cowl (page 2-7).

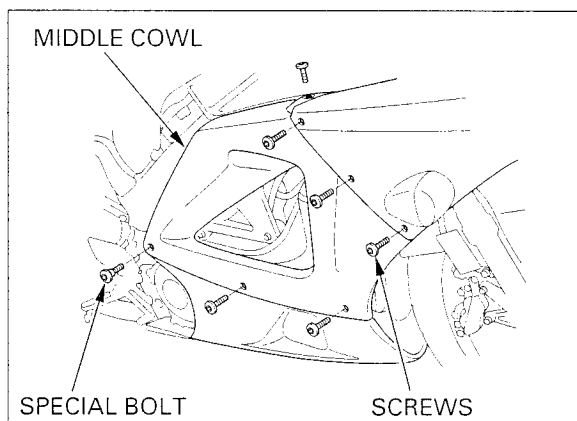


## VALVE CLEARANCE

*Inspect and adjust the valve clearance while the engine is cold (below 35°C/ 95°F).*


### INSPECTION

Remove the cylinder head cover (page 8-5).


Remove the cam chain tensioner lifter sealing bolt and sealing washer.

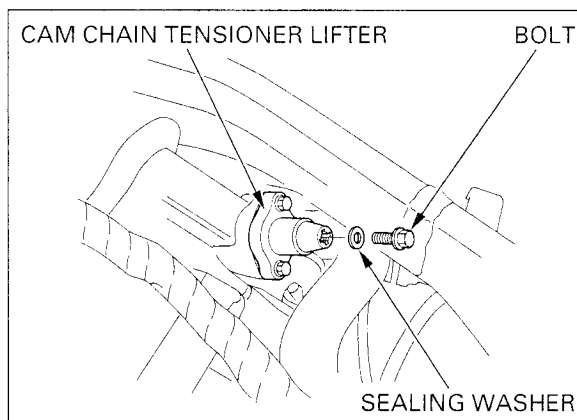


Turn the cam chain tensioner lifter shaft fully and secure it using the mechanic's tensioner stopper tool (page 8-8).

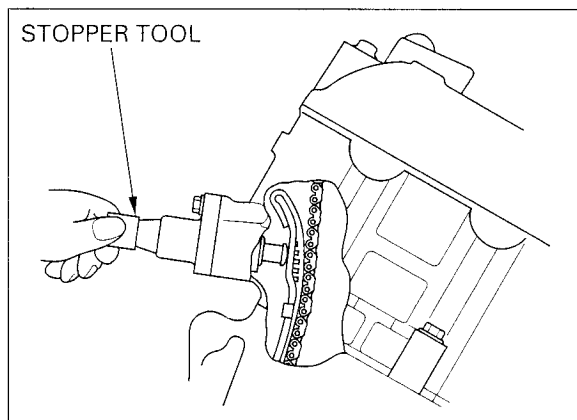

Remove the timing hole cap and O-ring.

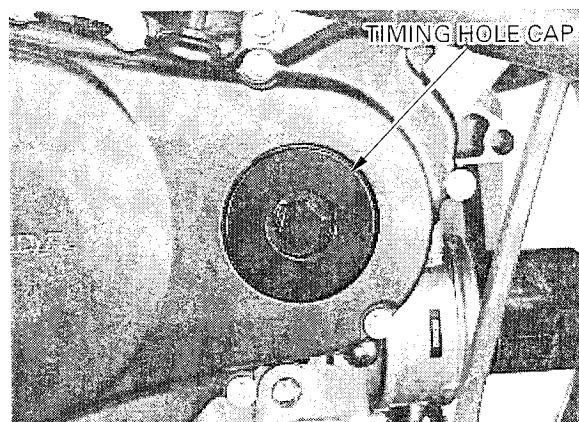


Turn the crankshaft clockwise, align the "T" mark on the ignition pulse generator rotor with the index mark on the right crankcase cover.

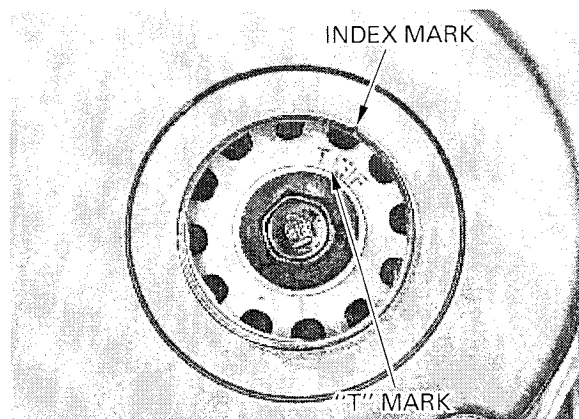

The timing marks ("IN" and "EX") on the cam sprockets must be flush with the cylinder head surface and facing outward as shown.

If the timing marks on the cam sprockets are facing inward, turn the crankshaft clockwise one full turn (360°) and realign the timing marks with the cylinder head surface so they are facing outward.

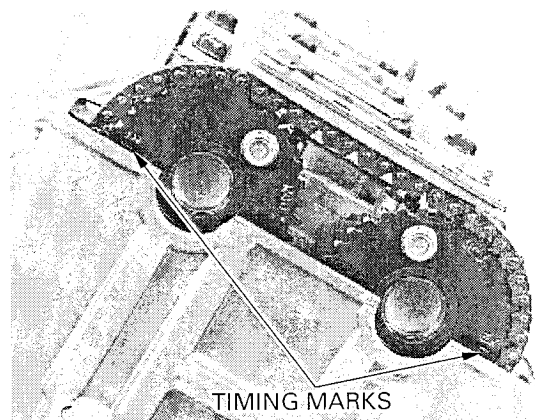


Insert the feeler gauge between the valve lifter and the cam lobe.

Check the valve clearance for the No.1 and No.3 cylinder intake valves using a feeler gauge.

#### VALVE CLEARANCE:


**IN:**  $0.16 \pm 0.03$  mm ( $0.006 \pm 0.001$  in)

*Record the clearance for each valve for reference in shim selection if adjustment is required.*

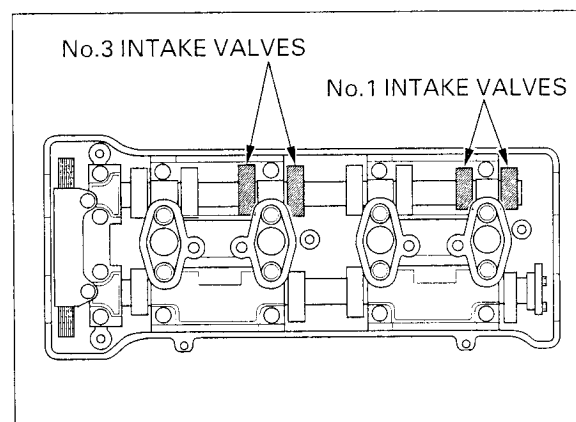

## MAINTENANCE

Turn the crankshaft clockwise 1/2 turn (180°), align the index line on the ignition pulse generator rotor so that it is facing up as shown.

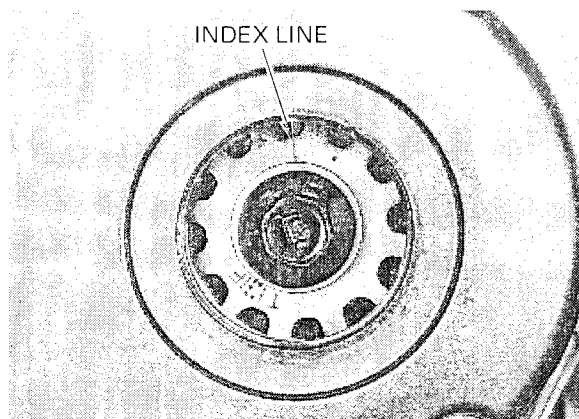


*Record the clearance for each valve for reference in shim selection if adjustment is required.*


Check the valve clearance for the No.2 and No.4 cylinder exhaust valves using a feeler gauge.

### VALVE CLEARANCE:

**EX:**  $0.27 \pm 0.03$  mm ( $0.011 \pm 0.001$  in)

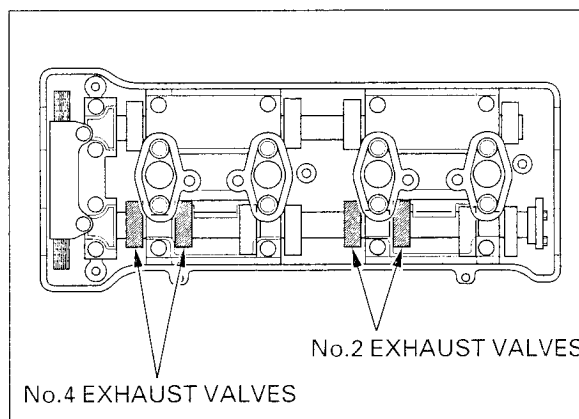

Turn the crankshaft clockwise 1/2 turn (180°), align the "T" mark on the ignition pulse generator rotor with the index mark on the right crankcase cover.

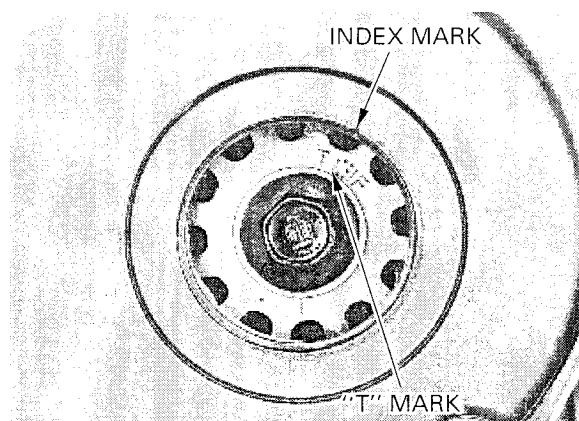


*Record the clearance for each valve for reference in shim selection if adjustment is required.*

Check the valve clearance for the No.2 and No.4 cylinder intake valves using feeler gauge.


### VALVE CLEARANCE:

**IN:**  $0.16 \pm 0.03$  mm ( $0.006 \pm 0.001$  in)

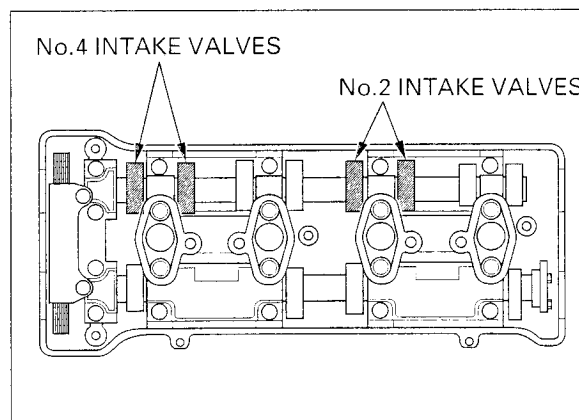



Turn the crankshaft clockwise 1/2 turn (180°), align the index line on the ignition pulse generator rotor so that it is facing up as shown.

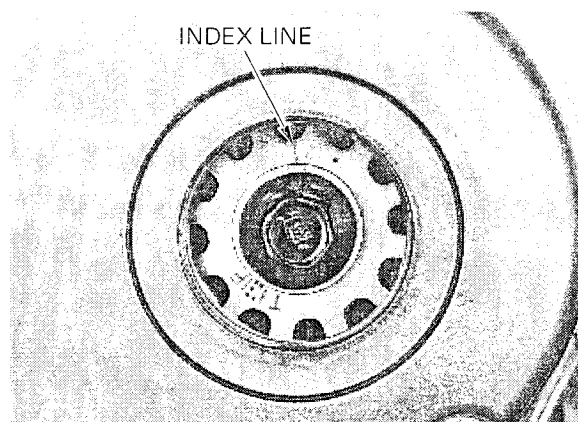


*Record the clearance for each valve for reference in shim selection if adjustment is required.*

Check the valve clearance for the No.1 and No.3 cylinder exhaust valves using a feeler gauge.

**VALVE CLEARANCE:**

**EX:**  $0.27 \pm 0.03$  mm ( $0.011 \pm 0.001$  in)

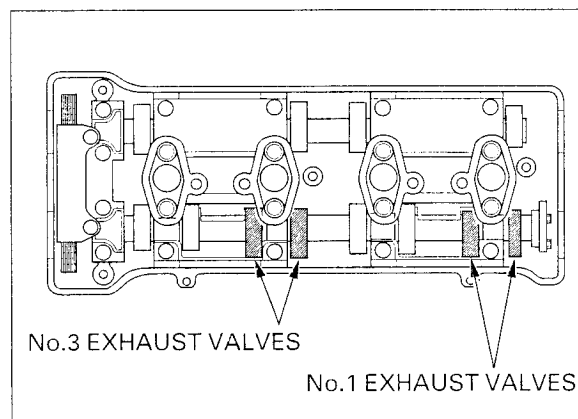


## ADJUSTMENT


Remove the camshaft (page 8-7).

Remove the valve lifters and shims.

- Shim may stick to the inside of the valve lifter. Do not allow the shims to fall into the crankcase.
- Mark all valve lifters and shims to ensure correct reassembly in their original locations.
- The valve lifter can be easily removed with a valve lapping tool or magnet.
- The shims can be easily removed with a tweezers or magnet.

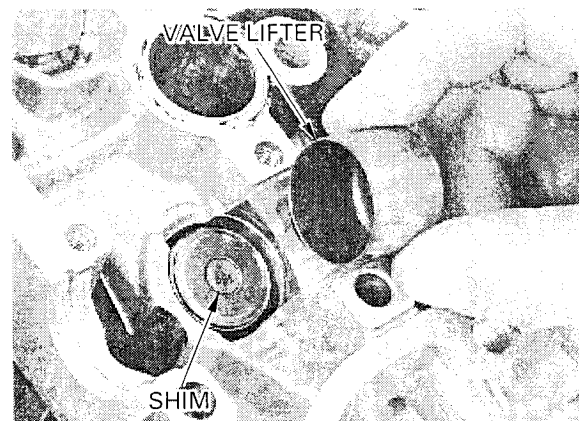

Clean the valve shim contact area in the valve lifter with compressed air.

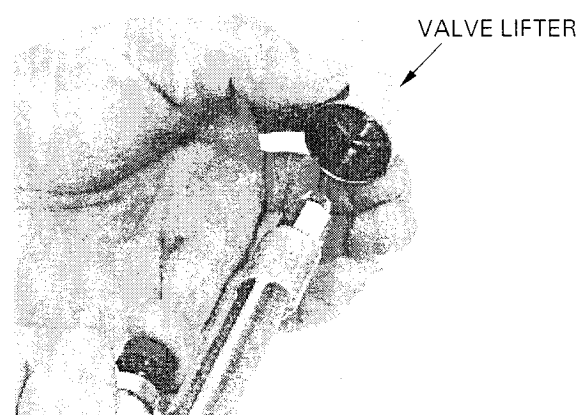

## MAINTENANCE

Sixty-five different thickness shims are available from the thinnest 1.200 mm thickness shim to the thickest 2.800 mm thickness shim in intervals of 0.025 mm.

Measure the shim thickness and record it.

Calculate the new shim thickness using the equation below.

$$A = (B - C) + D$$

A: New shim thickness



B: Recorded valve clearance

C: Specified valve clearance

D: Old shim thickness

- Make sure of the correct shim thickness by measuring the shim by micrometer.
- Reface the valve seat if carbon deposit result in a calculated dimension of over 2.800 mm.

SHIM

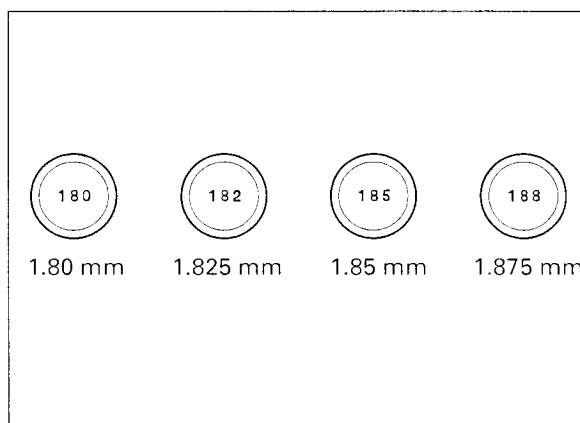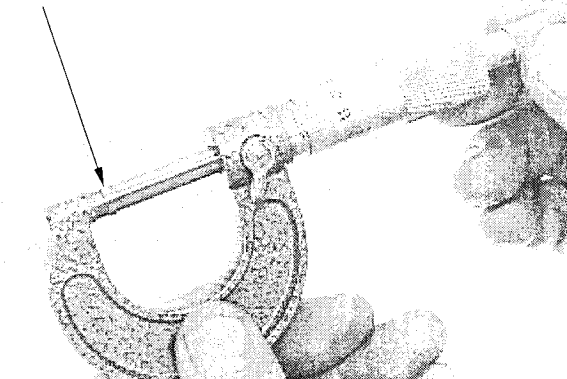

Install the shims and valve lifters in their original locations.

Install the newly selected shim on the valve retainer.

Apply molybdenum disulfide oil to the valve lifters.


Install the valve lifters into the valve lifter holes.

Install the camshaft (page 8-24).

Rotate the camshafts by rotating the crankshaft clockwise several times.

Recheck the valve clearance.


Remove the cam chain tensioner stopper tool.

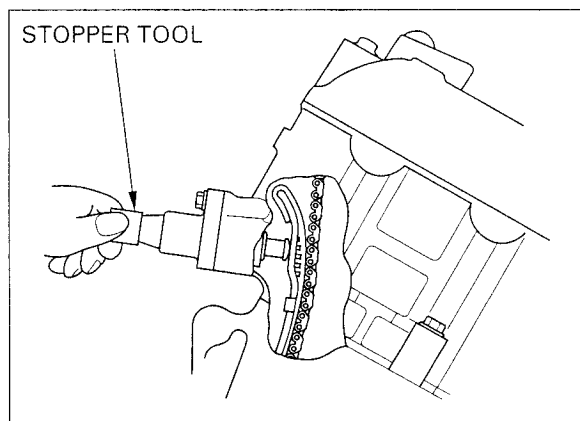

Install the new sealing washer and cam chain tensioner lifter sealing bolt.

Tighten the bolt securely.

Install the removed parts in the reverse order of removal.

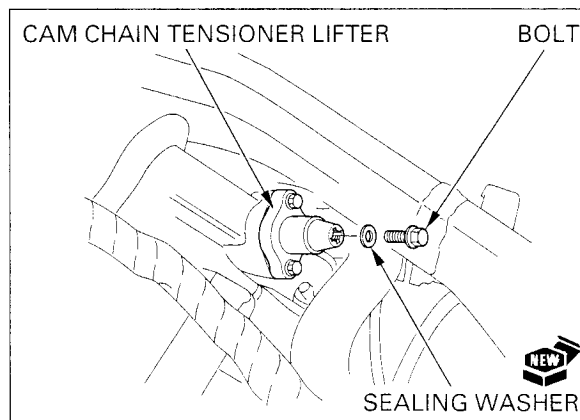


## ENGINE OIL/OIL FILTER


### OIL LEVEL INSPECTION

Start the engine and let it idle for 2 – 3 minutes.  
Turn off the engine and support the motorcycle level surface.


Check the oil level through the inspection window.

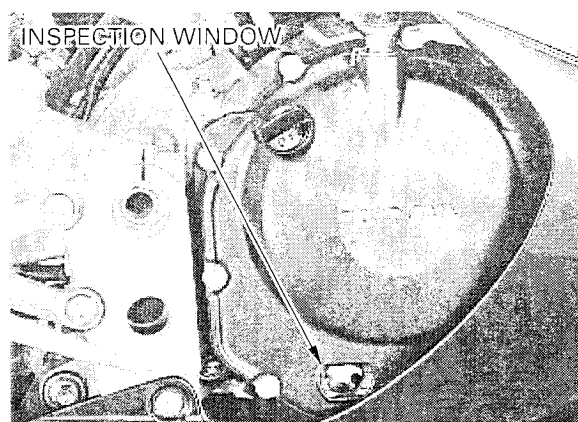

If the level is below the lower line, remove the oil filler cap and fill the crankcase with recommended oil up to the upper level line.

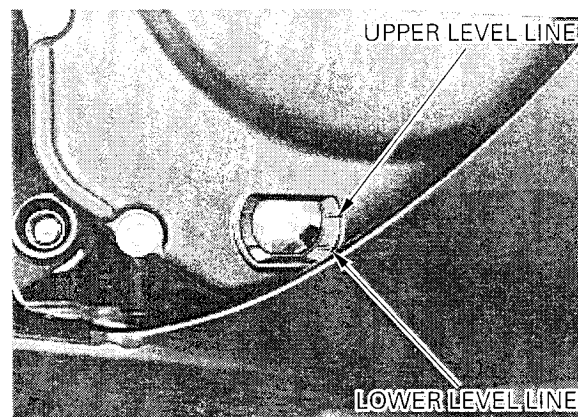

Remove the oil filler cap.

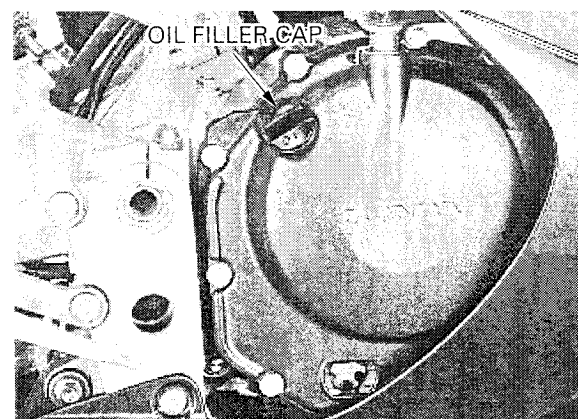


Fill the recommended engine oil up to the upper level line.

*Other viscosities shown in the chart may be used when the average temperature in your riding area is within the indicated range.*

#### RECOMMENDED ENGINE OIL:

Pro Honda GN4 or HP4 4-stroke oil (U.S.A & Canada), or Honda 4-stroke oil (Canada only), or equivalent motor oil  
API service classification: SF or SG  
Viscosity: 10W-40

Reinstall the filler cap and dipstick.

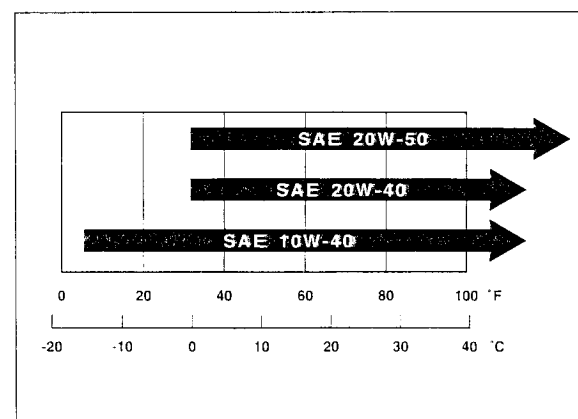




## MAINTENANCE

### ENGINE OIL & FILTER CHANGE


*Change the engine oil with the engine warm and the motorcycle on level ground to assure complete draining.*

Warm up the engine.

Stop the engine and remove the oil filler cap.

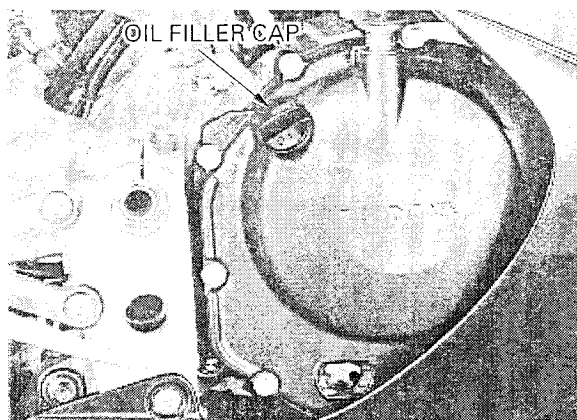

Remove the drain bolt and drain the oil completely.

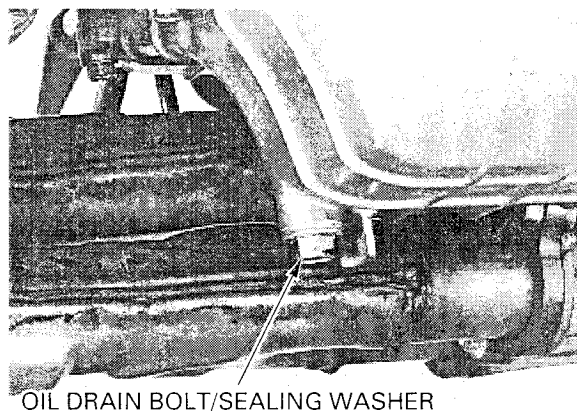


Remove the middle/lower cowl (page 2-5).

Remove and discard the oil filter cartridge using the special tool.

**TOOL:**


**Oil filter wrench**

07HAA-PJ70100

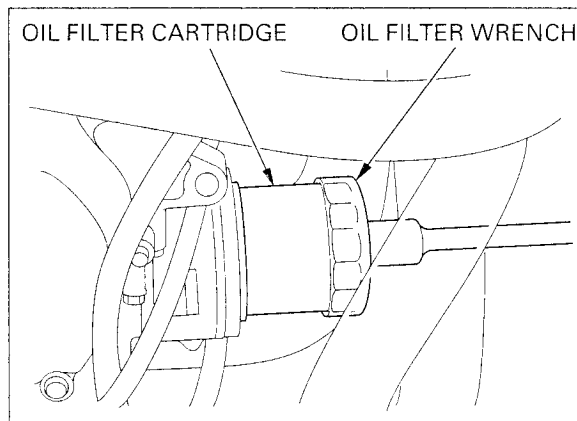


Check that the sealing washer on the drain bolt is in good condition, and replace if necessary. Install and tighten the drain bolt.

**TORQUE:** 29 N·m (3.0 kgf·m , 22 lbf·ft)

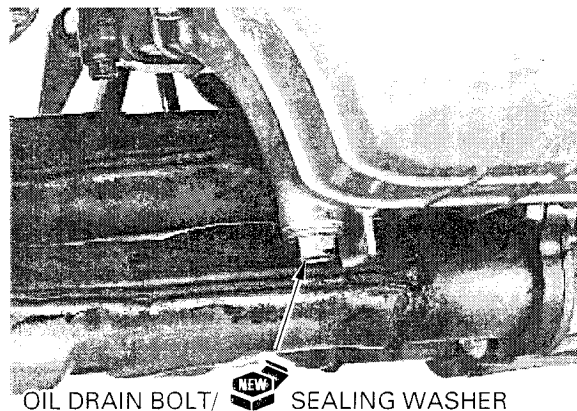

Apply oil to the new oil filter O-ring.

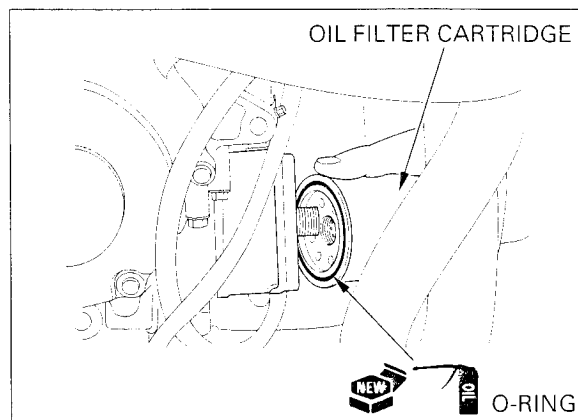


Install the new oil filter and tighten it to the specified torque.

**TOOL:**

**Oil filter wrench** 07HAA-PJ70100

**TORQUE:** 26 N·m (2.7 kgf·m , 20 lbf·ft)

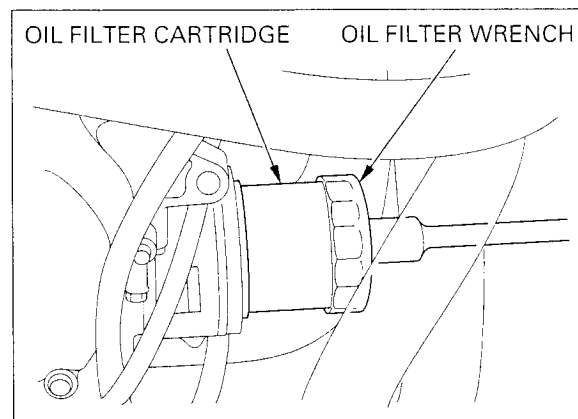

Fill the crankcase with recommended engine oil.

**OIL CAPACITY:**

3.5 ℓ (3.7 US qt , 3.1 Imp qt) at draining  
 3.7 ℓ (3.9 US qt , 3.3 Imp qt) at oil filter change

Install the oil filler cap.

Start the engine and let it idle for 2 to 3 minutes.  
 Stop the engine and recheck the oil level.  
 Make sure there are no oil leaks.

Install the middle/lower cowl (page 2-7).




## MAINTENANCE

### ENGINE IDLE SPEED

- Inspect and adjust the idle speed after all other engine maintenance items have been performed and are within specifications.
- The engine must be warm for accurate idle speed inspection and adjustment.

Warm up the engine for about ten minutes.  
Turn the throttle stop screw as required to obtain the specified idle speed.

**IDLE SPEED:** 1,200  $\pm$  100 rpm

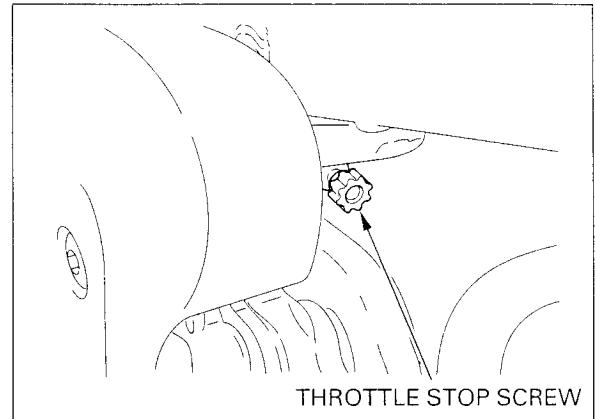

### RADIATOR COOLANT

Check the coolant level of the reserve tank with the engine running at normal operating temperature. The level should be between the "UPPER" and "LOWER" level lines.



If necessary, add recommended coolant.

**RECOMMENDED ANTIFREEZE:**

High quality ethylene glycol antifreeze containing corrosion protection inhibitors.

Remove the middle cowl (page 2-5).

Remove the reserve tank filler cap and fill to the "UPPER" level line with 50/50 mixture of distilled water and antifreeze.  
Reinstall the filler cap.

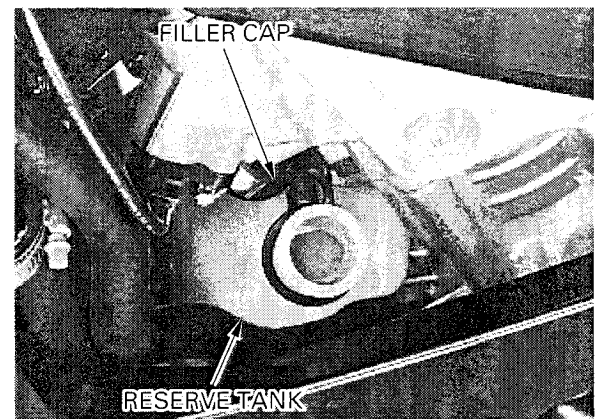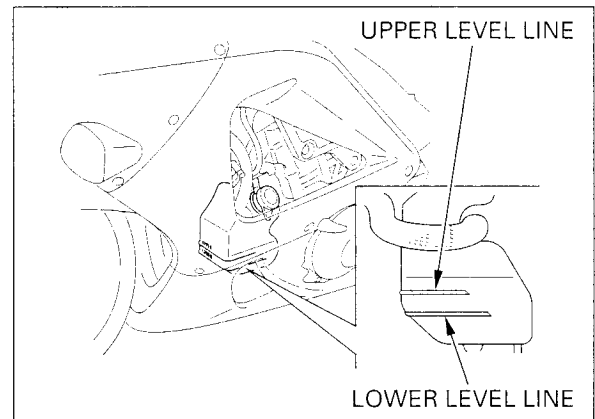


### COOLING SYSTEM

Remove the middle/lower cowl (page 2-5).


Check the radiator air passages for clogging or damage.

Straighten bend fins, and remove insects, mud or other obstructions with compressed air or low water pressure.

Replace the radiator if the air flow is restricted over more than 20% of the radiating surface.

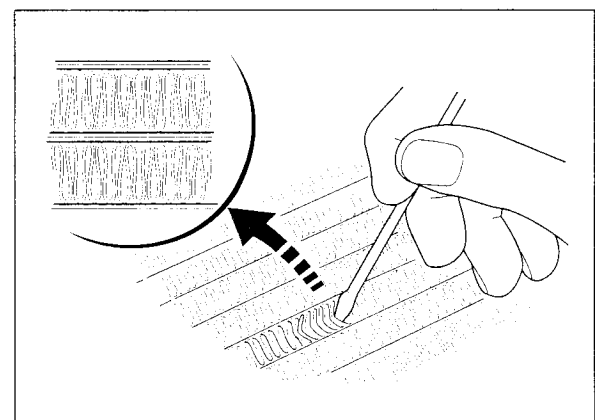

Inspect the radiator hoses for cracks or deterioration, and replace if necessary. Check the tightness of all hose clamps and fasteners.

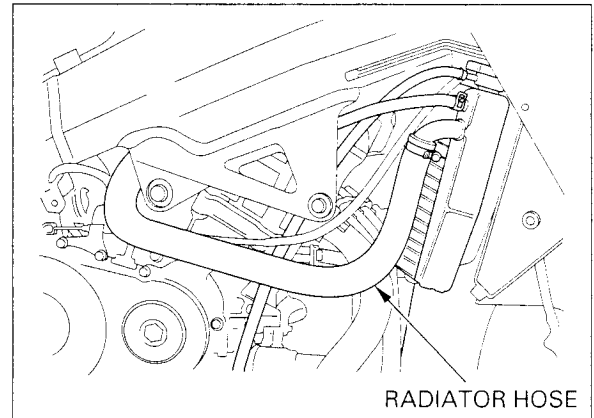


## SECONDARY AIR SUPPLY SYSTEM

- This model is equipped built-in secondary air supply system. The pulse secondary air supply system is located on the cylinder head cover.
- The secondary air supply system introduces filtered air into exhaust gases in the exhaust port. The secondary air is drawn into the exhaust port whenever there is negative pressure pulse in the exhaust system. This charged secondary air promotes burning of the unburned exhaust gases and changes a considerable amount of hydrocarbons and carbon monoxide into relatively harmless carbon dioxide and water.


Remove the air cleaner housing (page 5-58).

*If the hoses show any signs of heat damage, inspect the PAIR check valve in the PAIR reed valve cover for damage.*

Check the PAIR (pulse secondary air injection) tubes between the PAIR control solenoid valve and cylinder head cover for deterioration, damage or loose connections. Make sure that the hoses are not cracked.

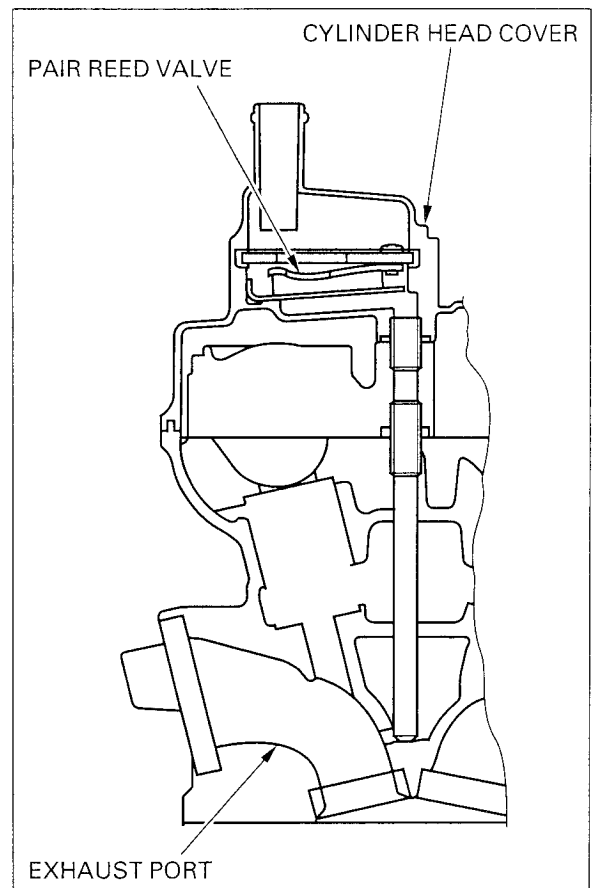

Check the air suction hose between the air cleaner housing and PAIR control solenoid valve for deterioration, damage or loose connections. Make sure that the hoses are not kinked, pinched or cracked.

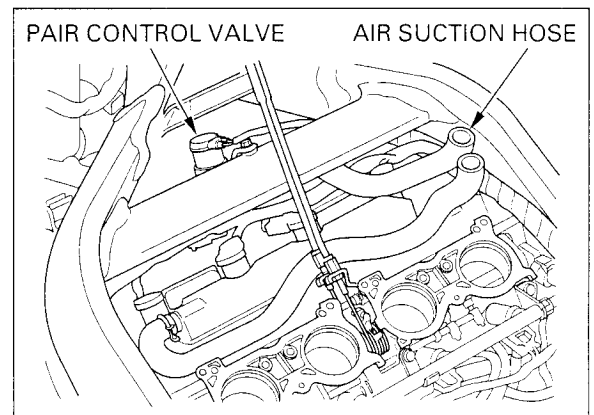




## MAINTENANCE

### EVAPORATIVE EMISSION CONTROL SYSTEM (CALIFORNIA TYPE ONLY)

Check the tubes between the fuel tank, EVAP canister, EVAP purge control solenoid valve for deterioration, damage or loose connections.

Check the EVAP canister for cracks or other damage.

Refer to the Vacuum Hose Routing Diagram Label (page 1-43) and Cable & Harness Routing (page 1-23) for tube connections.

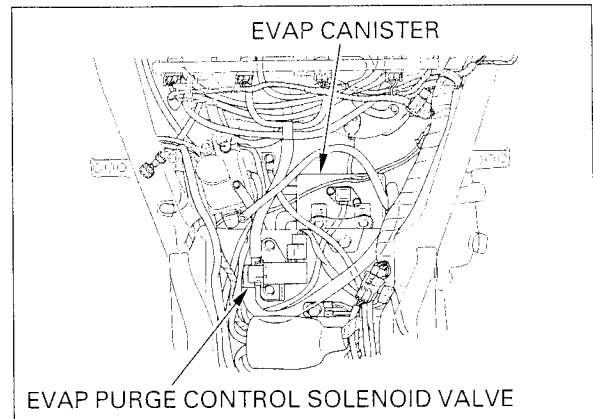

### DRIVE CHAIN

*Never inspect and adjust the drive chain while the engine is running.*

#### DRIVE CHAIN SLACK INSPECTION

Turn the ignition switch OFF, place the motorcycle on its side stand and shift the transmission into neutral.


Check the slack in the drive chain lower run midway between the sprockets.

**CHAIN SLACK:** 40 – 50 mm (1.6 – 2.0 in)

#### NOTICE

*Excessive chain slack, 50 mm (2.0 in) or more, may damage the frame.*

Lubricate the drive chain with #80–90 gear oil or drive chain lubricant designed specifically for use with O-ring chains. Wipe off the excess oil or chain lubricant.

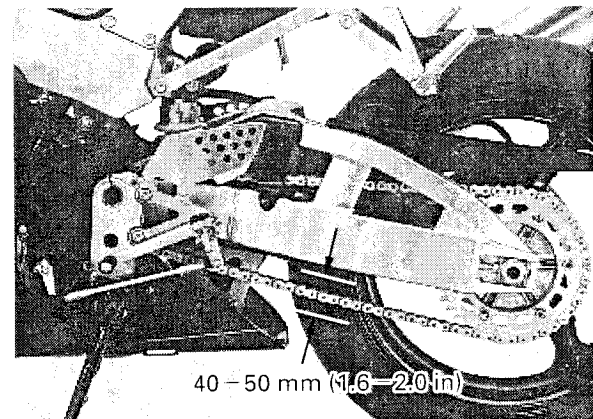

#### ADJUSTMENT


Loosen the rear axle nut.

Loosen drive chain adjust bolt lock nuts and turn both adjusting bolts until the correct drive chain slack is obtained.

Make sure the index marks on the both adjusting plate are aligned with the swingarm index mark. Tighten the rear axle nut to the specified torque.

**TORQUE:** 113 N·m (11.5 kgf·m, 83 lbf·ft)

Tighten both drive chain adjusting bolt lock nuts.

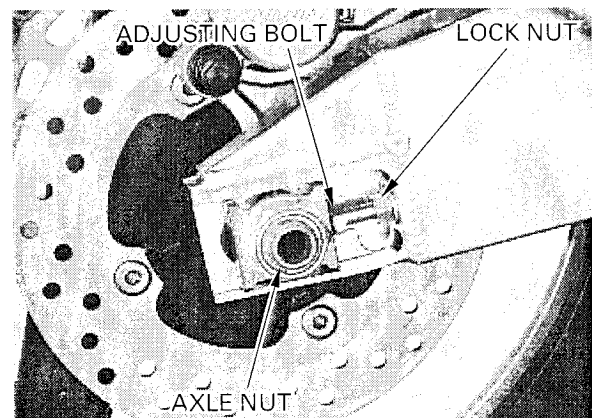




Recheck the drive chain slack and free wheel rotation. Lubricate the drive chain with #80–90 gear oil or Pro Honda chain lube designed specifically for use with O-ring chains. Wipe off the excess oil or chain lubricant.

Check the drive chain wear indicator label attached on the left swingarm.

If the drive chain adjusting plate index mark reaches red zone of the indicator label, replace the drive chain with a new one (page 3-22).

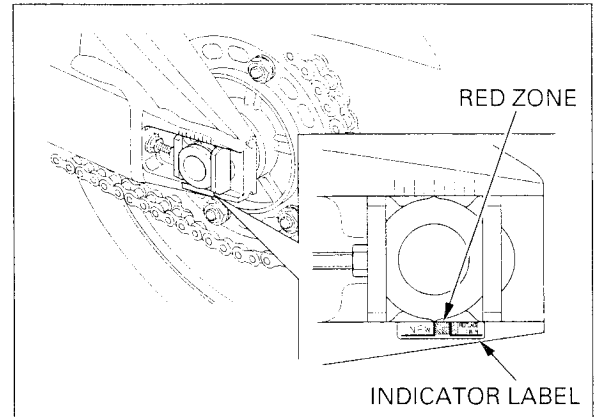

## CLEANING AND LUBRICATION

Clean the chain with non-flammable or high flash point solvent and wipe it dry.


Be sure the chain has dried completely before lubricating.

Inspect the drive chain for possible damage or wear.


Replace any chain that has damaged rollers, loose fitting links, or otherwise appears unserviceable.

Installing a new chain on badly worn sprockets will cause the new chain to wear quickly.

Inspect and replace the sprocket as necessary.

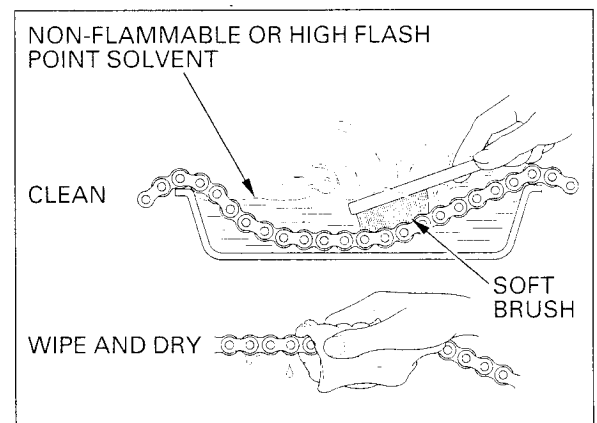

Lubricate the drive chain with #80–90 gear oil or Pro Honda chain lube designed specifically for use with O-ring chains. Wipe off the excess oil or chain lubricant.

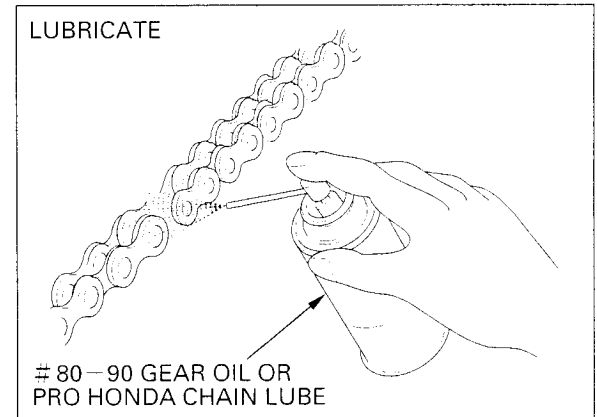


## SPROCKET INSPECTION

Inspect the drive and driven sprocket teeth for wear or damage, replace if necessary.

Never use a new drive chain on worn sprockets.

Both chain and sprockets must be in good condition, or the new replacement chain will wear rapidly.

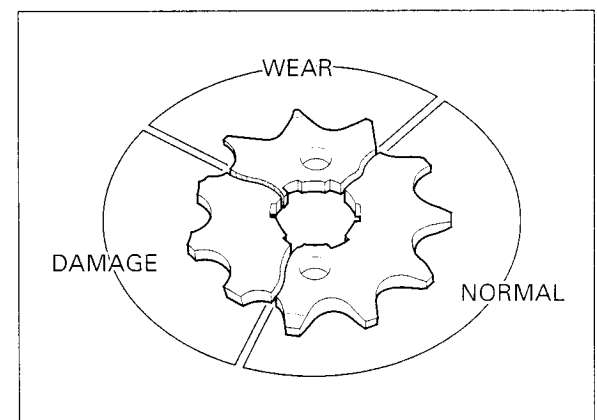


## MAINTENANCE

Check the attaching bolts and nuts on the drive and driven sprockets.  
If any are loose, torque them.

### TORQUE:

**Drive sprocket bolt:** 54 N·m (5.5 kgf·m , 40 lbf·ft)

**Driven sprocket nut:** 64 N·m (6.5 kgf·m , 47 lbf·ft)

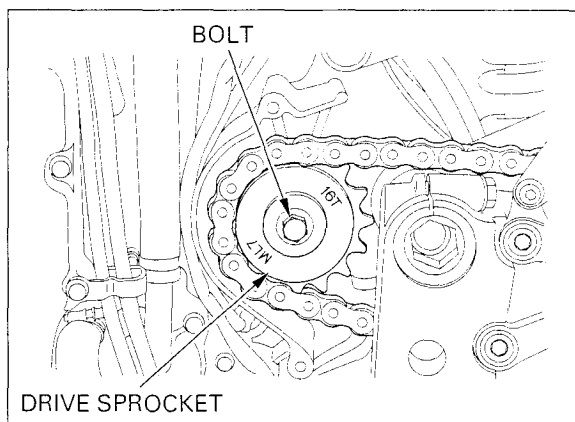

## REPLACEMENT

This motorcycle uses a drive chain with a staked master link.

Loosen the drive chain (page 3-20).


Assemble the special tool as shown.

*When using the special tool, follow the manufacturer's instruction.*

### TOOL:

**Drive chain tool set**

07HMH-MR10103 or  
07HMH-MR1010A  
(U.S.A. only)

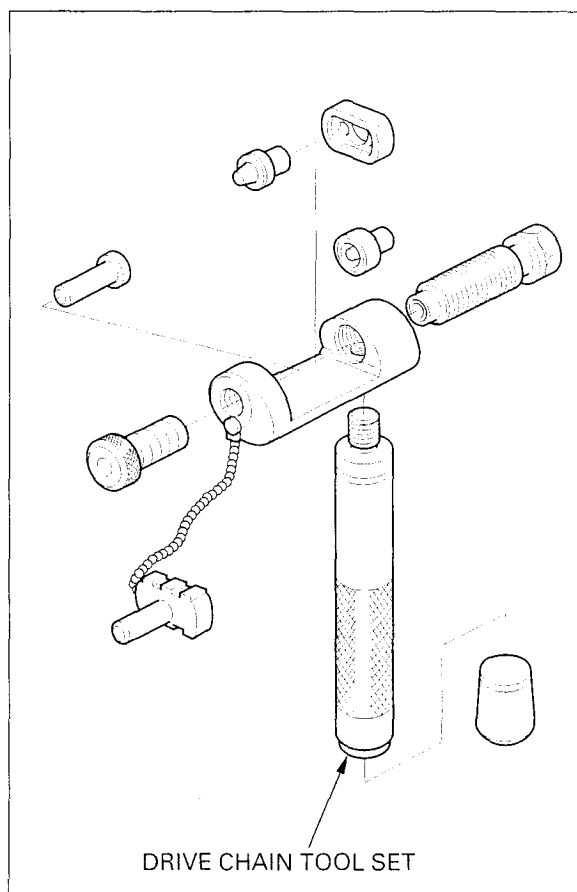


Locate the crimped pin ends of the master link from the outside of the chain, and remove the link with the drive chain tool set.

### TOOL:

**Drive chain tool set**

07HMH-MR10103 or  
07HMH-MR1010A  
(U.S.A. only)

Remove the drive chain.

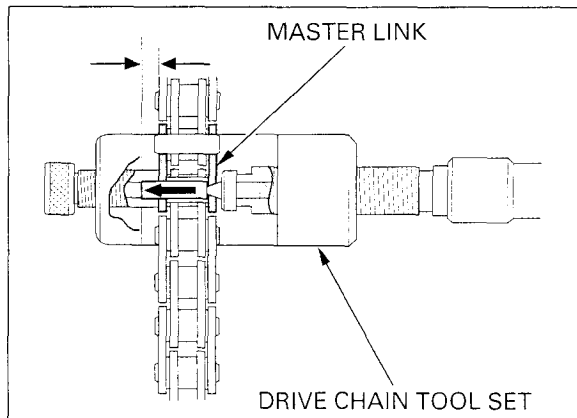

*Include the master link when you count the drive chain links.*


Remove the excess drive chain links from the new drive chain with the drive chain tool set.

**STANDARD LINKS:** 108 links


**REPLACEMENT CHAIN:**

**DID:** DID 50VA8 C1

**RK:** RK GB50HFOZ5

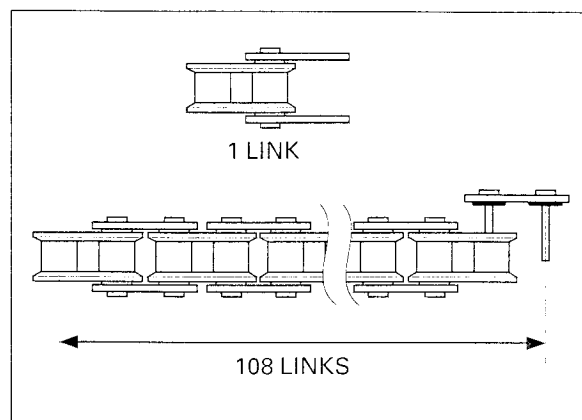

Route the drive chain into the swingarm as shown.

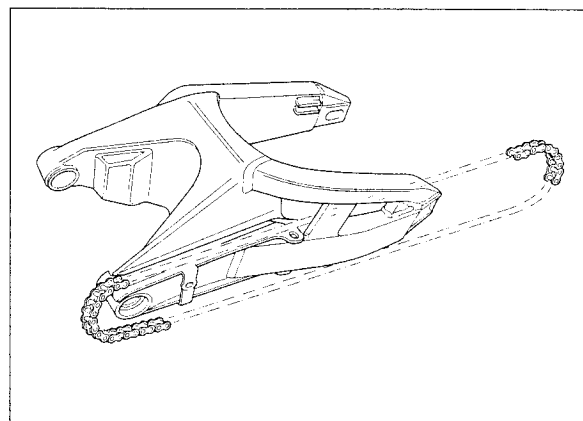


### NOTICE

*Never reuse the oil drive chain, master link, master link plate and O-rings.*

*Insert the master link from the inside of the drive chain, and install the plate with the identification mark facing the outside.*

Assemble the new master link, O-rings and plate.

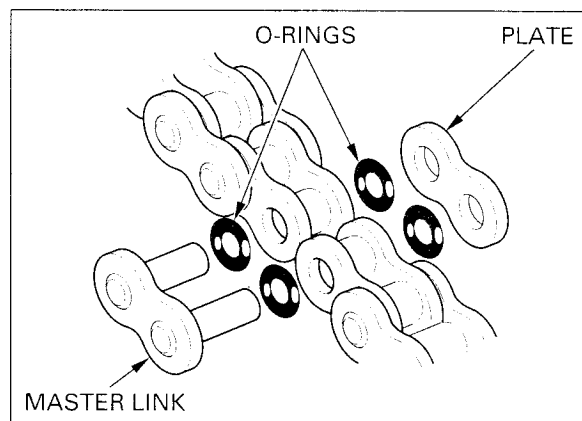


Assemble and set the drive chain tool set.

**TOOL:**

**Drive chain tool set**

07HMH-MR10103 or  
07HMH-MR1010A  
(U.S.A. only)

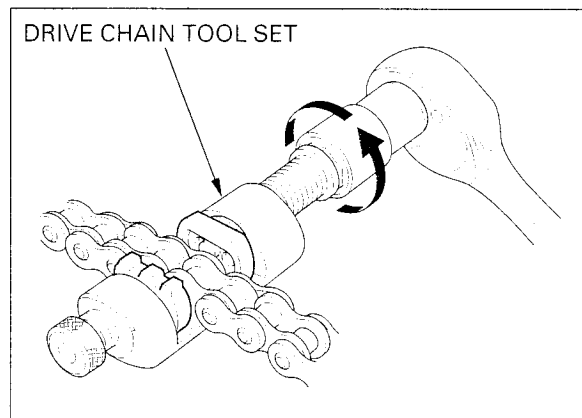

## MAINTENANCE


Make sure that the master link pins are installed properly.  
Measure the master link pin length projected from the plate.

### STANDARD LENGTH:

**DID:** 1.15 – 1.55 mm (0.045 – 0.061 in)

**RK:** 1.2 – 1.4 mm (0.05 – 0.06 in)

Stake the master link pins.

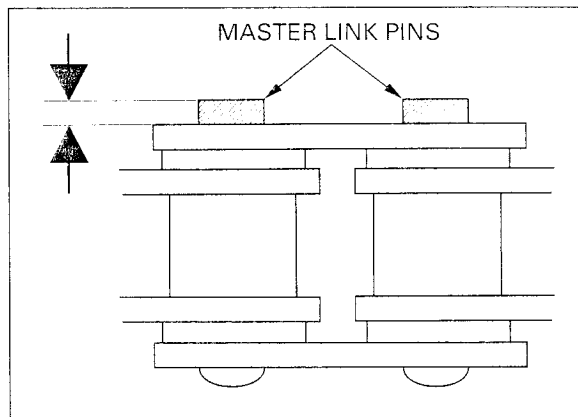


Make sure that the pins are staked properly by measuring the diameter of the staked area using a slide caliper.

### DIAMETER OF THE STAKED AREA:


**DID:** 5.50 – 5.80 mm (0.217 – 0.228 in)

**RK:** 5.45 – 5.85 mm (0.215 – 0.230 in)

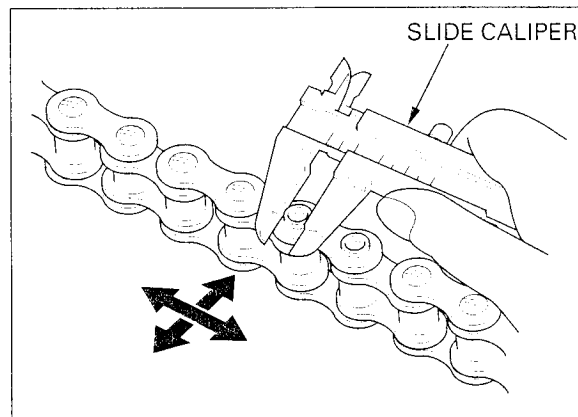

*A drive chain with a clip-type master link must not be used.*

After staking, check the staked area of the master link for cracks.  
If there is any cracking, replace the master link, O-rings and plate.

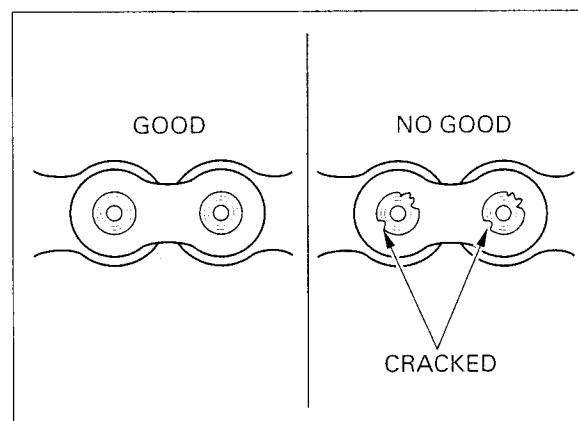

## BRAKE FLUID

### NOTICE

- Do not mix different types of fluid, as they are not compatible with each other.
- Do not allow foreign material to enter the system when filling the reservoir.
- Avoid spilling fluid on painted, plastic or rubber parts. Place a rag over these parts whenever the system is serviced.



When the fluid level is low, check the brake pads for wear (see below). A low fluid level may be due to wear of the brake pads. If the brake pads are worn, the caliper piston is pushed out, and this accounts for a low reservoir level. If the brake pads are not worn and the fluid level is low, check entire system for leaks (see next page).

### FRONT BRAKE

Turn the handlebar so that the reservoir is level and check the front brake fluid reservoir level. If the level is near the lower level line, check the brake pad wear (see below).

### REAR BRAKE

Place the motorcycle on a level surface, and support it upright position. Check the rear brake fluid reservoir level. If the level is near the lower level line, check the brake pad wear (see below).

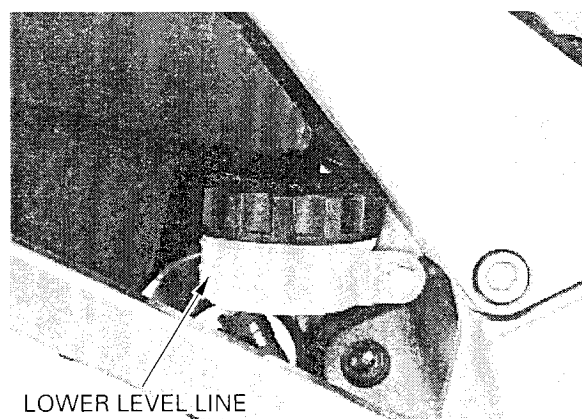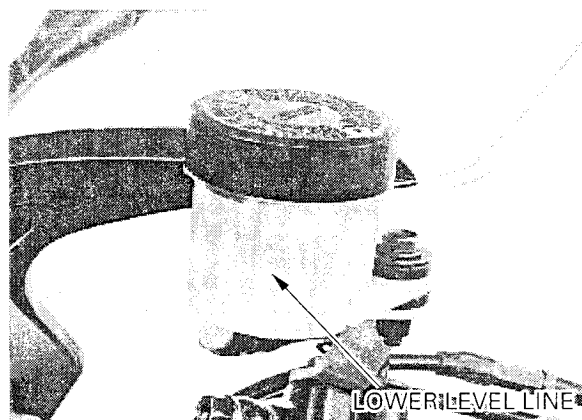


## BRAKE PAD WEAR

### FRONT BRAKE PADS

Check the brake pad for wear. Replace the brake pads if either pad is worn to the bottom of wear limit groove.


Refer to page 15-7 for brake pad replacement.

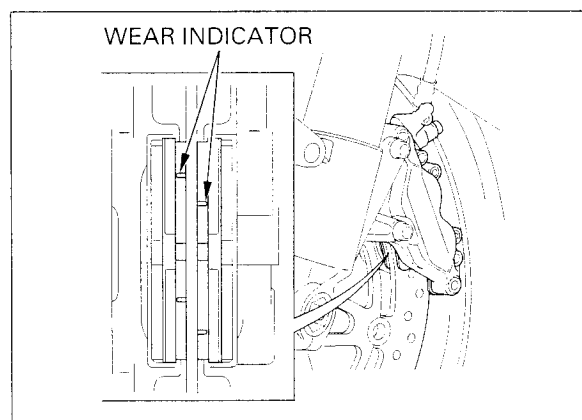

### REAR BRAKE PADS

Check the brake pad for wear. Replace the brake pads if either pad is worn to the bottom of wear limit groove.

Refer to page 15-8 for brake pad replacement.

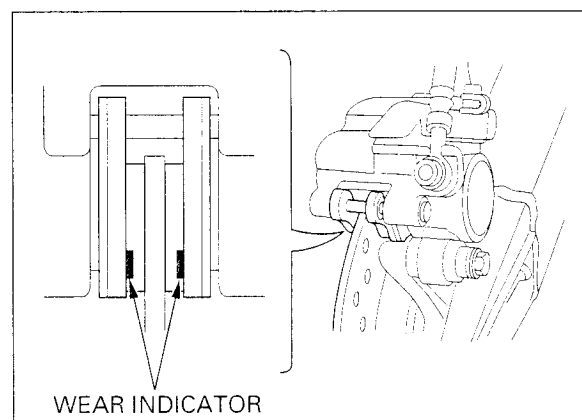

## MAINTENANCE

### BRAKE SYSTEM

#### INSPECTION

Firmly apply the brake lever or pedal, and check that no air has entered the system. If the lever or pedal feels soft or spongy when operated, bleed the air from the system.



Inspect the brake hose and fittings for deterioration, cracks, and signs of leakage. Tighten any loose fittings. Replace hoses and fittings as required.

Refer to page 15-5 for brake bleeding procedures.

#### BRAKE LEVER ADJUSTMENT


*Align the allowance on the brake lever with the index number on the adjuster.*

The distance between the top of the brake lever and the grip can be adjusted by turning the adjuster.

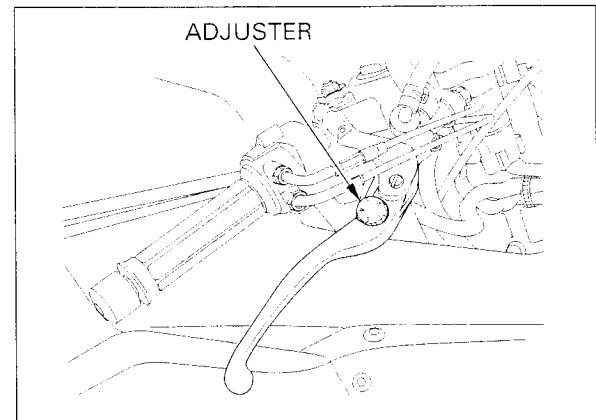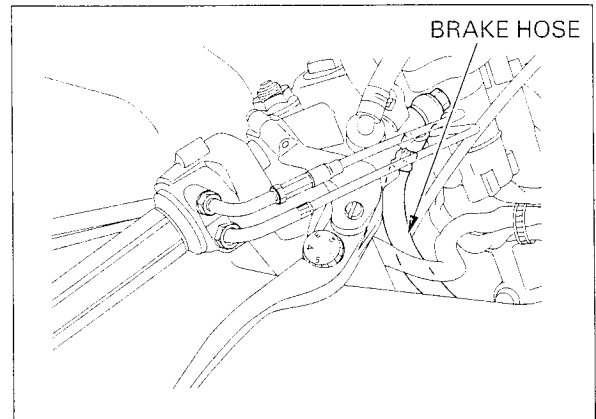

#### BRAKE PEDAL HEIGHT ADJUSTMENT

Loosen the lock nut and turn the push rod until the correct pedal height is obtained.

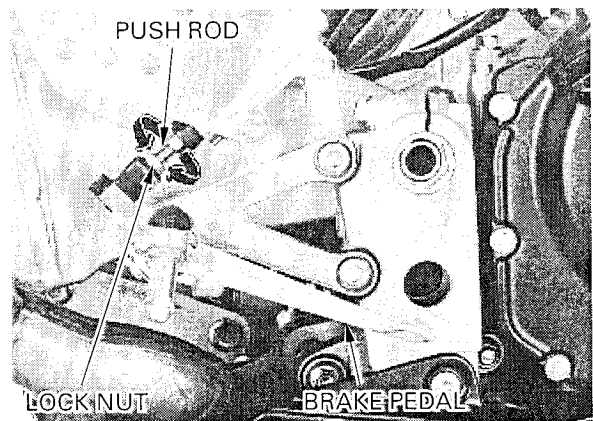


### BRAKE LIGHT SWITCH

*The front brake light switch does not require adjustment.*

Adjust the brake light switch so that the brake light comes on just prior to the brake actually being engaged.

If the light fails to come on, adjust the switch so that the light comes on at the proper time. Hold the switch body and turn the adjuster. Do not turn the switch body.

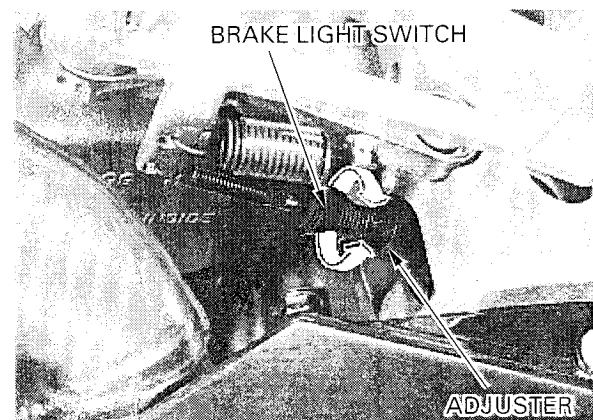



## HEADLIGHT AIM

*Adjust the headlight beam as specified by local laws and regulations.*

Place the motorcycle on a level surface.


Adjust the headlight beam vertically by turning the vertical beam adjuster.

A clockwise rotation moves the beam up and counterclockwise rotation moves the beam down.



Adjust the headlight beam horizontally by turning the horizontal beam adjuster.


A clockwise rotation moves the beam toward the right side of the rider.

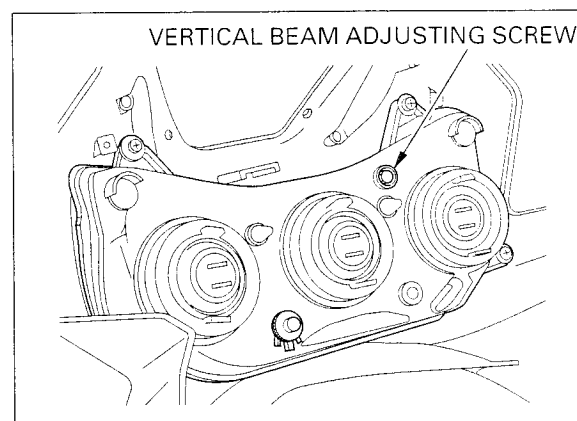

## CLUTCH SYSTEM

Measure the clutch lever free play at the end of the clutch lever.

**FREE PLAY:** 10–20 mm (3/8–13/16 in)

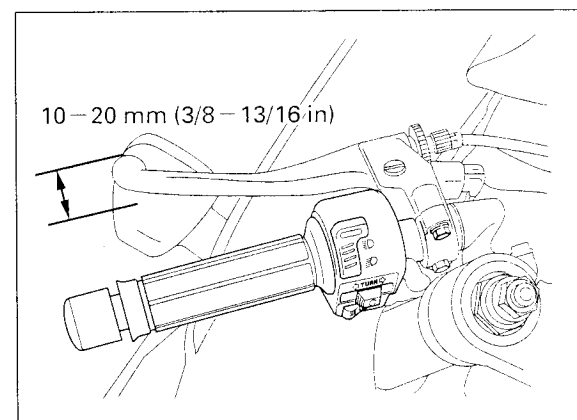

Minor adjustments are made using the upper adjuster at the clutch lever.


Loosen the lock nut and turn the adjuster.

### NOTICE

*The adjuster may be damaged if it is positioned too far out, leaving minimal thread engagement.*

If the adjuster is threaded out near its limit and the correct free play cannot be obtained, turn the adjuster all the way in and back out one turn.


Tighten the lock nut and make a major adjustment as described as follow.

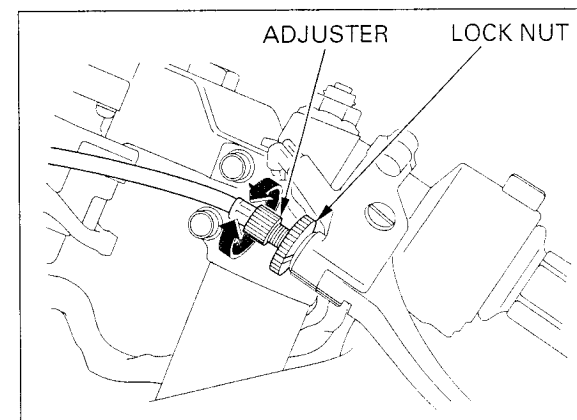

## MAINTENANCE

Major adjustments are performed at the clutch arm. Loosen the lock nut and turn the adjusting nut to adjust free play. Hold the adjusting nut securely while tightening the lock nut.

If proper free play cannot be obtained, or the clutch slips during test ride, disassemble and inspect the clutch (see section 9).

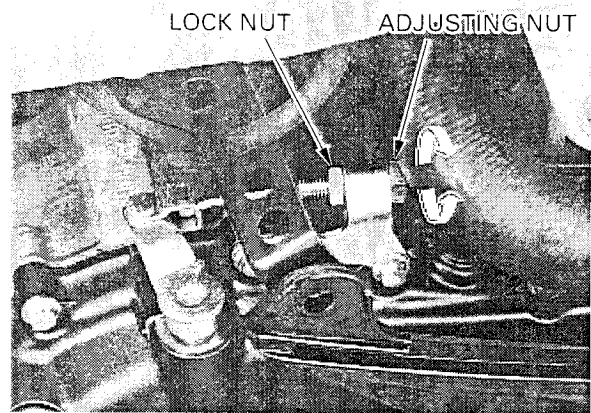

## SIDE STAND

Support the motorcycle on a level surface.



Check the side stand spring for damage or loss of tension.

Check the side stand assembly for freedom of movement and lubricate the side stand pivot if necessary.

Check the side stand ignition cut-off system:

- Sit astride the motorcycle and raise the side stand.
- Start the engine with the transmission in neutral, then shift the transmission into gear, with the clutch lever squeezed.
- Move the side stand full down.
- The engine should stop as the side stand is lowered.

If there is a problem with the system, check the side stand switch (section 19).

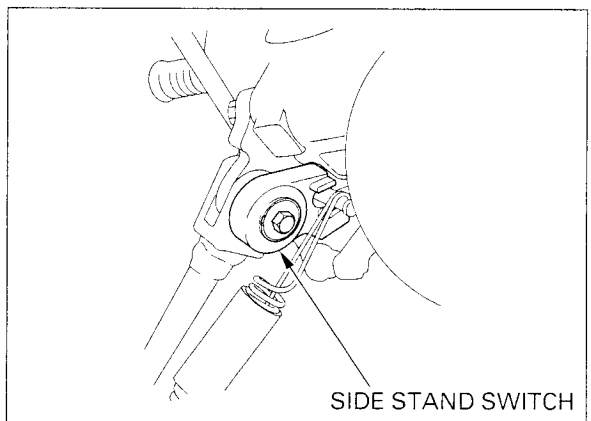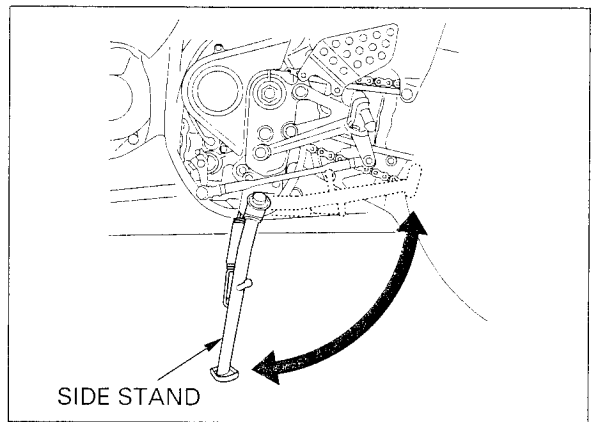

## SUSPENSION

### FRONT SUSPENSION INSPECTION

*Loose, worn or damaged suspension parts impair motorcycle stability and control.*


Check the action of the forks by operating the front brakes and compressing the front suspension several times.

Check the entire assembly for signs of leaks, damage or loose fasteners.

Replace damaged components which cannot be repaired.

Tighten all nuts and bolts.

Refer to section 13 for fork service.

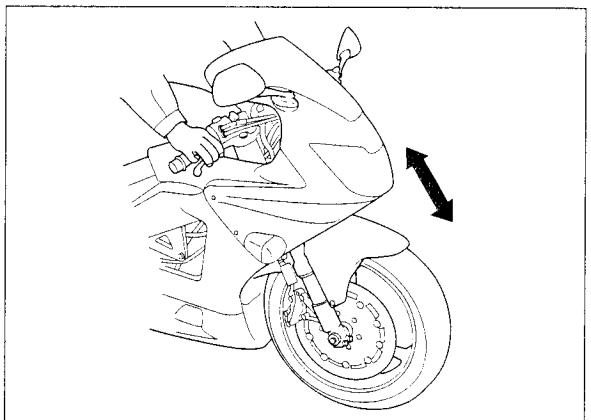

## FRONT SUSPENSION ADJUSTMENT

*To adjust both sides equally, set the right and left damping adjusters to the same position.*

## SPRING PRE-LOAD ADJUSTER

Spring pre-load can be adjusted by turning the adjuster.

**DIRECTION A:** Increase the spring pre-load



**DIRECTION B:** Decrease the spring pre-load

## PRE-LOAD ADJUSTER ADJUSTABLE RANGE:

10 – 25 mm (0.4 – 1.0 in) from top of fork bolt

## PRE-LOAD ADJUSTER STANDARD POSITION:

18 mm (0.7 in) from top of fork bolt

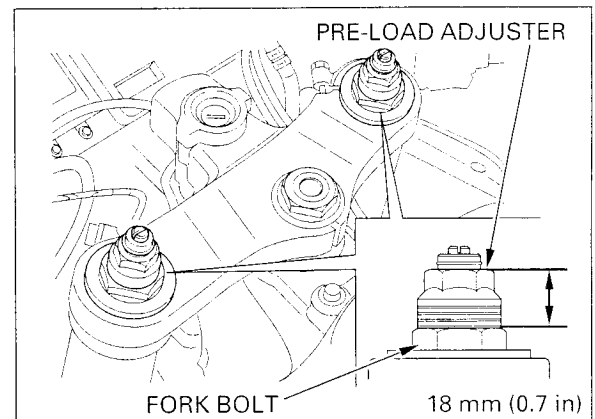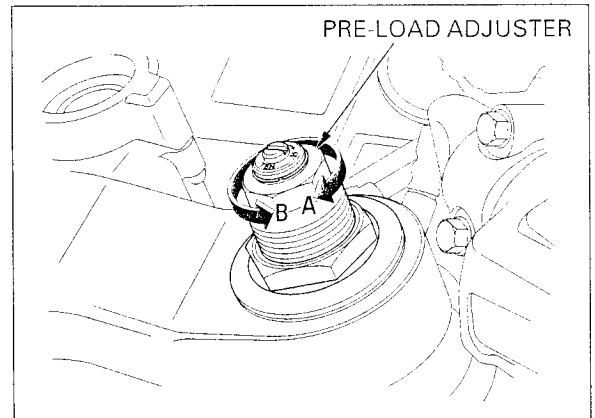

## COMPRESSION AND REBOUND DAMPING ADJUSTERS

## NOTICE

- Always start on full hard when adjusting the damping.
- Do not turn the adjuster screws more than the given positions or the adjusters may be damaged.
- Be sure that the rebound and compression adjusters are firmly located in a detent, and not between positions.

The compression and rebound damping can be adjusted by turning the adjusters.



**DIRECTION H:** Increases the damping force

**DIRECTION S:** Decreases the damping force

Turn the compression adjuster clockwise until it stops, then turn the adjuster counterclockwise.

## COMPRESSION ADJUSTER STANDARD POSITION:

1-1/2 turns from full hard

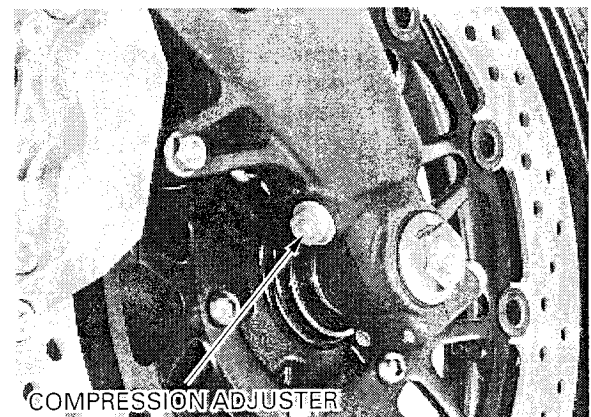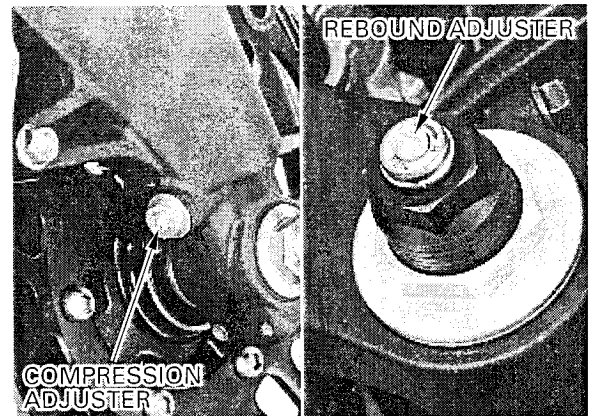




## MAINTENANCE

Turn the rebound adjuster clockwise until it stops, then turn the adjuster counterclockwise.

### REBOUND ADJUSTER STANDARD POSITION:


1 turn from full hard

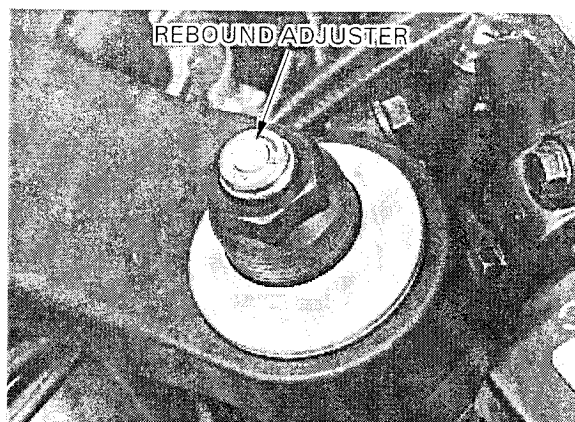

## REAR SUSPENSION INSPECTION


Support the motorcycle securely and raise the rear wheel off the ground.

Hold the swingarm and move the rear wheel sideways to see if the wheel bearings are worn.

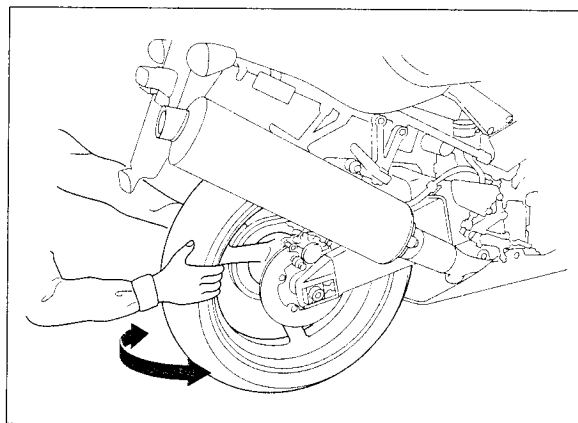

Check for worn swingarm bearings by grabbing the rear swingarm and attempting to move the swingarm side to side.

Replace the bearings if any looseness is noted.

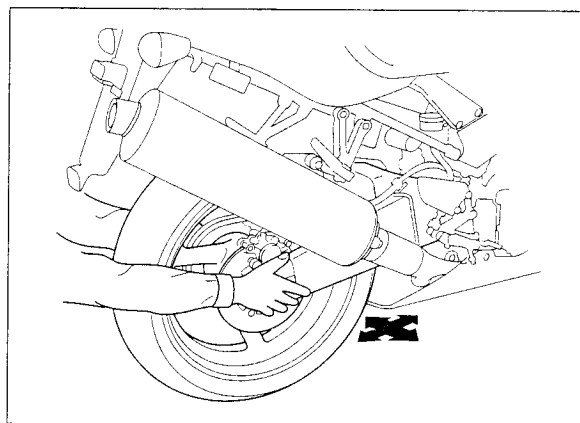


Check the action of the shock absorber by compressing it several times.

Check the entire shock absorber assembly for signs of leaks, damage or loose fasteners.

Replace damaged components which cannot be repaired.

Tighten all nuts and bolts.

Refer to section 14 for shock absorber service.

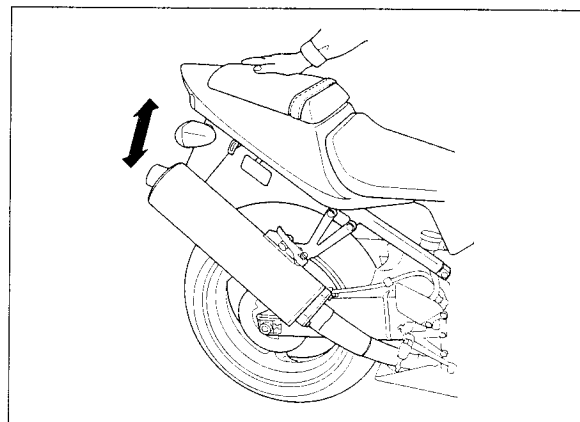

## REAR SUSPENSION ADJUSTMENT

### COMPRESSION AND REBOUND DAMPING ADJUSTERS

#### NOTICE

- Always start on full hard when adjusting the damping.
- Do not turn the adjuster screws more than the given positions or the adjusters may be damaged.

The compression and rebound damping can be adjusted by turning the adjusters.

**DIRECTION H:** Increases the damping force  
**DIRECTION S:** Decreases the damping force

Turn the compression adjuster clockwise until it stops, then turn the adjuster counterclockwise




#### COMPRESSION ADJUSTER STANDARD POSITION:

1 turn from full hard

Turn the rebound adjuster clockwise until it stops, then turn the adjuster counterclockwise.


#### REBOUND ADJUSTER STANDARD POSITION:

2 turns from full hard

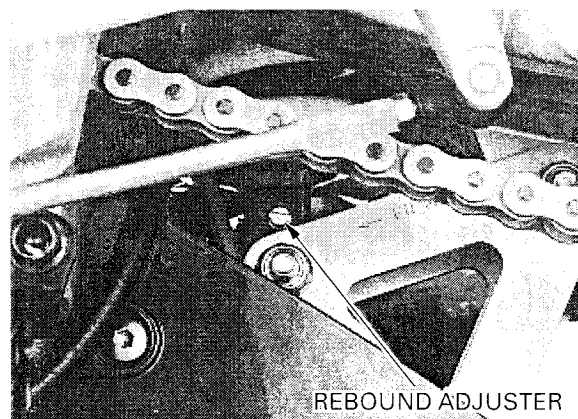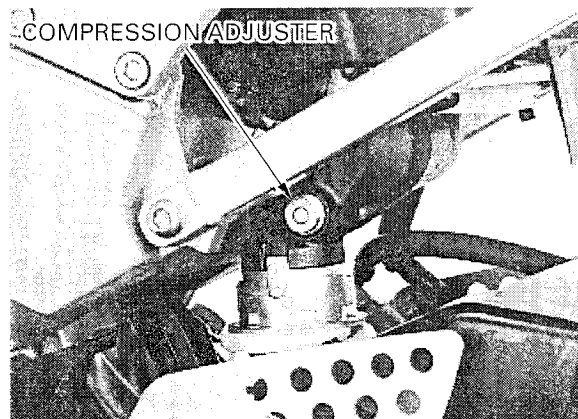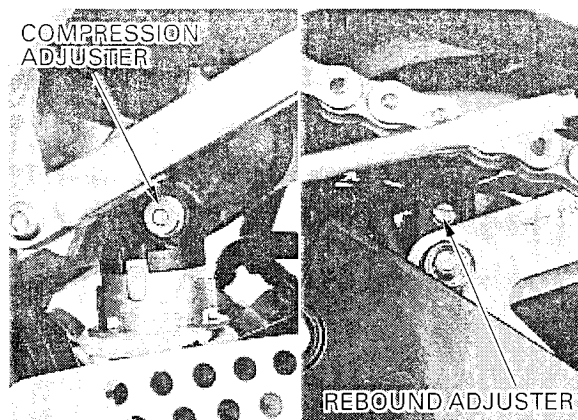

## NUTS, BOLTS, FASTENERS

Check that all chassis nuts and bolts are tightened to their correct torque values (page 1-13).  
Check that all safety clips, hose clamps and cable stays are in place and properly secured.

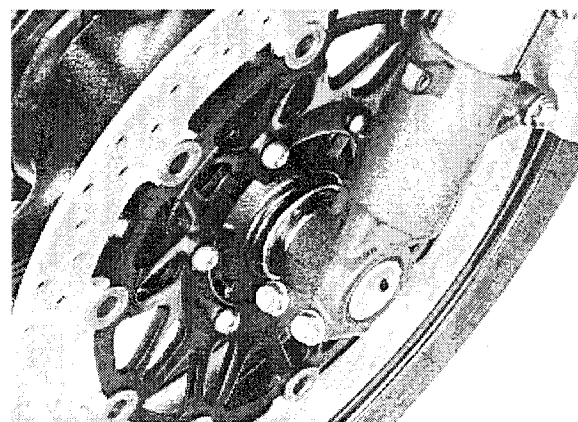


**MAINTENANCE****WHEELS/TIRES**

The pressure should be checked when the tires are COLD.

**RECOMMENDED TIRE PRESSURE AND TIRE SIZE:**

		FRONT	REAR
Tire pressure kPa (kgf/cm <sup>2</sup> , psi)		250 (2.50 , 36)	290 (2.90 , 42)
Tire size		120/70 ZR17 (58W)	190/50 ZR17 (73W)
Tire brand	Bridgestone	BT010F	BT010R
	Michelin	Pilot SPORT E	Pilot SPORT E

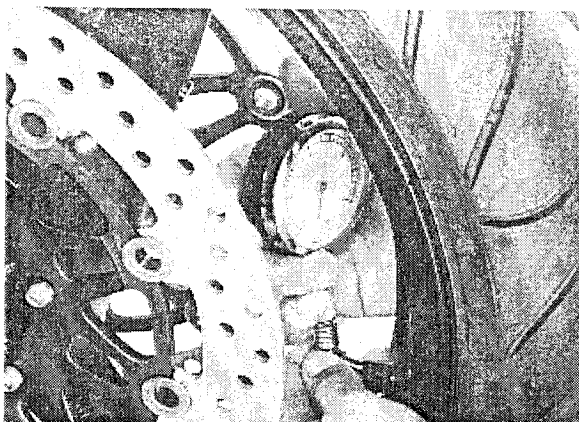

Check the tires for cuts, embedded nails, or other damage.

Check the front and rear wheels for trueness (refer to section 13 and 14).

Measure the tread depth at the center of the tires.  
Replace the tires when the tread depth reaches the following limits.

**MINIMUM TREAD DEPTH:**

**FRONT:** 1.5 mm (0.06 in)

**REAR:** 2.0 mm (0.08 in)


**STEERING HEAD BEARINGS**

Check that the control cables do not interfere with handlebar rotation.

Support the motorcycle securely and raise the front wheel off the ground.

Check that the handlebar moves freely from side to side.

If the handlebar moves unevenly, binds, or has vertical movement, inspect the steering head bearings (Section 13).

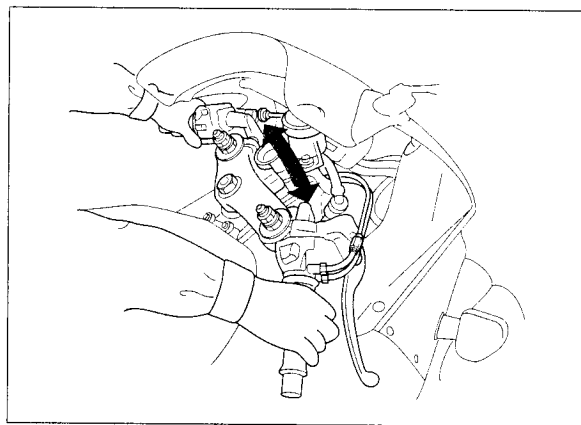



# 4. LUBRICATION SYSTEM

LUBRICATION SYSTEM DIAGRAM	4-0	OIL STRAINER/PRESSURE RELIEF VALVE	4-3
SERVICE INFORMATION	4-1	OIL PUMP	4-5
TROUBLESHOOTING	4-2	OIL COOLER	4-9
OIL PRESSURE INSPECTION	4-3		

## SERVICE INFORMATION

### GENERAL

#### CAUTION

Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

- The oil pump can be serviced with the engine installed in the frame.
- The service procedures in this section must be performed with the engine oil drained.
- When removing and installing the oil pump, use care not to allow dust or dirt to enter the engine.
- If any portion of the oil pump is worn beyond the specified service limits, replace the oil pump as an assembly.
- After the oil pump has been installed, check that there are no oil leaks and that oil pressure is correct.

### SPECIFICATIONS

Unit: mm (in)

ITEM		STANDARD	SERVICE LIMIT
Engine oil capacity	At draining	3.5 ℓ (3.7 US qt, 3.1 Imp qt)	_____
	At disassembly	4.0 ℓ (4.2 US qt, 3.5 Imp qt)	_____
	At oil filter change	3.7 ℓ (3.9 US qt, 3.3 Imp qt)	_____
Recommended engine oil		Pro Honda GN4 or HP4 4-stroke oil (U.S.A. & Canada), or Honda 4-stroke oil (Canada only), or equivalent motor oil API service classification SF or SG Viscosity: SAE 10W-40	_____
Oil pressure at oil pressure switch		490 kPa (5.0 kgf/cm <sup>2</sup> , 71 psi) at 5,400 rpm / (80°C/176°F)	_____
Oil pump rotor	Tip clearance	0.15 (0.006) max.	0.20 (0.008)
	Body clearance	0.15 – 0.22 (0.006 – 0.009)	0.35 (0.014)
	Side clearance	0.02 – 0.07 (0.001 – 0.003)	0.10 (0.004)

## LUBRICATION SYSTEM

---

### TORQUE VALUES

Oil drain bolt	29 N·m (3.0 kgf·m , 22 lbf·ft)	
Oil cooler mounting bolt	74 N·m (7.5 kgf·m , 54 lbf·ft)	Apply a locking agent to the threads
Oil pump assembly flange bolt	8 N·m (0.8 kgf·m , 5.8 lbf·ft)	CT bolt
Oil pump driven sprocket bolt	15 N·m (1.5 kgf·m , 11 lbf·ft)	Apply a locking agent to the threads
Oil filter cartridge	26 N·m (2.7 kgf·m , 20 lbf·ft)	Apply clean engine oil to the O-ring
Lower crankcase sealing bolt	30 N·m (3.1 kgf·m , 22 lbf·ft)	Apply a locking agent to the threads

### TOOLS

Oil pressure gauge	07506-3000000	Equivalent commercially available in U. S. A.
Oil pressure gauge attachment	07510-MA70000	
Oil filter wrench	07HAA-PJ70100	

## TROUBLESHOOTING

#### Engine oil level too low

- Oil consumption
- External oil leak
- Worn piston ring or incorrect piston ring installation
- Worn valve guide or seal

#### Low or no oil pressure

- Clogged oil orifice
- Incorrect oil being used

#### No oil pressure

- Oil level too low
- Oil pump drive sprocket broken
- Oil pump damaged (pump shaft)
- Internal oil leak

#### Low oil pressure

- Clogged oil strainer screen
- Oil pump worn or damaged
- Internal oil leak
- Incorrect oil being used
- Low oil level

#### High oil pressure

- Plugged oil filter, gallery, or metering orifice
- Incorrect oil being used

#### Oil contamination

- From coolant mixing with oil
  - Faulty water pump mechanical seal
  - Faulty cylinder head gasket
  - Water leak in crankcase
  - Faulty oil cooler


## OIL PRESSURE INSPECTION

*If the oil pressure indicator light remains on a few seconds, check the indicator system before checking the oil pressure.*

Check the oil level (page 3-15).

Warm up the engine to normal operating temperature (approximately 80°C/176°F).

Stop the engine and remove the crankcase sealing bolt.

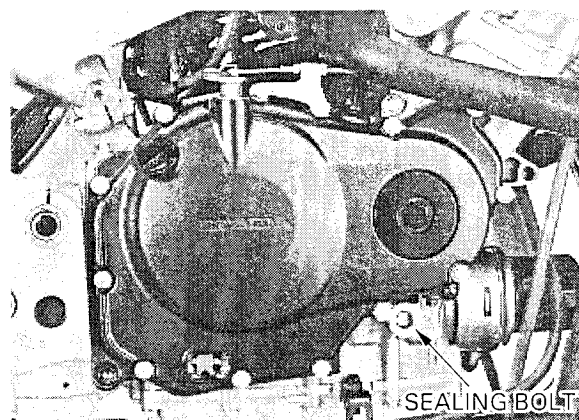

Connect an oil pressure gauge and attachment to the crankcase.

### TOOLS:

**Oil pressure gauge**

07506-3000000  
(Equivalent commercially available in U.S.A.)

**Oil pressure gauge attachment**

07510-MA70000

Start the engine and increase the rpm to 5,400 rpm and read the oil pressure.



### OIL PRESSURE:

490 kPa (5.0 kgf/cm<sup>2</sup> , 71 psi) at 5,400 rpm / (80°C/176°F)

Stop the engine and remove the tools.  
Apply a locking agent to the sealing plug threads.

Install and tighten the sealing plug to the specified torque.

**TORQUE:** 30 N·m (3.1 kgf·m , 22 lbf·ft)

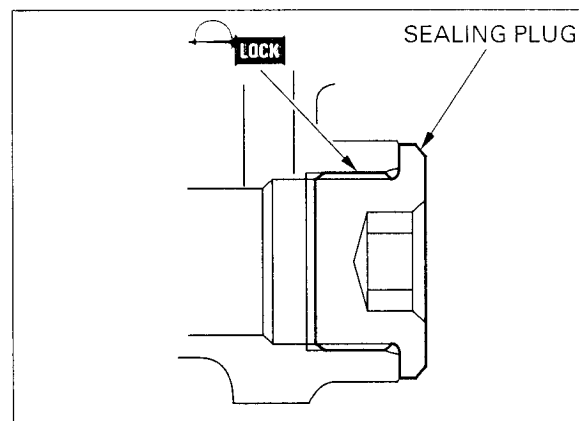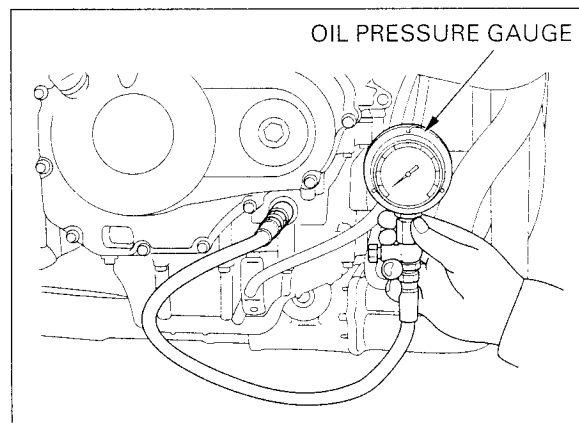


## OIL STRAINER/PRESSURE RELIEF VALVE

### REMOVAL

Drain the engine oil (page 3-16).


Remove the exhaust pipe (page 2-18).

Remove the oil pan flange bolts and oil pan.

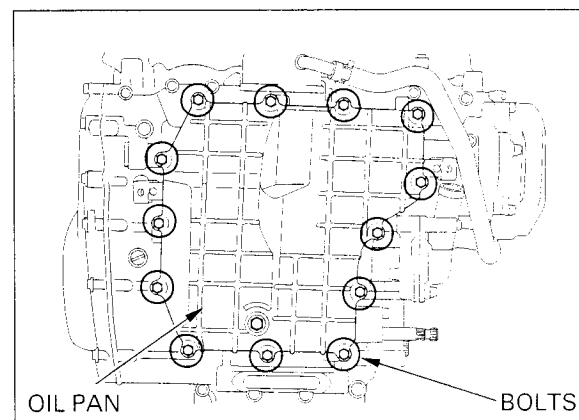


## LUBRICATION SYSTEM

Remove the pressure relief valve and O-ring.

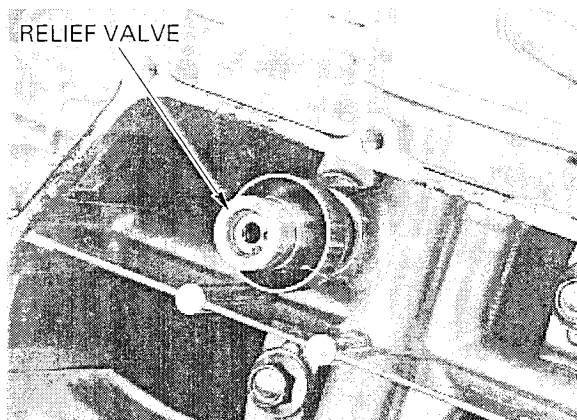

Remove the oil strainer and gasket.

Clean the oil strainer screen.

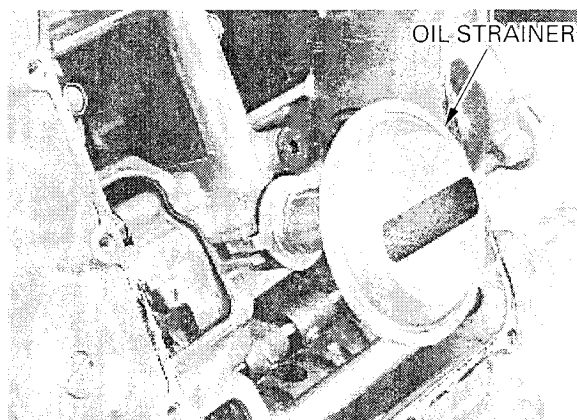


### INSPECTION

Check the operation of the pressure relief valve by pushing on the piston.  
Disassemble the relief valve by removing the snap ring.


Inspect the piston for wear, sticking or damage.  
Inspect the spring for weakness or damage.

Assemble the relief valve in the reverse order of disassembly.

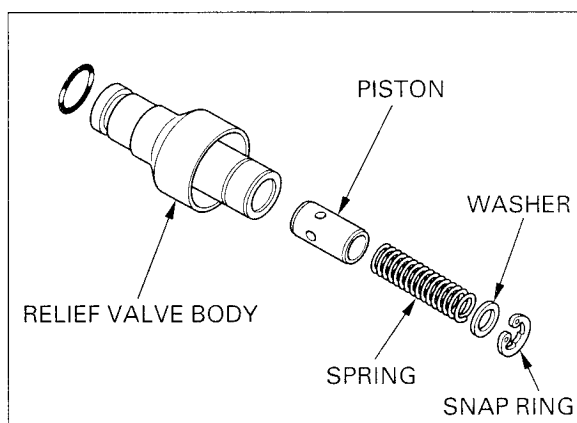

Apply oil to the new gasket and install it onto the oil strainer.


Install the oil strainer into the crankcase while aligning its boss with the groove of the crankcase.

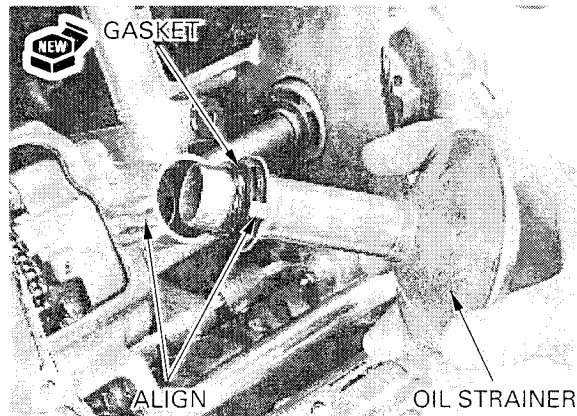




## LUBRICATION SYSTEM

Apply oil to the new O-ring and install it onto the relief valve.  
Install the relief valve into the crankcase.

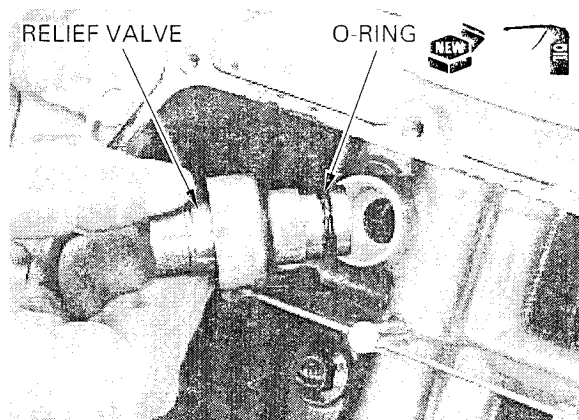

*Do not apply sealant more than necessary.*


Clean the oil pan mating surface thoroughly.  
Apply Three Bond 1207B or an equivalent to the mating surface.

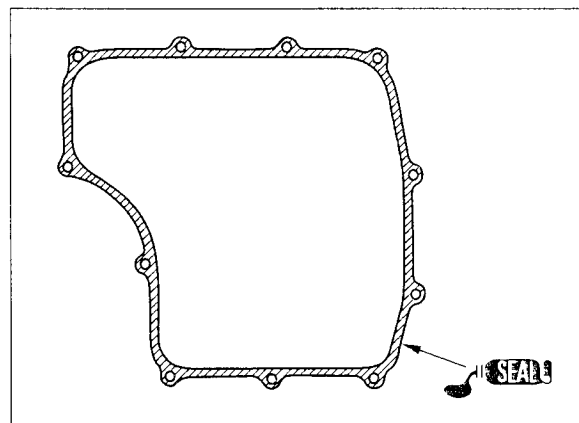

Install the oil pan onto the lower crankcase.  
Install the oil pan mounting bolts.  
Temporarily tighten the two bolts first, then tighten the all bolts in a crisscross pattern in 2—3 steps.

Install the exhaust pipe (page 2-20).  
Fill the crankcase with recommended oil (page 3-15).

After installation, check that there are no oil leaks.

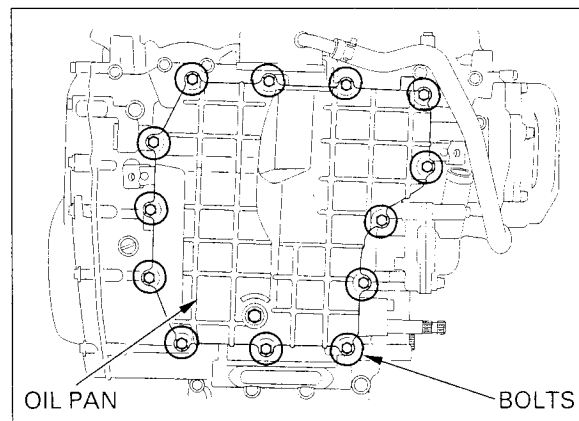


## OIL PUMP

### REMOVAL

Remove the following:

- Clutch assembly (page 9-4)
- Oil strainer and pressure relief valve (page 4-4)


Remove the bolt/washer, then remove the oil pump drive/driven sprocket, clutch outer guide and drive chain as an assembly.

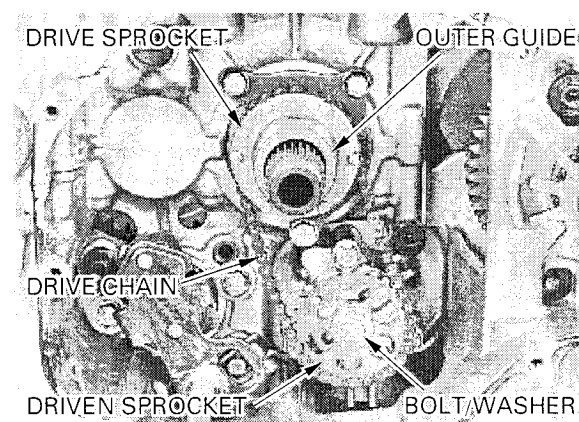




## LUBRICATION SYSTEM

Remove the three flange bolts and oil pump assembly.

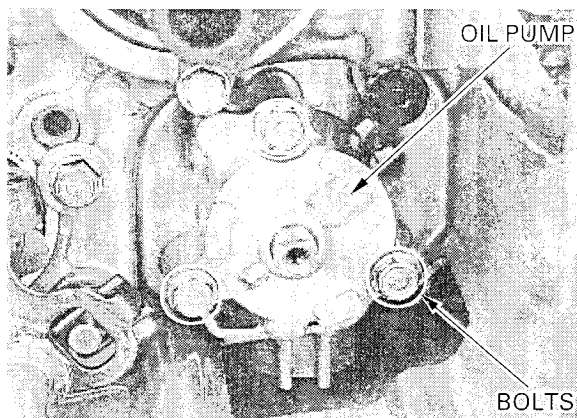


### DISASSEMBLY

Remove the dowel pins.  
Remove the oil pump assembly bolt and oil pump cover.

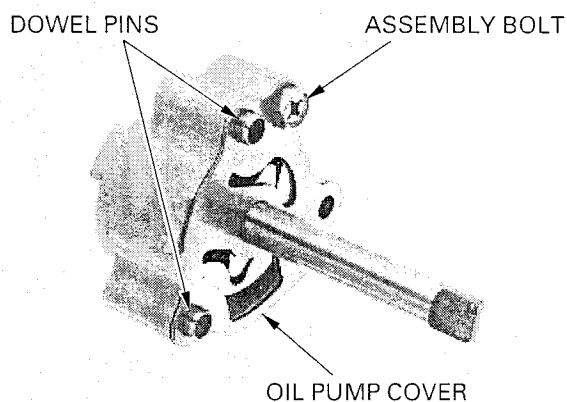

Remove the thrust washer, drive pin, oil pump shaft, outer rotor and inner rotor from the oil pump body.

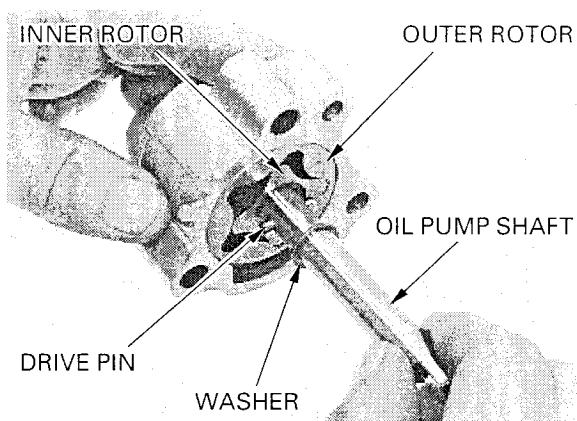


### INSPECTION

Temporarily install the oil pump shaft.  
Install the outer and inner rotors into the oil pump body.


Measure the tip clearance.

**SERVICE LIMIT:** 0.20 mm (0.008 in)

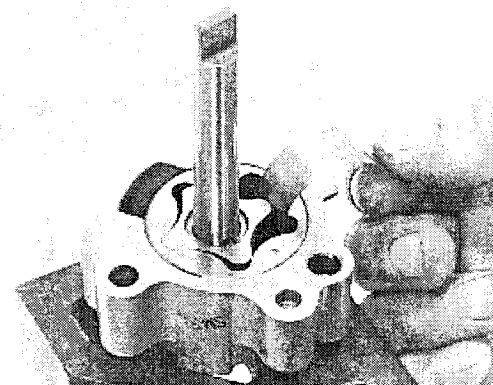


Measure the pump body clearance.

**SERVICE LIMIT:** 0.35 mm (0.014 in)

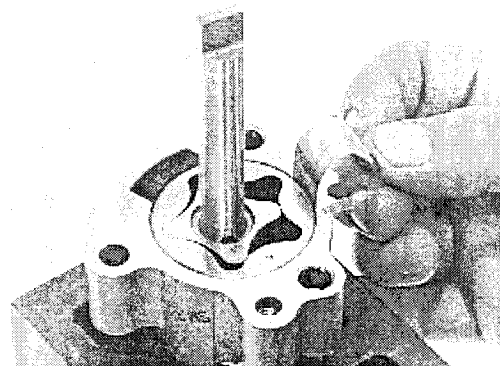


Measure the side clearance using a straight edge and feeler gauge.

**SERVICE LIMIT:** 0.10 mm (0.004 in)

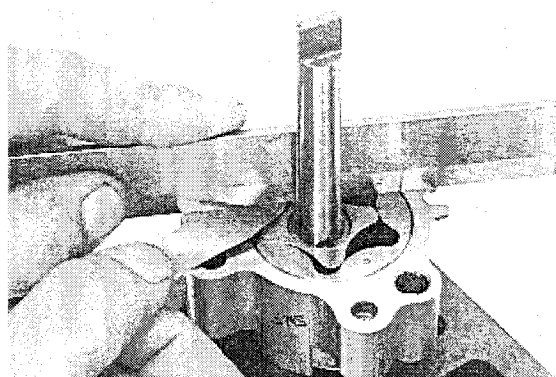

## ASSEMBLY

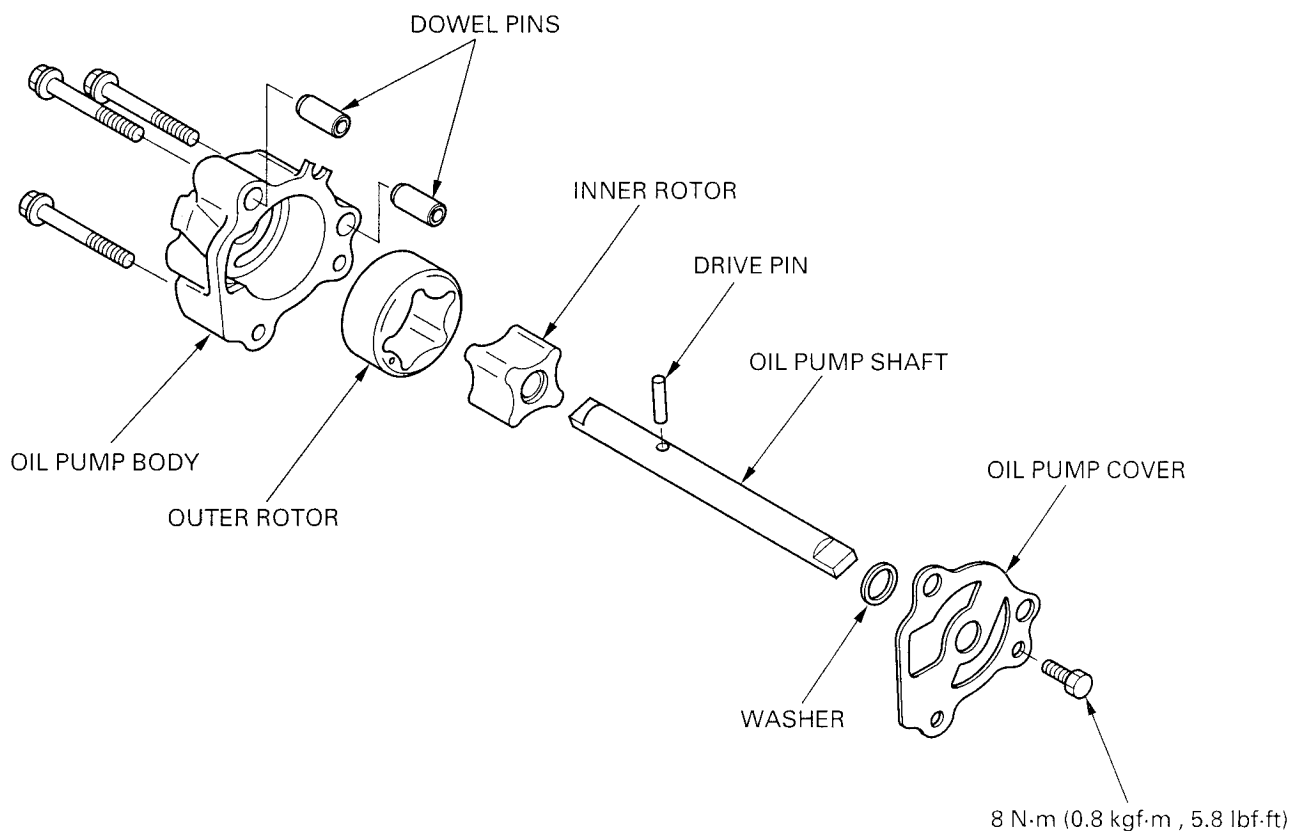

## LUBRICATION SYSTEM


*Install the outer rotor with its punch mark facing the oil pump cover.*

Install the outer and inner rotors into the oil pump body.

Install the oil pump shaft through the inner rotor and oil pump body.

Install the drive pin into the hole in the pump shaft and align the pin with the groove in the inner rotor as shown.

Install the thrust washer.

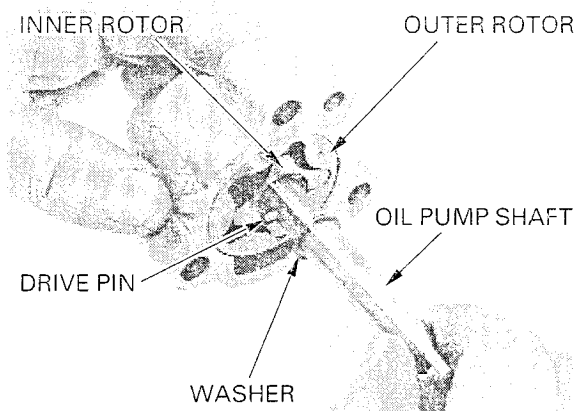


Install the dowel pins.

Install the oil pump cover and tighten the assembly bolt to the specified torque.

**TORQUE:** 8 N·m (0.8 kgf·m , 5.8 lbf·ft)


Check the oil pump operation by turning the pump shaft.

If necessary, reassemble the oil pump.

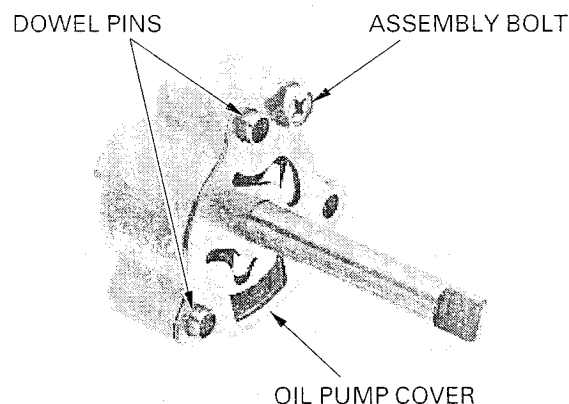


## INSTALLATION

Install the oil pump into the crankcase while aligning the pump shaft lug with the water pump shaft groove.

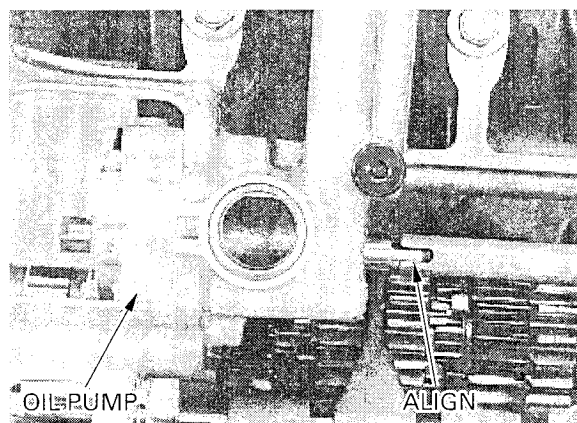

Install and tighten the three flange bolt securely.

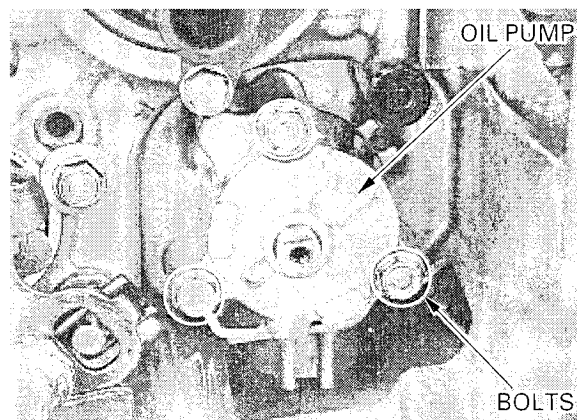




Apply oil to the clutch outer guide, oil pump drive sprocket, driven sprocket and drive chain.

*Install the oil pump driven sprocket with its "OUT" mark facing outward.*

Install the clutch outer guide, drive/driven sprocket and drive chain as an assembly.

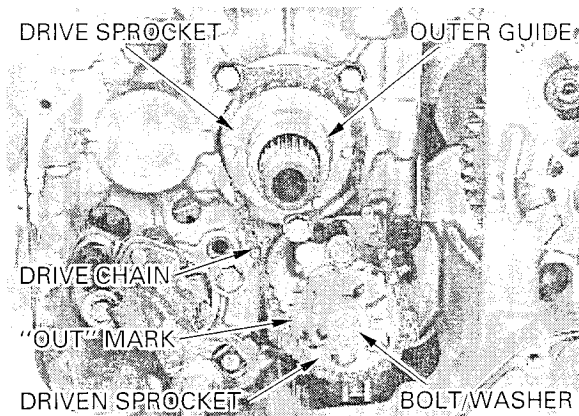

Apply a locking agent to the oil pump driven sprocket bolt threads.


Install and tighten the driven sprocket bolt/washer to the specified torque.

**TORQUE:** 15 N·m (1.5 kgf·m, 11 lbf·ft)

Install the following:

- Oil strainer/oil pipe and oil pan (page 4-5)
- Clutch assembly (page 9-9)

After installation, fill the crankcase with recommended oil and check that there is no oil leaks. Check the oil pressure (page 4-3).

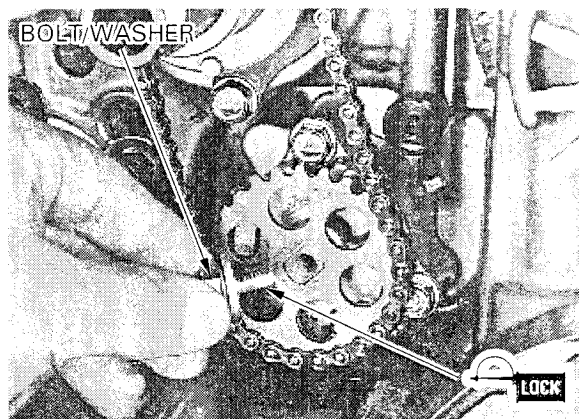

## OIL COOLER


### REMOVAL

Drain the engine oil and remove the oil filter cartridge (page 3-16).

Drain the coolant from the system (page 6-4).

Remove the radiator reserve tank (page 6-17).

Loosen the hose bands and disconnect the oil cooler water hoses from the cooler.

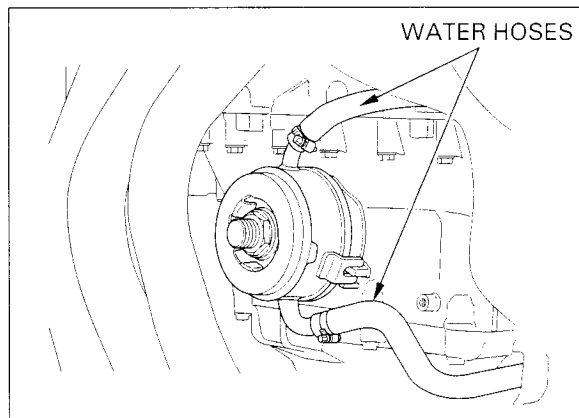


Remove the oil cooler mounting bolt, lock washer and oil cooler.

Remove the O-ring.


### INSPECTION

Check the oil cooler for damage.

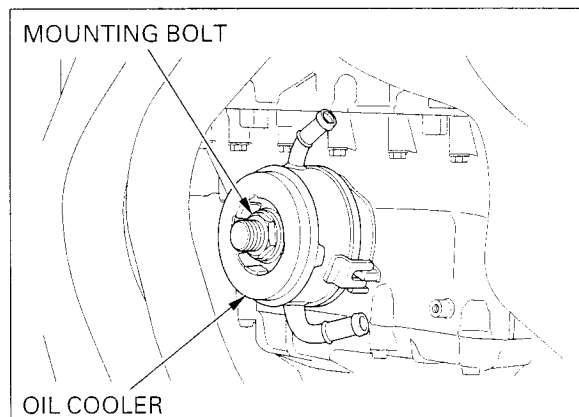


## LUBRICATION SYSTEM

### INSTALLATION

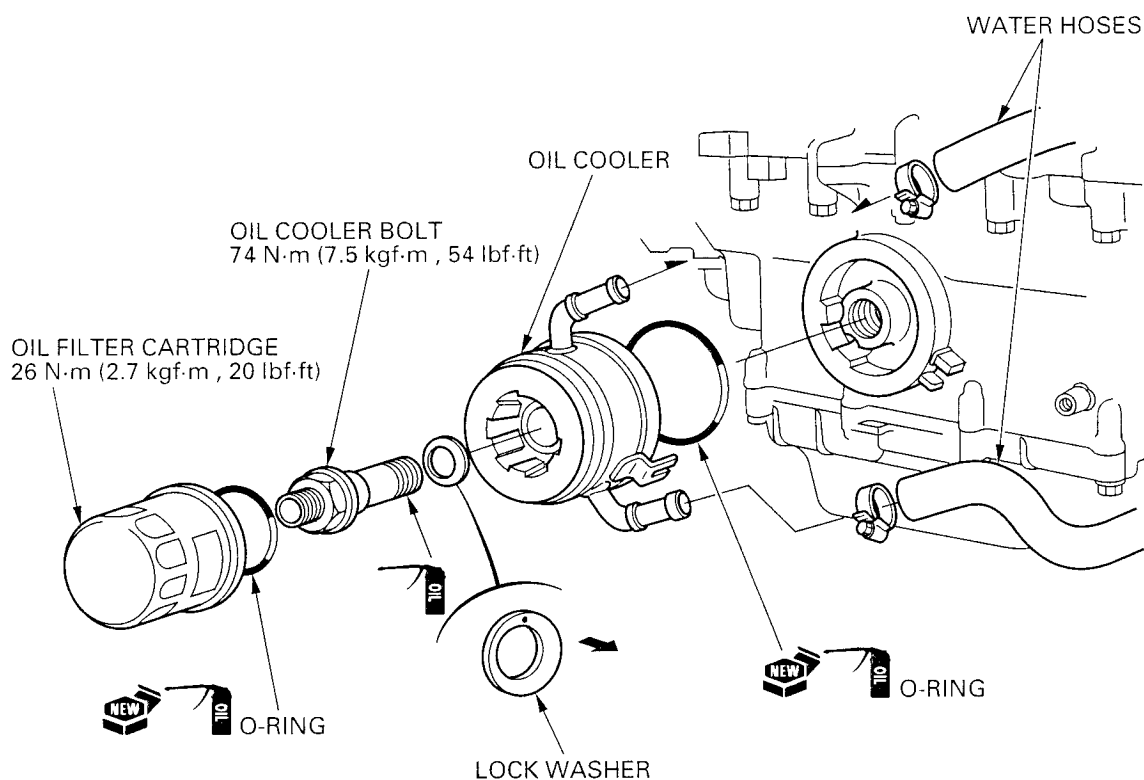

Coat a new O-ring with engine oil and install it into the oil cooler groove.


Install the oil cooler by aligning its guide groove with the rib on the crankcase.

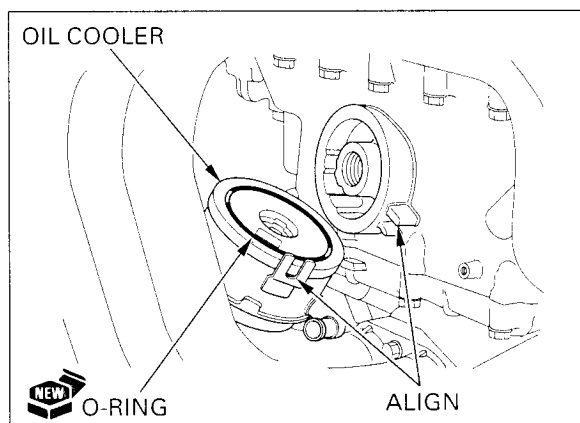

Apply oil to the oil cooler mounting bolt threads and seating surface.

Install the lock washer and oil cooler bolt.


*Install the lock washer with its concave side ("O" mark) facing the oil cooler.*

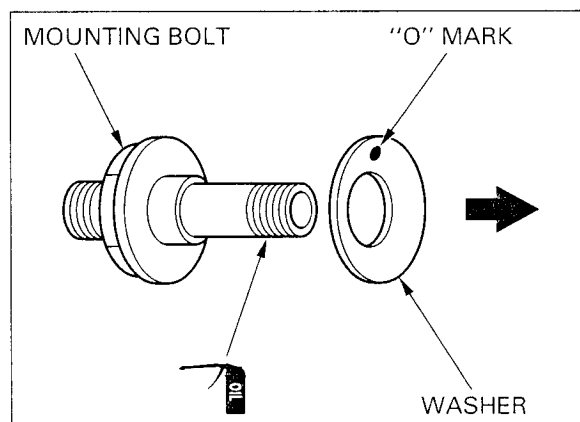




## LUBRICATION SYSTEM

*Be sure the cooler bolt collar slides inside the oil cooler.* Tighten the oil cooler mounting bolt to the specified torque.  
**TORQUE:** 74 N·m (7.5 kgf·m , 54 lbf·ft)

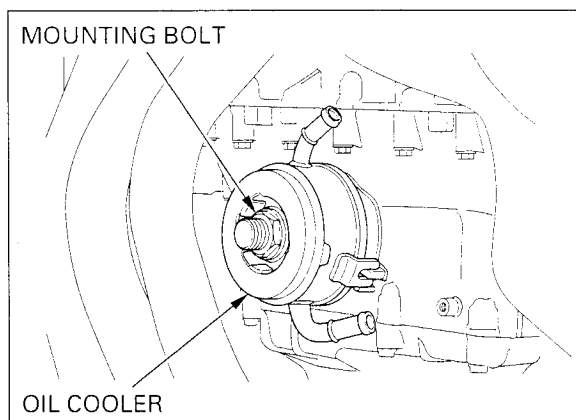


Connect the oil cooler water hoses, tighten the hose band securely.

Install the oil filter cartridge and fill the crankcase with recommended oil (page 3-15).  
Fill the cooling system and bleed air (page 6-4).

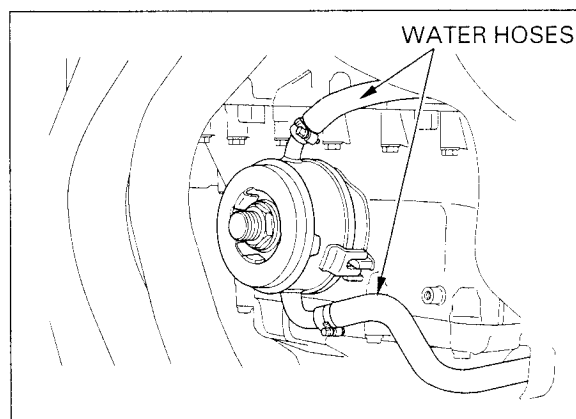

## FUEL SYSTEM (Programmed Fuel Injection)

---

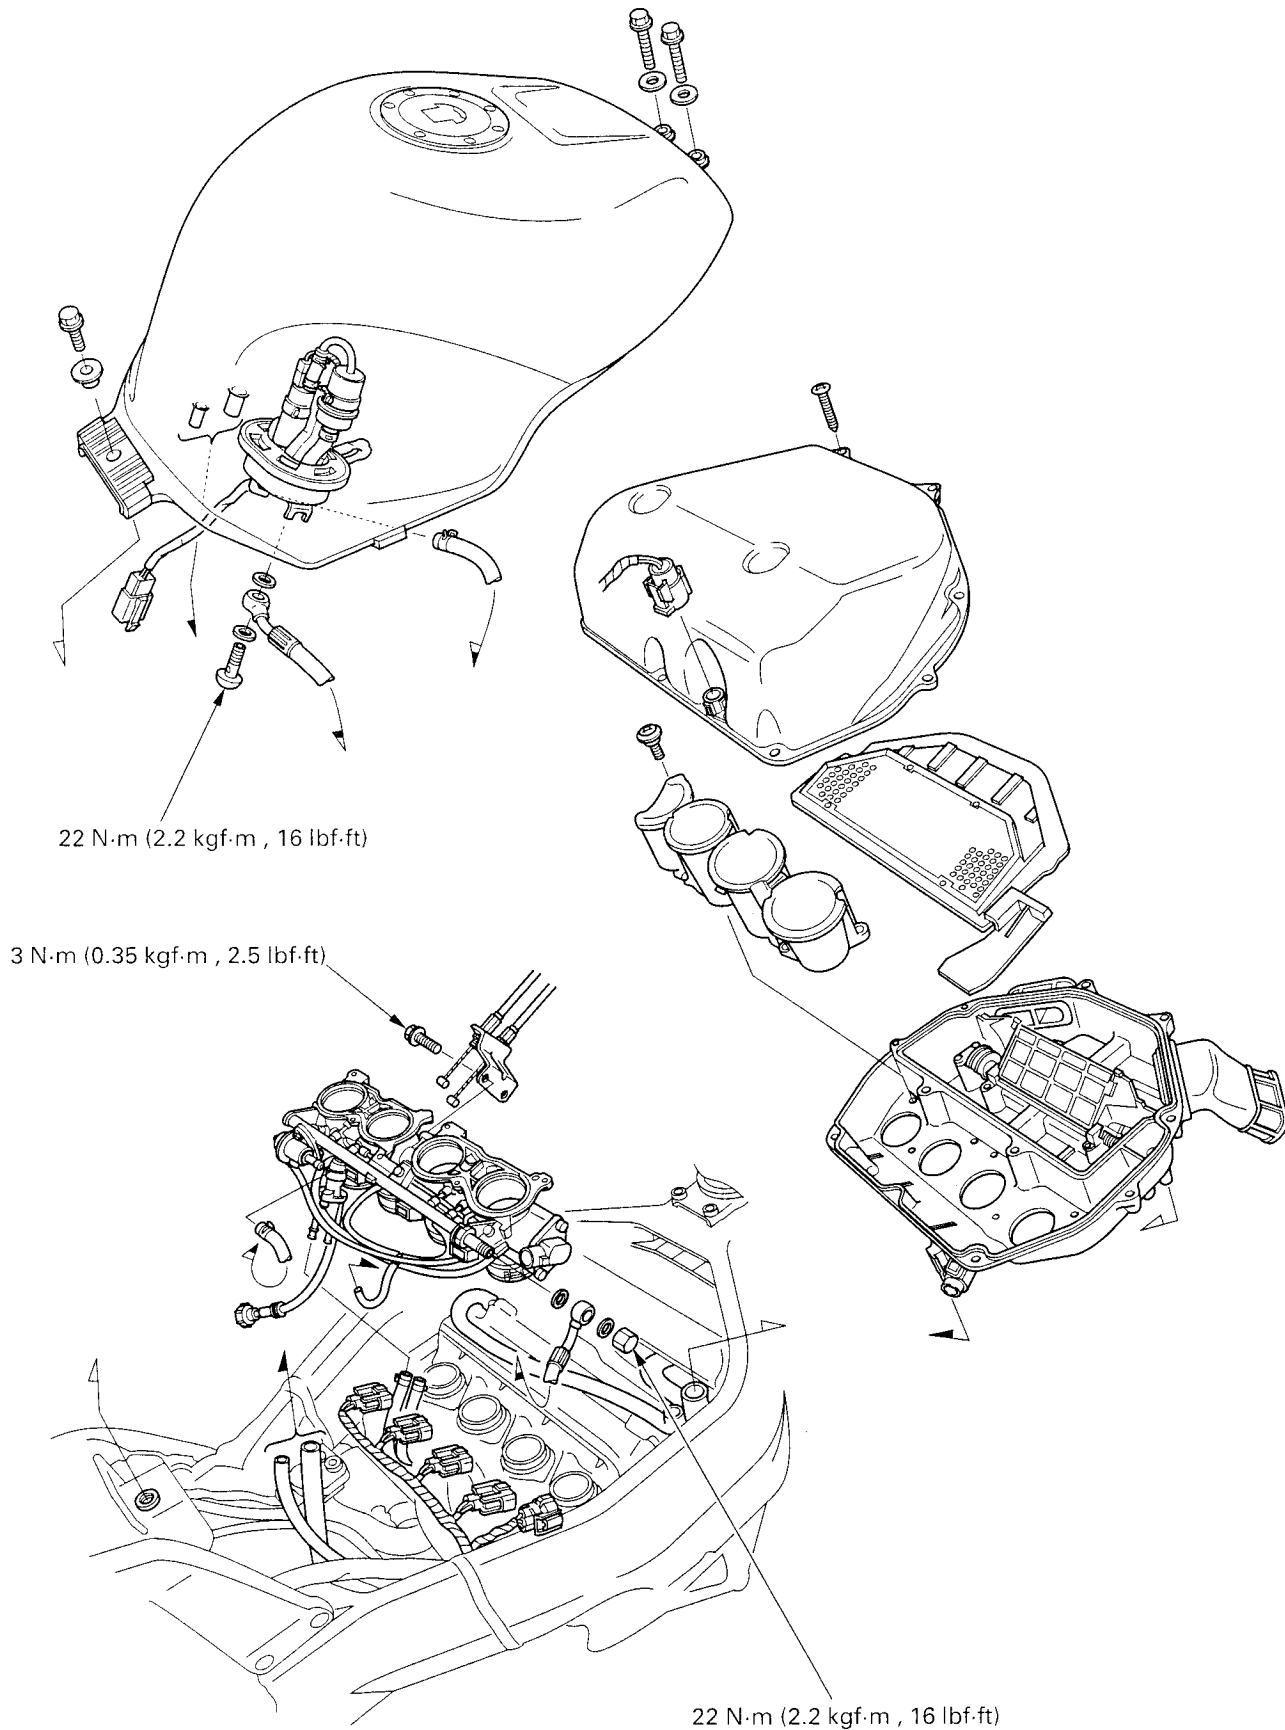

# 5. FUEL SYSTEM (Programmed Fuel Injection)

SERVICE INFORMATION	5-1	MAP SENSOR	5-83
TROUBLESHOOTING	5-3	IAT SENSOR	5-84
SYSTEM LOCATION	5-4	ECT SENSOR	5-85
SYSTEM DIAGRAM	5-6	CAM PULSE GENERATOR	5-85
PGM-FI (PROGRAMMED FUEL INJECTION) SYSTEM	5-8	TP SENSOR	5-86
PGM-FI SELF-DIAGNOSIS MALFUNCTION INDICATOR LAMP (MIL) FAILURE CODES	5-12	BANK ANGLE SENSOR	5-88
FUEL LINE INSPECTION	5-56	ENGINE STOP RELAY	5-89
FUEL PUMP	5-59	ECM (ENGINE CONTROL MODULE)	5-89
FUEL CUT RELAY	5-60	PAIR SOLENOID VALVE	5-91
FUEL TANK	5-61	PURGE CONTROL SOLENOID VALVE (CALIFORNIA TYPE ONLY)	5-92
AIR CLEANER HOUSING	5-66	O <sub>2</sub> SENSOR (CALIFORNIA TYPE ONLY)	5-92
THROTTLE BODY	5-68	EGCV AND AIR INTAKE VALVE INSPECTION	5-94
INJECTOR	5-73	EGCV AND AIR INTAKE VALVE SERVO MOTOR	5-97
PRESSURE REGULATOR	5-75	EGCV	5-100
FAST IDLE WAX UNIT	5-75	VARIABLE AIR INTAKE VALVE	5-107
STARTER VALVE	5-78		
STARTER VALVE SYNCHRONIZATION	5-81		

## SERVICE INFORMATION

### GENERAL

- Be sure to relieve the fuel pressure while the engine is OFF.
- Bending or twisting the control cables will impair smooth operation and could cause the cables to stick or bind, resulting in loss of vehicle control.

## FUEL SYSTEM (Programmed Fuel Injection)

- Do not apply commercially available carburetor cleaners to the inside of the throttle bore, which is coated with molybdenum.
- Do not snap the throttle valve from full open to full close after the throttle cable has been removed. It may cause incorrect idle operation.
- Seal the cylinder head intake ports with tape or a clean cloth to keep dirt and debris from entering the intake ports after the throttle body has been removed.
- Do not apply excessive force to the fuel pipe on the throttle body while removing or installing the throttle body.
- Do not damage the throttle body. It may cause incorrect throttle and idle valve synchronization.
- Prevent dirt and debris from entering the throttle bore, fuel tube and return tube, clean them using compressed air.
- The throttle body is factory pre-set. Do not disassemble in a way other than shown in this manual.
- Do not loosen or tighten the white painted bolts and screws of the throttle body. Loosening or tightening them can cause throttle and idle valve synchronization failure.
- Do not push the fuel pump base under the fuel tank when the fuel tank is stored.
- Always replace the packing when the fuel pump is removed.
- The programmed fuel injection system is equipped with the Self-Diagnostic System described on page 5-8. If the malfunction indicator lamp blinks, follow the Self-Diagnostic Procedures to remedy the problem.
- When checking the PGM-FI, always follow the steps in the troubleshooting flow chart (page 5-12).
- The PGM-FI system is provided with fail-safe function to secure a minimum running capability even when there is any trouble in the system. When any abnormality is detected by the self-diagnosis function, running capability is secured by making use of the numerical values of a situation preset in advance in the simulated program map. It must be remembered, however, that when any abnormality is detected in four injectors and/or the ignition and cam pulse generator, the fail safe function stops the engine from the standpoint of protecting it.
- For PGM-FI system location, see page 5-4.
- A faulty PGM-FI system is often related to poorly connected or corroded connectors. Check those connections before proceeding.
- For fuel reserve sensor inspection, see section 19.
- The vehicle speed sensor sends digital pulse signal to the ECM (PGM-FI unit) and computation. For vehicle speed sensor inspection, see section 19.
- When disassembling the programmed fuel injection parts, note the location of the O-rings. Replace them with new ones upon reassembly.
- Before disconnecting the fuel tube, release the fuel pressure by loosening the fuel tube banjo bolt at the fuel tank.
- Always replace the sealing washers when the fuel tube banjo bolt is removed or loosened.
- Used a digital tester for PGM-FI system inspection.
- EGCv is the abbreviation for Exhaust Gas Control Valve.

## SPECIFICATIONS

ITEM		SPECIFICATIONS
Throttle body identification number	49 states, Canada type	GQ60C
	California type	GQ60B
Starter valve vacuum difference		20 mm Hg
Base throttle valve for synchronization		No.1
Idle speed		1,200 $\pm$ 100 rpm
Throttle grip free play		2 – 6 mm (1/16 – 1/4 in)
Intake air temperature sensor resistance (at 20°C/68°F)		1 – 4 k $\Omega$
Engine coolant temperature sensor resistance (at 20°C/68°F)		2.3 – 2.6 k $\Omega$
Fuel injector resistance (at 20°C/68°F)		11.1 – 12.3 $\Omega$
PAIR solenoid valve resistance (at 20°C/68°F)		20 – 24 k $\Omega$
Purge control solenoid valve resistance (at 20°C/68°F)		30 – 34 k $\Omega$
Cam pulse generator peak voltage (at 20°C/68°F)		0.7 V minimum
Ignition pulse generator peak voltage (at 20°C/68°F)		0.7 V minimum
Manifold absolute pressure at idle		150 – 250 mm Hg
Fuel pressure at idle		343 kPa (3.5 kgf/cm <sup>2</sup> , 50 psi)
Fuel pump flow (at 12 V)		188 cm <sup>3</sup> (6.4 US oz, 6.6 Imp oz) minimum/10 seconds

**TORQUE VALUES**

ECT (Engine Coolant Temperature)/thermosensor	23 N·m (2.3 kgf·m , 17 lbf·ft)	
Throttle body insulator band screw	See page 1-14	
Throttle cable bracket mounting screw	3 N·m (0.35 kgf·m , 2.5 lbf·ft)	
Fuel pipe mounting bolt	10 N·m (1.0 kgf·m , 7 lbf·ft)	
Pressure regulator mounting bolt	10 N·m (1.0 kgf·m , 7 lbf·ft)	
Starter valve synchronization plate screw	1 N·m (0.09 kgf·m , 0.7 lbf·ft)	
Fast idle wax unit link plate screw	1 N·m (0.09 kgf·m , 0.7 lbf·ft)	
Fast idle wax unit mounting screw	5 N·m (0.5 kgf·m , 3.6 lbf·ft)	
Starter valve lock nut	2 N·m (0.18 kgf·m , 1.3 lbf·ft)	
Vacuum joint plug socket bolt for synchronization	3 N·m (0.3 kgf·m , 2.2 lbf·ft)	
Fuel filler cap bolt	2 N·m (0.2 kgf·m , 1.4 lbf·ft)	
Fuel tube banjo bolt (fuel tank side)	22 N·m (2.2 kgf·m , 16 lbf·ft)	
Fuel tube sealing nut (throttle body side)	22 N·m (2.2 kgf·m , 16 lbf·ft)	
Fuel pump mounting nut	12 N·m (1.2 kgf·m , 9 lbf·ft)	See page 5-60 for tightening sequence
O <sub>2</sub> sensor	25 N·m (2.6 kgf·m , 19 lbf·ft)	
Exhaust valve mounting bolt (front)	14 N·m (1.4 kgf·m , 10 lbf·ft)	
Exhaust valve mounting bolt (rear)	14 N·m (1.4 kgf·m , 10 lbf·ft)	
Exhaust valve cover mounting bolt	12 N·m (1.2 kgf·m , 9 lbf·ft)	
Exhaust valve pulley nut	12 N·m (1.2 kgf·m , 9 lbf·ft)	
Exhaust valve pulley cover mounting bolt (lower)	12 N·m (1.2 kgf·m , 9 lbf·ft)	

**TOOLS**

Peak voltage tester (U.S.A. only) or  
Peak voltage adaptor

07HGJ-0020100 with  
Commercially available digital multimeter (impedance 10 M $\Omega$ /DCV  
minimum)  
07YMZ-0010100 (two required)  
07YMF-MCJ0100  
07YMF-MCJ0200  
07YMF-MCJ0300  
07YMF-MCJ0400

ECU test harness  
Installer shaft guide  
Installer shaft  
Installer shaft, 14 × 30 mm  
Remover, 14 × 16 mm

**TROUBLESHOOTING****Engine won't to start**

- Intake air leak
- Fuel contaminated/deteriorated
- Pinched or clogged fuel tube
- Faulty fuel pump
- Clogged fuel filter
- Clogged fuel injector filter
- Sticking fuel injector needle
- Faulty fuel pump operating system

**Engine stall, hard to start, rough idling**

- Intake air leak
- Fuel contaminated/deteriorated
- Pinched or clogged fuel tube
- Idle speed misadjusted
- Starter valve synchronization misadjusted

**Backfiring or misfiring during acceleration**

- Ignition system malfunction

**Poor performance (driveability) and poor fuel economy**


- Pinched or clogged fuel tube
- Faulty pressure regulator



## FUEL SYSTEM (Programmed Fuel Injection)


### SYSTEM LOCATION

Except California type:

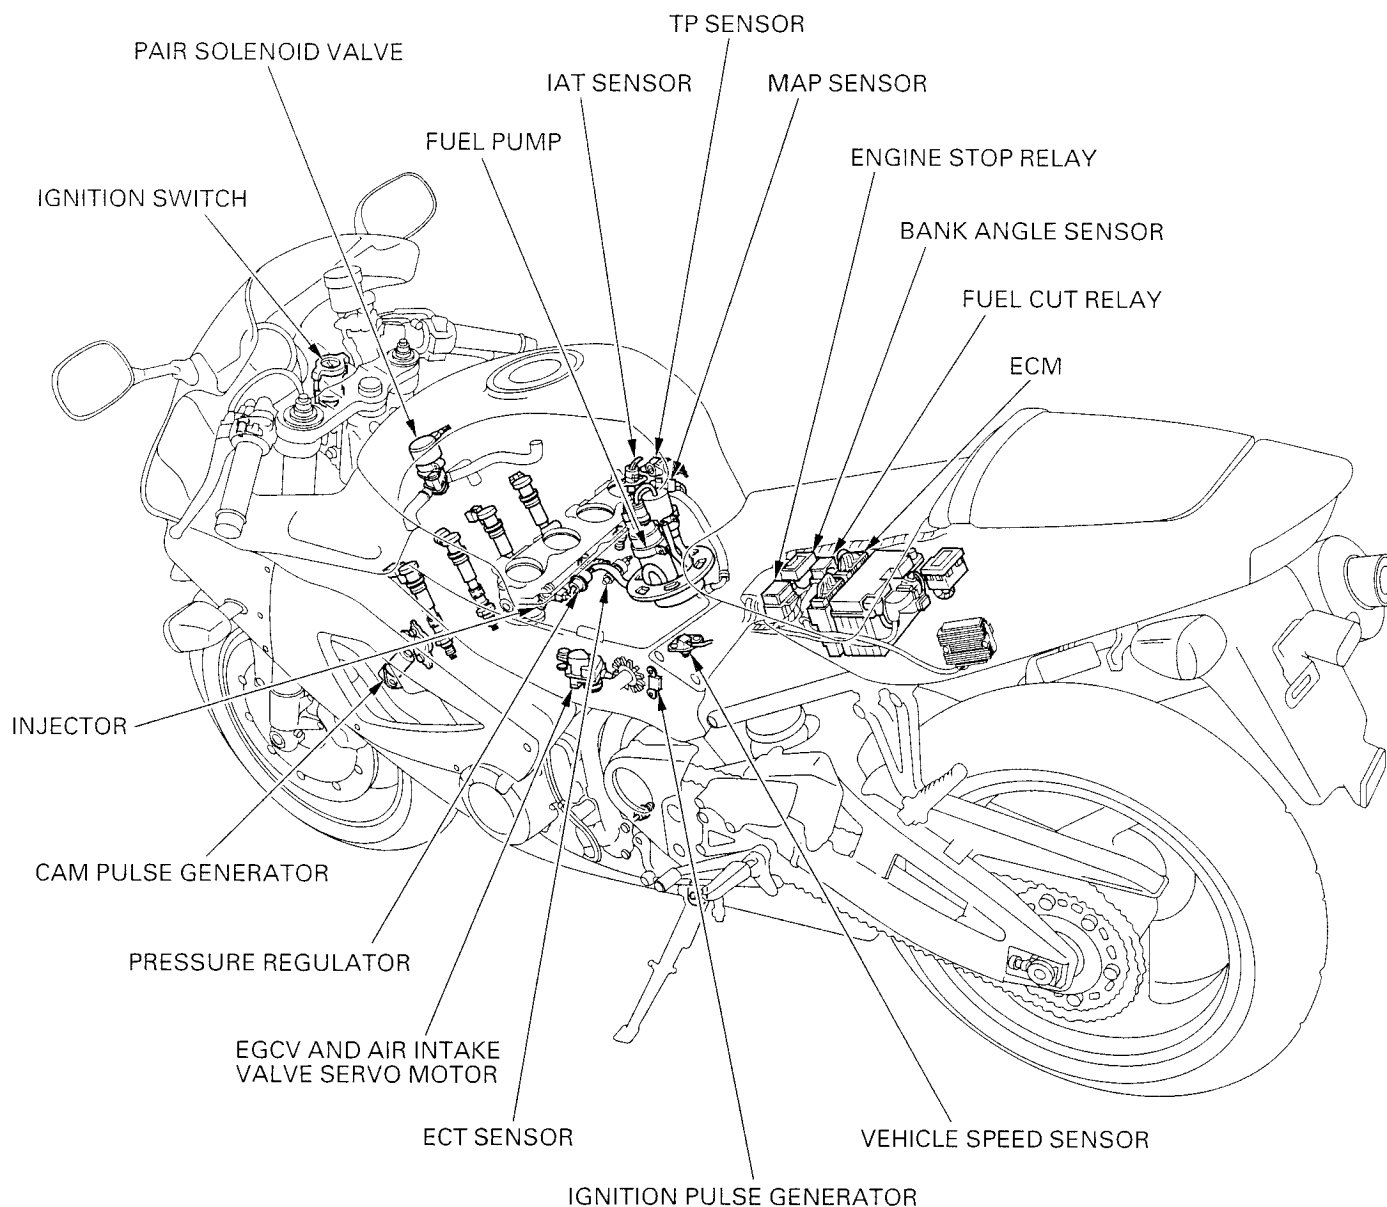

FULL NAME	ABBREVIATIONS
Manifold absolute pressure sensor	MAP sensor
Throttle position sensor	TP sensor
Intake air temperature sensor	IAT sensor
Engine coolant temperature sensor	ECT sensor
Engine control module	ECM

California type:

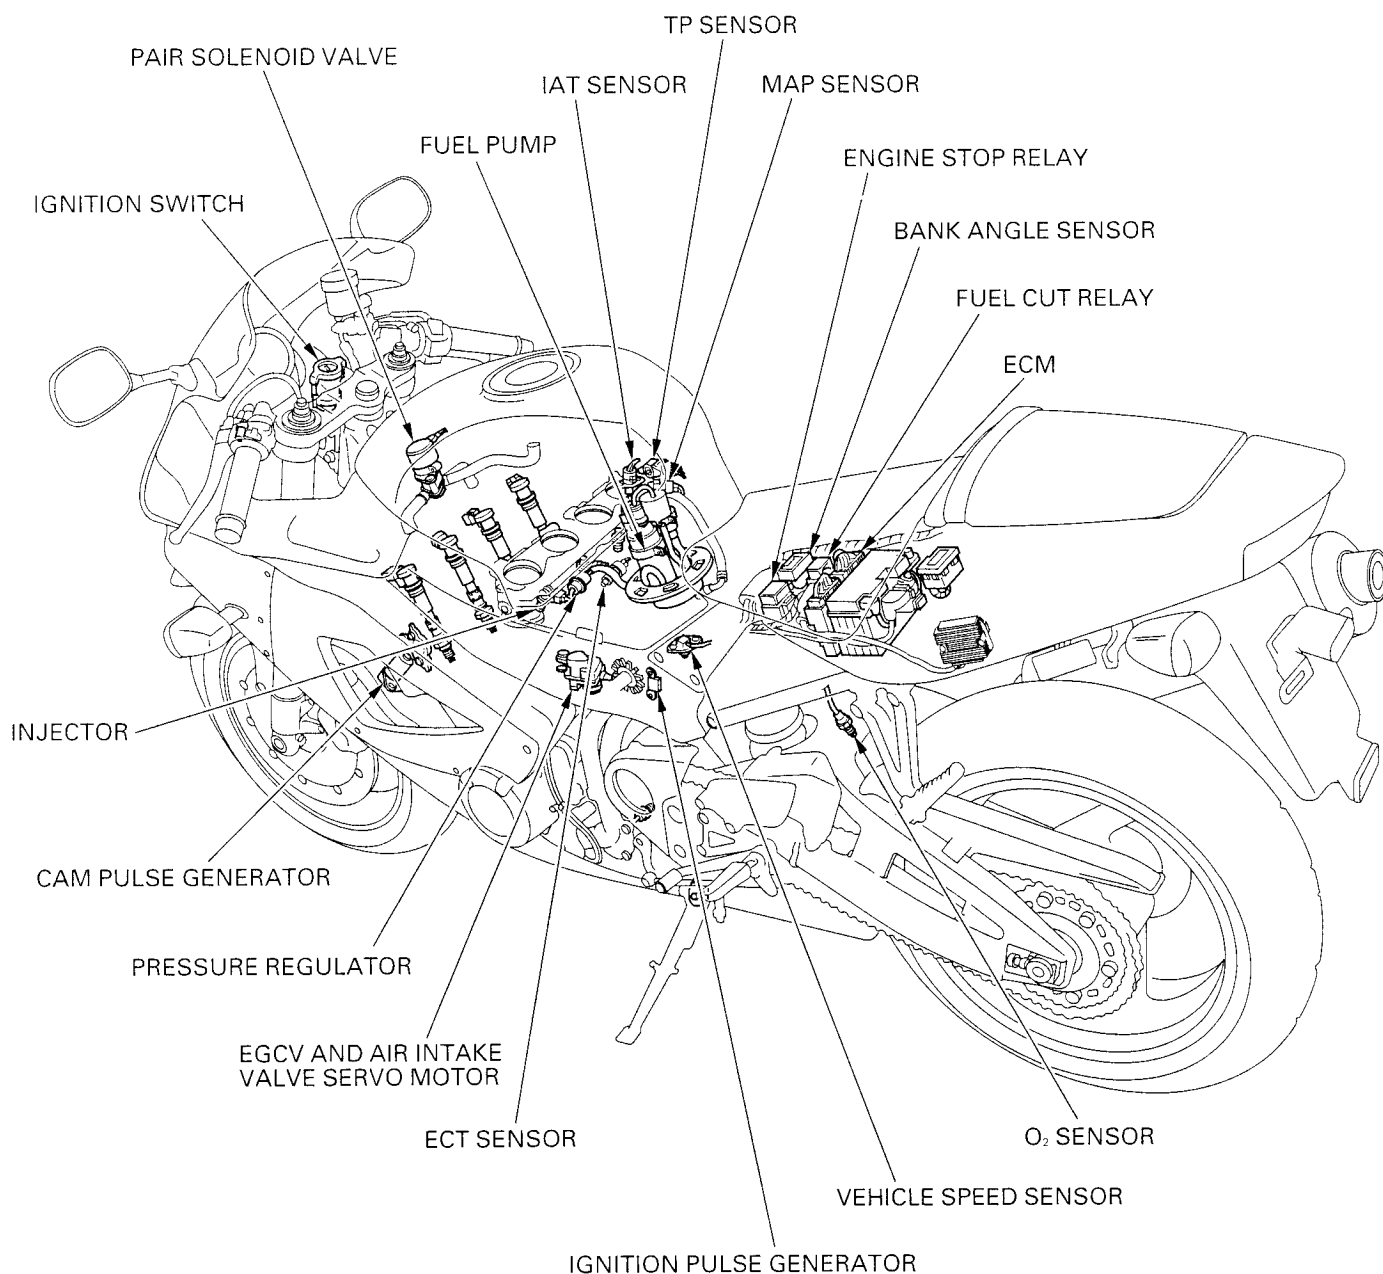


FULL NAME	ABBREVIATIONS
Manifold absolute pressure sensor	MAP sensor
Throttle position sensor	TP sensor
Intake air temperature sensor	IAT sensor
Engine coolant temperature sensor	ECT sensor
Engine control module	ECM

## FUEL SYSTEM (Programmed Fuel Injection)

### SYSTEM DIAGRAM

Except california type:

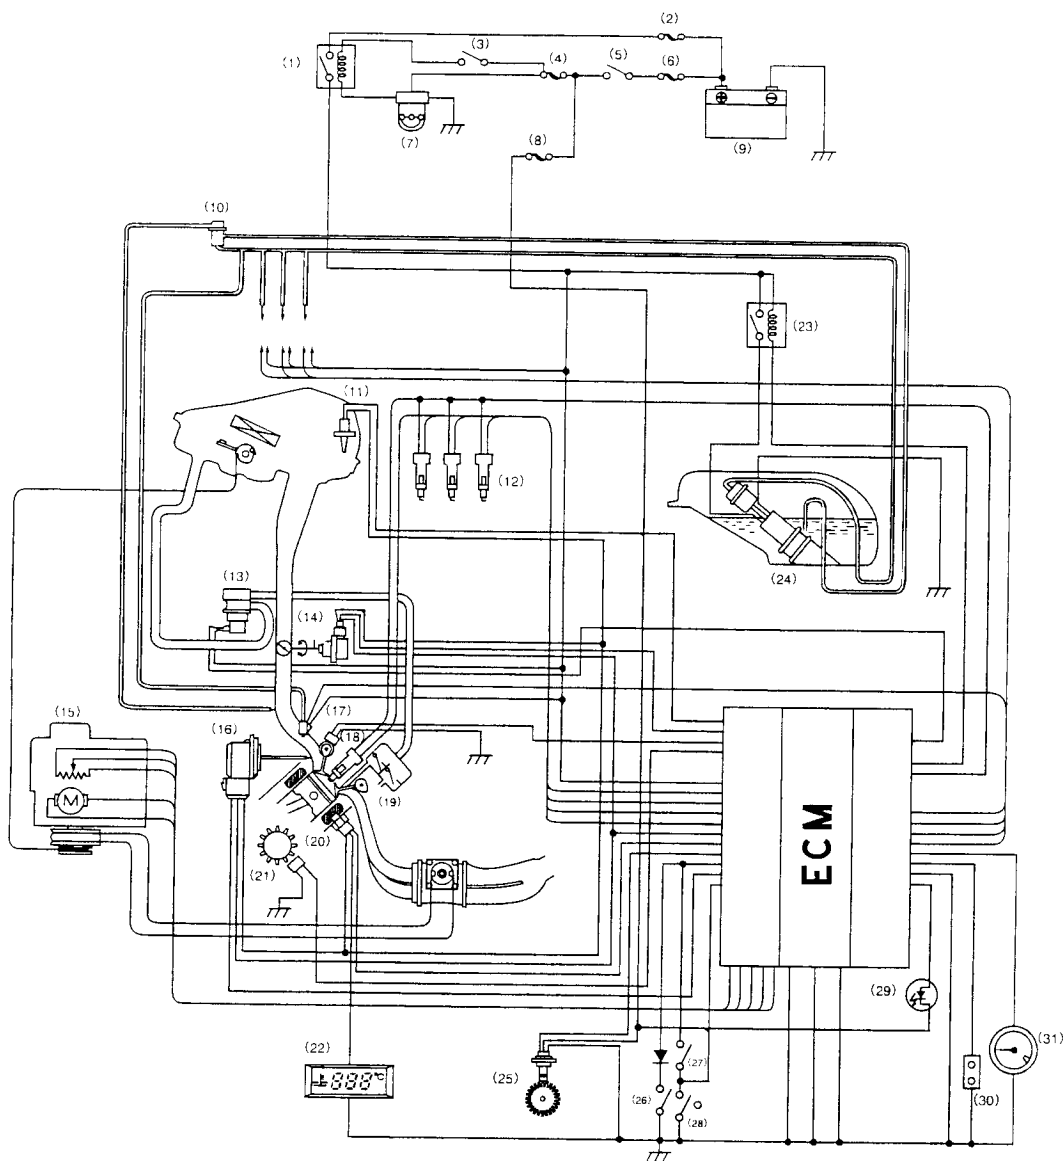


- |      |                                       |
|------|---------------------------------------|
| (1)  | Engine stop relay                     |
| (2)  | Main fuse B (20A)                     |
| (3)  | Engine stop switch                    |
| (4)  | Sub-fuse (10A)                        |
| (5)  | Ignition switch                       |
| (6)  | Main fuse A (30A)                     |
| (7)  | Bank angle sensor                     |
| (8)  | Sub-fuse (10A)                        |
| (9)  | Battery                               |
| (10) | Pressure regulator                    |
| (11) | IAT sensor                            |
| (12) | Direct ignition coil/spark plug       |
| (13) | PAIR solenoid valve                   |
| (14) | TP sensor                             |
| (15) | EGCV and air intake valve servo motor |
| (16) | MAP sensor                            |

- |      |                            |
|------|----------------------------|
| (17) | Injector                   |
| (18) | Cam pulse generator        |
| (19) | PAIR check valve           |
| (20) | ECT sensor                 |
| (21) | Ignition pulse generator   |
| (22) | Coolant temperature LCD    |
| (23) | Fuel cut relay             |
| (24) | Fuel pump                  |
| (25) | Vehicle speed sensor       |
| (26) | Neutral switch             |
| (27) | Clutch switch              |
| (28) | Side stand switch          |
| (29) | Malfunction indicator lamp |
| (30) | Service check connector    |
| (31) | Tachometer                 |

**FUEL SYSTEM (Programmed Fuel Injection)**

California type:

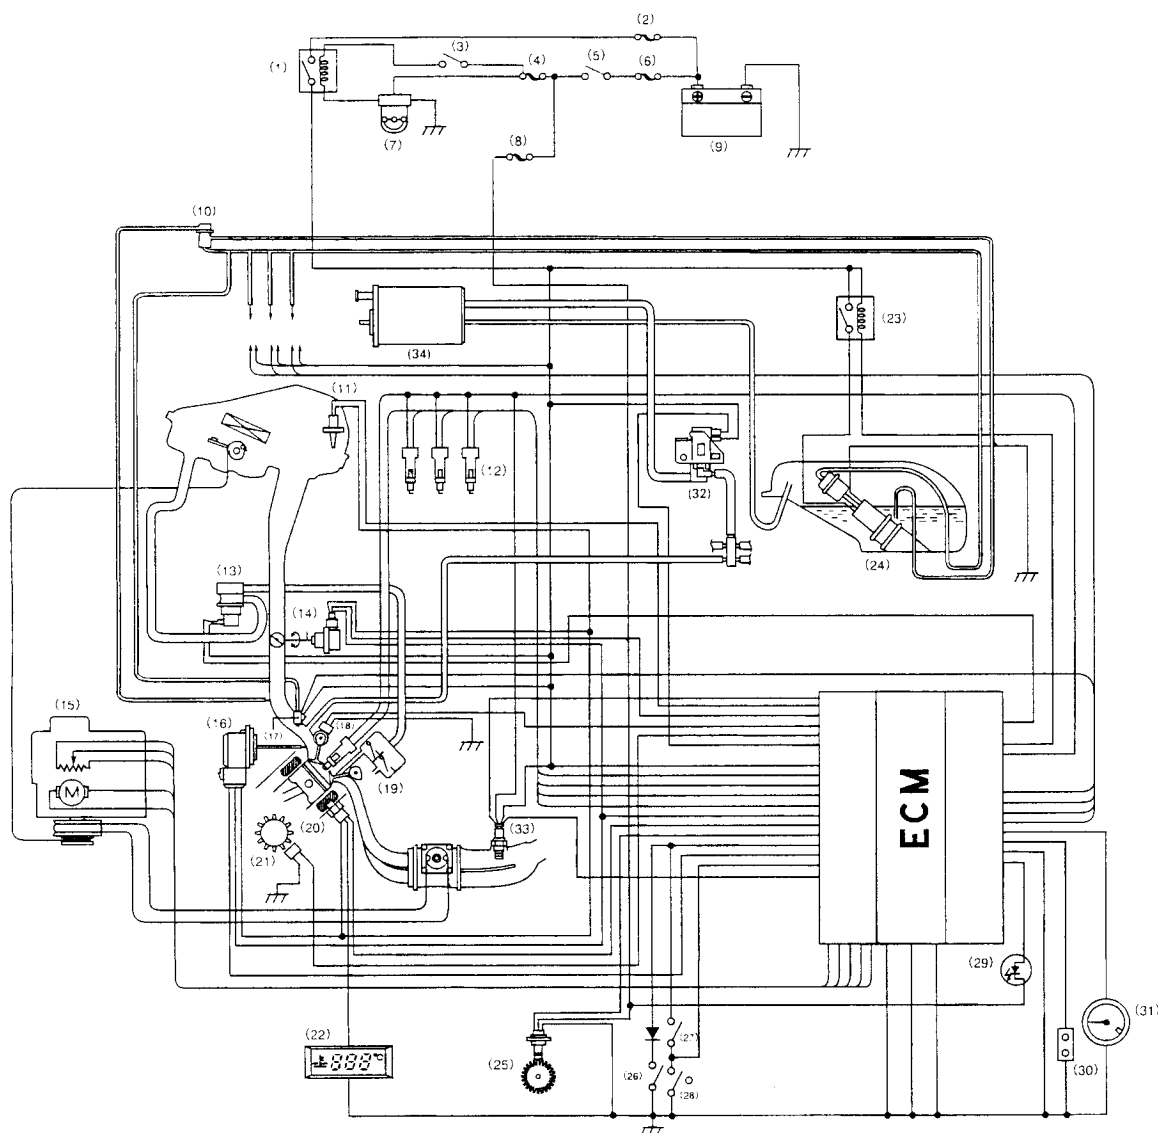

- |      |                                       |
|------|---------------------------------------|
| (1)  | Engine stop relay                     |
| (2)  | Main fuse B (20A)                     |
| (3)  | Engine stop switch                    |
| (4)  | Sub-fuse (10A)                        |
| (5)  | Ignition switch                       |
| (6)  | Main fuse A (30A)                     |
| (7)  | Bank angle sensor                     |
| (8)  | Sub-fuse (10A)                        |
| (9)  | Battery                               |
| (10) | Pressure regulator                    |
| (11) | IAT sensor                            |
| (12) | Direct ignition coil/spark plug       |
| (13) | PAIR solenoid valve                   |
| (14) | TP sensor                             |
| (15) | EGCV and air intake valve servo motor |
| (16) | MAP sensor                            |
| (17) | Injector                              |

- |      |                                   |
|------|-----------------------------------|
| (18) | Cam pulse generator               |
| (19) | PAIR check valve                  |
| (20) | ECT sensor                        |
| (21) | Ignition pulse generator          |
| (22) | Coolant temperature LCD           |
| (23) | Fuel cut relay                    |
| (24) | Fuel pump                         |
| (25) | Vehicle speed sensor              |
| (26) | Neutral switch                    |
| (27) | Clutch switch                     |
| (28) | Side stand switch                 |
| (29) | Malfunction indicator lamp        |
| (30) | Service check connector           |
| (31) | Tachometer                        |
| (32) | EVAP purge control solenoid valve |
| (33) | O <sub>2</sub> sensor             |
| (34) | EVAP canister                     |

## FUEL SYSTEM (Programmed Fuel Injection)

### PGM-FI (PROGRAMMED FUEL INJECTION) SYSTEM


#### SELF-DIAGNOSTIC PROCEDURES

Place the motorcycle on its side stand.  
Start the engine and let it idle.

*The malfunction indicator lamp (MIL) will start blinking only with the side stand down and with the engine off (engine stop switch in RUN) or engine revs are below 5,000 rpm. In any other conditions, the malfunction indicator lamp (MIL) will illuminate and stay on.*


If the malfunction indicator lamp (MIL) does not light or blink, the system has no memory of problem data.

If the malfunction indicator blinks, note how many times the malfunction indicator lamp (MIL) blinks, and determine the cause of the problem (page 5-12 through 5-55).

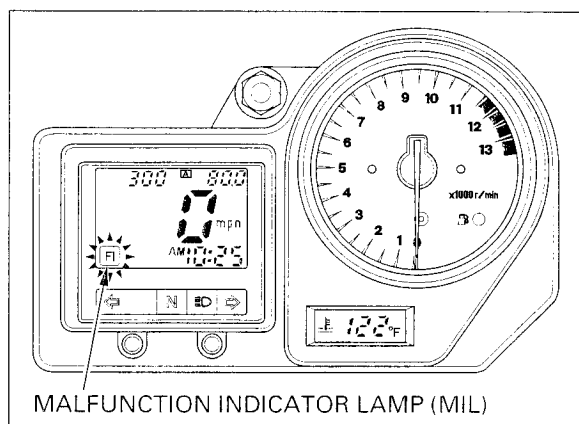


If you wish to read the PGM-FI memory for trouble data, perform the following:

Turn the ignition switch OFF.

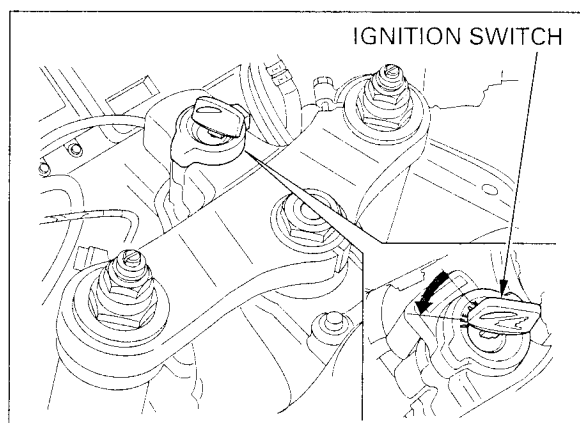

Remove the seat (page 2-2).

Short the PGM-FI system service check connector terminals using a jumper wire.

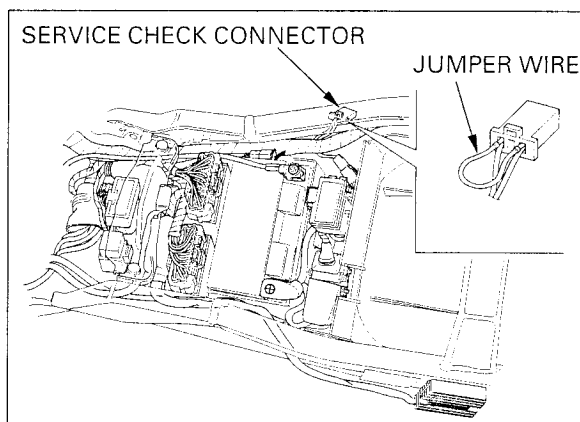




## FUEL SYSTEM (Programmed Fuel Injection)

Turn the ignition switch ON and engine stop switch RUN.


If the ECM has no self diagnosis memory data, the MIL will illuminate when you turn the ignition switch ON.

*Even if the PGM-FI has memory data, the MIL does not blink when the engine is running.*

If the ECM has self diagnosis memory data, the MIL will start blinking when you turn the ignition switch ON.

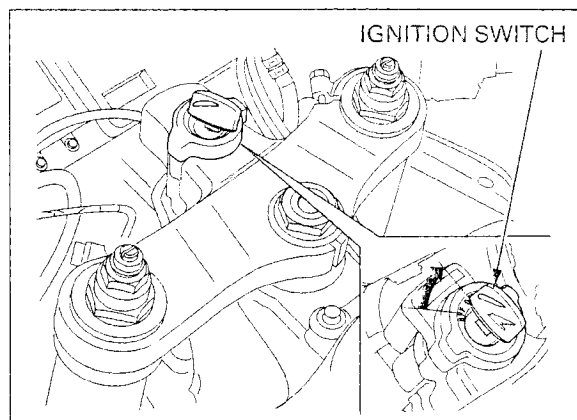

Note how many times the MIL blinks, and determine the cause of the problem (page 5-12 through 5-55).


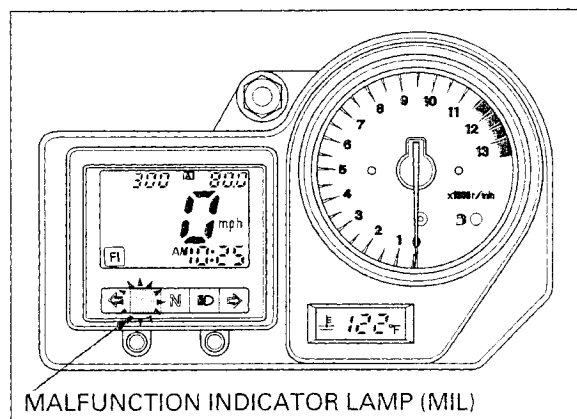


### SELF-DIAGNOSIS RESET PROCEDURE

1. Turn the engine stop switch to RUN and ignition switch OFF.
2. Short the service check connector of the PGM-FI system using a jumper wire.
3. Turn the ignition switch ON.
4. Remove the jumper wire from the service check connector.
5. The MIL lights about 5 seconds.  
While the indicator lights, short the service check connector again with the jumper wire.  
Self diagnosis memory data is erased, if the MIL turn off and start blinking.

- The service check connector must be jumped while the indicator lights. If not, the MIL will not start blinking.
- Note that the self diagnosis memory data cannot be erased if you turn off the ignition switch before the MIL starts blinking.

If the MIL blinks 20 times, the data has not been erased, so try again.

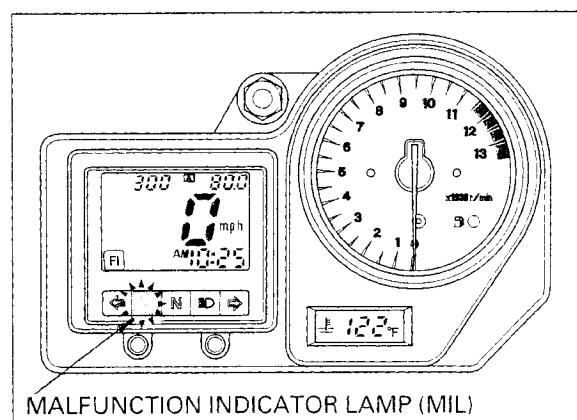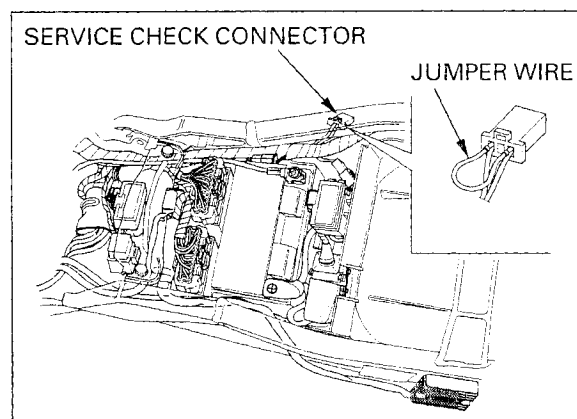

## FUEL SYSTEM (Programmed Fuel Injection)

### PEAK VOLTAGE INSPECTION PROCEDURE

- Use this procedure for the ignition pulse generator and cam pulse generator inspection.
- Check all system connections before inspection. If the system is disconnected, incorrect peak voltage might be measured.
- Check cylinder compression and check that the all spark plugs are installed correctly.
- Use recommended digital multimeter or commercially available digital multimeter with an impedance of 10 M $\Omega$ /DCV minimum.
- The display value differs depending upon the internal impedance of the multimeter.
- Disconnect the fuel pump connector before checking the peak voltage.

Open and support the front end of fuel tank (page 3-4).



Disconnect the fuel pump 3P (Black) connector.

*Avoid touching the tester probes to prevent electric shock.*

Connect the peak voltage adaptor to the digital multimeter.

#### TOOLS:

**Peak voltage tester (U.S.A. only) or**  
**Peak voltage adaptor** 07HGJ-0020100  
**with commercially available digital multimeter**  
**(impedance 10 M $\Omega$ /DCV minimum)**

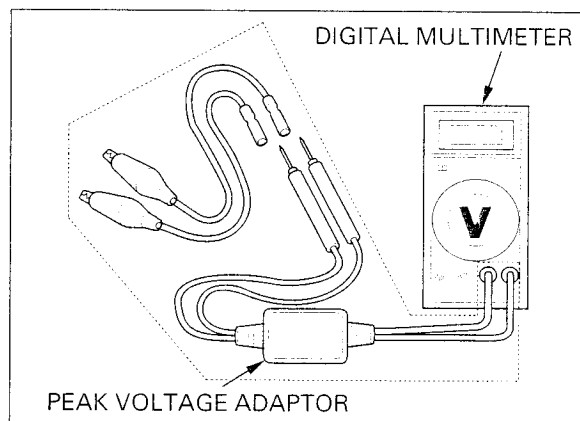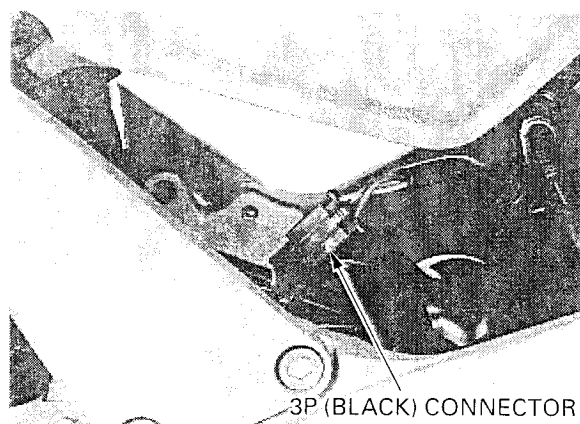


### TEST HARNESS CONNECTION

Remove the seat (page 2-2).


Remove the fuel tank mounting bolts and then remove the fuel tank rear bracket (page 5-89).

Remove the ECM cover.

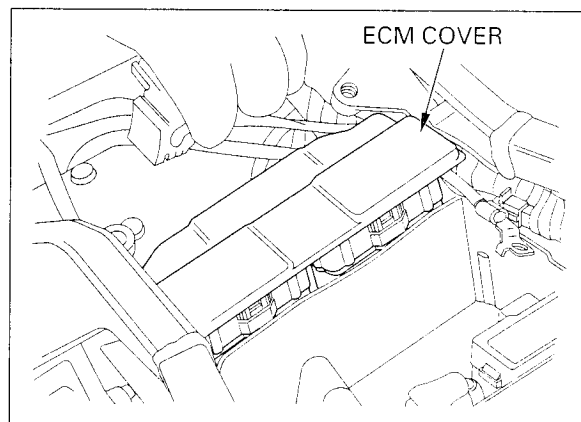

## FUEL SYSTEM (Programmed Fuel Injection)

Disconnect the ECM 22P (Black) and 22P (Light gray) connectors from the unit.

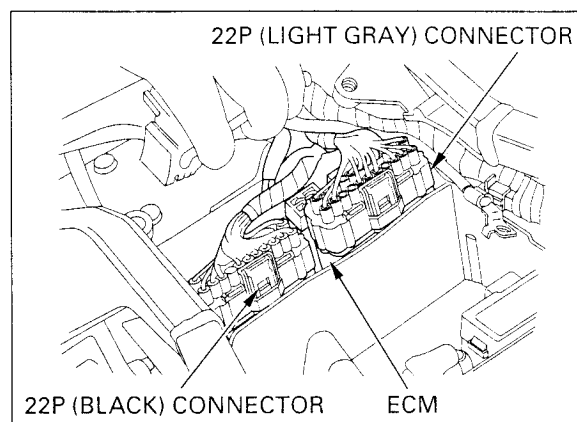


Connect the ECU test harnesses between the main wire harness and the ECM.

### TOOL:


ECU test harness

07YMZ-MCF0000  
(two required)

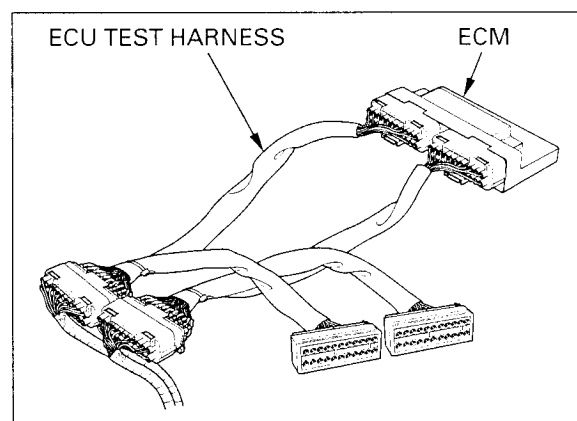


## TEST HARNESS TERMINAL LAYOUT

The ECM connector terminals are numbered as shown in the illustration.

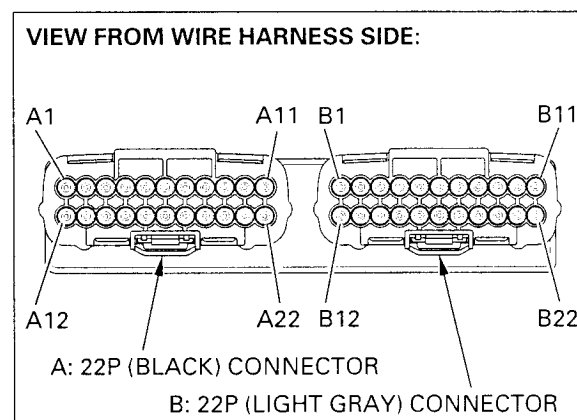



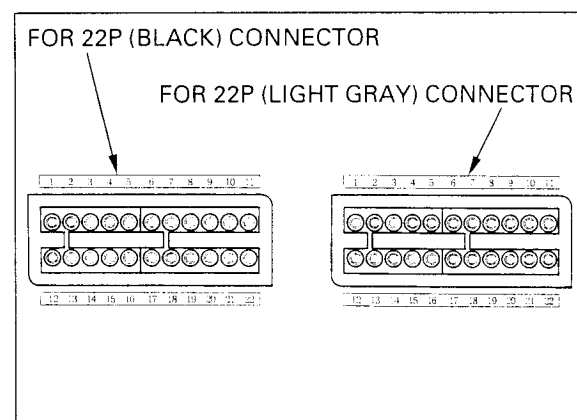





The test harness terminals are same layout as for the ECM connector terminals as shown.















**FUEL SYSTEM (Programmed Fuel Injection)****PGM-FI SELF-DIAGNOSIS MALFUNCTION INDICATOR LAMP (MIL) FAILURE CODES**

- The PGM-FI MIL denotes the failure codes (the number of blinks from 0 to 35). When the indicator lights for 1.3 seconds it is equivalent to ten blinks. For example, a 1.3 second illumination and two blinks (0.5 second  $\times$  2) of the indicator equals 12 blinks. Follow code 12 on page 5-28).
- When more than one failure occurs, the MIL shows the blinks in the order of lowest number to highest number. For example, if the indicator blinks once, then two times, two failures have occurred. Follow codes 1 and 2 on page 5-14).

Number of PGM-FI MIL		Causes	Symptoms (Fail-safe contents)	Refer to page
0	 No blinks	<ul style="list-style-type: none"> <li>• Open circuit at the power input wire of the ECM</li> <li>• Faulty bank angle sensor</li> <li>• Open circuit in bank angle sensor related circuit</li> <li>• Faulty engine stop relay</li> <li>• Open circuit in engine stop relay related wires</li> <li>• Faulty engine stop switch</li> <li>• Open circuit in engine stop switch related wires</li> <li>• Faulty ignition switch</li> <li>• Faulty ECM</li> <li>• Blown PGM-FI fuse (20 A)</li> <li>• Open circuit in engine stop switch ground</li> <li>• Blown sub-fuse (10 A) (Starter/ignition)</li> </ul>	• Engine does not start	5-90
	 No blinks	<ul style="list-style-type: none"> <li>• Open or short circuit in MIL wire</li> <li>• Faulty ECM</li> </ul>	• Engine operates normally	5-11
	 Stays lit	<ul style="list-style-type: none"> <li>• Short circuit in service check connector wire</li> <li>• Faulty ECM</li> </ul>	• Engine operates normally	—
1	 Blinks	<ul style="list-style-type: none"> <li>• Loose or poor contacts on MAP sensor connector</li> <li>• Open or short circuit in MAP sensor wire</li> <li>• Faulty MAP sensor</li> </ul>	• Engine operates normally	5-14
2	 Blinks	<ul style="list-style-type: none"> <li>• Loose or poor connection of the MAP sensor vacuum tube</li> <li>• Faulty MAP sensor</li> </ul>	• Engine operates normally	5-16
7	 Blinks	<ul style="list-style-type: none"> <li>• Loose or poor contact on ECT sensor</li> <li>• Open or short circuit in ECT sensor wire</li> <li>• Faulty ECT sensor</li> </ul>	• Hard start at a low temperature (Simulate using numerical values; 90°C/194°F)	5-18
8	 Blinks	<ul style="list-style-type: none"> <li>• Loose or poor contact on TP sensor connector</li> <li>• Open or short circuit in TP sensor wire</li> <li>• Faulty TP sensor</li> </ul>	• Poor engine response when operating the throttle quickly (Simulate using numerical values; Throttle opens 0°)	5-20
9	 Blinks	<ul style="list-style-type: none"> <li>• Loose or poor contact on IAT sensor</li> <li>• Open or short circuit in IAT sensor wire</li> <li>• Faulty IAT sensor</li> </ul>	• Engine operates normally (Simulate using numerical values; 25°C/77°F)	5-24


**FUEL SYSTEM (Programmed Fuel Injection)**

Number of PGM-FI MIL blinks		Causes	Symptoms (Fail-safe contents)	Refer to page
11	 Blinks	<ul style="list-style-type: none"> <li>• Loose or poor contact on vehicle speed sensor connector</li> <li>• Open or short circuit in vehicle speed sensor connector</li> <li>• Faulty vehicle speed sensor</li> </ul>	• Engine operates normally	5-26
12	 Blinks	<ul style="list-style-type: none"> <li>• Loose or poor contact on No. 1 injector connector</li> <li>• Open or short circuit in No. 1 injector wire</li> <li>• Faulty No. 1 injector</li> </ul>	• Engine does not start	5-28
13	 Blinks	<ul style="list-style-type: none"> <li>• Loose or poor contact on No. 2 injector connector</li> <li>• Open or short circuit in No. 2 injector wire</li> <li>• Faulty No. 2 injector</li> </ul>	• Engine does not start	5-31
14	 Blinks	<ul style="list-style-type: none"> <li>• Loose or poor contact on No. 3 injector connector</li> <li>• Open or short circuit in No. 3 injector wire</li> <li>• Faulty No. 3 injector</li> </ul>	• Engine does not start	5-34
15	 Blinks	<ul style="list-style-type: none"> <li>• Loose or poor contact on No. 4 injector connector</li> <li>• Open or short circuit in No. 4 injector wire</li> <li>• Faulty No. 4 injector</li> </ul>	• Engine does not start	5-37
18	 Blinks	<ul style="list-style-type: none"> <li>• Loose or poor contact on cam pulse generator</li> <li>• Open or short circuit in cam pulse generator</li> <li>• Faulty cam pulse generator</li> </ul>	• Engine does not start	5-40
19	 Blinks	<ul style="list-style-type: none"> <li>• Loose or poor contact on ignition pulse generator connector</li> <li>• Open or short circuit in ignition pulse generator</li> <li>• Faulty ignition pulse generator</li> </ul>	• Engine does not start	5-42
21	 Blinks	• Faulty O <sub>2</sub> sensor	• Engine operates normally	5-44
23	 Blinks	• Faulty O <sub>2</sub> sensor heater	• Engine operates normally	5-46
33	 Blinks	• Faulty E <sup>2</sup> -PROM in ECM	<ul style="list-style-type: none"> <li>• Engine operates normally</li> <li>• Does not hold the self-diagnosis data</li> </ul>	5-50
34	 Blinks	• Faulty EGCV and air intake valve servo motor potentiometer voltage	• Engine operates normally	5-52
35	 Blinks	• Faulty EGCV and air intake valve servo motor	• Engine operates normally	5-54




## FUEL SYSTEM (Programmed Fuel Injection)

### PGM-FI MIL 1 BLINK (MAP SENSOR)

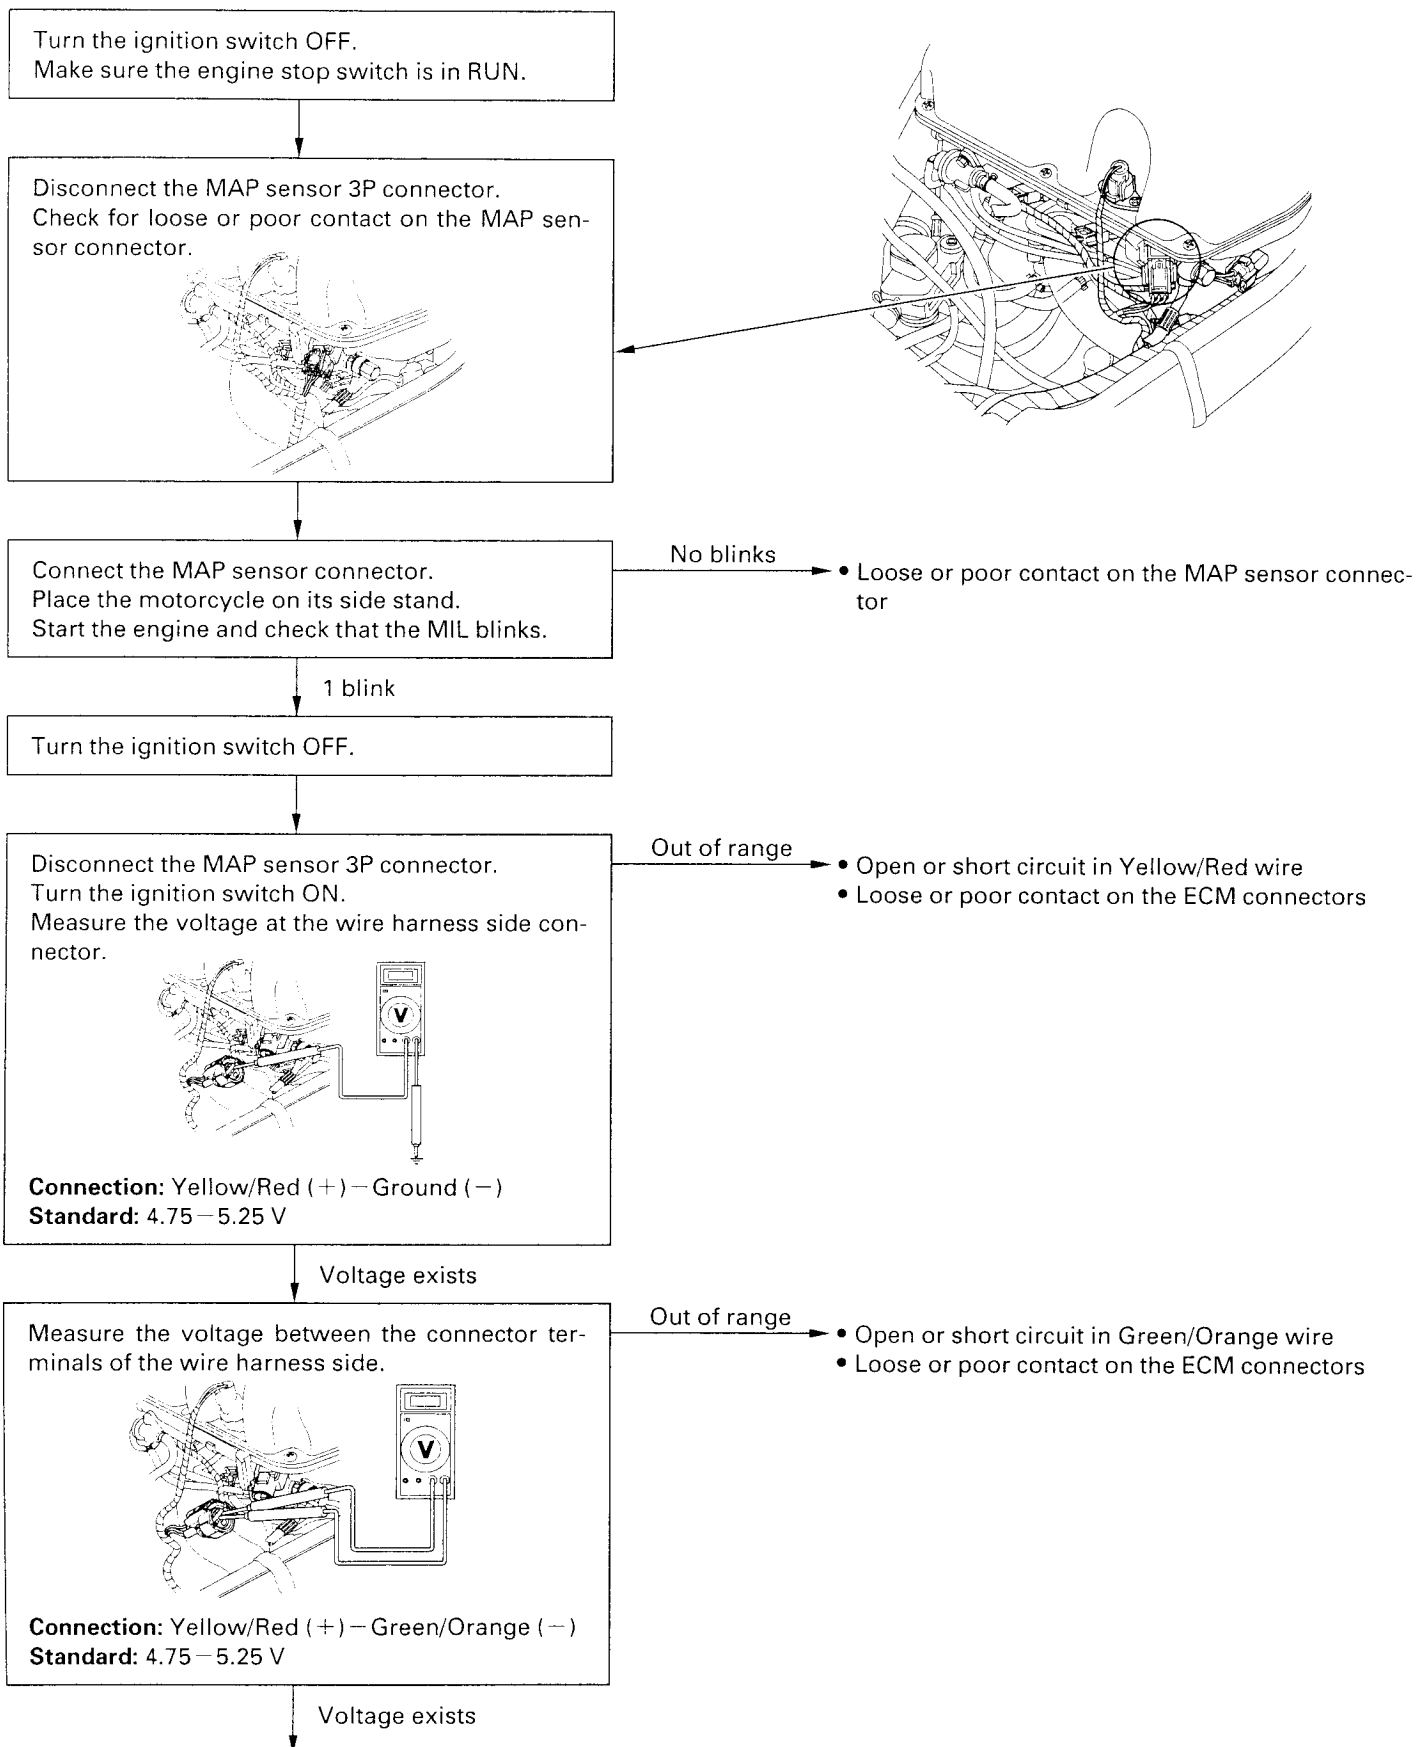

**FUEL SYSTEM (Programmed Fuel Injection)**

Measure the voltage between the terminals of the wire harness side.

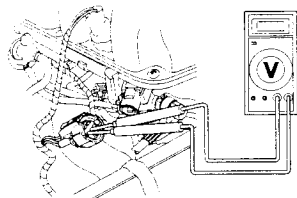**Connection:**

Light green/Yellow (+) – Green/Orange (–)


**Standard:** 4.75 – 5.25 V

Out of range →


- Open or short circuit in Light green/Yellow wire
- Loose or poor contact on the ECM connectors

Voltage exists


Turn the ignition switch OFF.  
Connect the MAP sensor 3P connector.

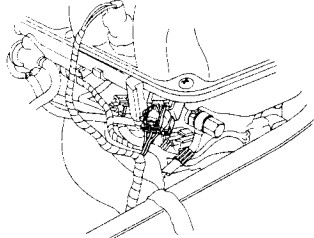

Disconnect the ECM connectors.  
Connect the test harness to ECM connectors.  
Turn the ignition switch ON.

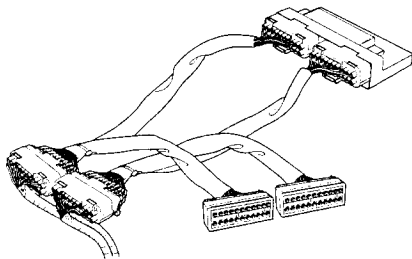

Measure the voltage at the test harness terminals (page 5-9).

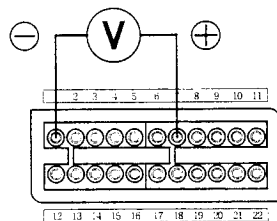

**Connection:** B7 (+) – B1 (–)

**Standard:** 2.7 – 3.1 V (760 mm Hg/1,013 kPa)

Out of range →

- Faulty MAP sensor

Voltage exists →


- Replace the ECM with a new one, and inspect it again

## FUEL SYSTEM (Programmed Fuel Injection)

### PGM-FI MIL 2 BLINKS (MAP SENSOR)

Turn the ignition switch OFF.

Disconnect the vacuum tube from the MAP sensor.  
Connect the vacuum gauge between the throttle body and the MAP sensor using a 3-way joint.  
Start the engine and measure the manifold absolute pressure at idle speed.

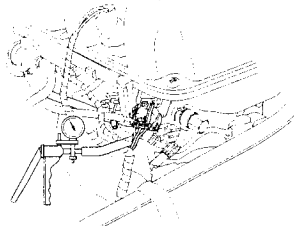


**Standard:** 150 – 250 mm Hg


Out of range →


• Check the tube installation

Disconnect the vacuum gauge and connect the tube to the MAP sensor.

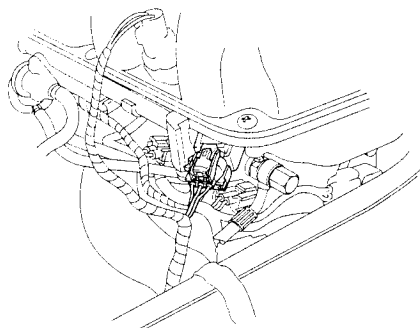

Disconnect the ECM connectors.  
Connect the test harness to the ECM connector.

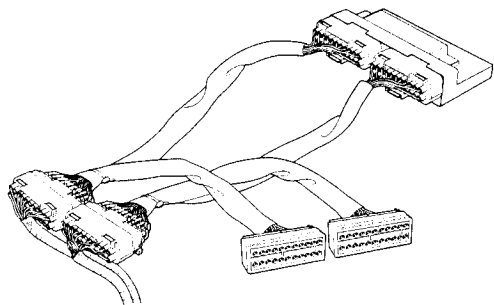


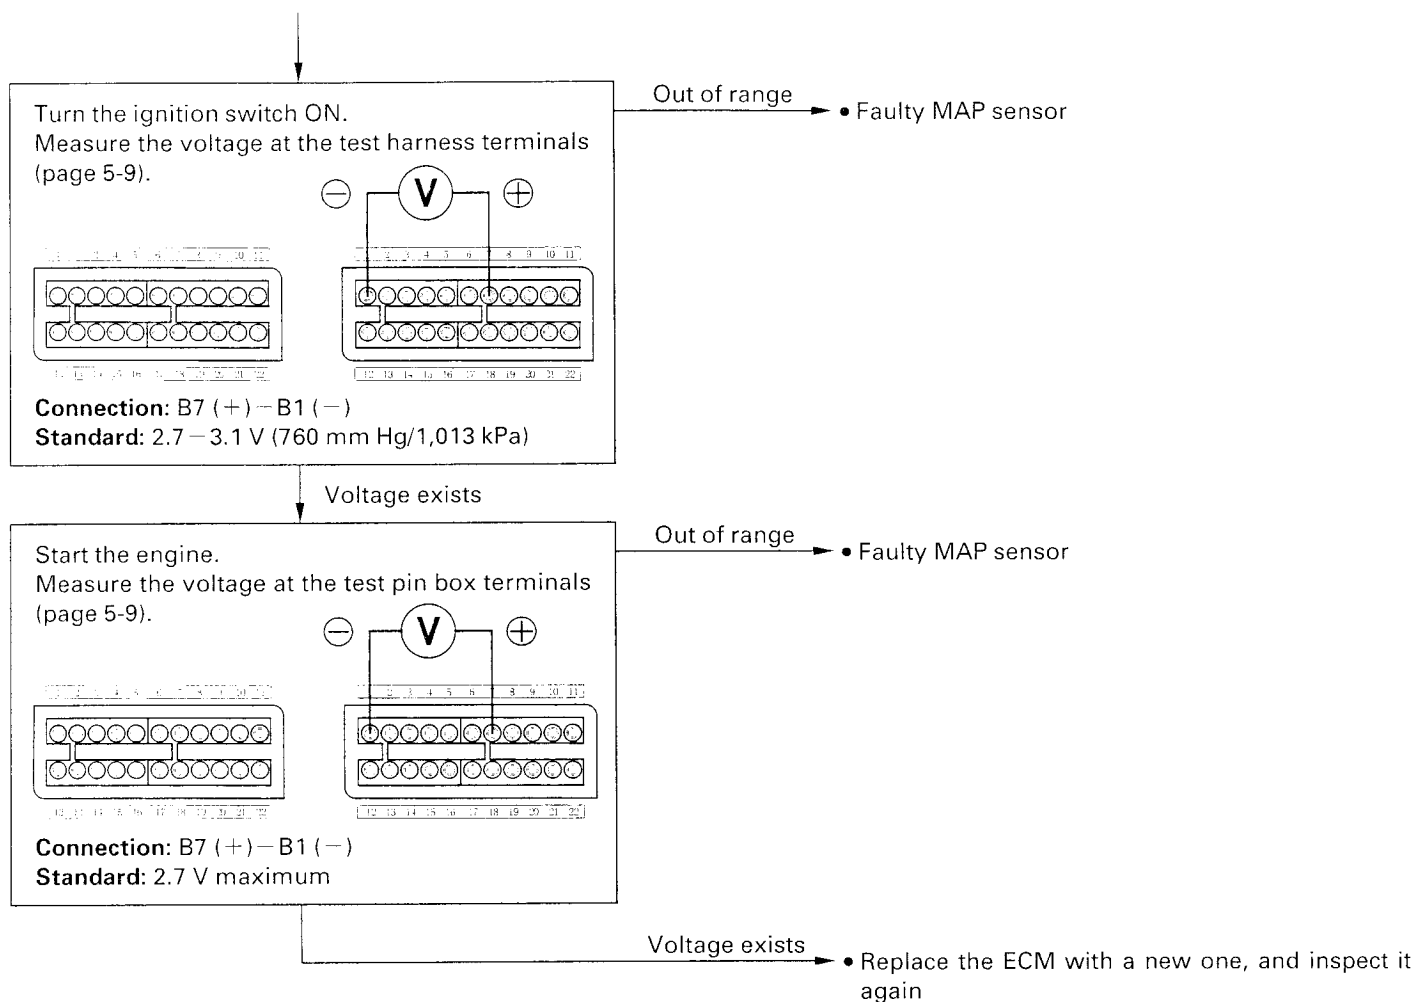
**FUEL SYSTEM (Programmed Fuel Injection)**

## FUEL SYSTEM (Programmed Fuel Injection)


### PGM-FI MIL 7 BLINKS (ECT SENSOR)

Turn the ignition switch OFF.

Disconnect the ECT sensor 3P connector.  
Check for loose or poor contact on the ECT sensor connector.

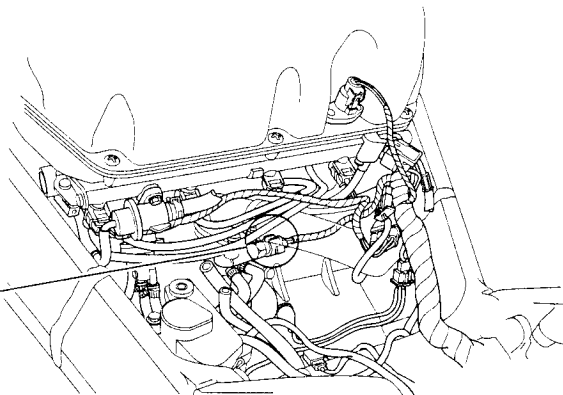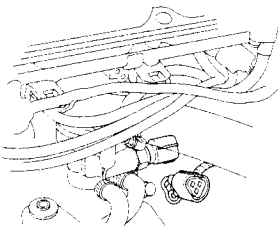

Connect the ECT sensor connector.  
Place the motorcycle on its side stand.  
Turn the ignition switch ON.

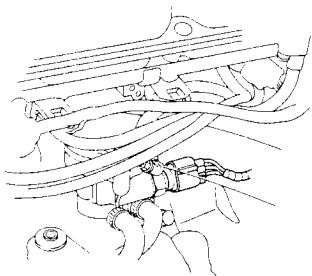

Check that the MIL blinks.

No blinks


- Loose or poor contact on the ECT sensor connector

7 blinks

Abnormal

- Faulty ECT sensor

Turn the ignition switch OFF.  
Disconnect the ECT sensor connector.  
Measure the resistance at the ECT sensor terminals.

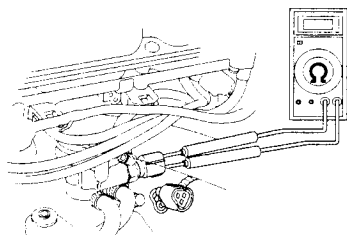


**Connection:** Pink/White (+) – Green/Orange (–)  
(sensor side terminals)

**Standard:** 2.3 – 2.6 k $\Omega$  (20°C/68°F)

Normal




## FUEL SYSTEM (Programmed Fuel Injection)

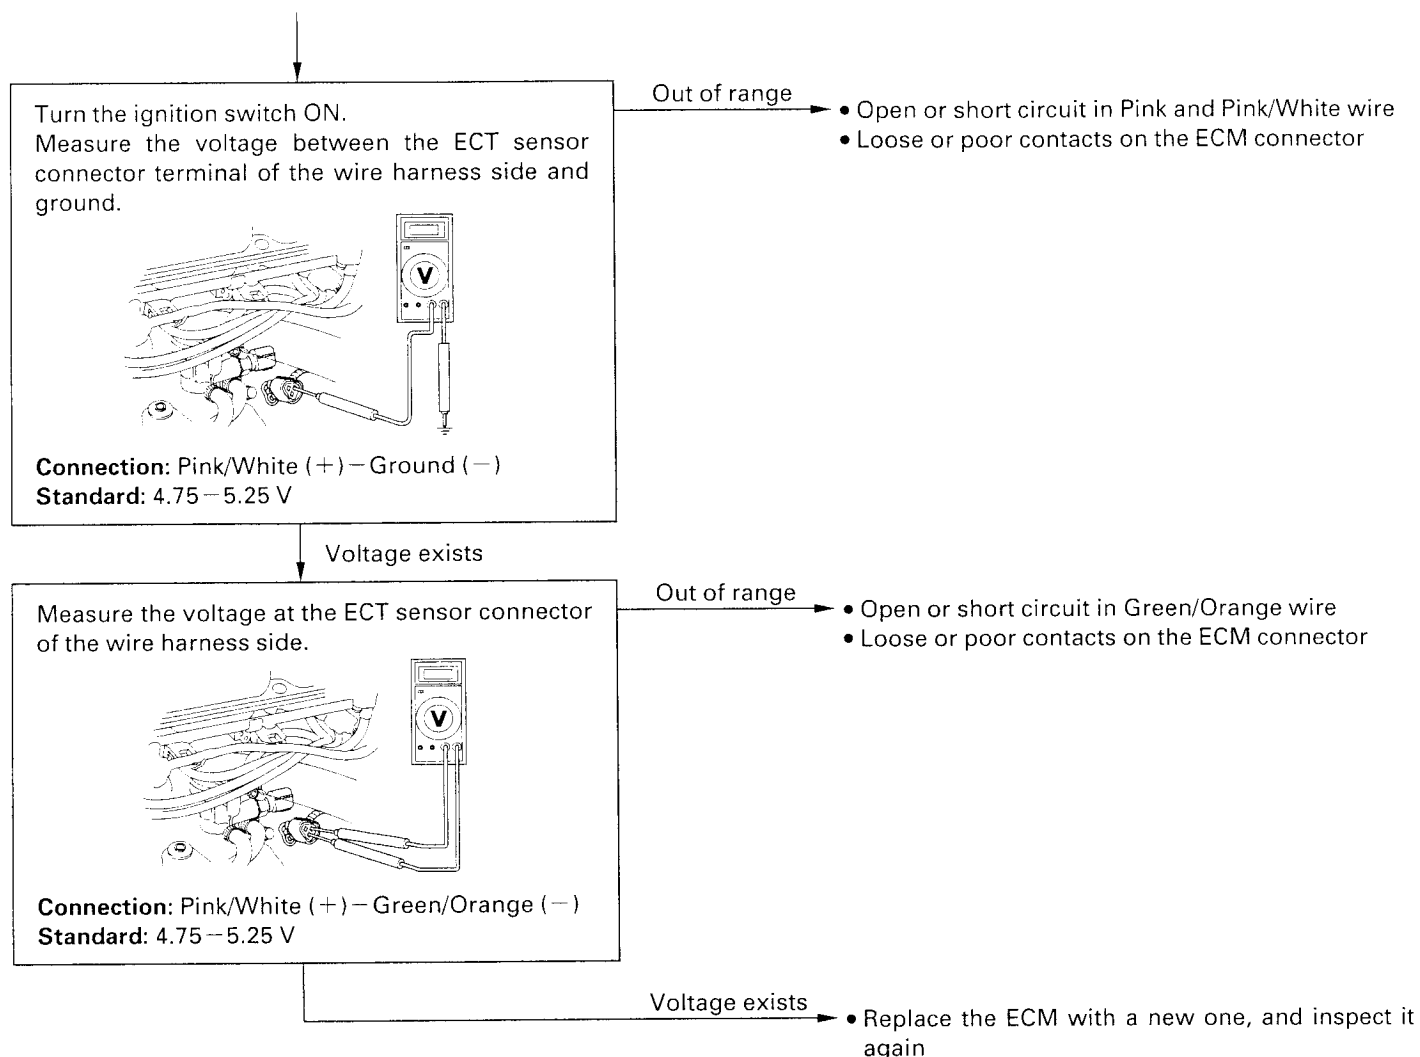


## FUEL SYSTEM (Programmed Fuel Injection)

### PGM-FI MIL 8 BLINKS (TP SENSOR)

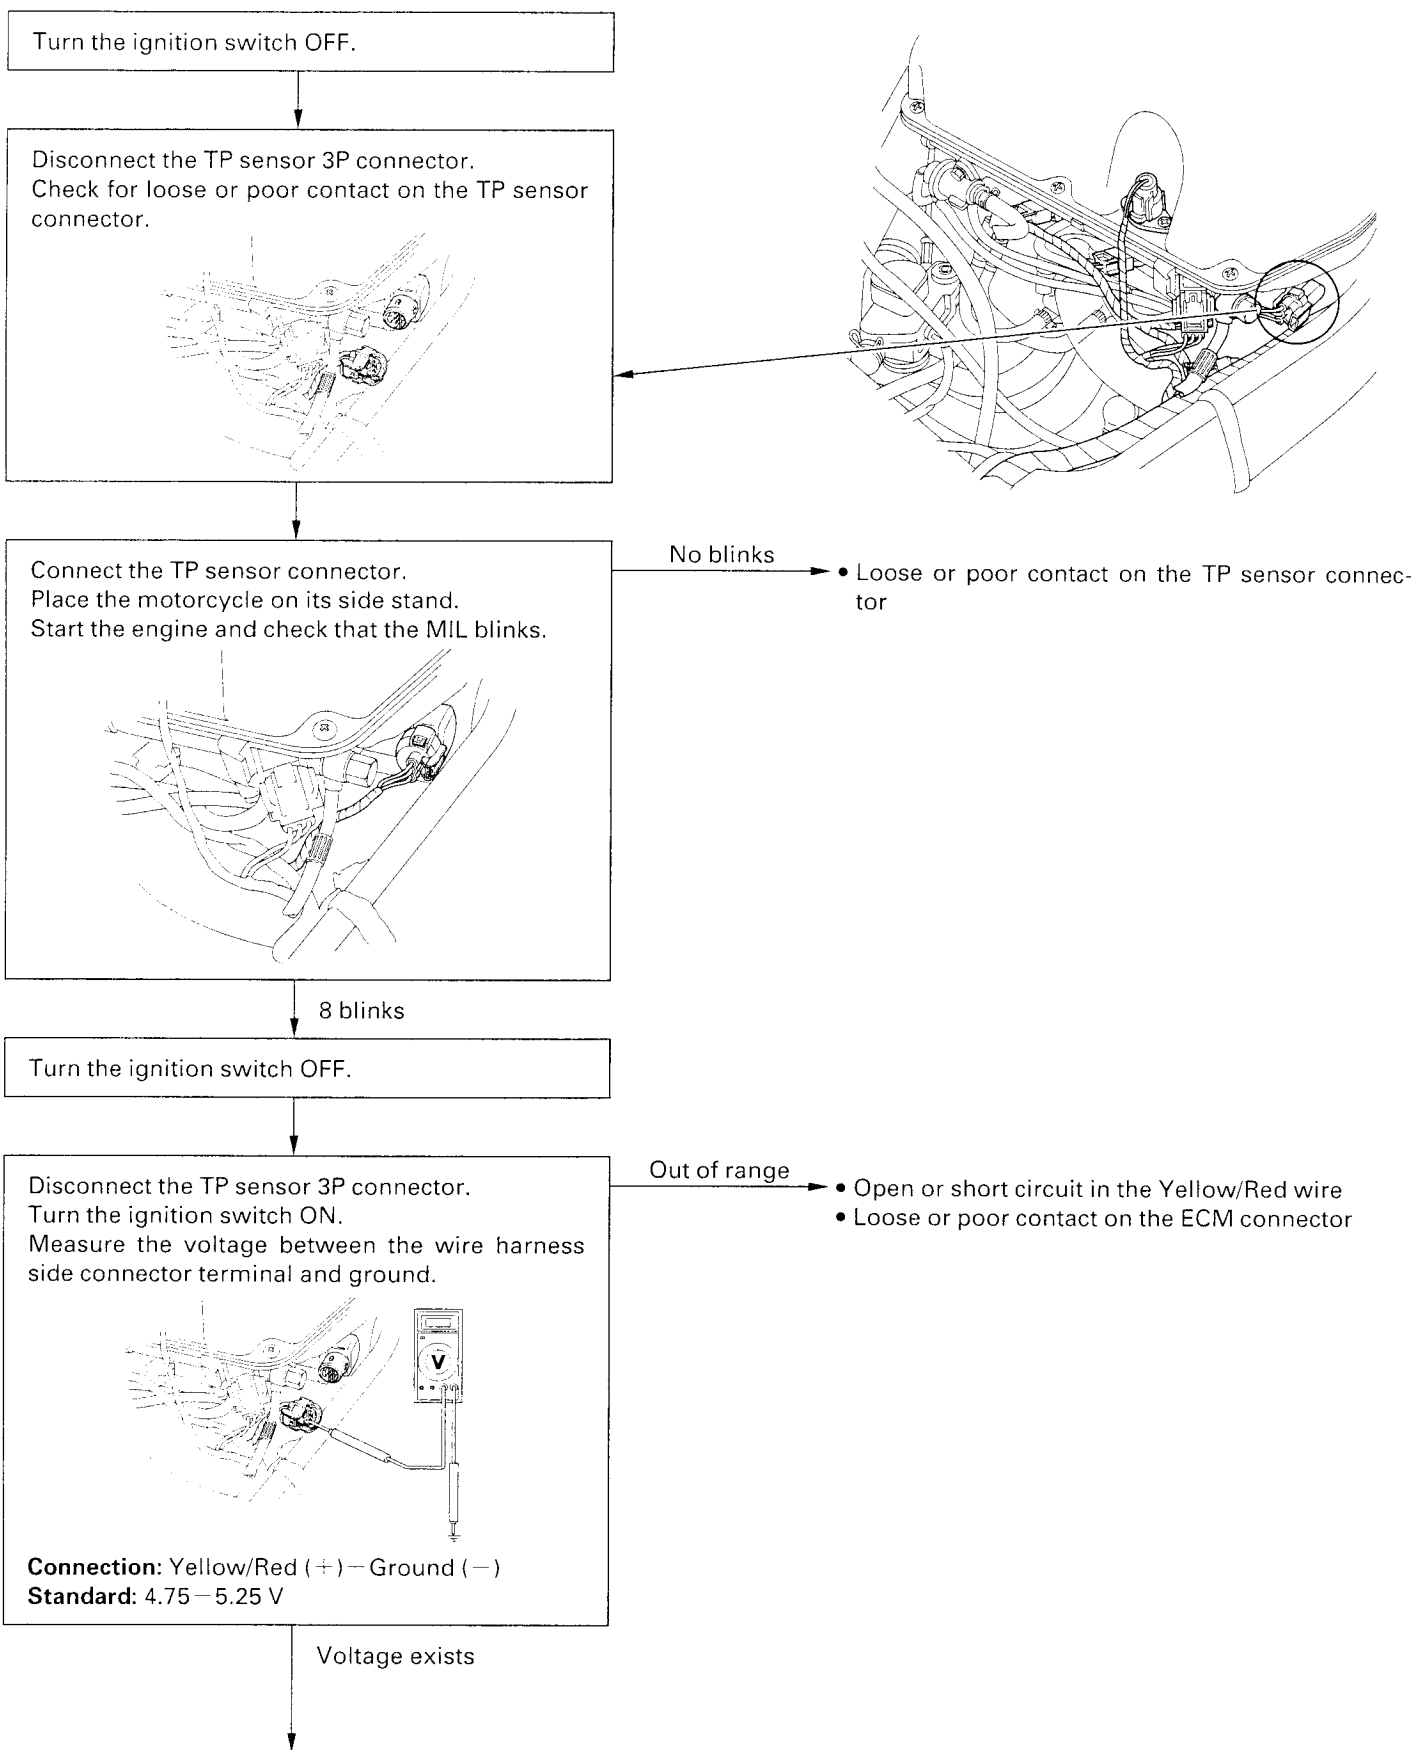


## FUEL SYSTEM (Programmed Fuel Injection)

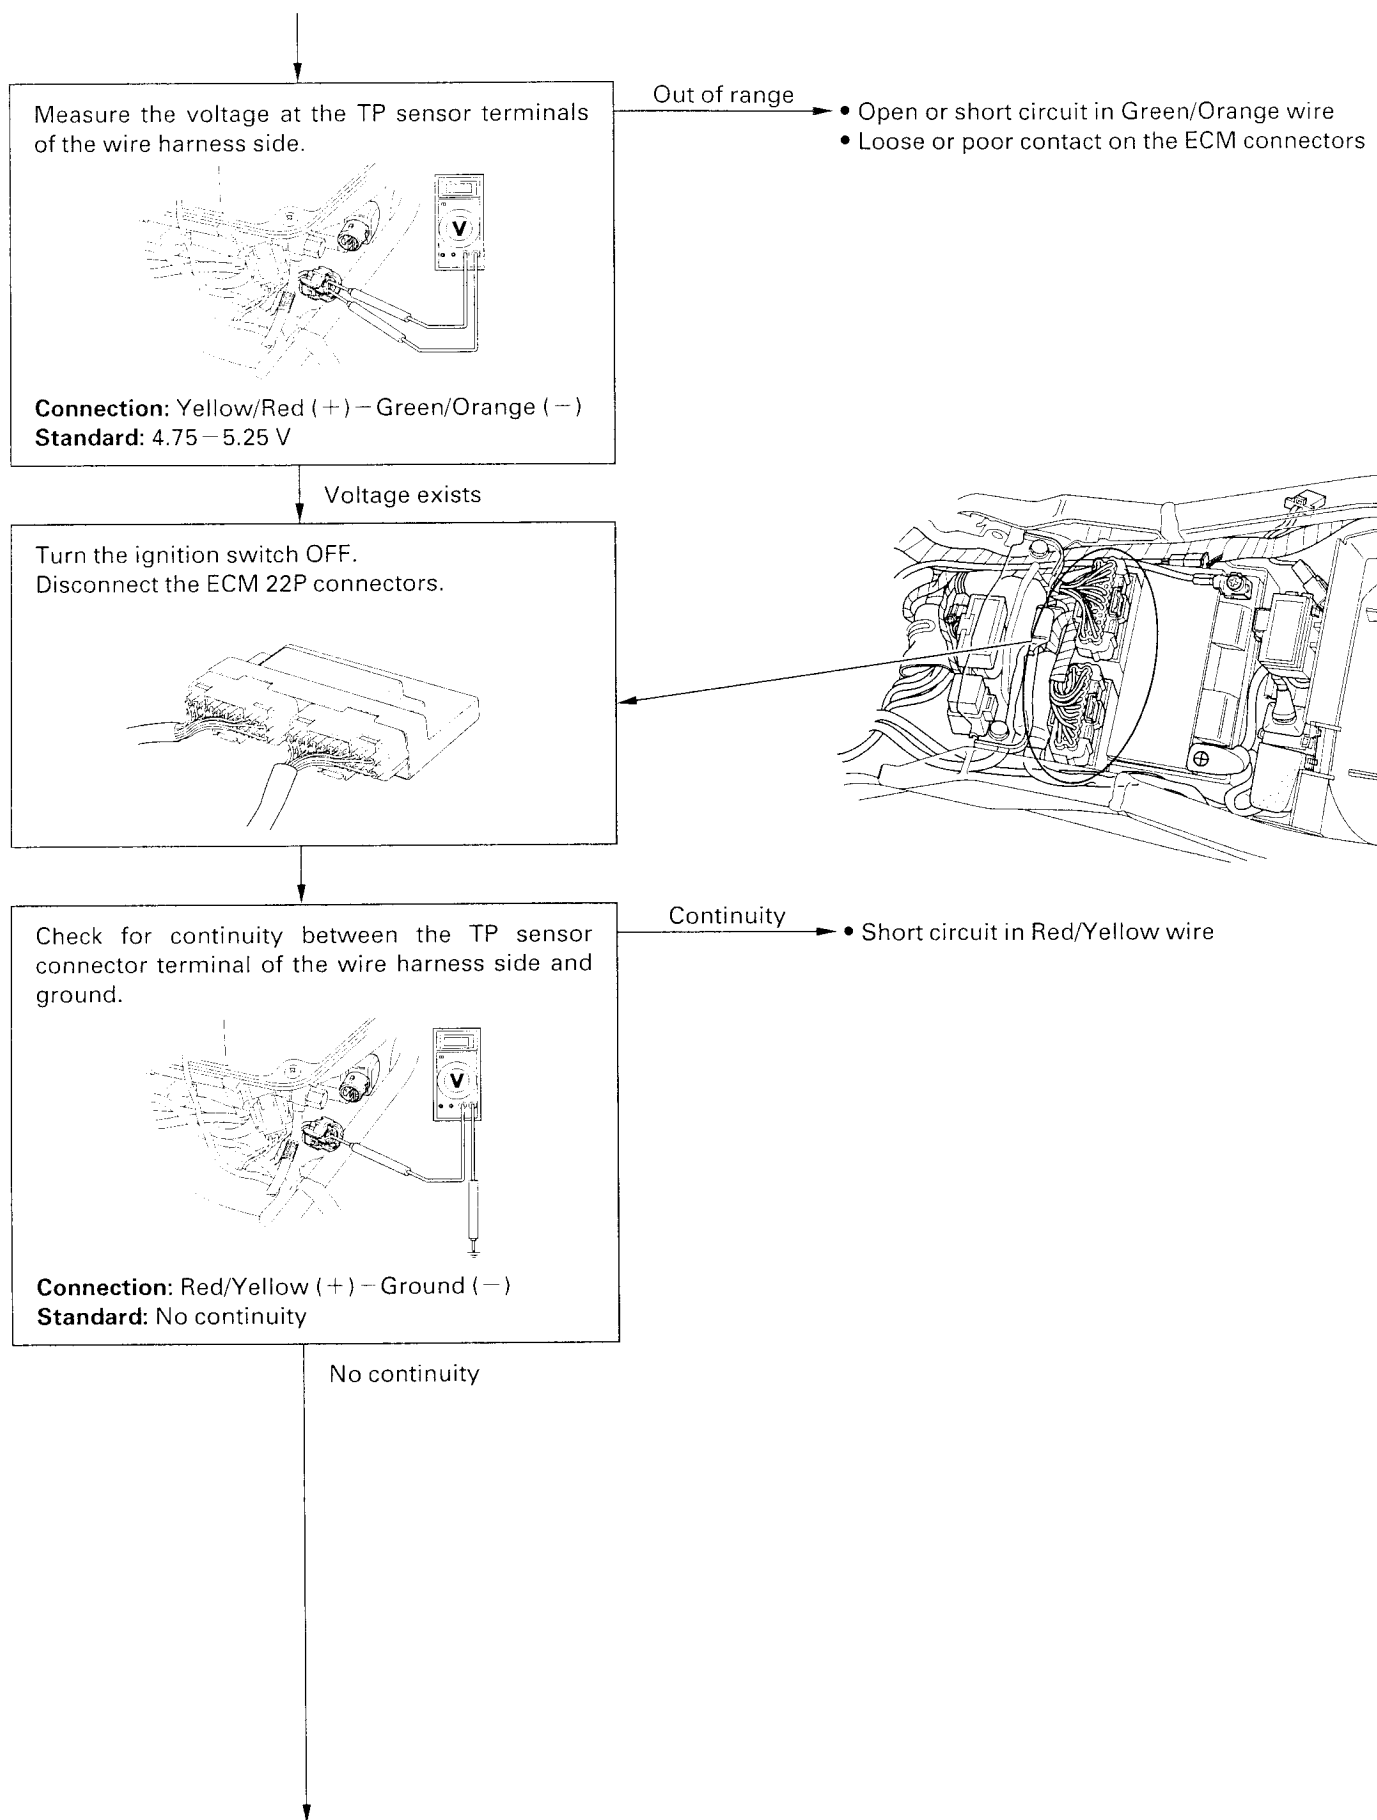

## FUEL SYSTEM (Programmed Fuel Injection)


Connect the test harness to the ECM connectors.

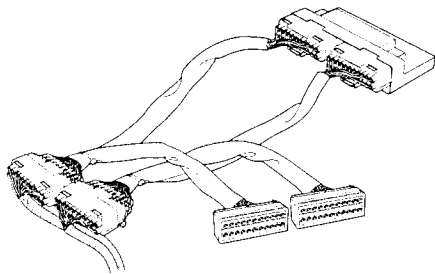

Check for continuity between the test harness terminal and the TP sensor connector terminal.

No continuity


• Open or short circuit in Red/Yellow wire

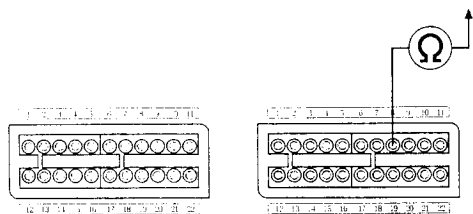

**Connection:** Red/Yellow – B8  
**Standard:** Continuity

Continuity


Connect the TP sensor 3P connector.

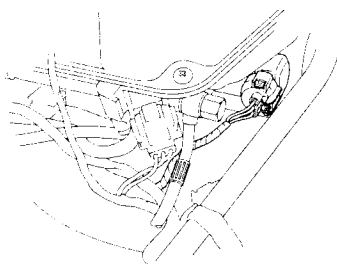

Turn the ignition switch ON.  
Measure the voltage at the test harness terminals.

Normal

• Replace the ECM with a new one, and inspect it again.

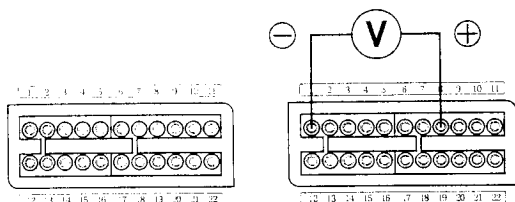

**Connection:** B8 (+) – B1 (–)  
**Standard:** \*0.4 – 0.6 V (throttle fully closed)  
\*4.2 – 4.8 V (throttle fully open)

Out of range

• Faulty TP sensor

## FUEL SYSTEM (Programmed Fuel Injection)

---

A voltage marked \* refers to the value when the voltage reading at the TP sensor 3P connector (page 5-19) shows 5 V.  
When the reading shows other than 5 V, derive a voltage at the test harness as follows:

In the case of a voltage of 4.75 V at the TP sensor 3P connector:

$$0.4 \times 4.75/5.0 = 0.38 \text{ V}$$

$$0.6 \times 4.75/5.0 = 0.57 \text{ V}$$


Thus, the solution is "0.38—0.57 V" with the throttle fully closed.

Replace 0.4 and 0.6 with 4.2 and 4.8, respectively, in the above equations to determine the throttle fully open range.




## FUEL SYSTEM (Programmed Fuel Injection)

### PGM-FI MIL 9 BLINKS (IAT SENSOR)

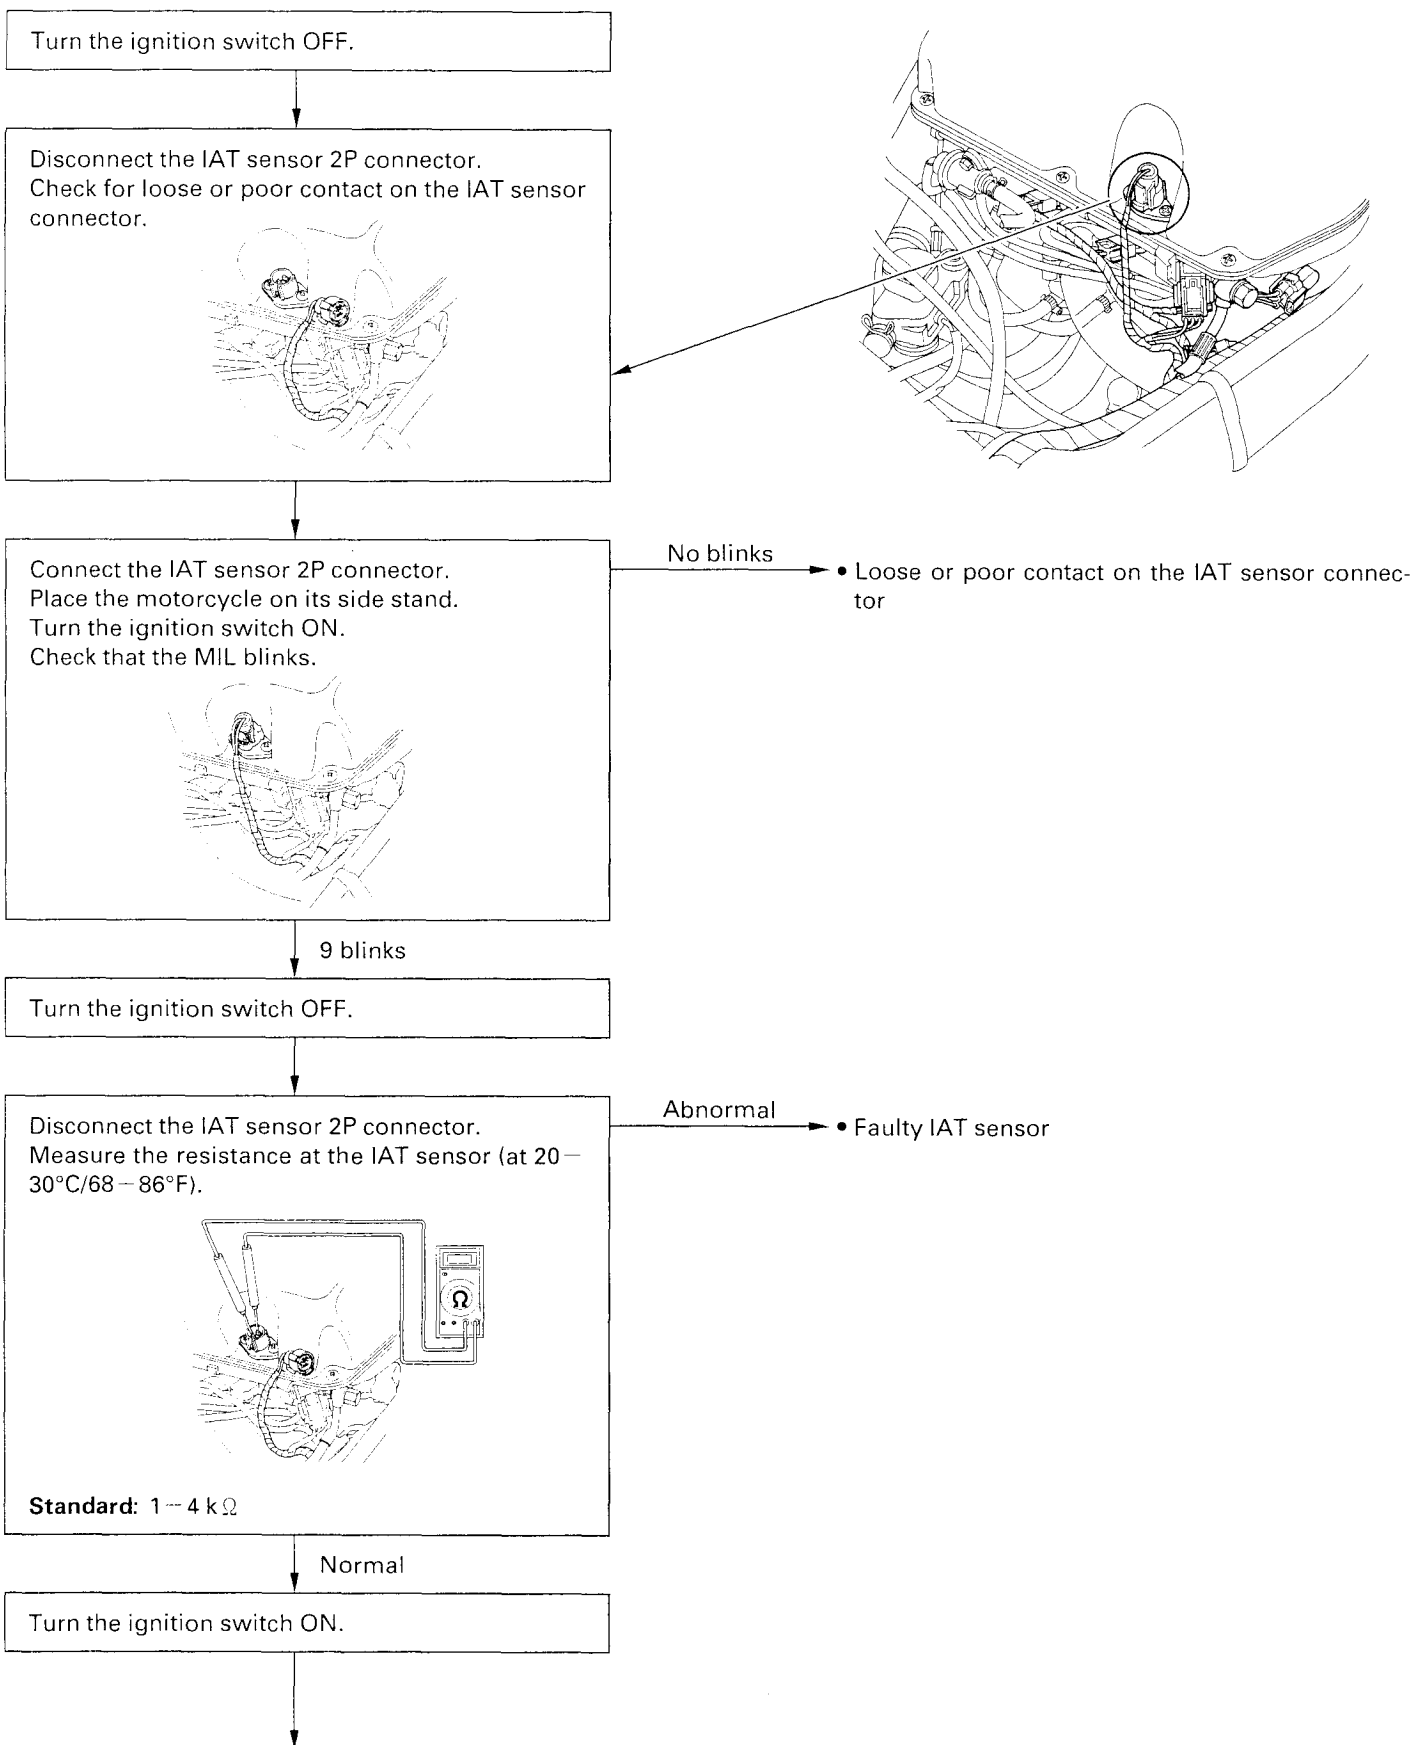


## FUEL SYSTEM (Programmed Fuel Injection)

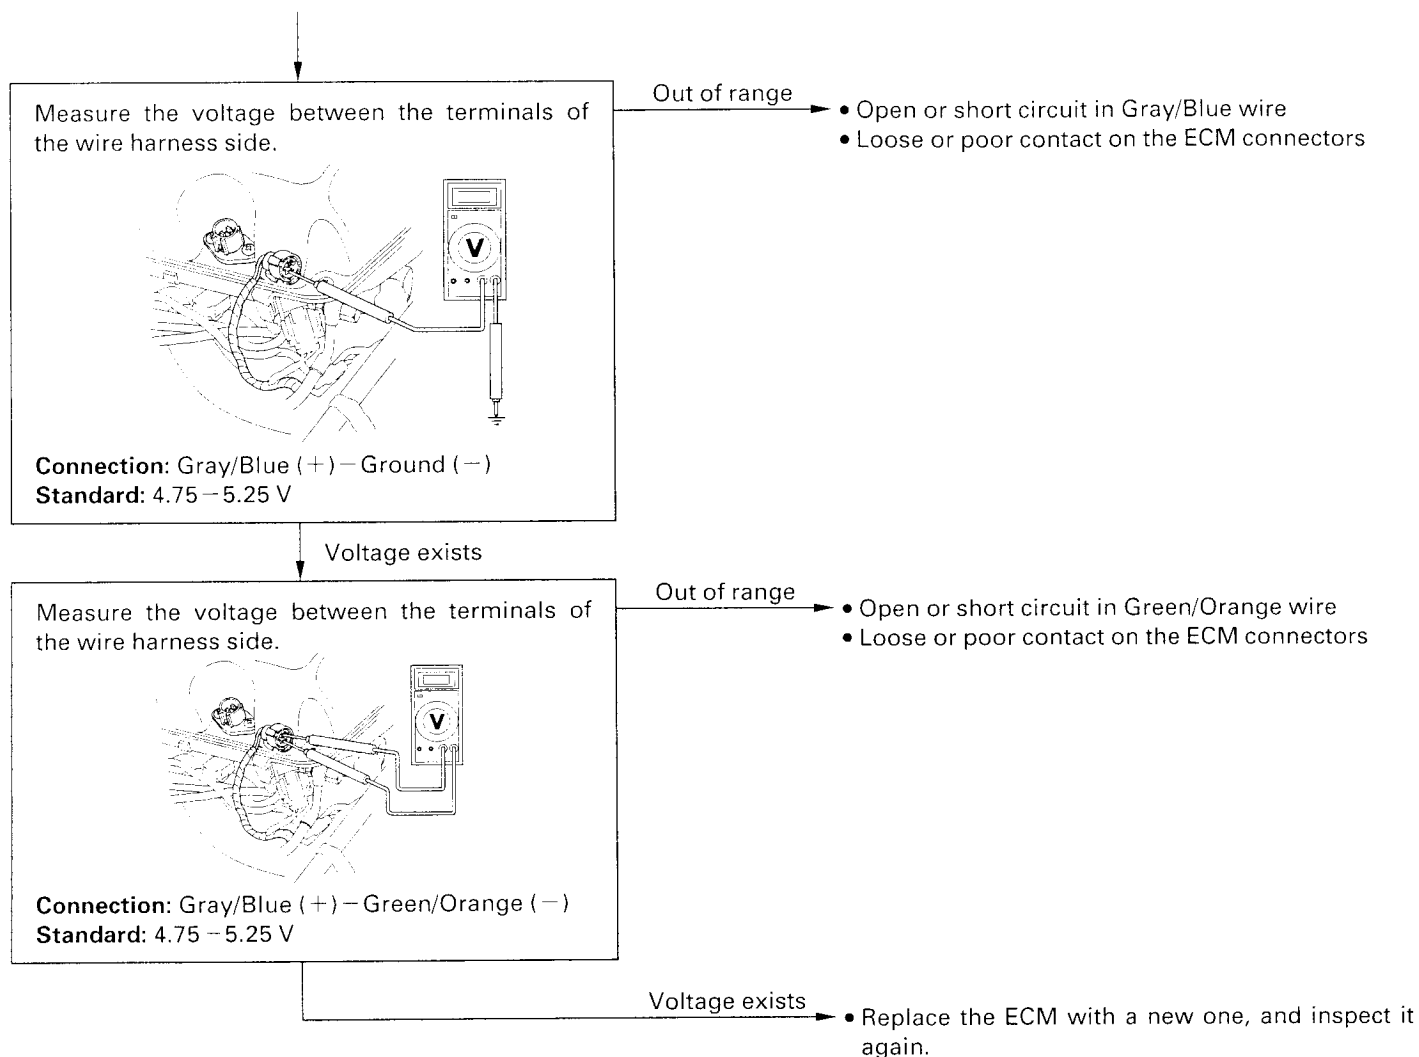


## FUEL SYSTEM (Programmed Fuel Injection)

### PGM-FI MIL 11 BLINKS (VEHICLE SPEED SENSOR)

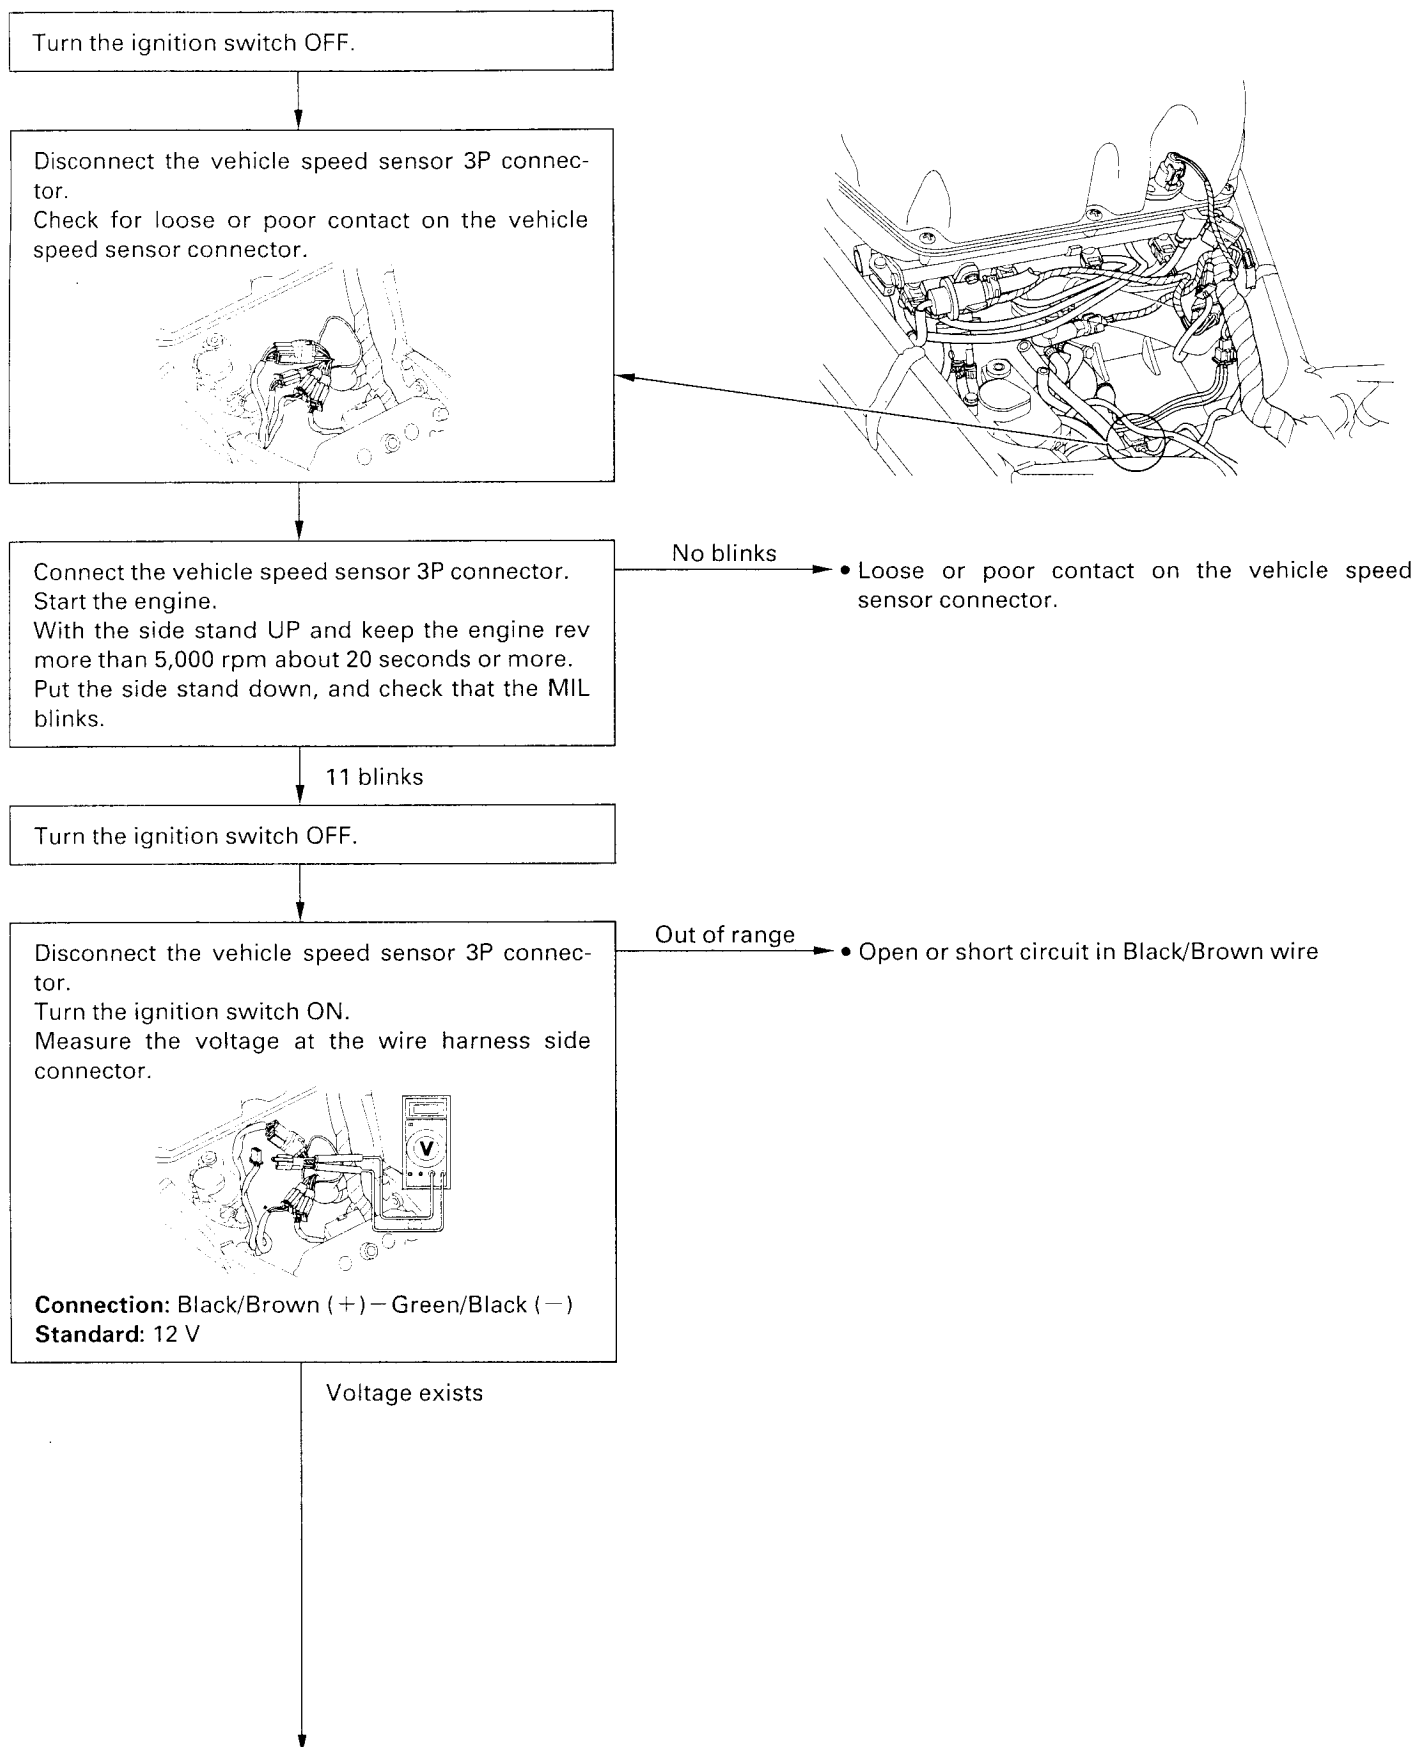


## FUEL SYSTEM (Programmed Fuel Injection)


Connect the speed sensor 3P connector.

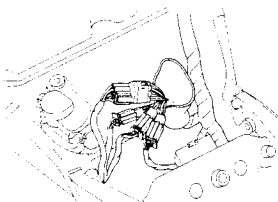

Disconnect the ECM connectors.  
Connect the test harness to the wire harness connectors.

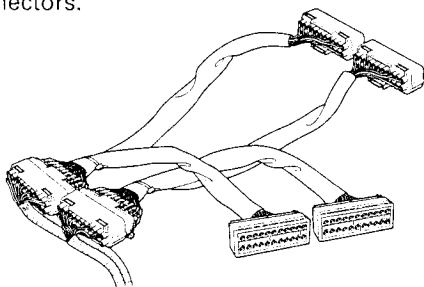

Support the motorcycle securely and place the rear wheel off the ground.  
Shift the transmission into neutral.  
Measure the voltage at the test harness terminals with the ignition switch is ON while slowly turning the rear wheel by hand.

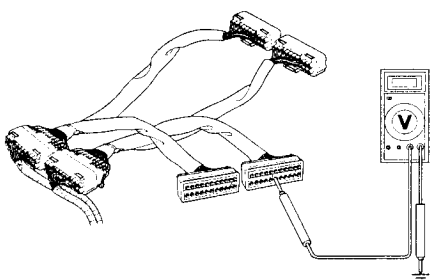

**CONNECTION:** B17 (+) - Ground (-)

**STANDARD:** Repeat 0 to 5V

Abnormal

- Open or short circuit in Pink/Green wire

Normal



- Replace the ECM with a new one, and inspect it again.

## FUEL SYSTEM (Programmed Fuel Injection)


### PGM-FI MIL 12 BLINKS (NO. 1 INJECTOR)

Turn the ignition switch OFF.

Disconnect the No. 1 injector 2P connector.  
Check for loose or poor contact on the No. 1 injector 2P connector.

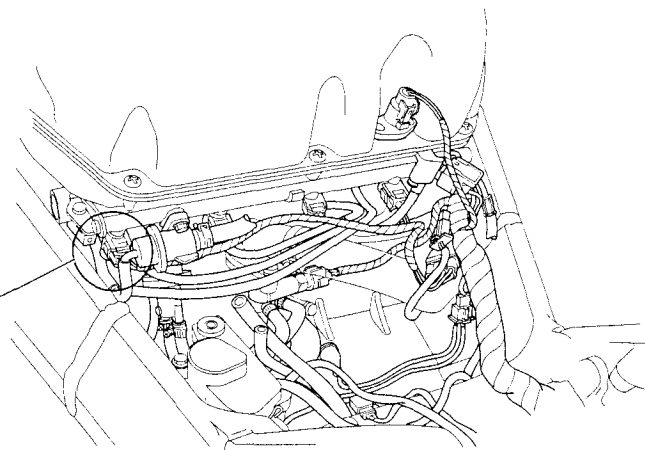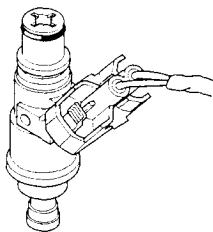

Connect the No. 1 injector 2P connector.  
Place the motorcycle on its side stand.  
Turn the ignition switch ON.  
Check that the MIL blinks.

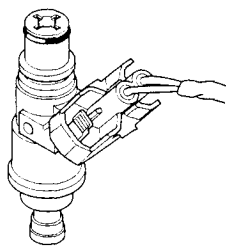


No blinks

• Loose or poor contact on the No. 1 injector connector

12 blinks

Turn the ignition switch OFF.  
Disconnect the No. 1 injector 2P connector and measure the resistance of the No. 1 injector.

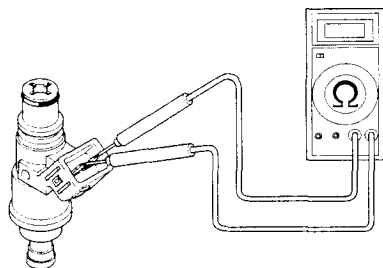

Abnormal


• Faulty No. 1 injector

**Connection:** Black/White (+) – Pink/Yellow (–)  
**Standard:** 11.1 – 12.3  $\Omega$  (20°C/68°F)

Normal

## FUEL SYSTEM (Programmed Fuel Injection)

Check for continuity between the No. 1 injector and ground.

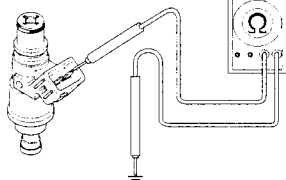


**Connection:** Black/White (+) – Ground (–)  
**Standard:** No continuity

Continuity →

• Faulty No. 1 injector

No continuity ↓

Turn the ignition switch ON.  
Measure the voltage between the No. 1 injector connector of the wire harness side and ground.

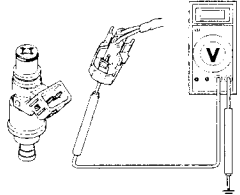


**Connection:** Black/White (+) – Ground (–)  
**Standard:** Battery voltage

Out of range →


• Open or short circuit in Black/White wire

Voltage exists ↓

Turn the ignition switch OFF.  
Connect the No. 1 injector connector.

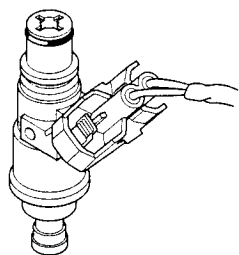


Disconnect the ECM connectors.  
Connect the test harness to the wire harness connectors.

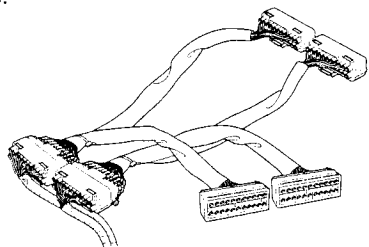



## FUEL SYSTEM (Programmed Fuel Injection)


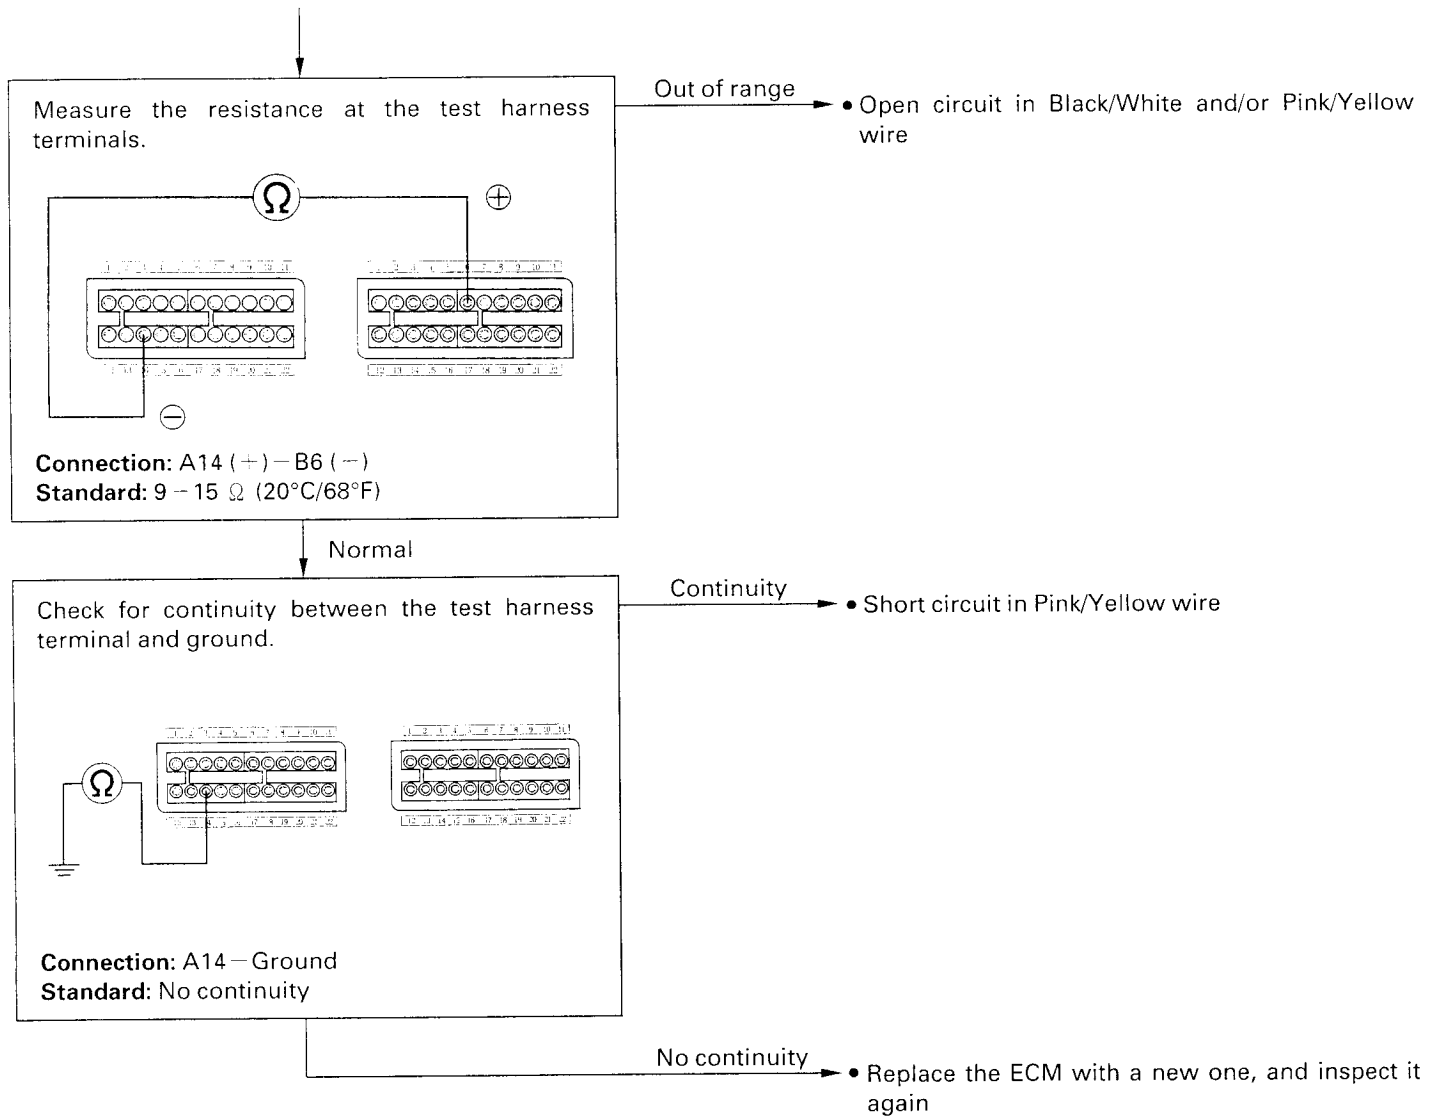


## FUEL SYSTEM (Programmed Fuel Injection)


### PGM-FI MIL 13 BLINKS (NO. 2 INJECTOR)

Turn the ignition switch OFF.

Disconnect the No. 2 injector 2P connector.  
Check for loose or poor contact on the No. 2 injector 2P connector.

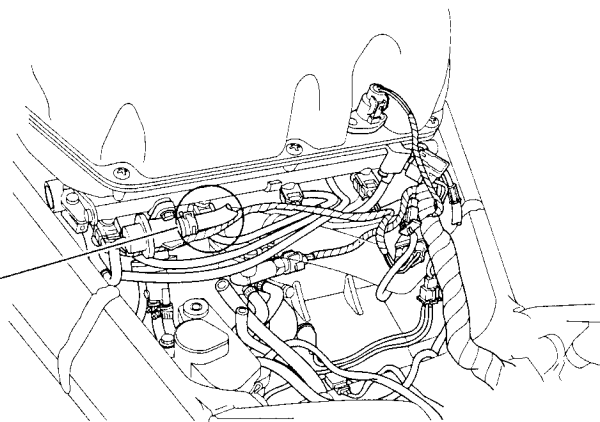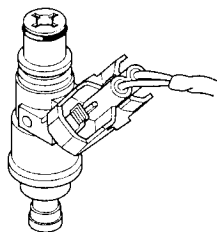

Connect the No. 2 injector 2P connector.  
Place the motorcycle on its side stand.  
Turn the ignition switch ON.  
Check that the MIL blinks.

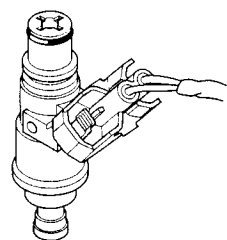


No blinks

- Loose or poor contact on the No. 2 injector connector

13 blinks

Turn the ignition switch OFF.  
Disconnect the No. 2 injector 2P connector and measure the resistance of the No. 2 injector.

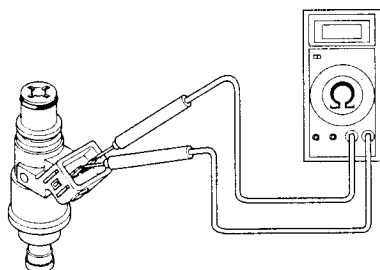

Abnormal


- Faulty No. 2 injector

**Connection:** Black/White (+) – Pink/Blue (–)  
**Standard:** 11.1 – 12.3  $\Omega$  (20°C/68°F)

Normal

## FUEL SYSTEM (Programmed Fuel Injection)

Check for continuity between the No. 2 injector and ground.

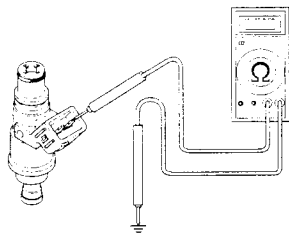


**Connection:** Black/White (+) -- Ground (-)  
**Standard:** No continuity

Continuity →

• Faulty No. 2 injector

No continuity ↓

Turn the ignition switch ON.  
Measure the voltage between the No. 2 injector connector of the wire harness side and ground.

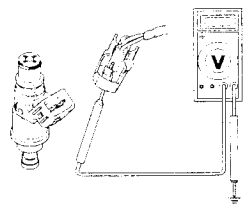


**Connection:** Black/White (+) -- Ground (-)  
**Standard:** Battery voltage

Out of range →


• Open or short circuit in Black/White wire

Voltage exists ↓


Turn the ignition switch OFF.  
Connect the No. 2 injector connector.

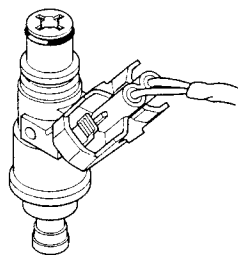

Disconnect the ECM connectors.  
Connect the test harness to the wire harness connectors.

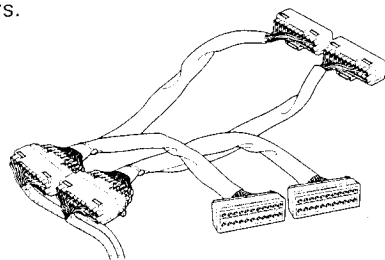

## FUEL SYSTEM (Programmed Fuel Injection)


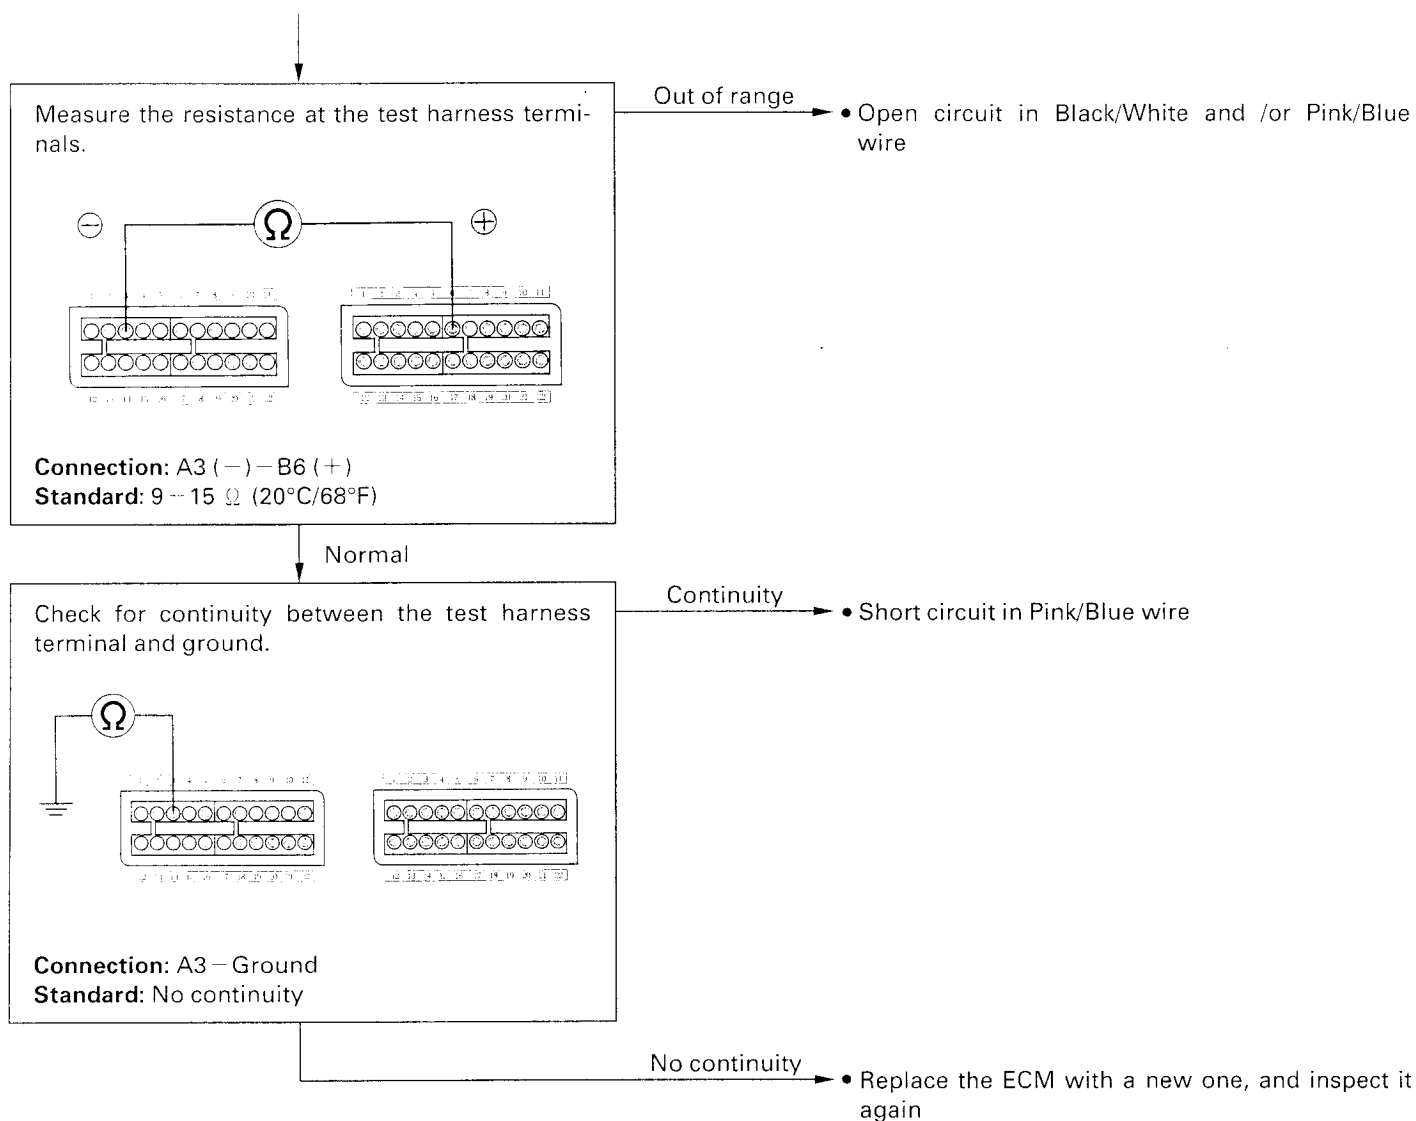


## FUEL SYSTEM (Programmed Fuel Injection)


### PGM-FI MIL 14 BLINKS (NO. 3 INJECTOR)

Turn the ignition switch OFF.

Disconnect the No. 3 injector 2P connector.  
Check for loose or poor contact on the No. 3 injector 2P connector.

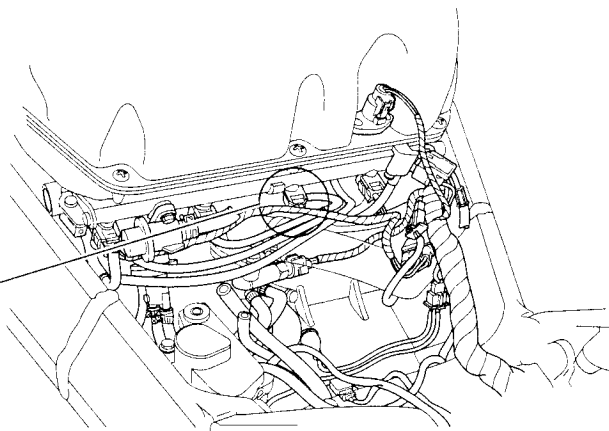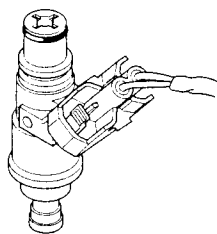

Connect the No. 3 injector 2P connector.  
Place the motorcycle on its side stand.  
Turn the ignition switch ON.  
Check that the MIL blinks.

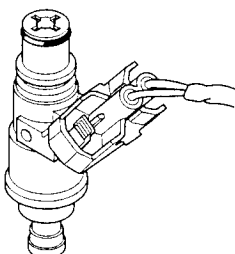


No blinks

- Loose or poor contact on the No. 3 injector connector

14 blinks

Turn the ignition switch OFF.  
Disconnect the No. 3 injector 2P connector and measure the resistance of the No. 3 injector.

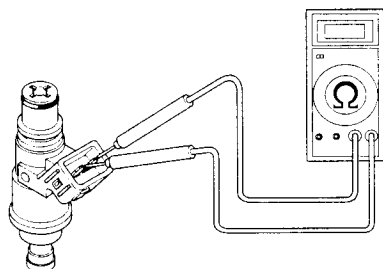

Abnormal


- Faulty No. 3 injector

**Connection:** Black/White (+) – Pink/Green (–)  
**Standard:** 11.1 – 12.3  $\Omega$  (20°C/68°F)

Normal

## FUEL SYSTEM (Programmed Fuel Injection)

Check for continuity between the No. 3 injector and ground.

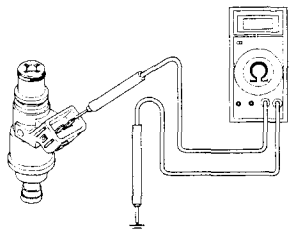

**Connection:** Black/White (+) – Ground (–)


**Standard:** No continuity

Continuity

• Faulty No. 3 injector.

No continuity

Turn the ignition switch ON.  
Measure the voltage between the No. 3 injector connector of the wire harness side and ground.

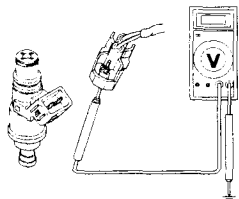

**Connection:** Black/White (+) – Ground (–)


**Standard:** Battery voltage

Out of range


• Open or short circuit in Black/White wire

Voltage exists

Turn the ignition switch OFF.  
Connect the No. 3 injector connector.

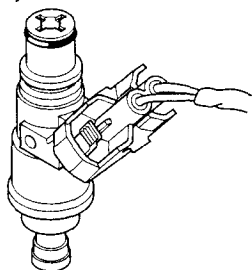


Disconnect the ECM connectors.  
Connect the test harness to the wire harness connectors.

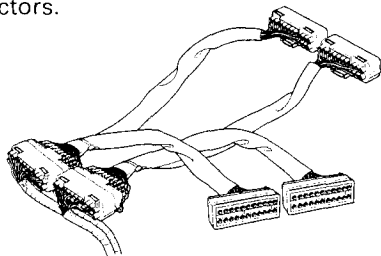





## FUEL SYSTEM (Programmed Fuel Injection)

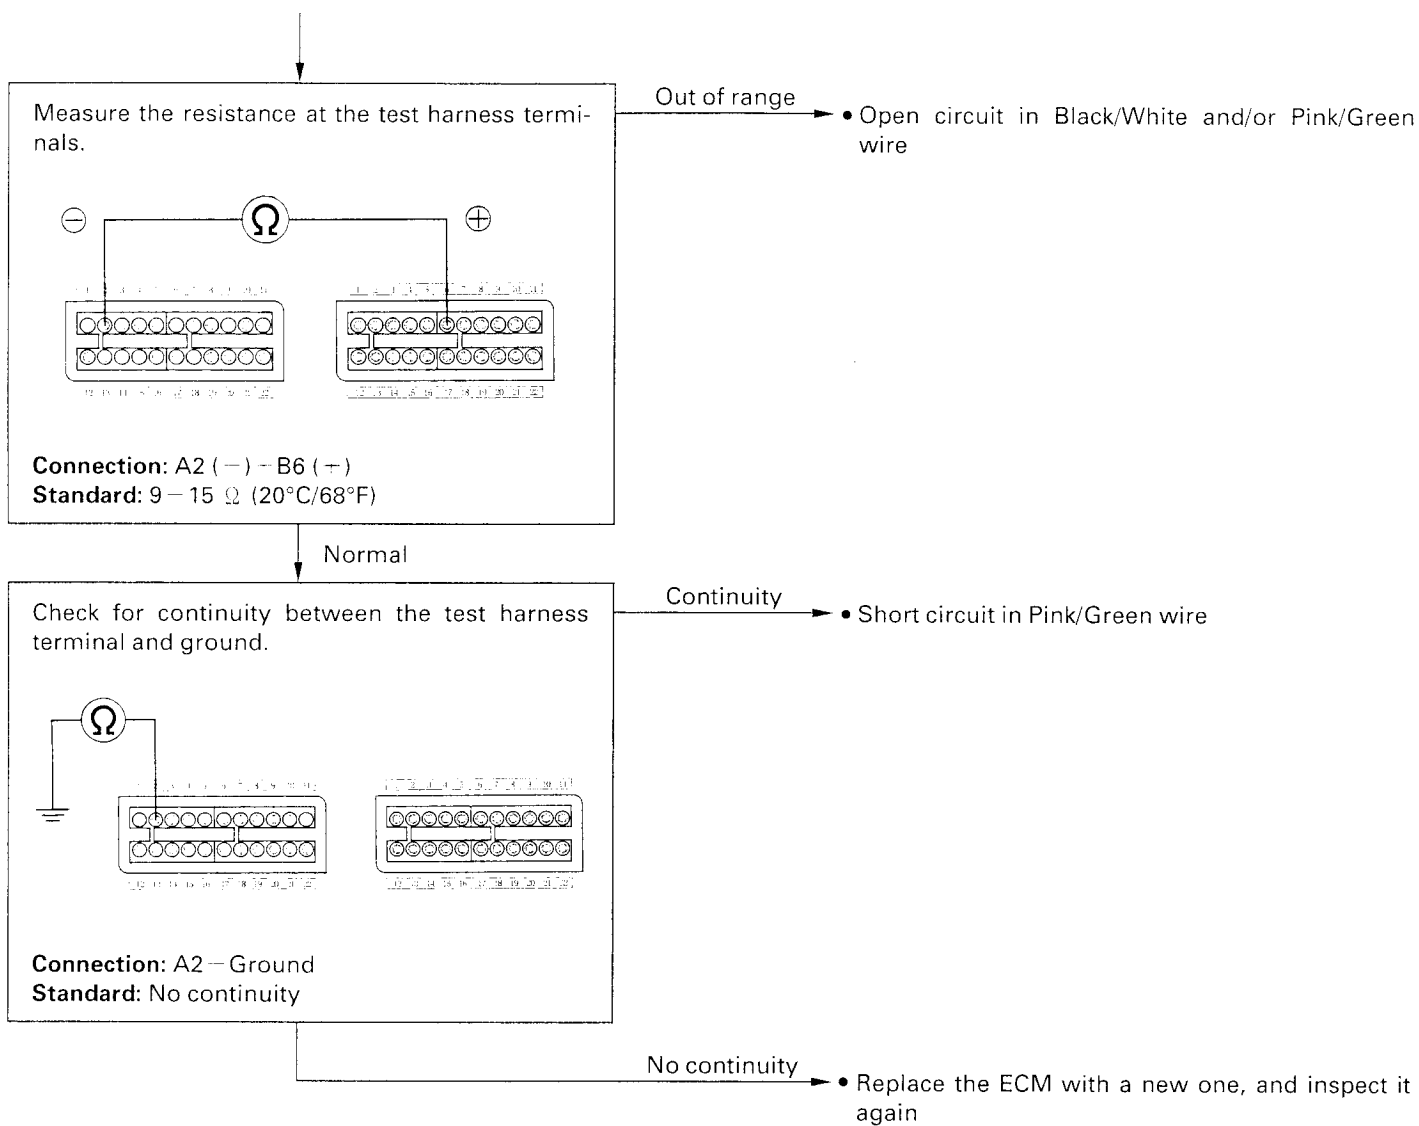


## PGM-FI MIL 15 BLINKS (NO. 4 INJECTOR)

Turn the ignition switch OFF.

Disconnect the No. 4 injector 2P connector.  
Check for loose or poor contact on the No. 4 injector 2P connector.

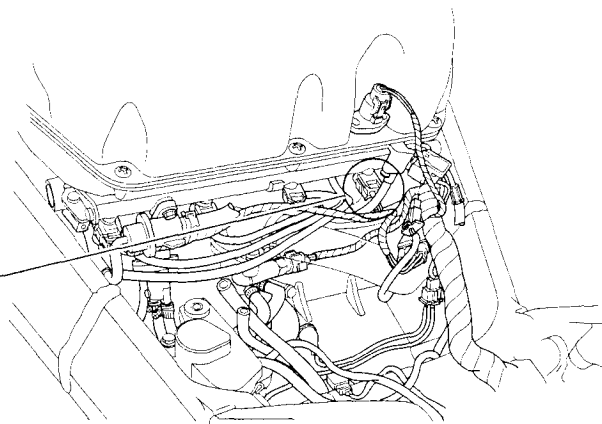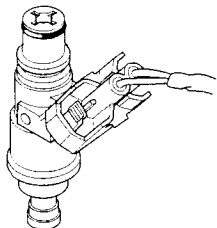

Connect the No. 4 injector 2P connector.  
Place the motorcycle on its side stand.  
Turn the ignition switch ON.  
Check that the MIL blinks.

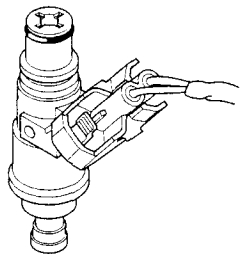


No blinks

• Loose or poor contact on the No. 4 injector connector

15 blinks

Turn the ignition switch OFF.  
Disconnect the No. 4 injector 2P connector and measure the resistance of the No. 4 injector.

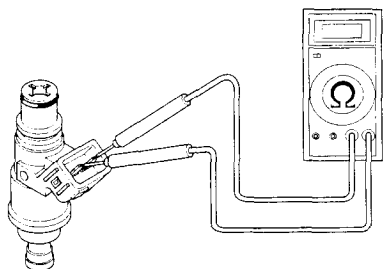


Abnormal

• Faulty No. 4 injector


**Connection:** Black/White (+) – Pink/Black (–)  
**Standard:** 11.1 – 12.3  $\Omega$  (20°C/68°F)

Normal

## FUEL SYSTEM (Programmed Fuel Injection)

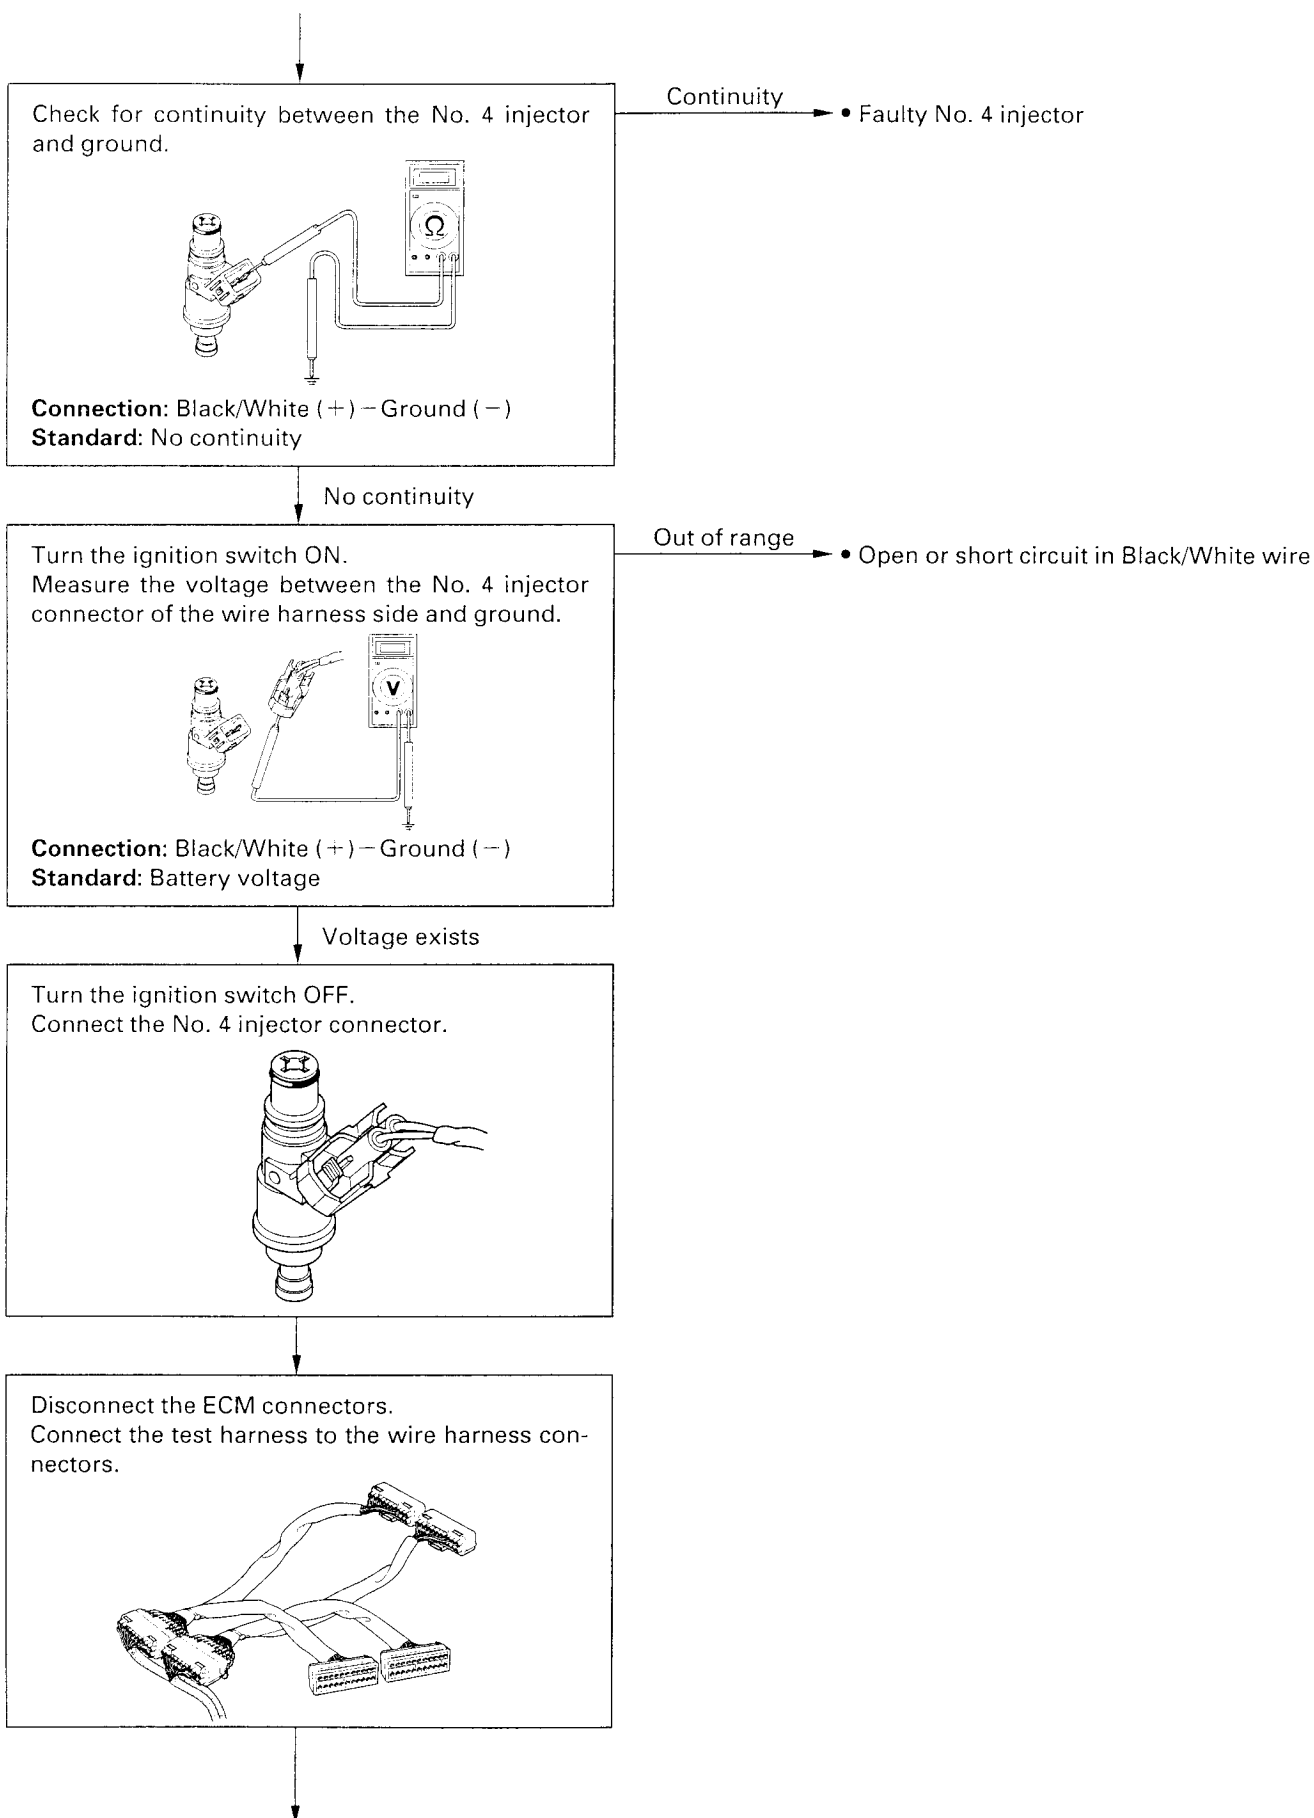

## FUEL SYSTEM (Programmed Fuel Injection)


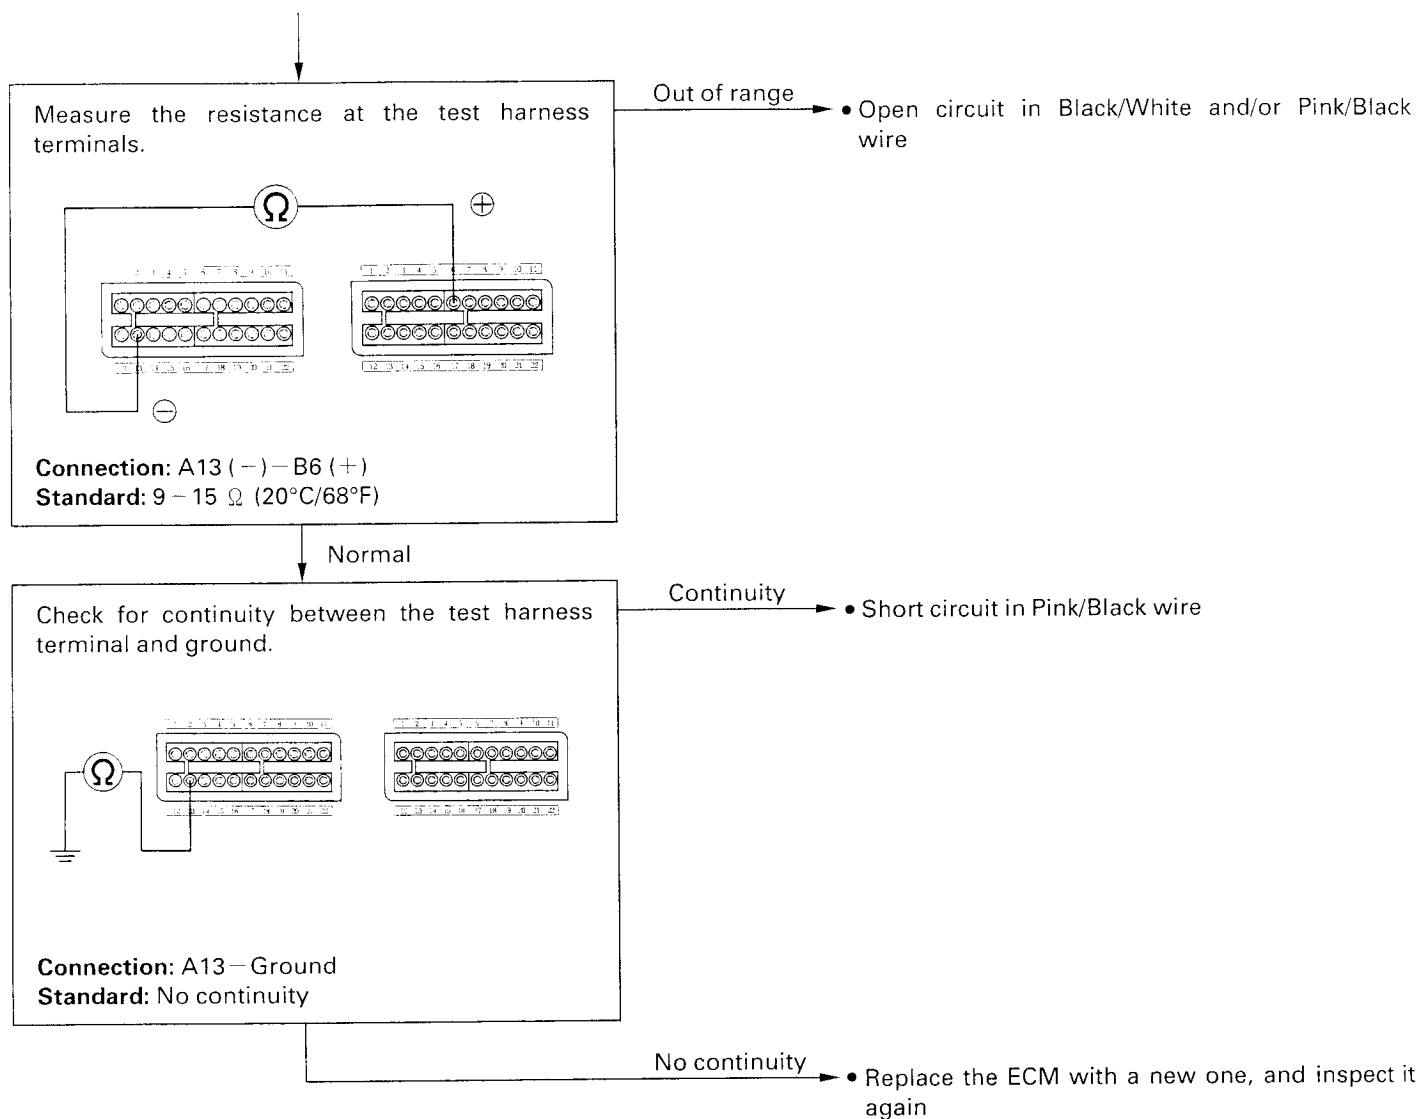


## FUEL SYSTEM (Programmed Fuel Injection)

### PGM-FI MIL 18 BLINKS (CAM PULSE GENERATOR)

Turn the ignition switch OFF.

Disconnect the cam pulse generator 2P connector.  
Check for loose or poor contact on the cam pulse generator 2P connector.

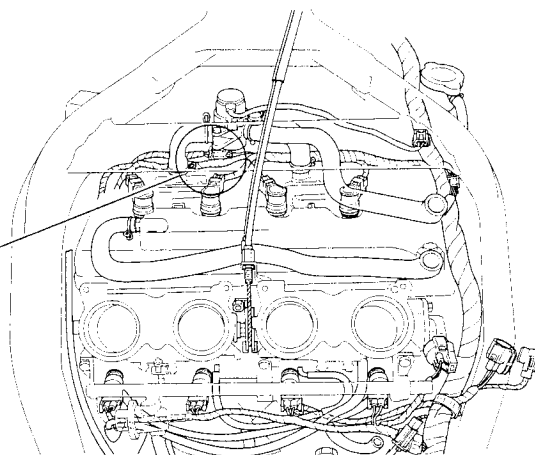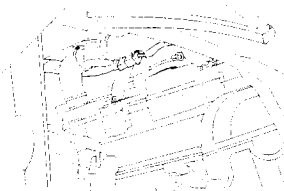


Connect the cam pulse generator 2P connector.  
Place the motorcycle on its side stand.  
Turn the ignition switch ON and check that the MIL blinks.

No blinks

• Loose or poor contact on the cam pulse generator 2P connector.

18 blinks


Turn the ignition switch OFF and the engine stop switch OFF.  
Disconnect the cam pulse generator 2P connector.

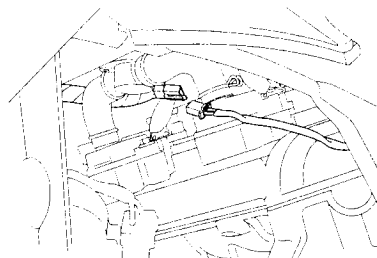

Turn the ignition switch OFF.  
Check the continuity between the cam pulse generator connector terminal and ground.

Continuity

• Faulty cam pulse generator

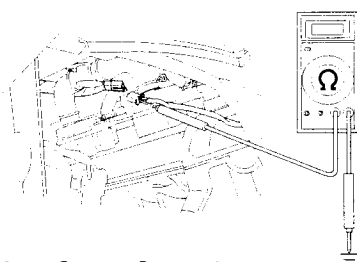


**Connection:** Gray – Ground  
White – Ground

**Standard:** No continuity

No continuity

**FUEL SYSTEM (Programmed Fuel Injection)**

Crank the engine with the starter motor, and measure the cam pulse generator peak voltage at the cam pulse generator 2P connector.

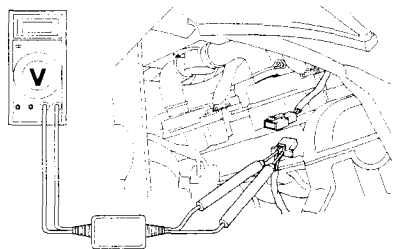


**Connection:** Gray (+) – White (–)  
**Standard:** 0.7 V minimum (20°C/68°F)

Out of range


- Faulty cam pulse generator

Normal

Connect the cam pulse generator 2P connector.  
Disconnect the ECM connectors.  
Connect the test harness to ECM connectors.

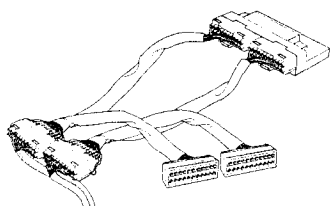

Crank the engine with the starter motor, and measure the cam pulse generator peak voltage at the test harness terminals.

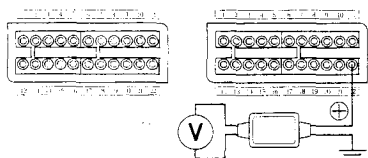

**Connection:** B22 (+) – Ground (–)  
**Standard:** 0.7 V minimum (20°C/68°F)

Out of range

- Open circuit in White/Yellow and/or Gray wire


Normal

- Replace the ECM with a new one, and inspect it again.




## FUEL SYSTEM (Programmed Fuel Injection)

### PGM-FI MIL 19 BLINKS (IGNITION PULSE GENERATOR)

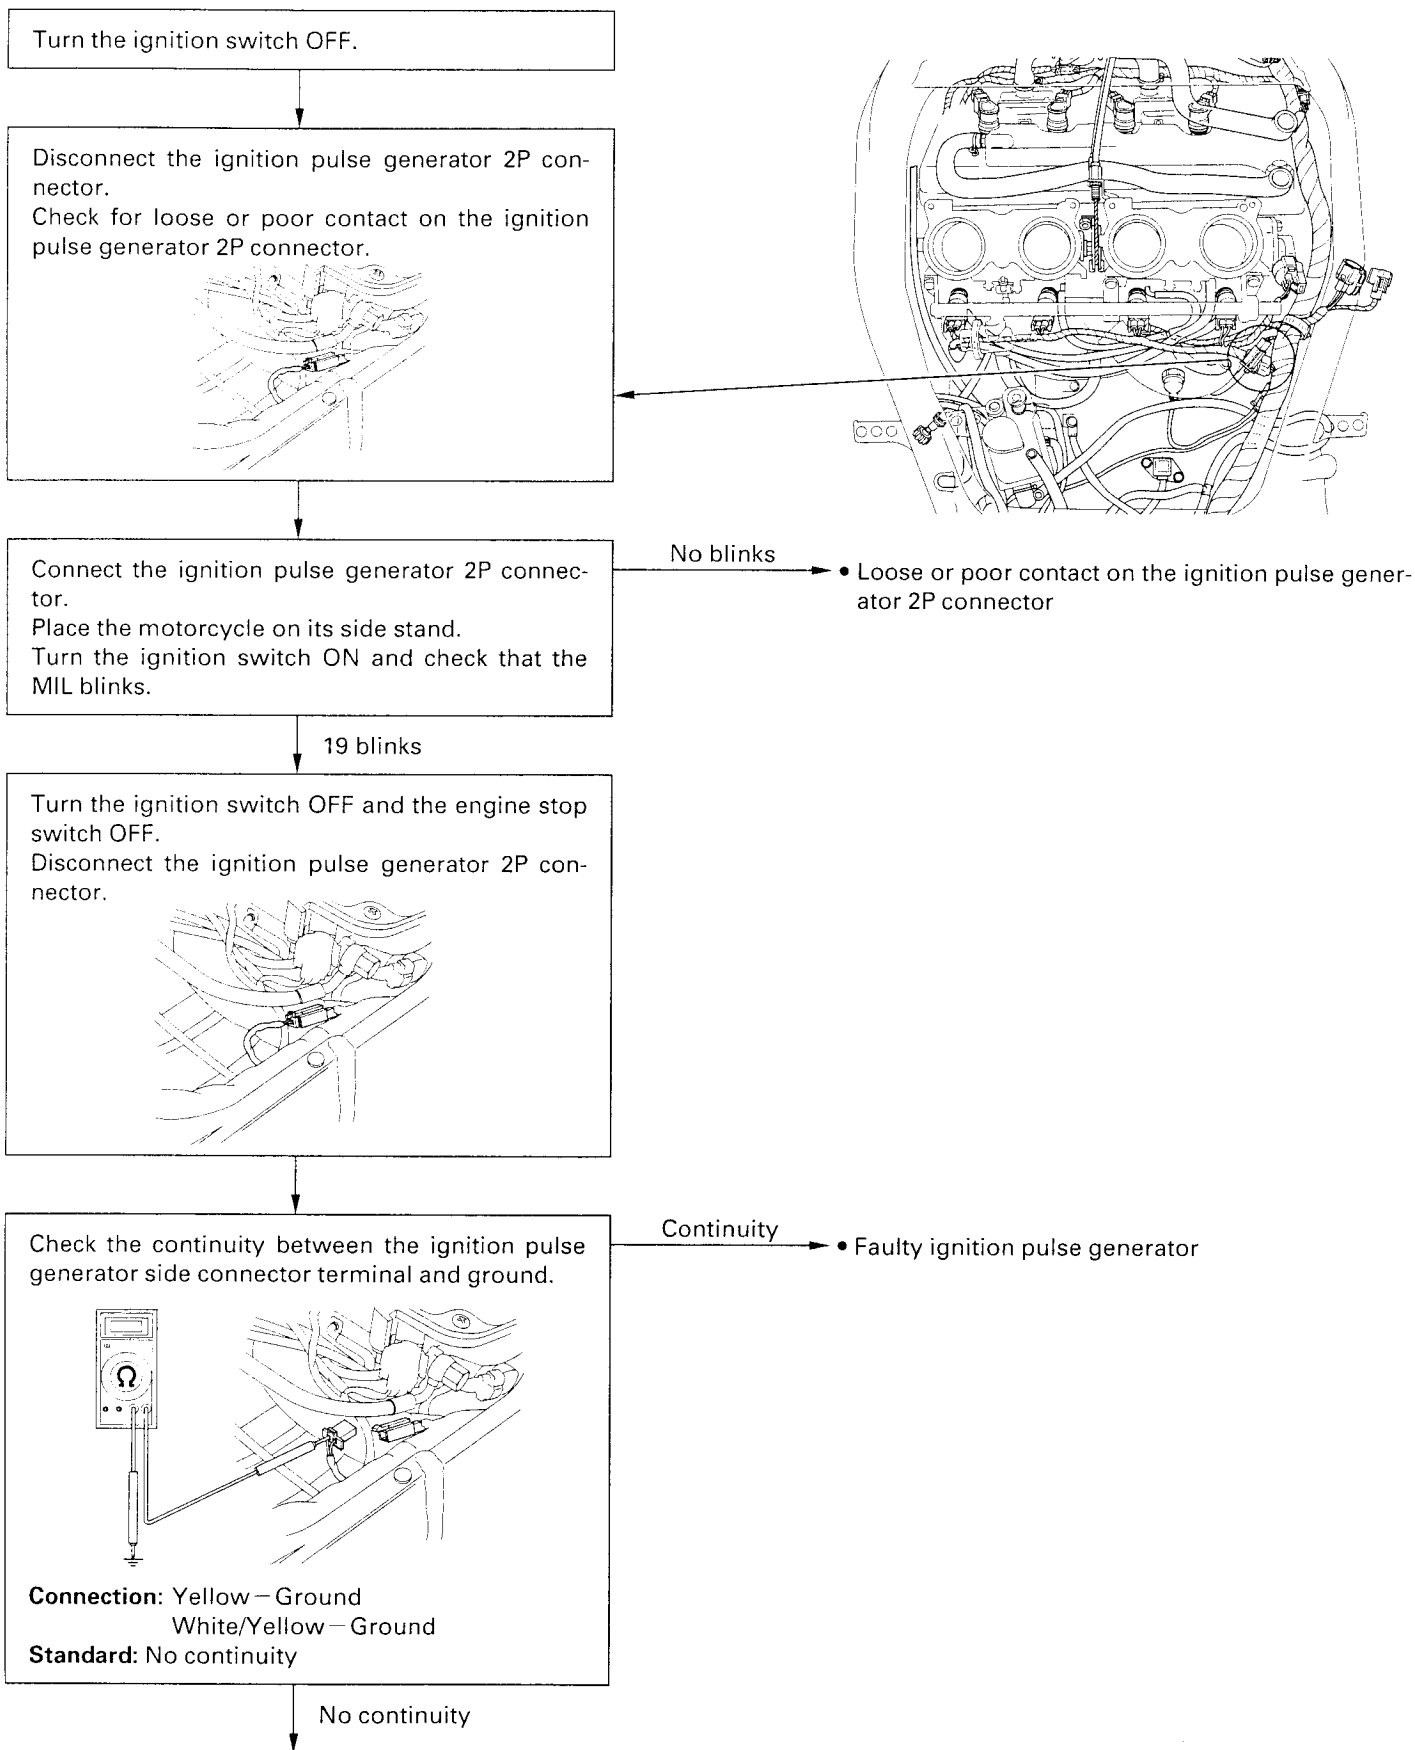

**FUEL SYSTEM (Programmed Fuel Injection)**

Crank the engine with the starter motor, and measure the ignition pulse generator peak voltage at the ignition pulse generator 2P connector.

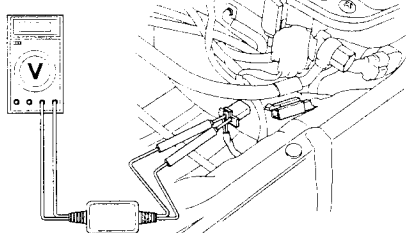


**Connection:** Yellow (+) – White/Yellow (–)  
**Standard:** 0.7 V minimum (20°C/68°F)

Out of range →


- Faulty ignition pulse generator

Normal

Connect the ignition pulse generator 2P connector. Disconnect the ECM connectors. Connect the test harness to ECM connectors.

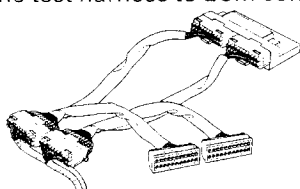

Crank the engine with the starter motor, and measure the ignition pulse generator peak voltage at the test harness terminals.

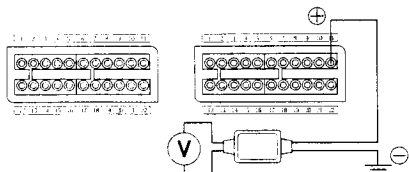

**Connection:** B11 (+) – Ground (–)  
**Standard:** 0.7 V minimum (20°C/68°F)

Out of range →

- Open circuit in White/Yellow wire
- Open circuit in Yellow wire

Normal →



- Replace the ECM with a new one, and inspect it again

## FUEL SYSTEM (Programmed Fuel Injection)


### PGM-FI MIL 21 BLINKS (O<sub>2</sub> SENSOR/CALIFORNIA TYPE ONLY)

Turn the ignition switch OFF.


Disconnect the O<sub>2</sub> sensor connector.  
Check for loose or poor contact on the O<sub>2</sub> sensor connector.

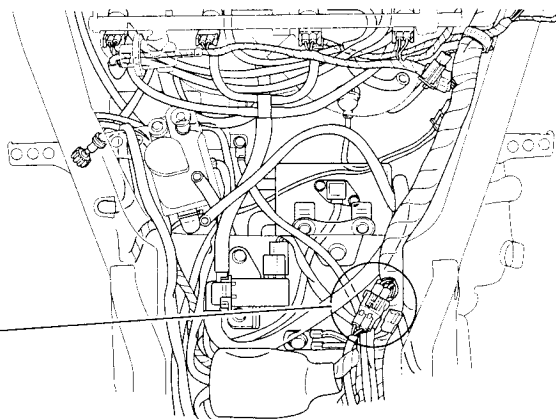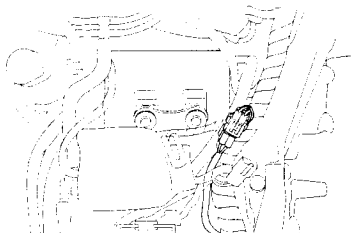

Disconnect the ECM connectors.  
Connect the test harness to ECM connectors.

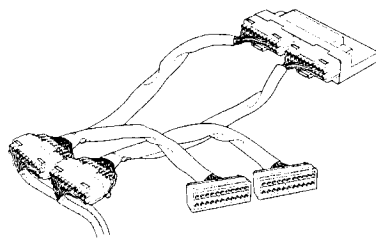

Check the continuity between the test harness terminal and O<sub>2</sub> sensor connector terminal.

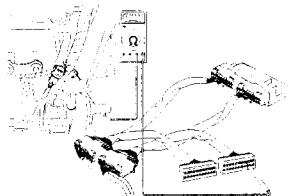


**Connection:** Orange/White – A5  
**Standard:** Continuity

No continuity →

• Open circuit in O<sub>2</sub> sensor Orange/White wire

Continuity

Check the continuity between the O<sub>2</sub> sensor connector terminal and ground.

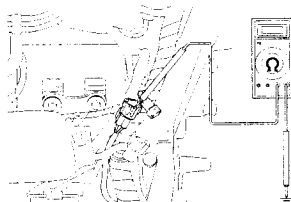

**Connection:** Orange/white – Ground  
**Standard:** No continuity


Continuity →

• Short circuit in O<sub>2</sub> sensor Orange/White wire

No continuity


## FUEL SYSTEM (Programmed Fuel Injection)

Connect the O<sub>2</sub> sensor connector.  
Turn the ignition switch ON and warm up the engine up to coolant temperature is 80°C (176°F).

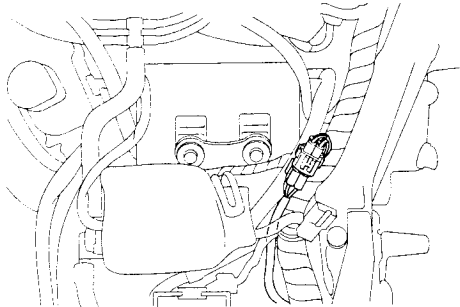

Operate the throttle grip and snap the engine speed from idle to 5,000 rpm.

Check the voltage between the test harness terminals.

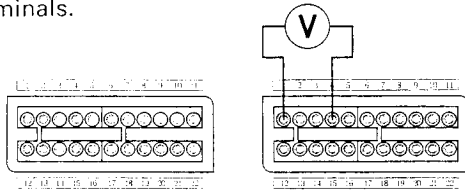

**Connection:** B1 – B4

**Standard:**

**With the throttle fully open:**

0.6 V minimum

**With the throttle quickly closed:**

0.4 V maximum

Out of range


• Faulty O<sub>2</sub> sensor

Normal


• Check the fuel supply system, if the system is correct, replace the ECM and inspect again.

## FUEL SYSTEM (Programmed Fuel Injection)

### PGM-FI MIL 23 BLINKS (O<sub>2</sub> SENSOR HEATER/CALIFORNIA TYPE ONLY)

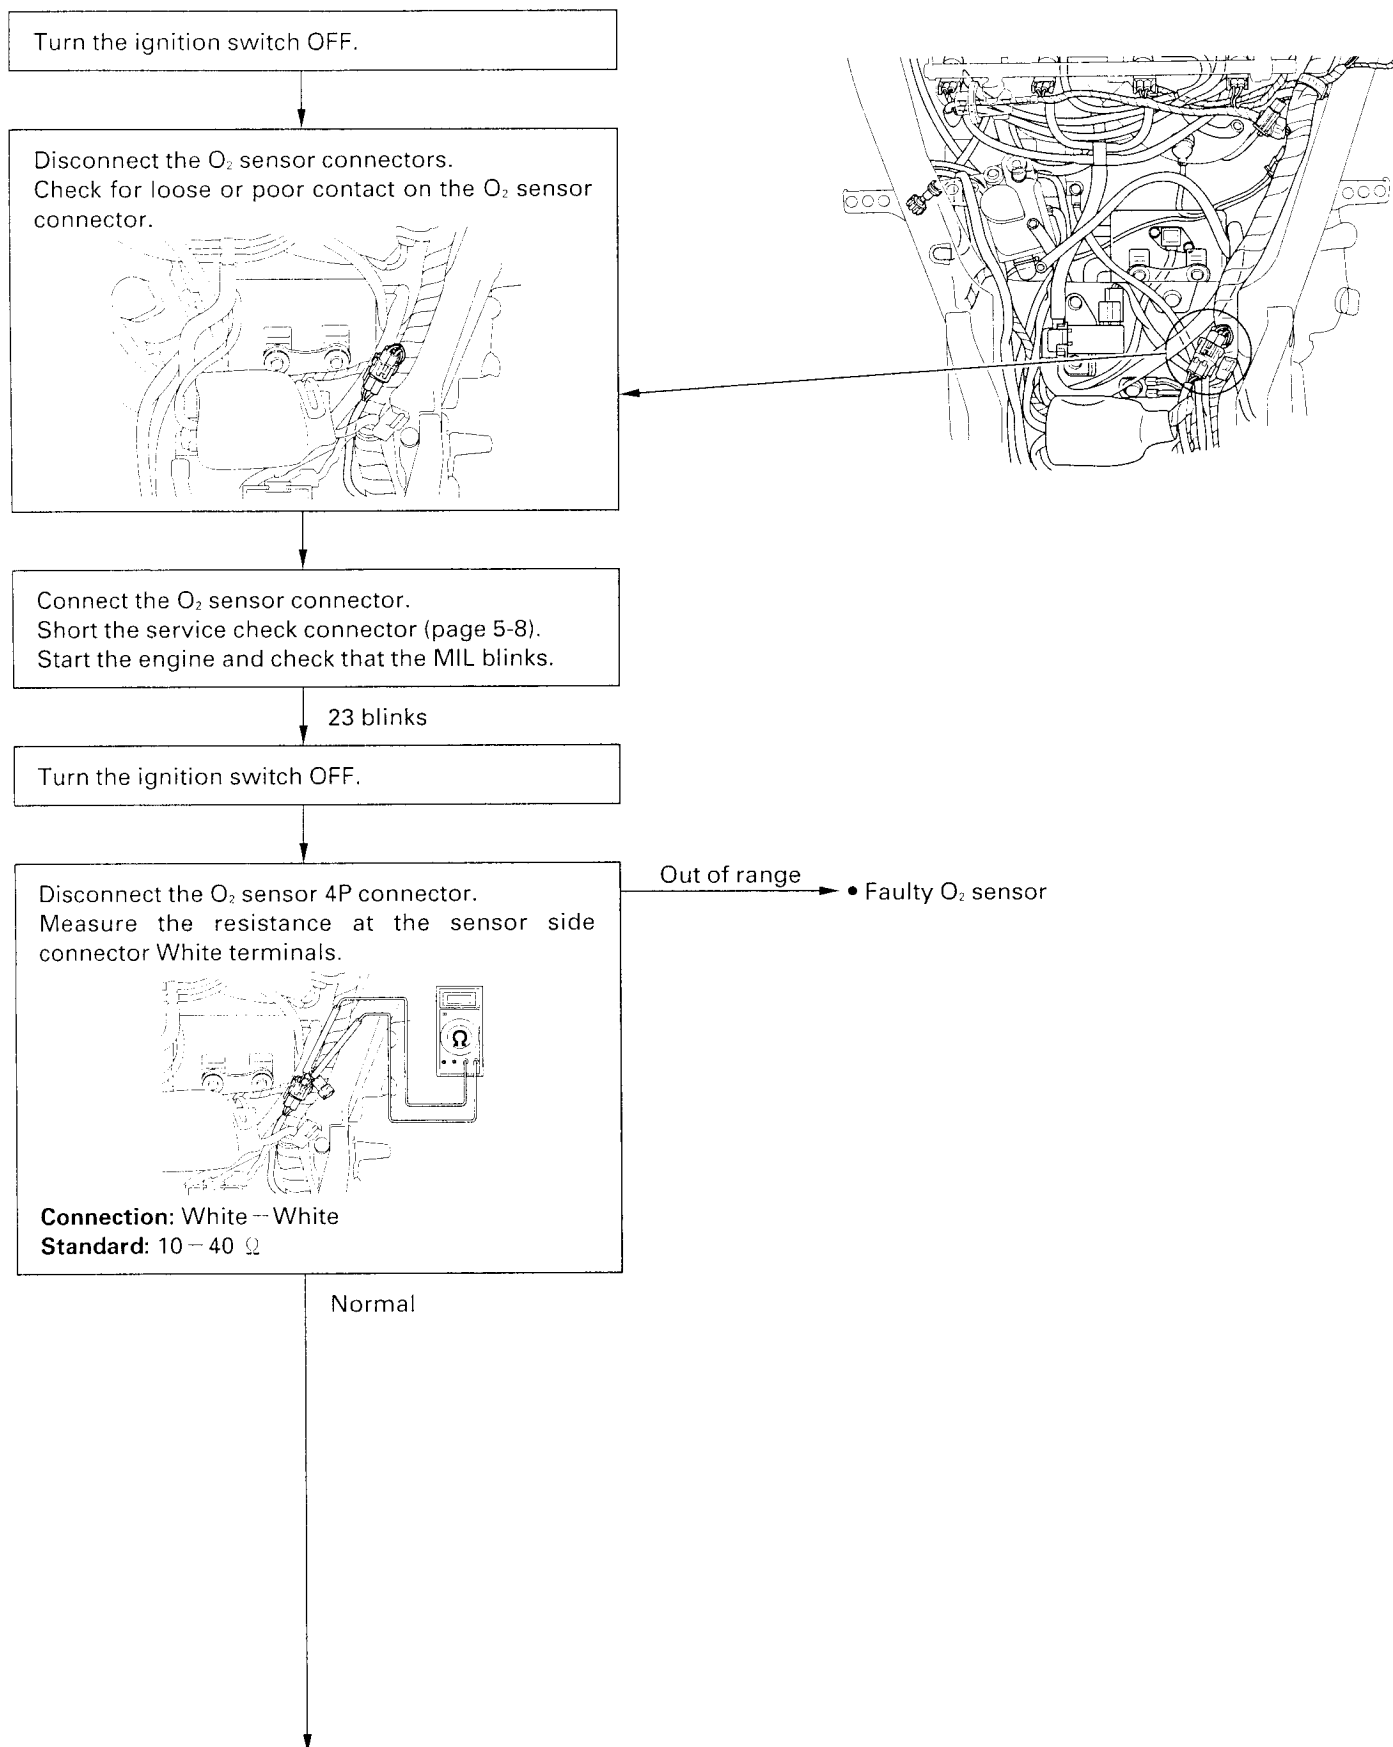


## FUEL SYSTEM (Programmed Fuel Injection)

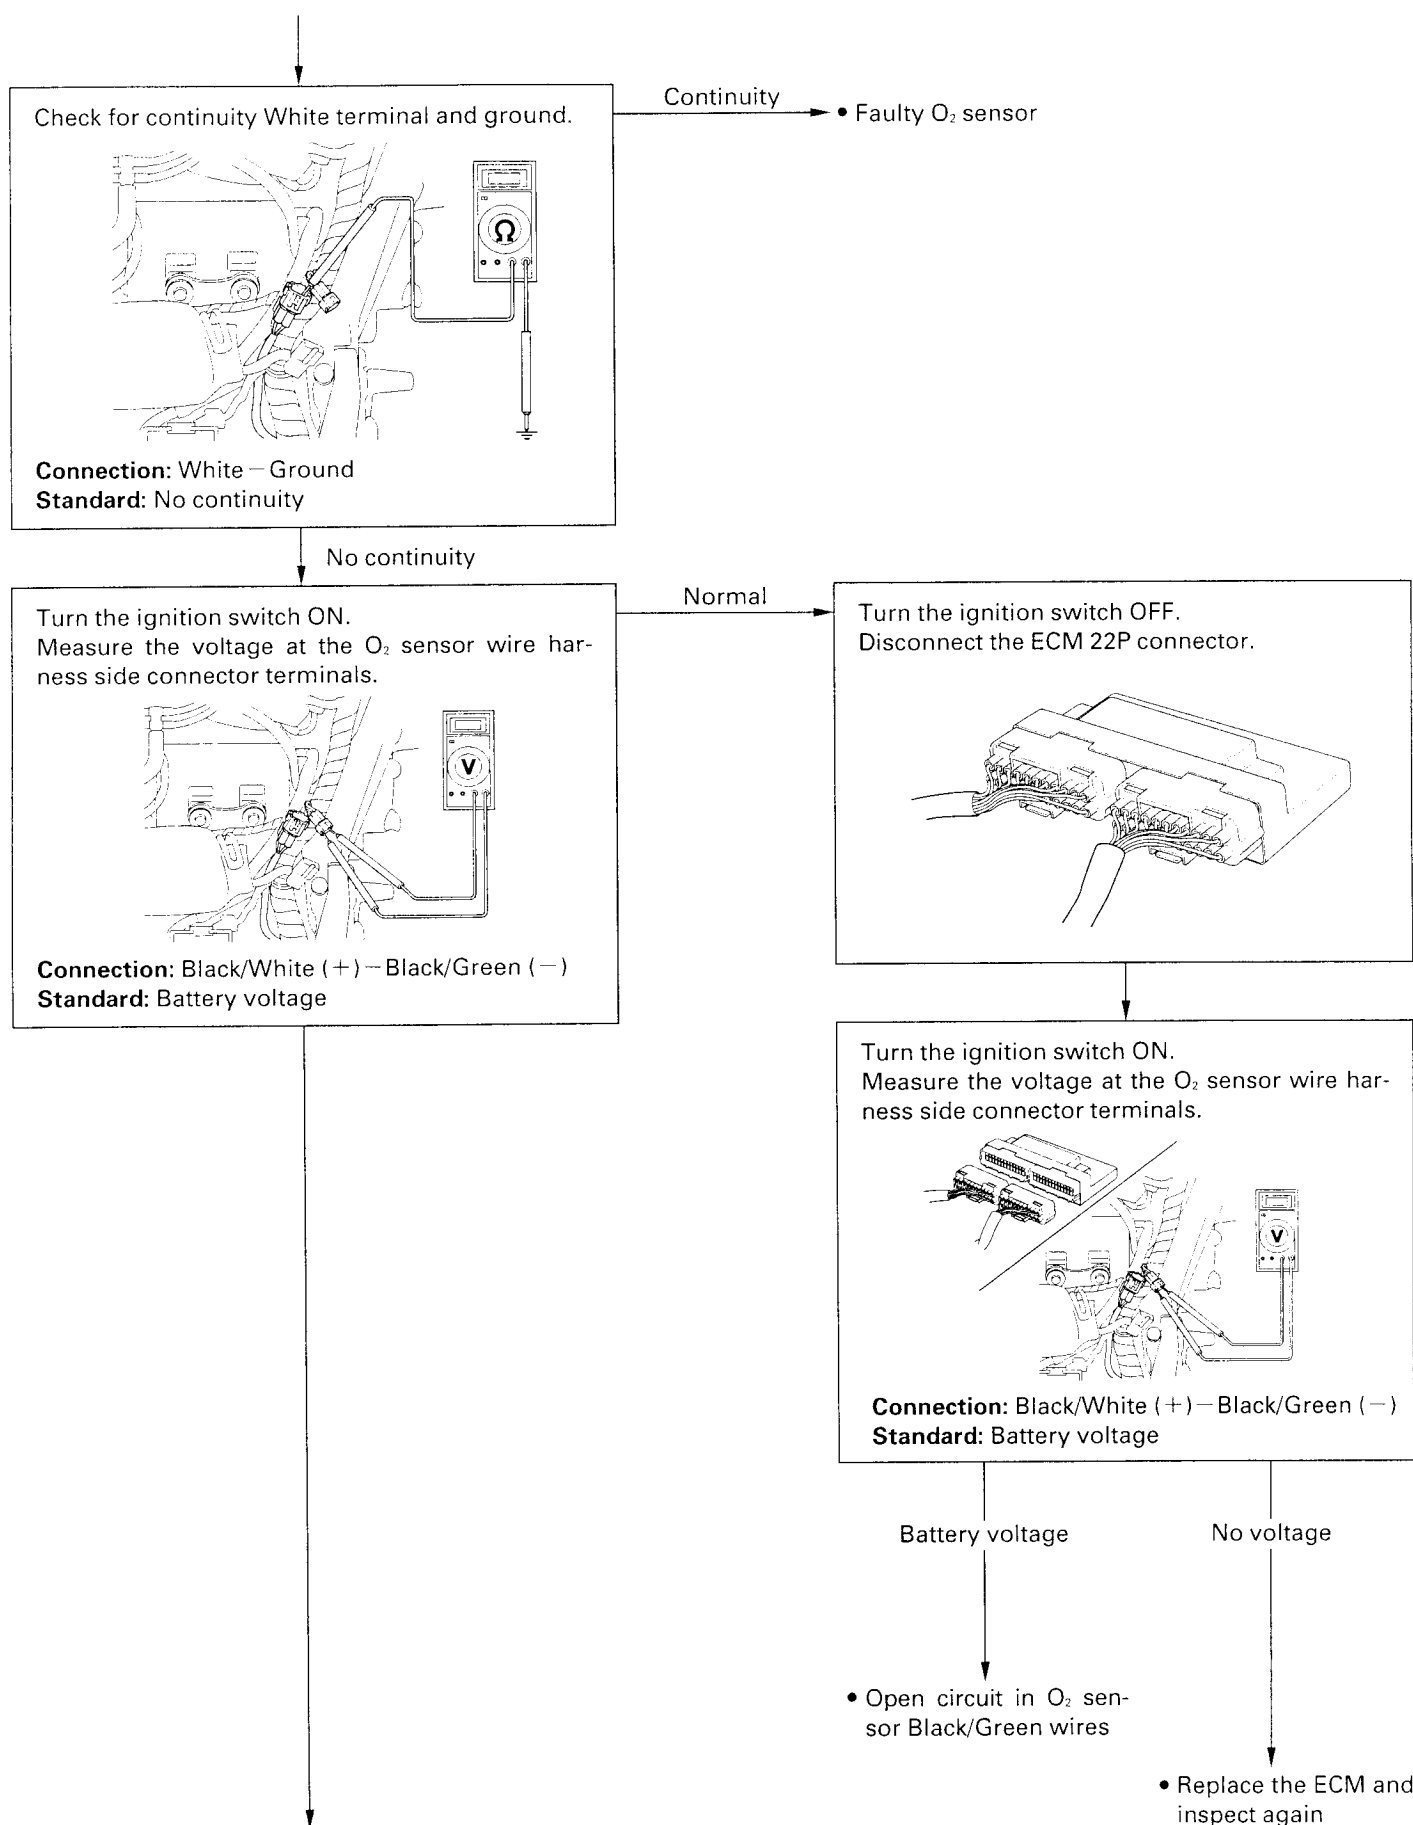



## FUEL SYSTEM (Programmed Fuel Injection)

Measure the voltage at the O<sub>2</sub> sensor wire harness side connector terminal and ground.

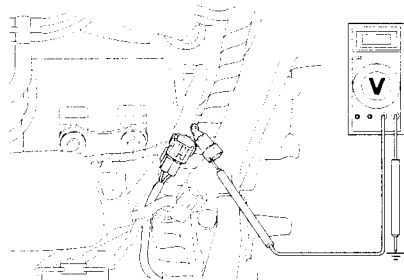

**Connection:** Black/White (+) – Ground (–)  
**Standard:** Battery voltage


No voltage →

- Open circuit in Black/White wire between the O<sub>2</sub> sensor and engine stop relay


Battery voltage

Turn the ignition switch OFF.


Connect the O<sub>2</sub> sensor 4P connectors.

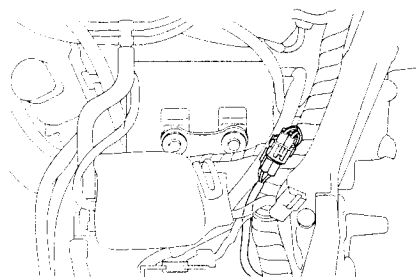

Disconnect the ECM connectors.  
Connect the test harness to the wire harness connectors.

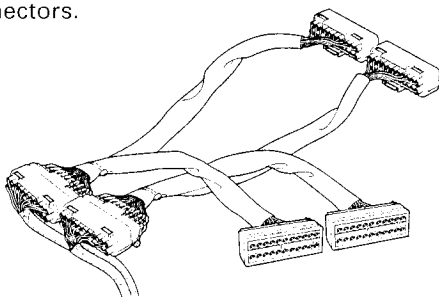


## FUEL SYSTEM (Programmed Fuel Injection)

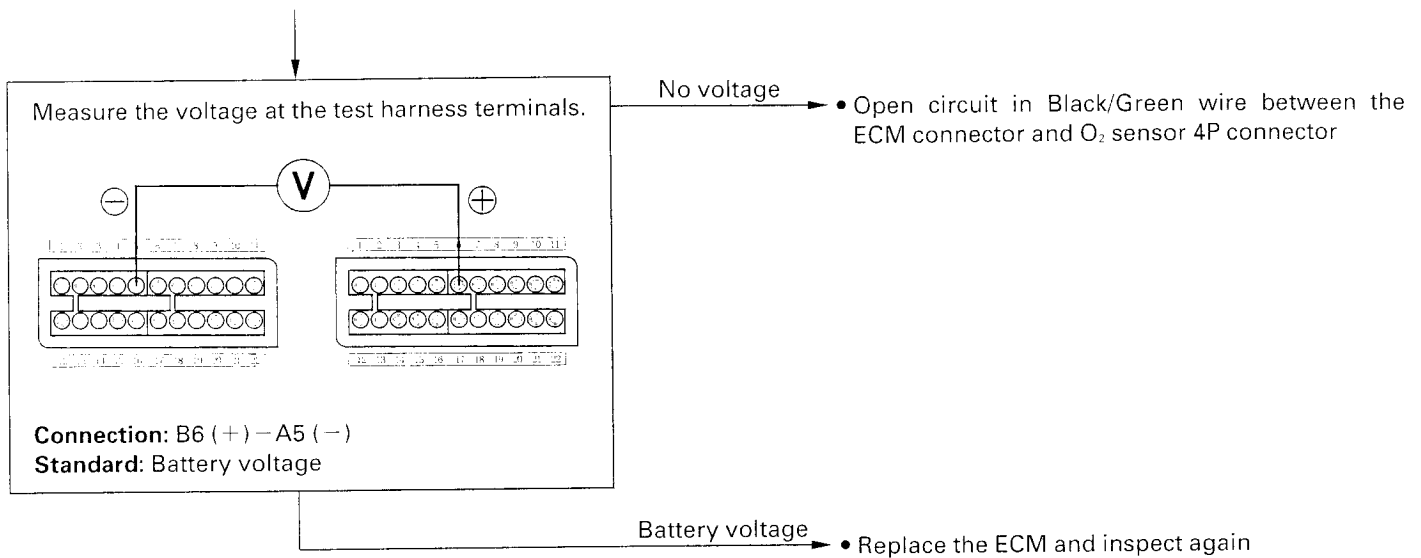


## FUEL SYSTEM (Programmed Fuel Injection)

### PGM-FI MIL 33 BLINKS (E<sup>2</sup>-PROM)

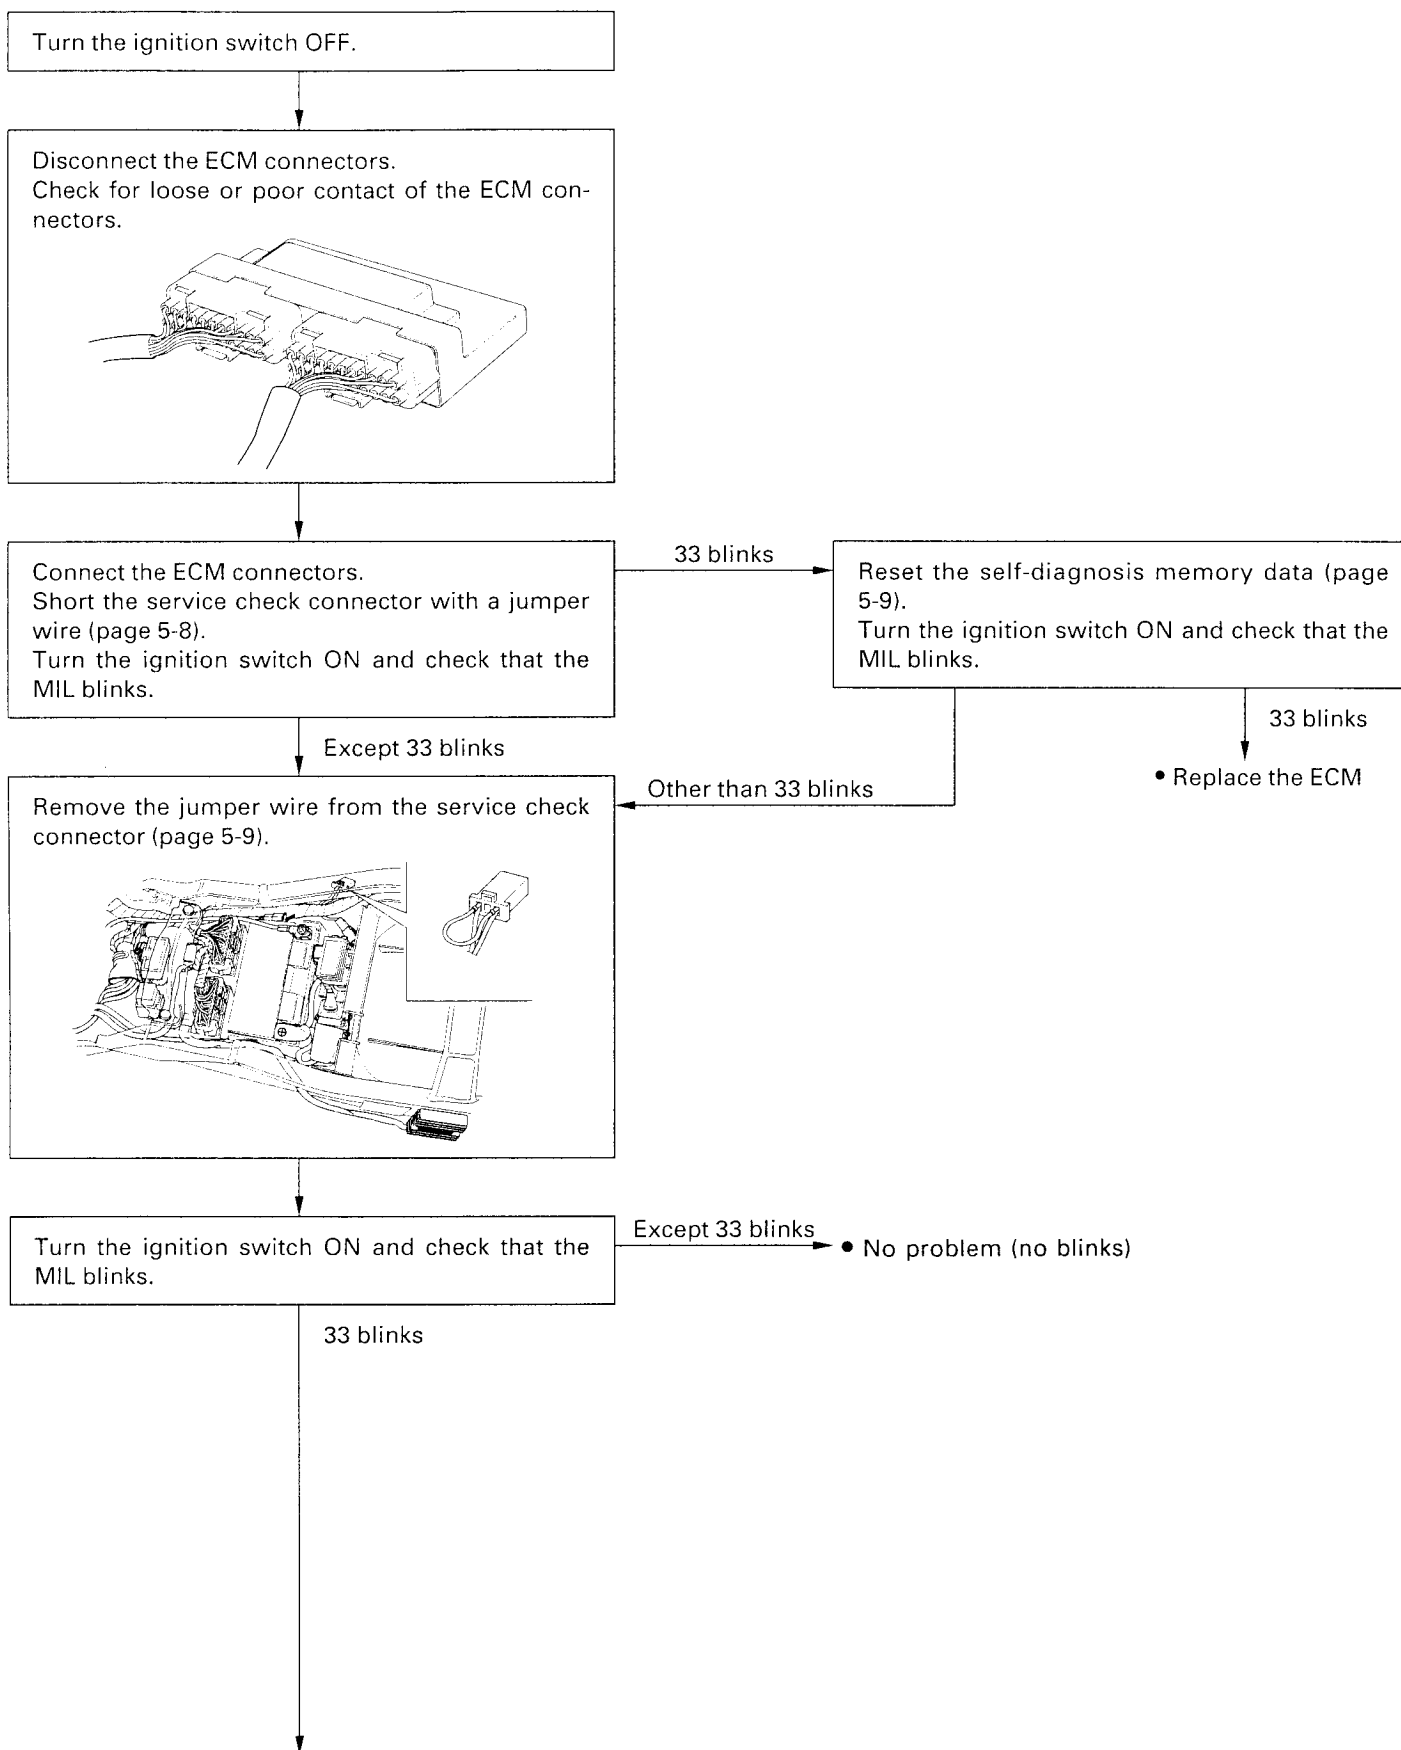

## FUEL SYSTEM (Programmed Fuel Injection)

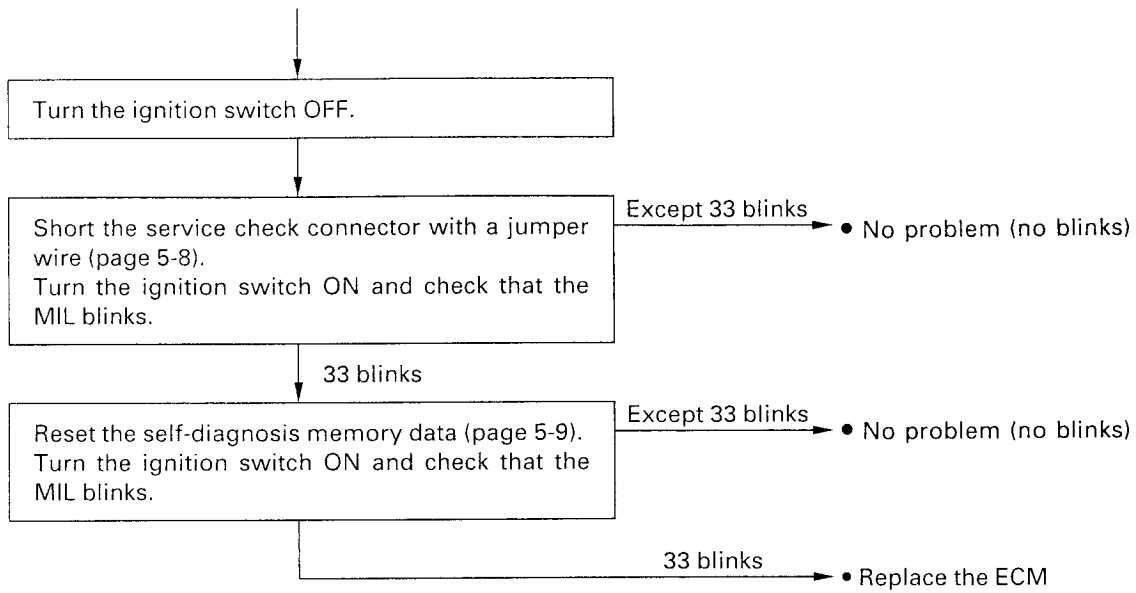


## FUEL SYSTEM (Programmed Fuel Injection)

### PGM-FI MIL 34 BLINKS (EGCV AND AIR INTAKE VALVE SERVO MOTOR POTENTIOMETER VOLTAGE)

Turn the ignition switch OFF.

Disconnect the servo motor 6P connector.  
Check for loose or poor contact on the servo motor 6P connector.

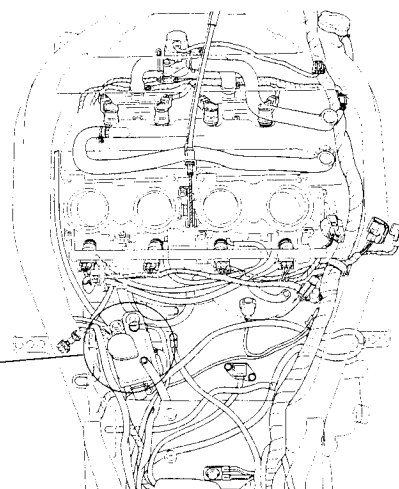


Connect the servo motor 6P connector.  
Place the motorcycle on its side stand.  
Turn the ignition switch ON and check that the MIL blinks.

No blinks

- Loose or poor contact on the servo motor 6P connector.

34 blinks


Turn the ignition switch OFF and the engine stop switch OFF.  
Disconnect the servo motor 6P connector.

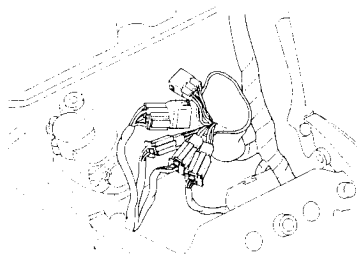

Measure the resistance at the servo motor 6P connector terminals.

Abnormal

- Faulty servo motor

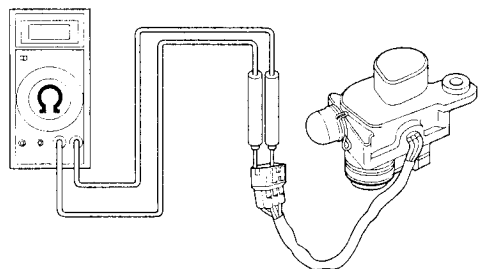


**Connection:** Yellow/Red (+) – Green/Orange (–)  
**Standard:** 5 k $\Omega$  (20°C/68°F)

Normal

**FUEL SYSTEM (Programmed Fuel Injection)**

Measure the resistance at the servo motor 6P connector terminals.

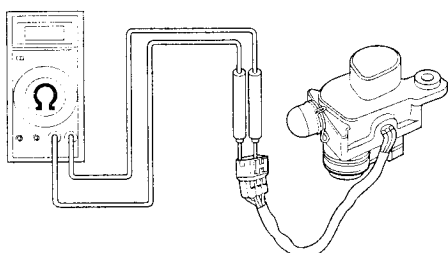


**Connection:** Light green/Pink (—) — Green/Orange (—)  
**Standard:** 0 — 5 k $\Omega$  (20°C/68°F)

Abnormal


- Faulty servo motor

Normal

Disconnect the ECM connectors.  
Connect the test harness to the wire harness connectors.

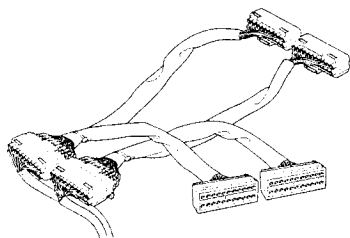

Check for continuity between the test harness terminal and servo motor 6P connector terminals of the wire harness side.

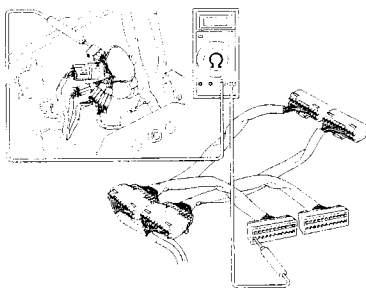

**Connection:** A1 — Red  
A12 — Blue  
B1 — Green/Orange  
B5 — Yellow/Red  
B16 — Light green/Pink  
**Standard:** Continuity

No continuity

- Open circuit in related wire


Continuity

- Replace the ECM with a new one, and inspect it again.




## FUEL SYSTEM (Programmed Fuel Injection)

### PGM-FI MIL 35 BLINKS (EGCV AND AIR INTAKE VALVE SERVO MOTOR)

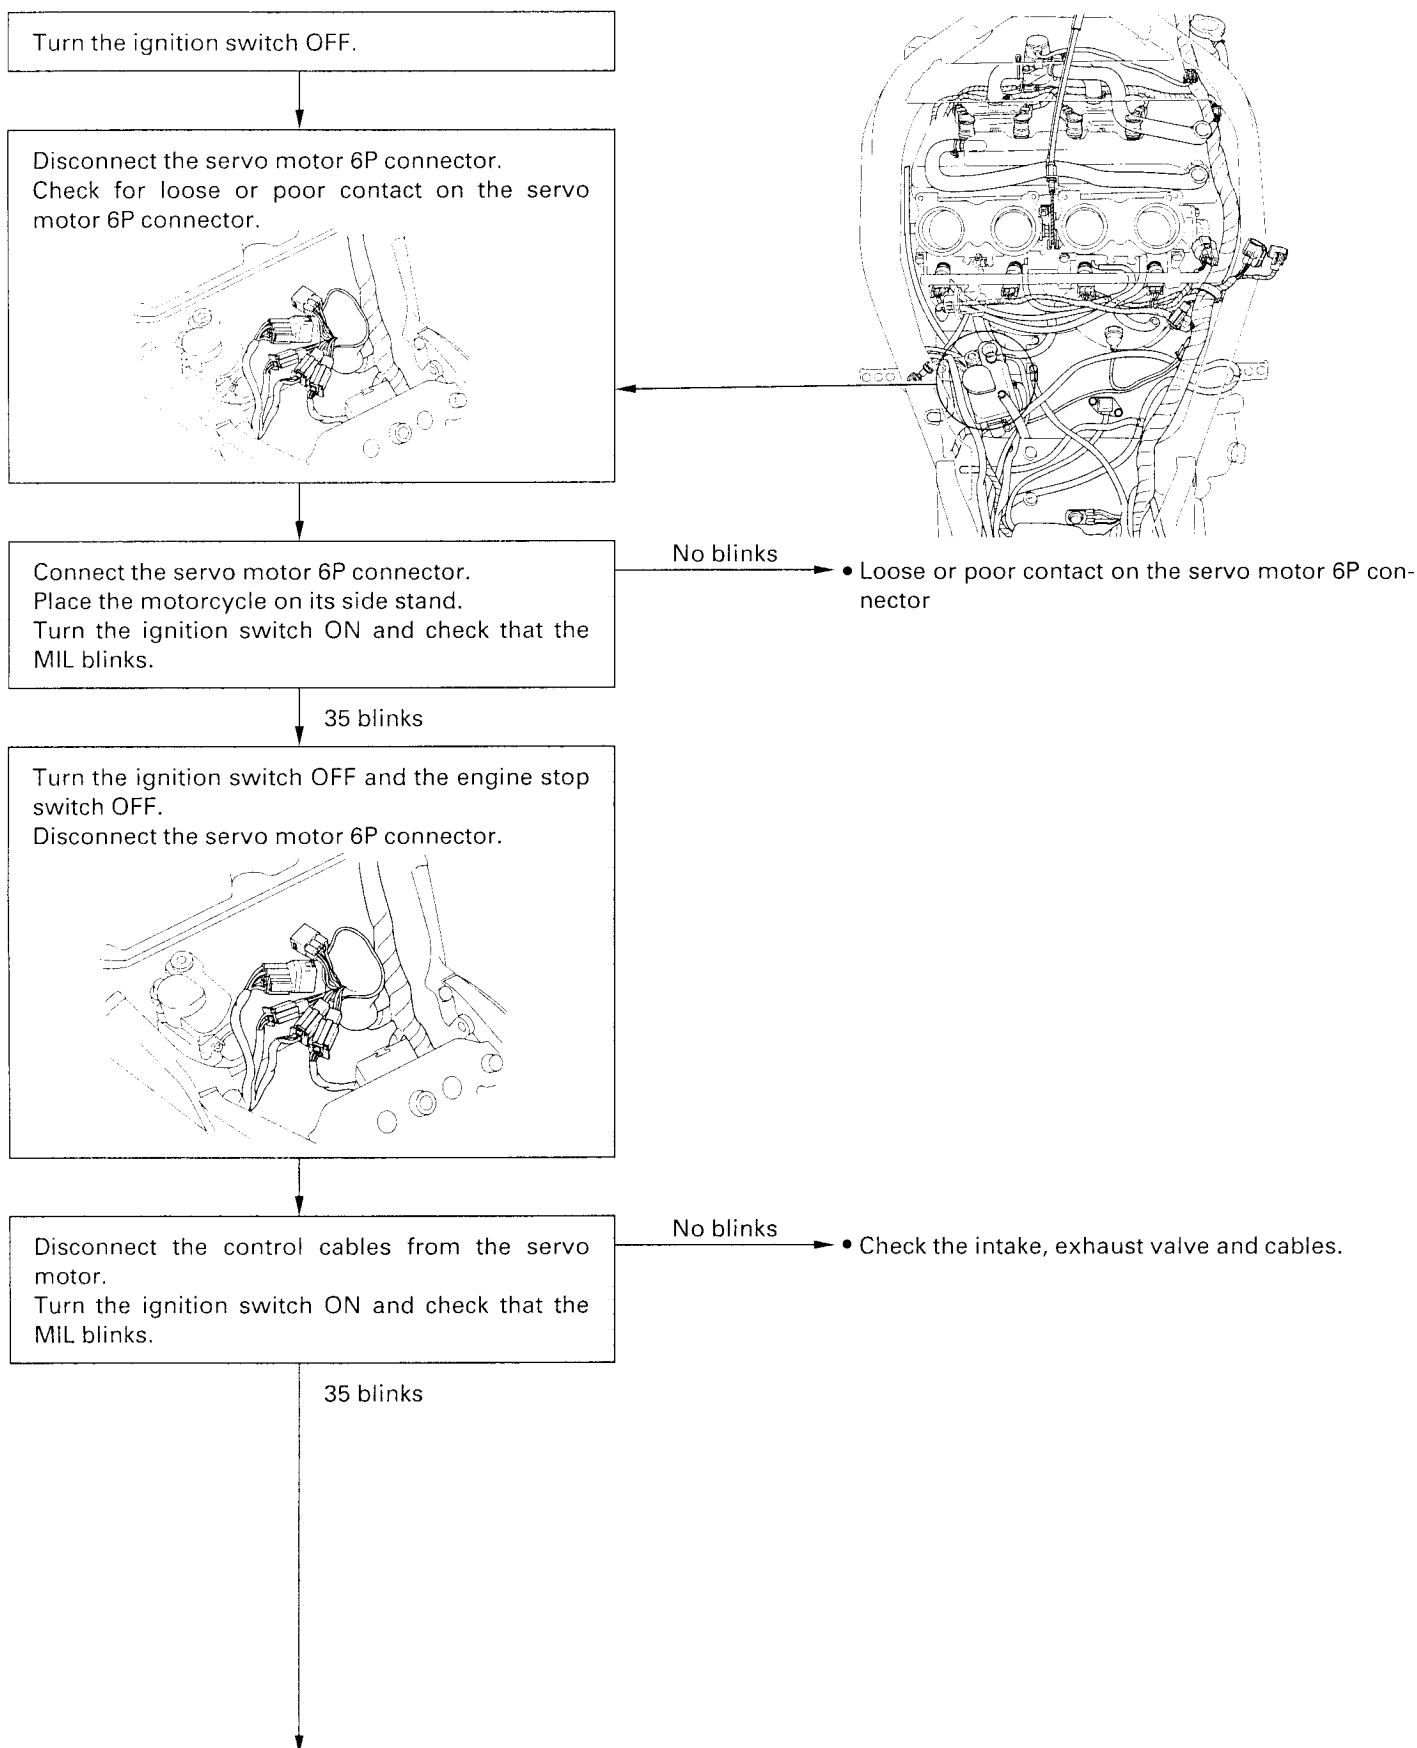

Remove the servo motor (page 5-86).

Connect the 12 V battery to the servo motor connector terminals and check the servo motor function.

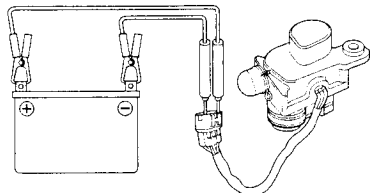

**Connection:** Red (+) — Blue (—)


Abnormal

- Faulty servo motor


Normal

Disconnect the ECM connectors.

Connect the test harness to the wire harness connectors.

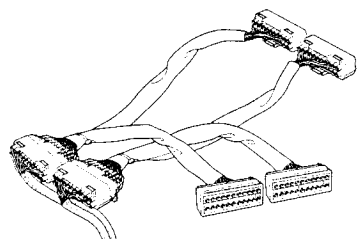

Check for continuity between the test harness terminal and servo motor 6P connector terminals of the wire harness side.

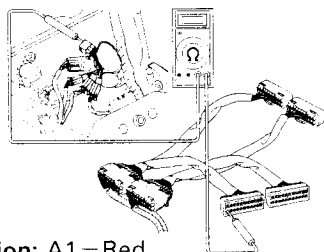

**Connection:** A1 — Red  
A12 — Blue

**Standard:** Continuity

No continuity

- Open circuit in related wire

Continuity

- Replace the ECM with a new one, and inspect it again.

## FUEL SYSTEM (Programmed Fuel Injection)

### FUEL LINE INSPECTION


#### FUEL PRESSURE INSPECTION

##### NOTICE

- Before disconnecting fuel tubes, release the fuel pressure by loosening the fuel tube banjo bolt at the fuel tank.
- Always replace the sealing washers when the fuel tube banjo bolt is removed or loosened.

Remove the seat (page 2-2).

Disconnect the battery negative cable from the battery terminal.

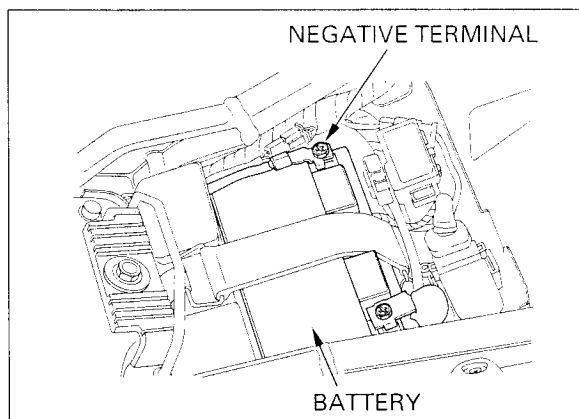


Open and support the front end of fuel tank (page 5-61).

Disconnect the pressure regulator vacuum tube and plug the vacuum tube.



Cover the fuel tube banjo bolt with a rag or shop towel.

Slowly loosen the fuel tube banjo bolt and catch the remaining fuel using an approved gasoline container.

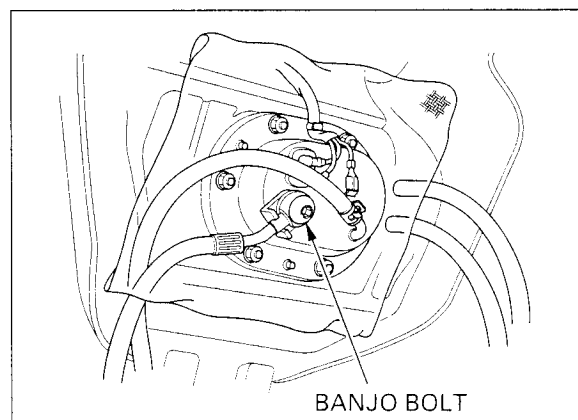


## FUEL SYSTEM (Programmed Fuel Injection)

Remove the fuel tube banjo bolt and attach the fuel pressure gauge with the following Honda Genuine parts.

Banjo bolt, 12 mm  
 Parts No. 90008-PP4-E02  
 Sealing washer, 12 mm  
 Parts No. 90428-PD6-003  
 Sealing washer, 6 mm  
 Parts No. 90430-PD6-003

**TOOL:**

**Fuel pressure gauge** 07406-0040002

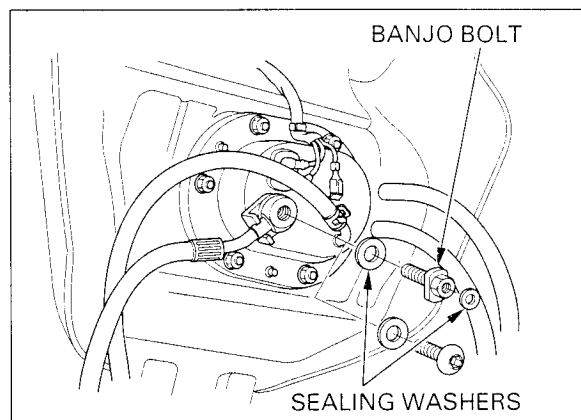

Connect the battery negative cable.  
 Start the engine.  
 Read the fuel pressure at idle speed.


**IDLE SPEED:** 1,200  $\pm$  100 rpm  
**STANDARD:** 343 kPa (3.5 kgf/cm<sup>2</sup>, 50 psi)

If the fuel pressure is higher than specified, inspect the following:

- Pinched or clogged fuel return tube
- Pressure regulator
- Fuel pump (page 5-59)

If the fuel pressure is lower than specified, inspect the following:


- Fuel line leaking
- Clogged fuel filter
- Pressure regulator
- Fuel pump (page 5-59)

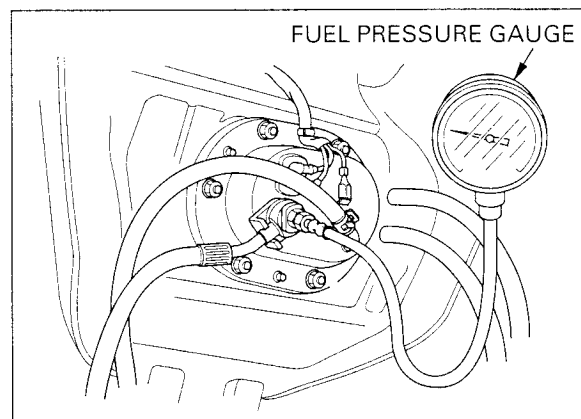

*Always replace the sealing washers when the fuel tube banjo bolt is removed or loosened.*


After inspection, remove the fuel tube banjo bolt and reinstall and tighten the original fuel tube banjo bolt using the new sealing washers.

**TORQUE:** 22 N·m (2.2 kgf·m, 16 lbf·ft)

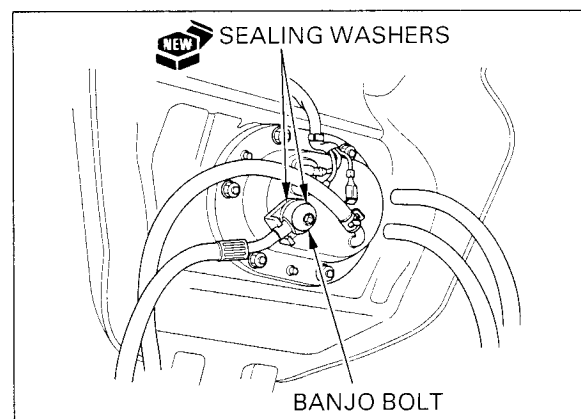

Connect the pressure regulator vacuum tube.

Install the removed parts in the reverse order of removal.

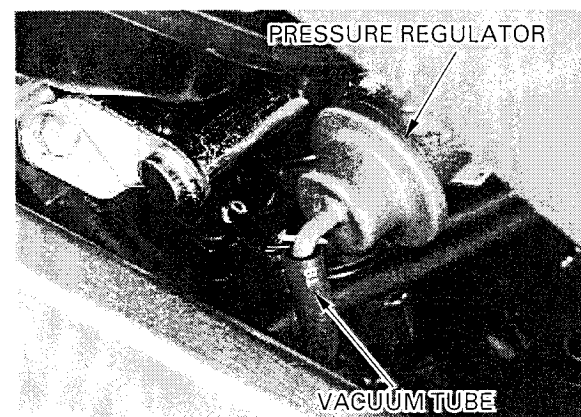


## FUEL SYSTEM (Programmed Fuel Injection)

### FUEL FLOW INSPECTION

Remove the seat (page 2-2).


Open and support the front end of fuel tank (page 3-4).

Remove the ECM cover and disconnect the fuel cut relay connector.

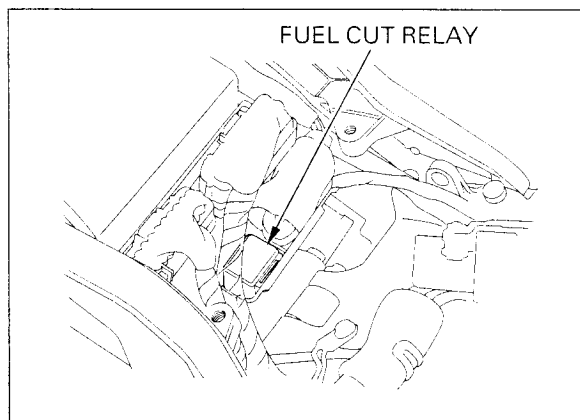

Jump the Brown and Black/White wire terminals of the wire harness side using a jumper wire.

- When the fuel return tube is disconnected, gasoline will spill out from the tube. Place an approved gasoline container underneath the tube and drain the gasoline.
- Wipe off spilled out gasoline.

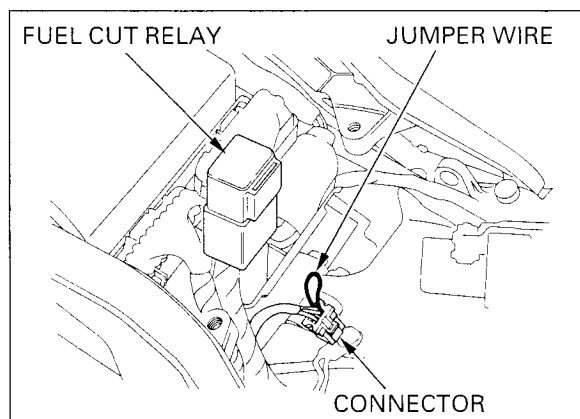


Disconnect the fuel return tube at the pressure regulator, plug the pressure regulator inlet joint.

Turn the ignition switch ON for 10 seconds.  
Measure the amount of fuel flow.


**Amount of fuel flow:** 188 cm<sup>3</sup> (6.4 US oz , 6.6 Imp oz) minimum/10 seconds

If the fuel flow is less than specified, inspect the following:

- Pinched or clogged fuel tube and fuel return tube
- Clogged fuel filter
- Pressure regulator
- Fuel pump (page 5-59)

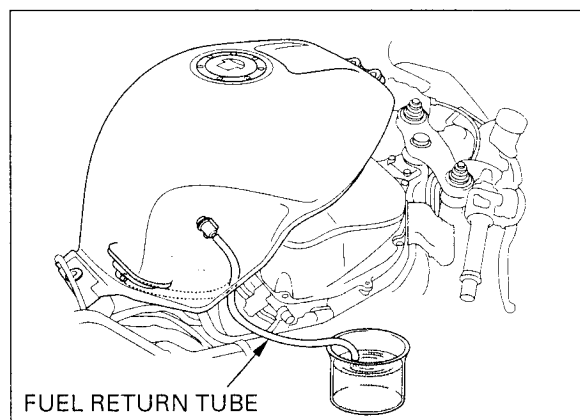

After inspection, connect the fuel return tube.  
Start the engine and check for leaks.

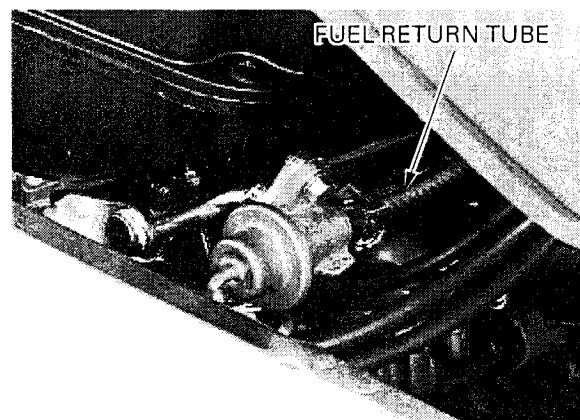



## FUEL PUMP

### INSPECTION

Turn the ignition switch ON and confirm that the fuel pump operates for a few seconds.  
If the fuel pump does not operate, inspect as follows:

Open and support the front end of fuel tank (page 3-4).

Disconnect the fuel pump 3P (Black) connector.



Turn the ignition switch ON and measure the voltage between the terminals.

**Connection:** Brown (+) – Green (–)

There should be battery voltage for a few seconds.

If there is battery voltage, replace the fuel pump.  
If there is no battery voltage, inspect the following:


- Main fuel 30A
- Sub fuse 10A, 20A
- Engine stop switch (page 19-18)
- Fuel cut relay (page 5-60)
- Engine stop relay (page 5-89)
- Bank angle sensor (page 5-88)
- ECM (page 5-89)

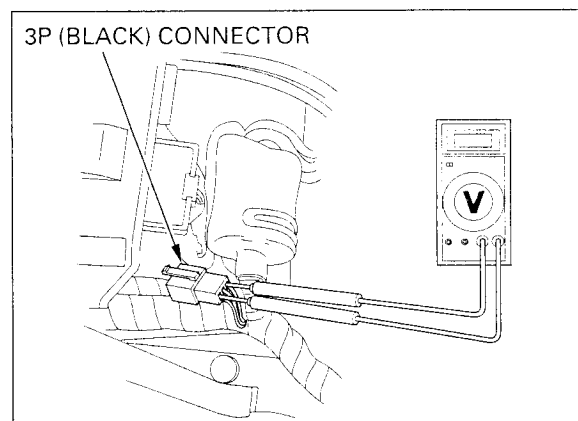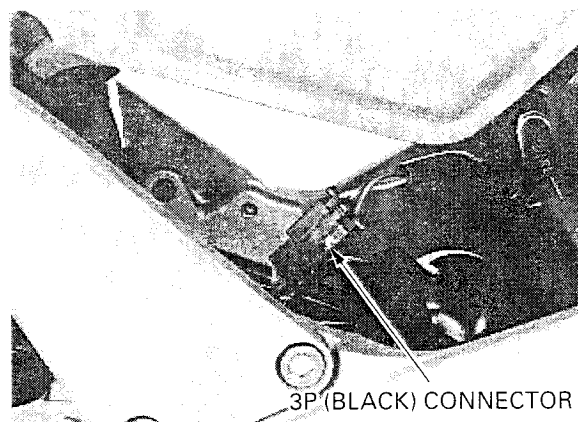

### REMOVAL

#### NOTICE


- Before disconnecting the fuel tube, release the fuel pressure by loosening the fuel tube banjo bolt at the fuel tank.
- Always replace the sealing washers when the fuel tube banjo bolt is removed or loosened.

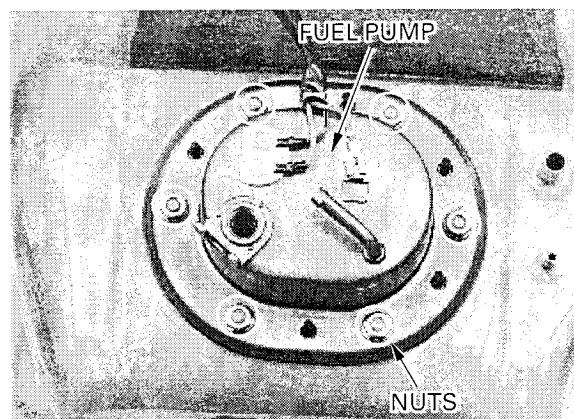

Remove the fuel tank (page 5-61).

Remove the fuel pump mounting nuts.

Remove the fuel pump assembly and packing.

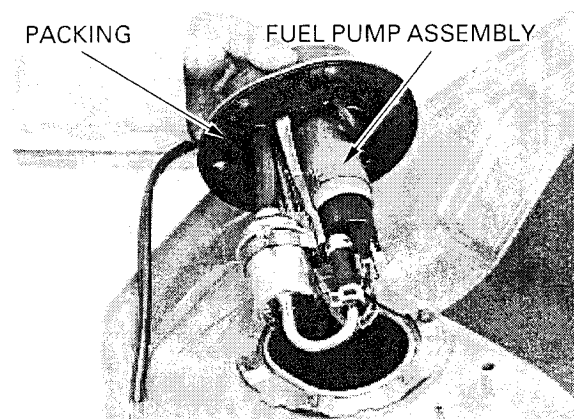




## FUEL SYSTEM (Programmed Fuel Injection)

### FUEL FILTER REPLACEMENT

Disconnect the fuel tubes from the fuel filter.  
Remove the screws and fuel filter.

*Note the direction  
of the fuel filter.*

Install the fuel filter in the reverse order of removal.

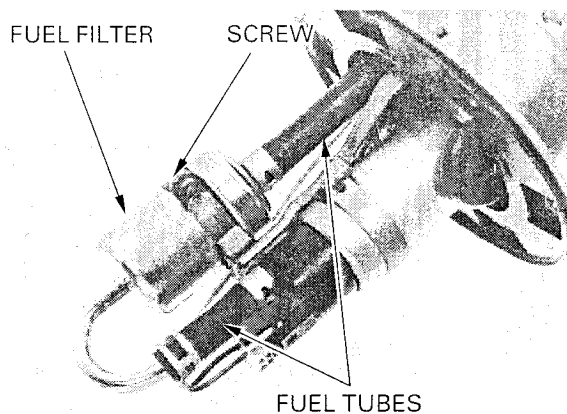


### INSTALLATION

*Always replace  
packing with a  
new one.*


Place a new packing onto the fuel tank.

Install the fuel pump being careful not to damage  
the fuel pump wire.

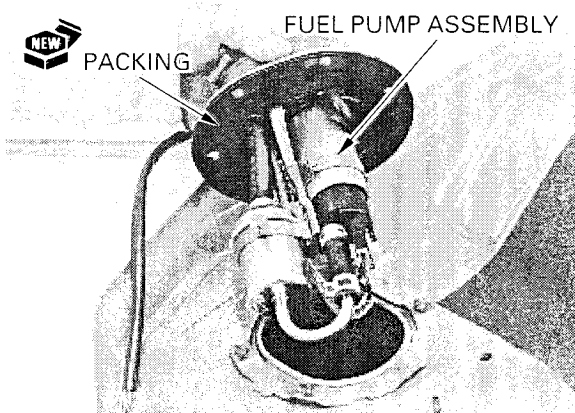

Install and tighten the fuel pump mounting nuts in  
the sequence shown.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

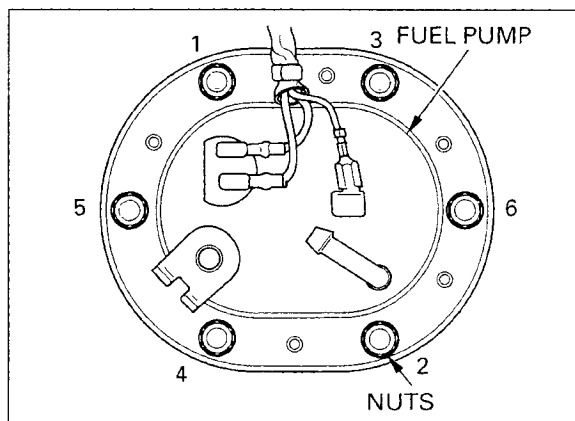


## FUEL CUT RELAY

### INSPECTION

Remove the fuel tank rear bracket and ECM cover  
(page 5-89).

Disconnect the fuel cut relay 4P connector, remove  
the fuel cut relay.

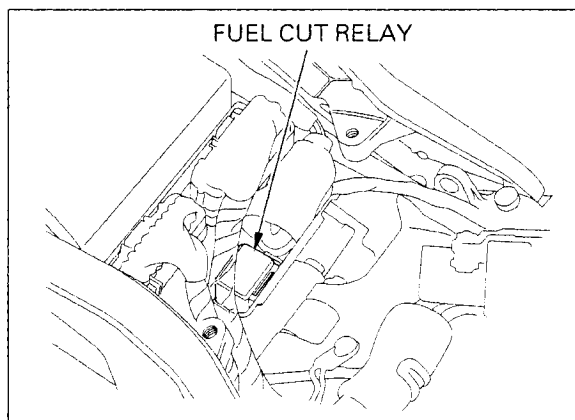

## FUEL SYSTEM (Programmed Fuel Injection)

Connect the ohmmeter to the fuel cut relay connector terminals.


**CONNECTION:** Black/White – Brown

Connect the 12 V battery to the following fuel cut relay connector terminals.

**CONNECTION:** Brown/Black – Black/White

There should be continuity only when the 12 V battery is connected.


If there is no continuity when the 12 V battery is connected, replace the fuel cut relay.

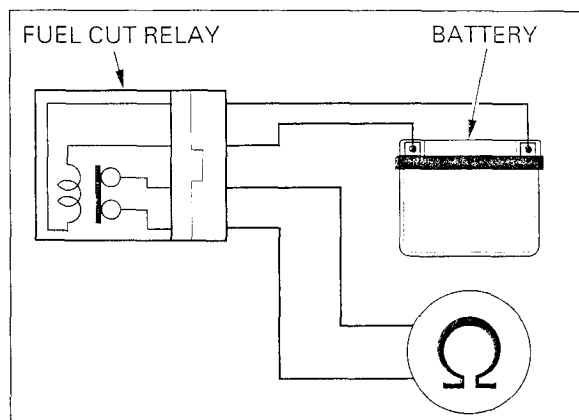


## FUEL TANK

### REMOVAL


Remove the fuel tank front mounting bolts and washers.

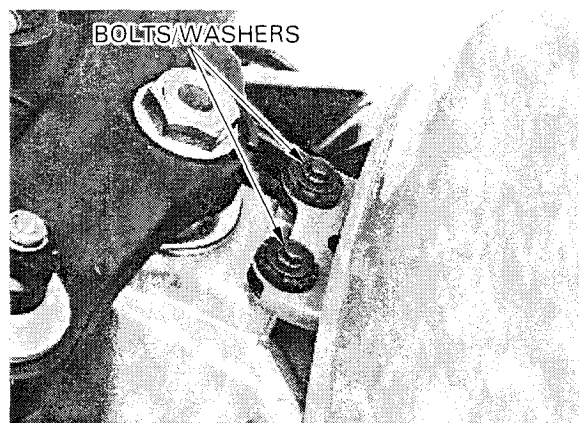

Remove the fuel tank rear mounting bolt and collar.

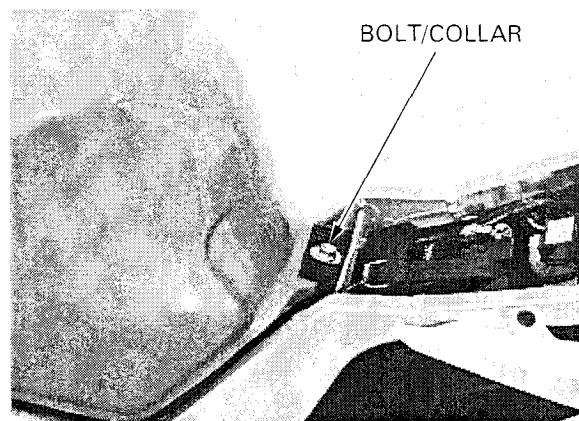


Temporarily install the fuel tank rear mounting bolt.

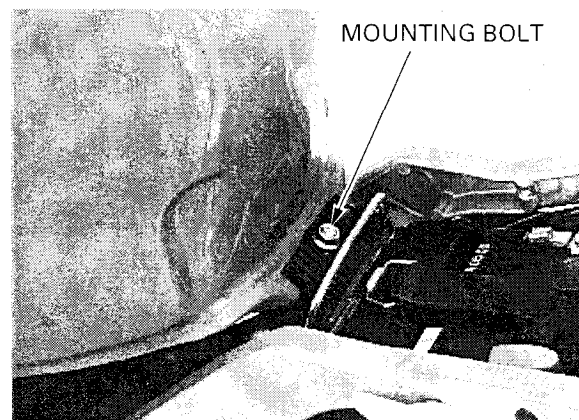


## FUEL SYSTEM (Programmed Fuel Injection)

Lift and support the front of the fuel tank and support it using a suitable support (310 mm).


Release the fuel pressure (page 5-56).

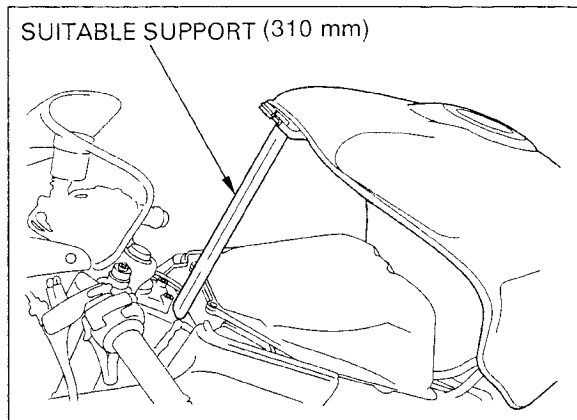

Disconnect the fuel pump/reserve sensor 3P (Black) connector.

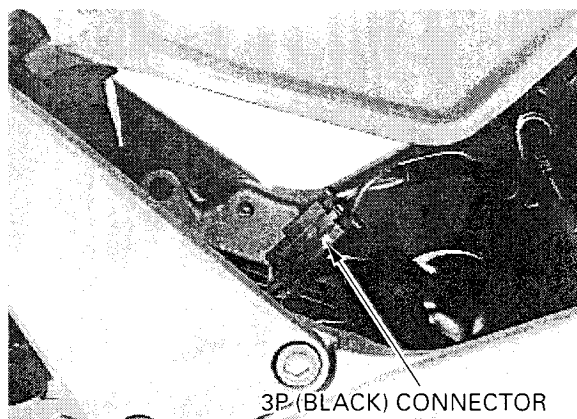

Disconnect the fuel tank air vent tube and overflow tube.

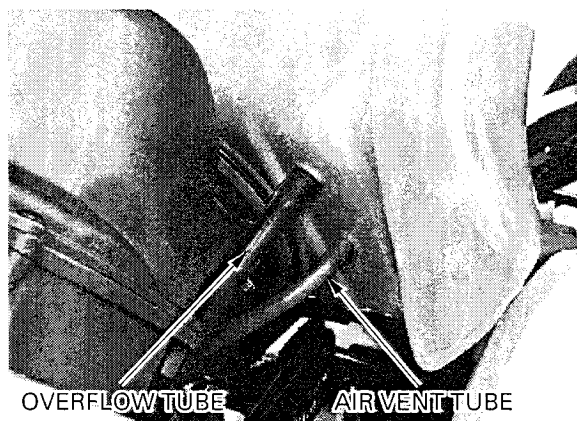


Hold the fuel pipe nut and remove the fuel tube sealing nut and sealing washers, then disconnect the fuel tube. Do not apply excessive force to the fuel pipe.

### NOTICE

- Always hold the fuel pipe nut while removing the fuel tube sealing nut.

Temporarily install a 12 × 30 mm bolt (pitch 1.25) and sealing washers to the fuel tube banjo, then tighten the sealing nut.

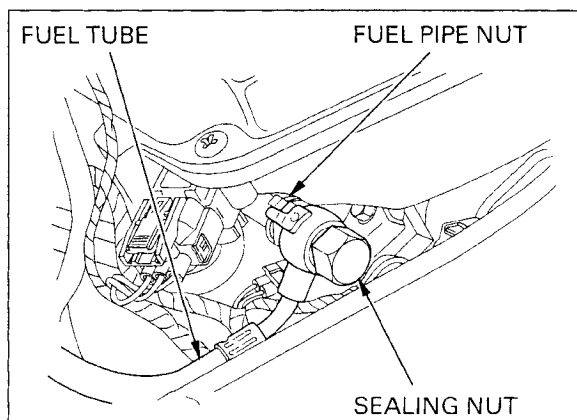




## FUEL SYSTEM (Programmed Fuel Injection)

Disconnect the fuel return tube at the pressure regulator.  
Do not apply excessive force to the fuel pipe.

Remove the fuel tank rear mounting bolt and then remove the fuel tank from the frame.

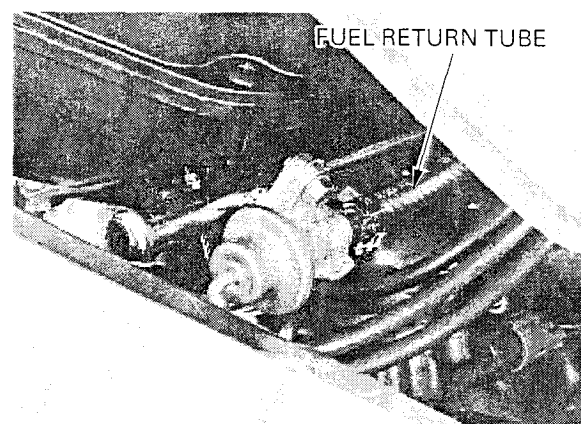


*Be careful not to damage the fuel tank.*


Place the fuel tank upside down.

Disconnect the fuel return tube from the fuel pump. Remove the fuel tube banjo bolt and sealing washers, then remove the fuel tube from the fuel pump.

Refer to page 5-59 for fuel pump removal.

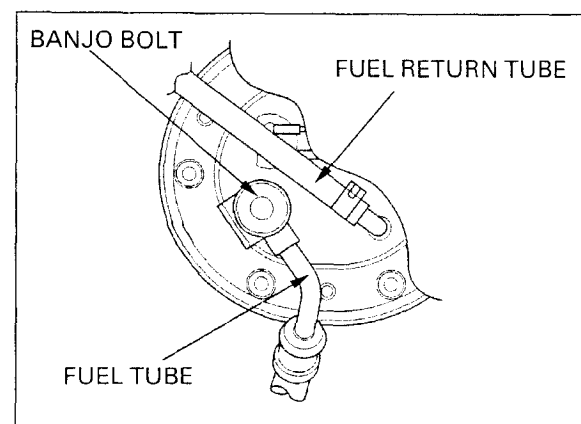

## INSTALLATION

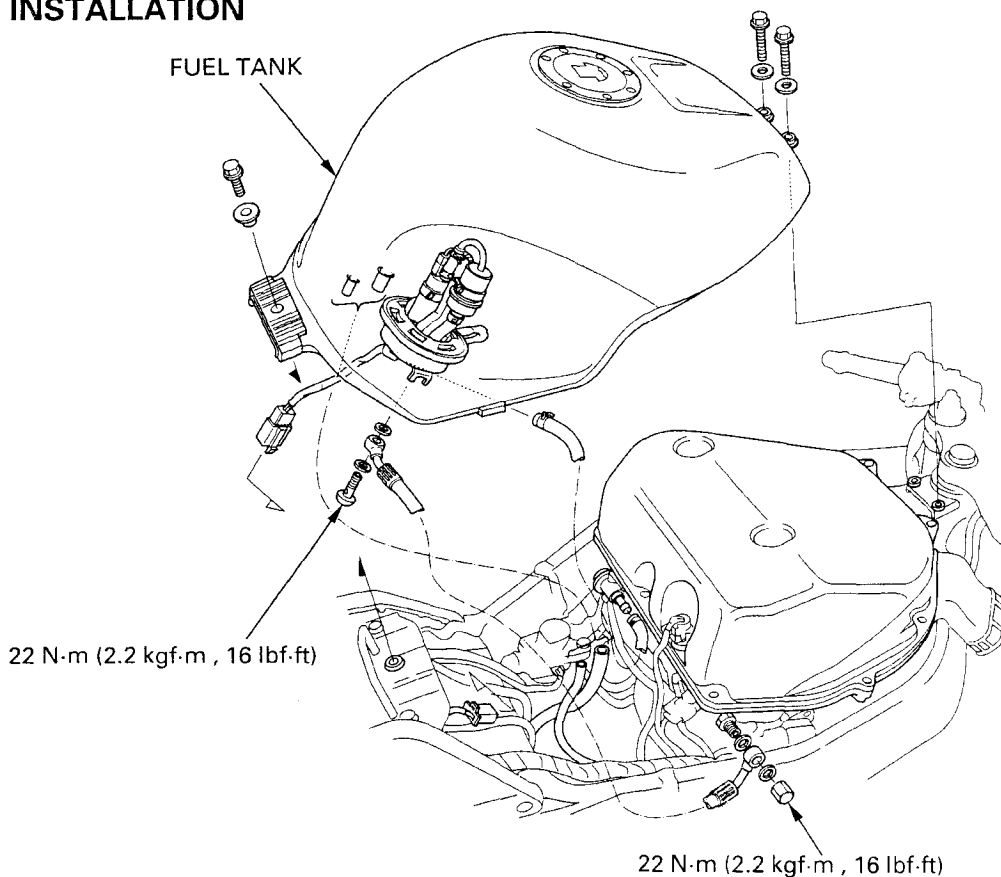

## FUEL SYSTEM (Programmed Fuel Injection)


*Align the fuel tube eyelet joint with the stopper on the fuel pump.*

Connect the fuel tube to the fuel pump with new sealing washers.


Install and tighten the fuel tube banjo bolt to the specified torque.

**TORQUE:** 22 N·m (2.2 kgf·m , 16 lbf·ft)


Connect the fuel return tube to the fuel pump.

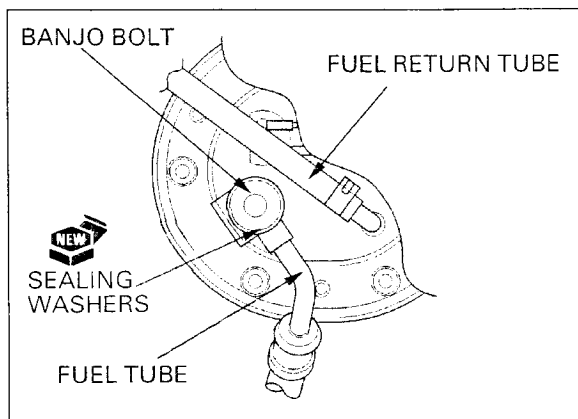


Install the fuel tank onto the frame, temporarily install the fuel tank rear mounting bolt and support the front end of fuel tank using a suitable support (310 mm).

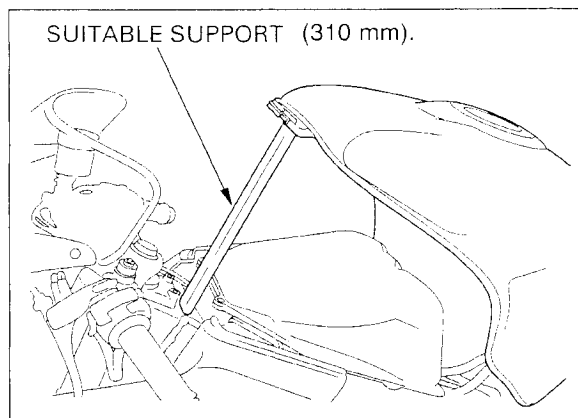

Connect the fuel tank air vent tube and overflow tube to the fuel tank.

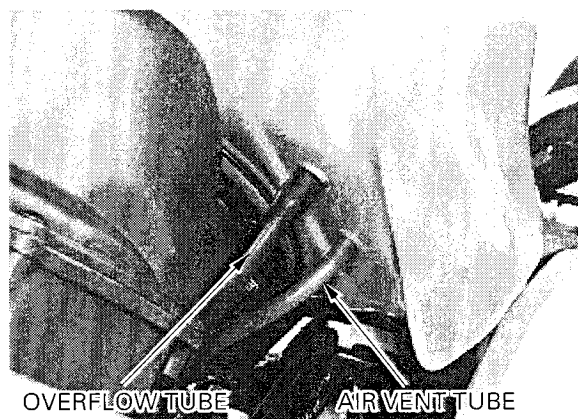

Connect the fuel return tube to the pressure regulator.  
Do not apply excessive force to the fuel pipe.

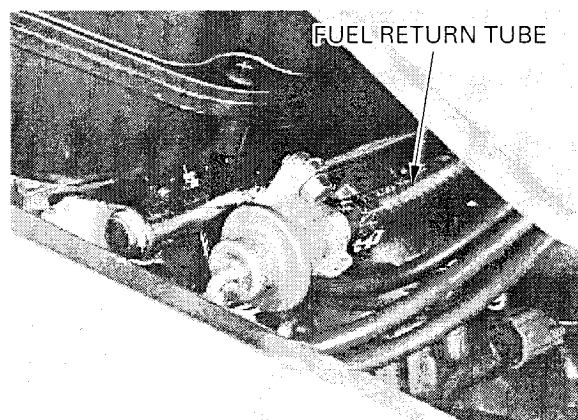

## FUEL SYSTEM (Programmed Fuel Injection)


Connect the fuel tube banjo to the throttle body with new sealing washers.

While pushing the fuel tube banjo stopper to the throttle body, install and tighten the sealing nut to the specified torque.


### NOTICE

- Do not apply excessive force to the fuel pipe.
- Always hold the fuel pipe nut while tightening the fuel tube sealing nut.

**TORQUE:** 22 N·m (2.2 kgf·m , 16 lbf·ft)

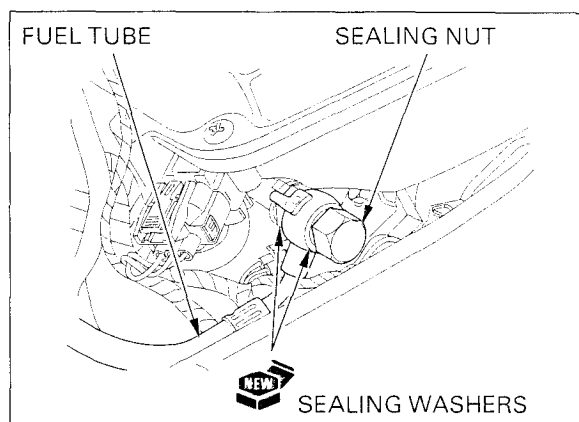


Connect the fuel pump/reserve sensor 3P (Black) connector.

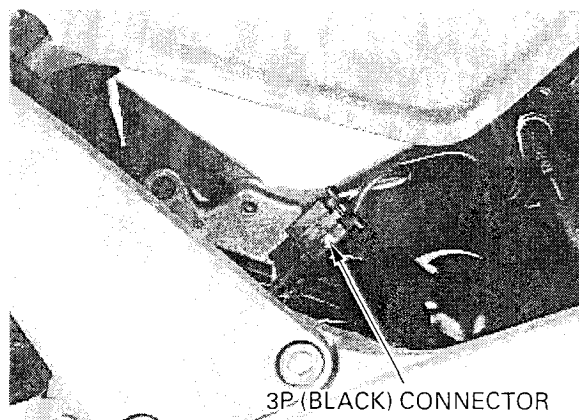


Remove the supporting tool and close the fuel tank.

Install the fuel tank mounting collar and bolt.

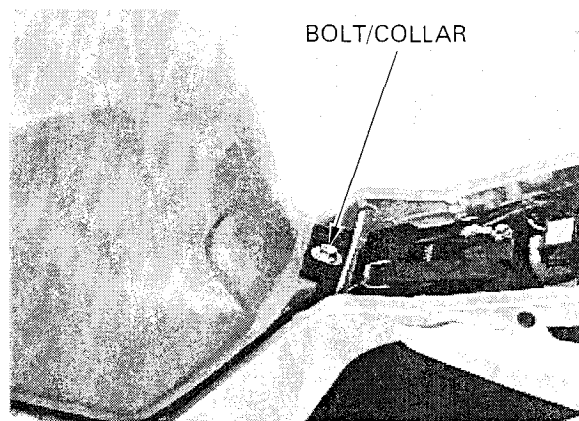

Install the fuel tank front mounting bolts and washers, then tighten the front and rear fuel tank mounting bolts.

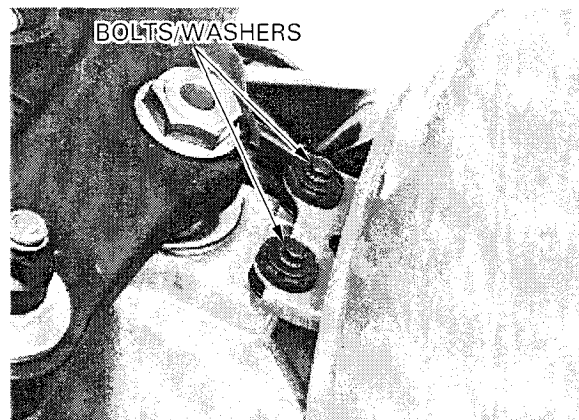




## FUEL SYSTEM (Programmed Fuel Injection)

### AIR CLEANER HOUSING


#### REMOVAL

Remove the air cleaner element (page 3-5).

Remove the EGCV and air intake valve servo motor mounting bolt.

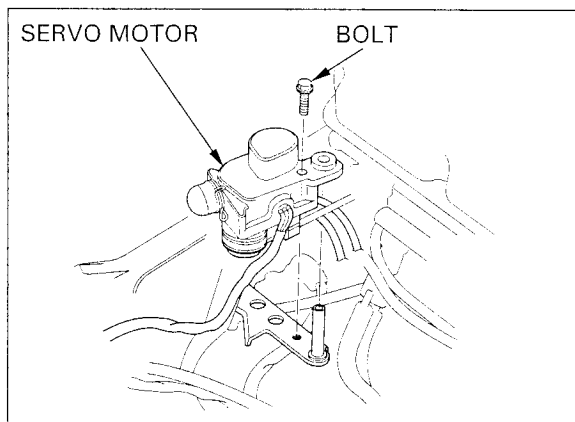


Remove the servo motor assembly from the bracket and disconnect the intake valve control cable from the servo motor pulley.

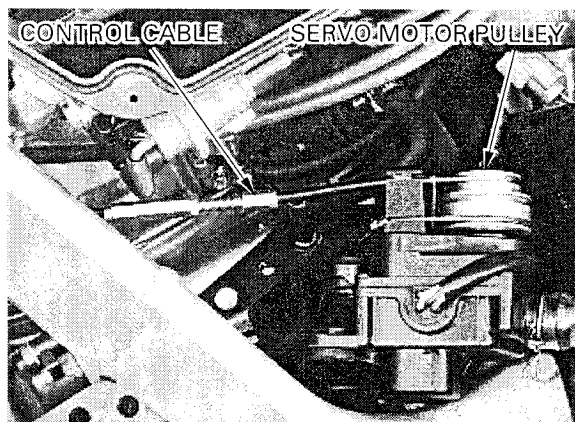

Disconnect the MAP sensor connector and vacuum tube.


Remove the air funnel/air cleaner housing mounting screws, then remove the air funnels.

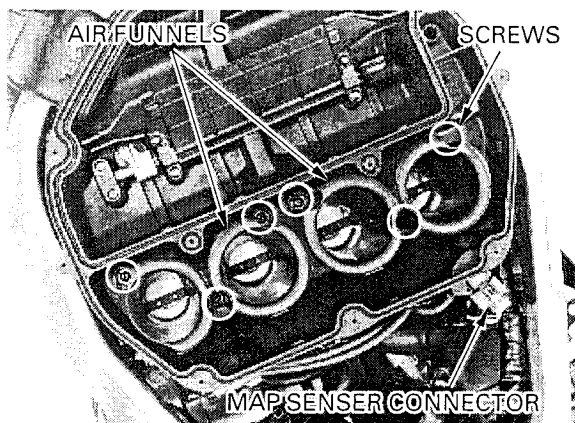

Disconnect the crankcase breather tube and PAIR control valve air suction tube from the air cleaner housing.

Remove the air cleaner housing.

See page 5-107 for intake air control valve disassembly/assembly.

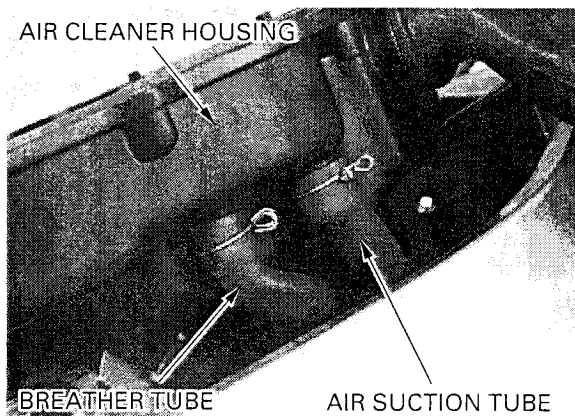


## FUEL SYSTEM (Programmed Fuel Injection)


### INSTALLATION

Route the variable intake air control valve wire properly, then install the air cleaner housing onto the throttle body.


Connect the crankcase breather tube and PAIR control valve air suction tube to the air cleaner housing.

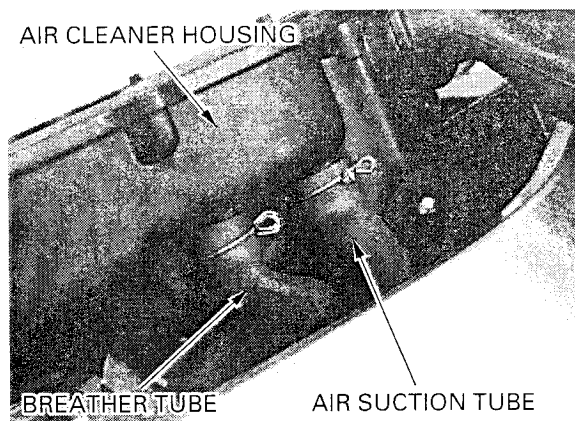

Install the air funnels in their proper locations.  
Install and tighten the air funnel/air cleaner housing mounting screws.  
Connect the MAP sensor connector and vacuum tube.

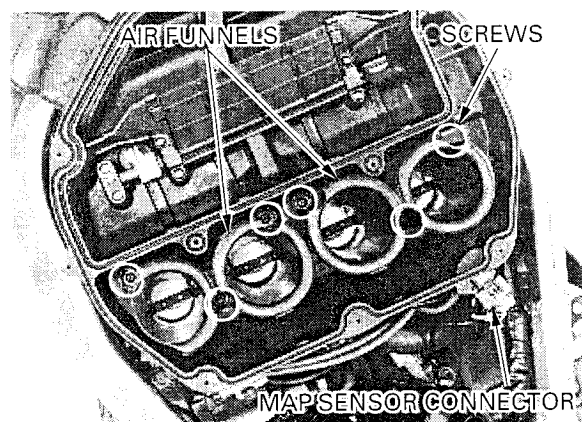


Connect the variable air intake control cable to the servo motor pulley.

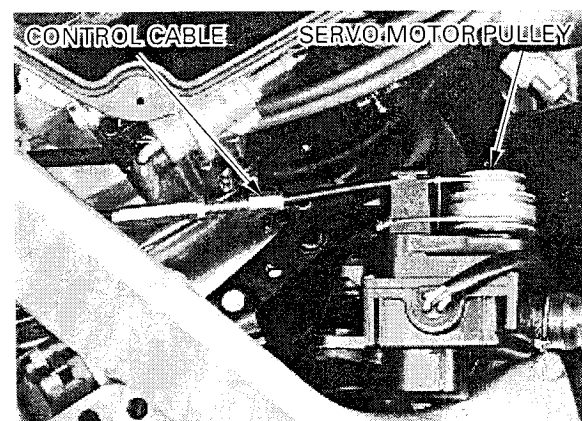

Install the servo motor onto the bracket, then tighten the bolt securely.

Install the air cleaner element (page 3-5).

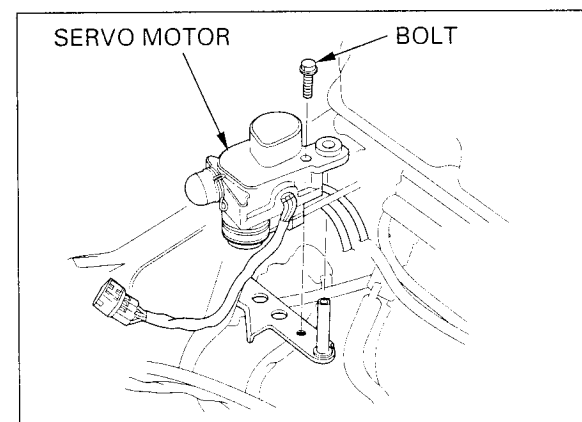



## FUEL SYSTEM (Programmed Fuel Injection)

### THROTTLE BODY

#### REMOVAL

##### NOTICE

- Before disconnecting the fuel tube, release the fuel pressure by loosening the fuel tube banjo bolt.
- Always replace the sealing washers when the fuel tube banjo bolt is removed or loosened.

Drain the coolant from the cooling system (page 6-4).

Remove the following:

- Fuel tank (page 5-61)
- Air cleaner housing (page 5-66)

Remove the throttle cable guide bracket mounting bolts.

*Do not snap the throttle valve from full open to full close after the throttle cable has been removed. It may cause incorrect idle operation.*





Disconnect the throttle cable ends from the throttle drum.

Remove the throttle stop screw knob from the bracket.

Loosen the hose band screws and disconnect the fast idle wax unit water hoses from the wax unit.

Disconnect the TP sensor connector and fuel injector connectors.

If you will not be disassembling the throttle body, disconnect the throttle body sub-harness multi-connector.

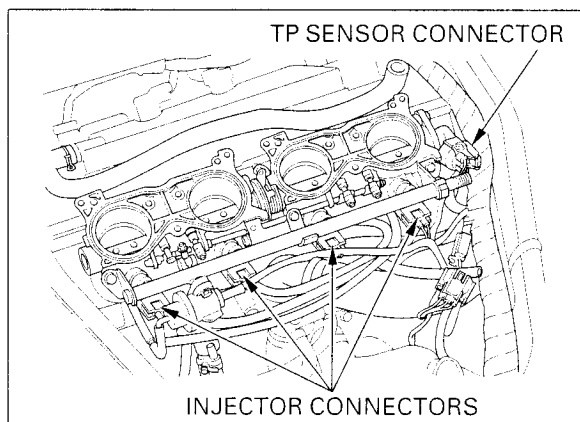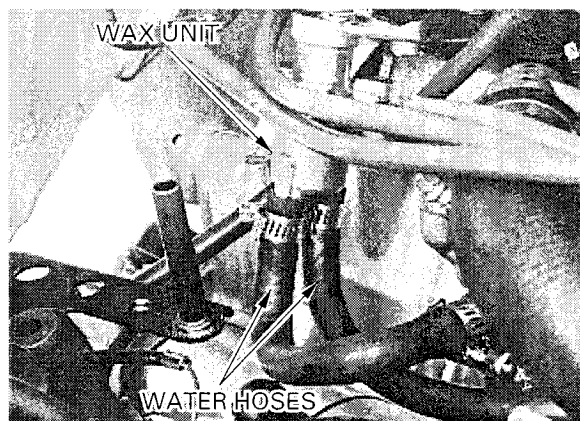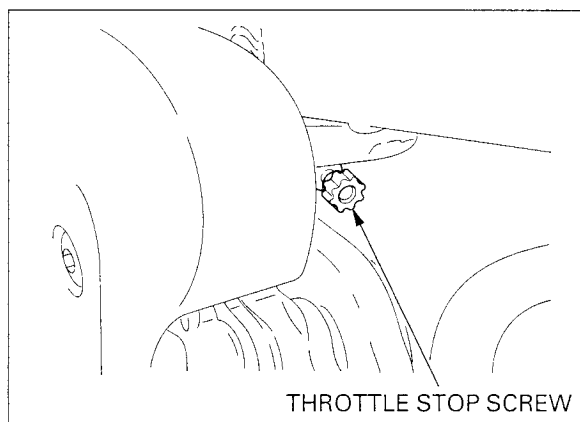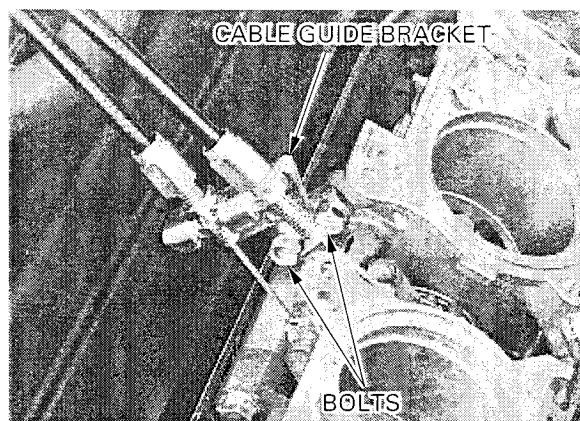


## FUEL SYSTEM (Programmed Fuel Injection)

Loosen the engine side insulator band screws.

Remove the throttle body from the cylinder head.

### NOTICE

*Do not hold the fuel pipe on the throttle body while removing the throttle body.*

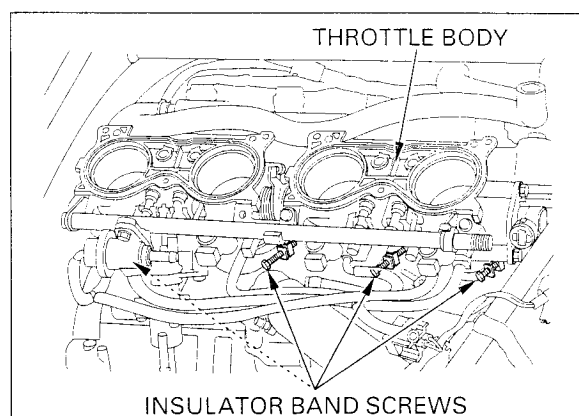


*Do not snap the throttle valve from full open to full close after the throttle cable has been removed. It may cause incorrect idle operation.*

Remove the insulators from the throttle body.

### NOTICE


*Seal the cylinder head intake ports with tape or a clean cloth to keep dirt and debris from entering the intake ports after the throttle body has been removed.*

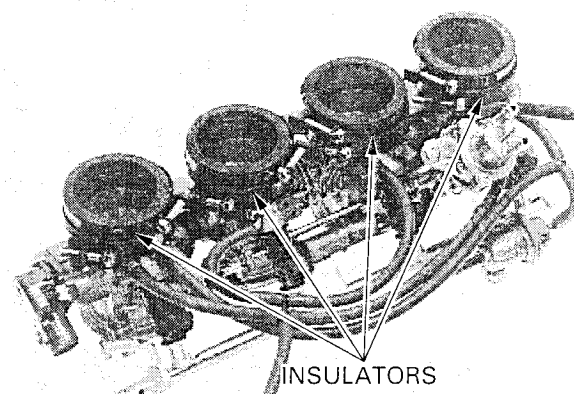

### NOTICE


- *Do not damage the throttle body. It may cause incorrect throttle and idle valve synchronization.*
- *The throttle body is factory pre-set. Do not disassemble in a way other than shown in this manual.*
- *Do not loosen or tighten the white painted bolts and screws of the throttle body. Loosening or tightening them can cause throttle and idle valve synchronization failure.*

TOP VIEW:

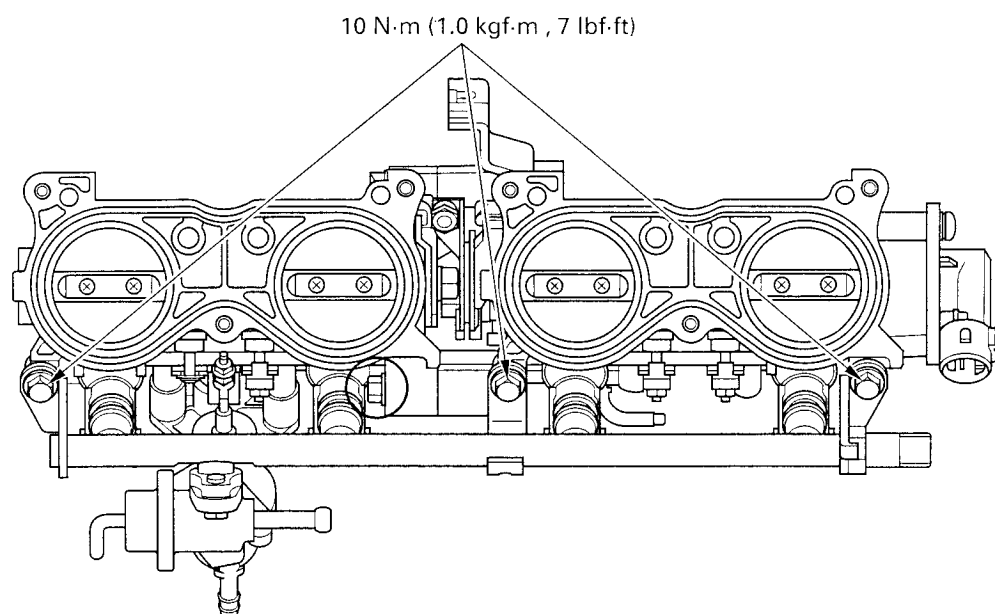


## FUEL SYSTEM (Programmed Fuel Injection)

### REAR VIEW:

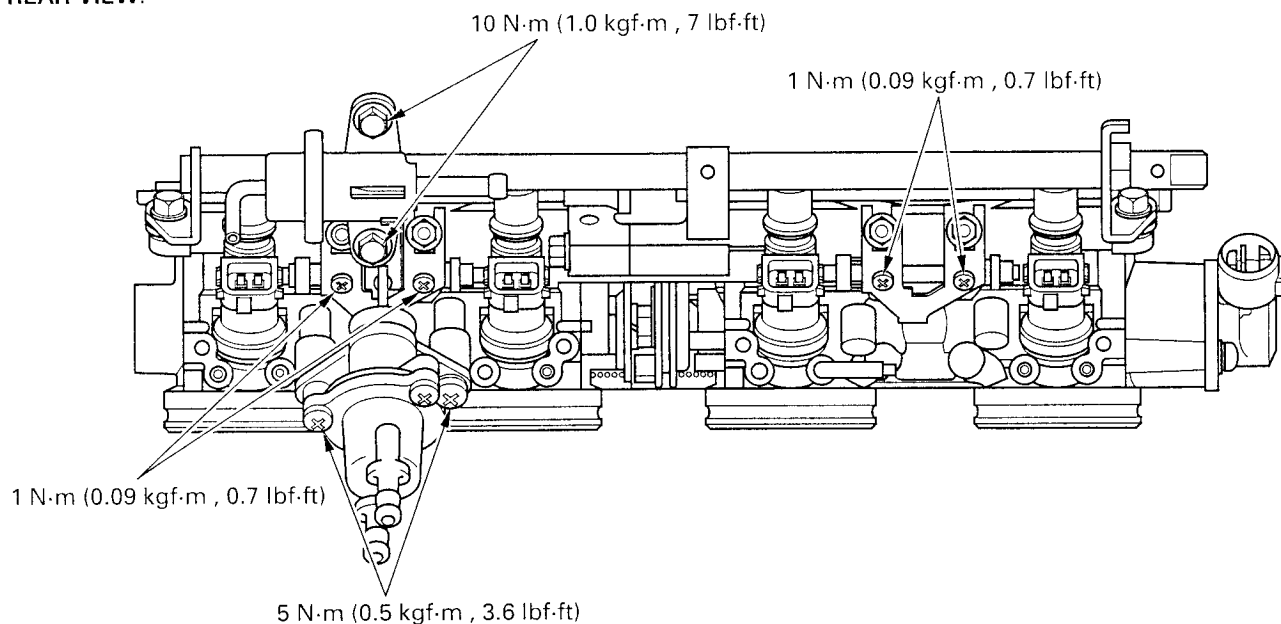


### THROTTLE DRUM VIEW:

3 N·m (0.35 kgf·m , 2.5 lbf·ft)

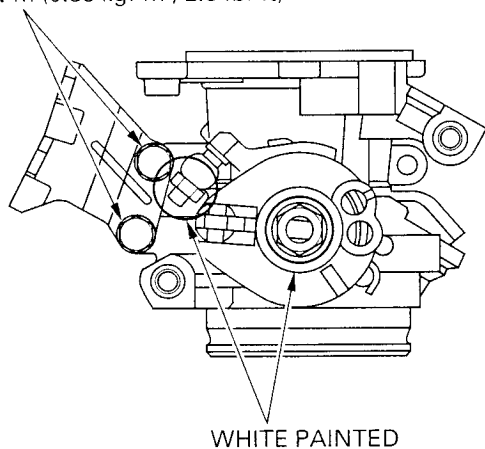


### RIGHT SIDE VIEW:

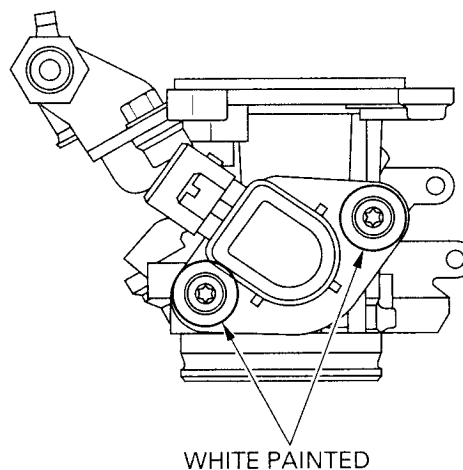


### THROTTLE LINK VIEW:

**WHITE PAINTED**

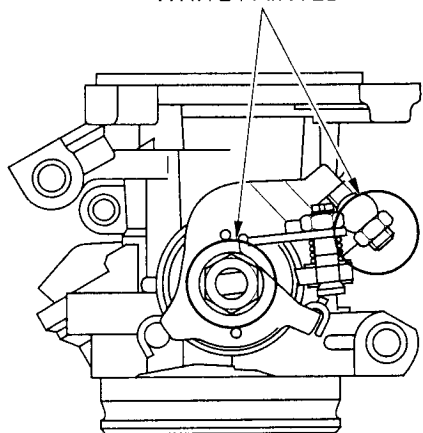

### STARTER VALVE LINK VIEW:


**WHITE PAINTED**

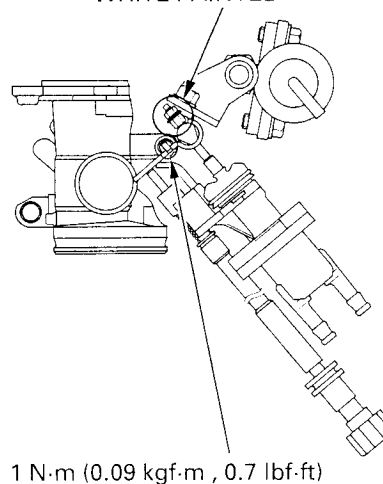


1 N·m (0.09 kgf·m , 0.7 lbf·ft)

## THROTTLE BODY VACUUM TUBE ROUTING

Except California type:

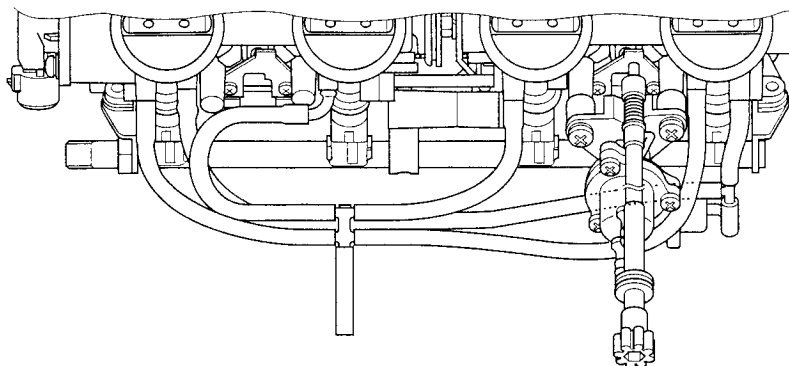


California type:

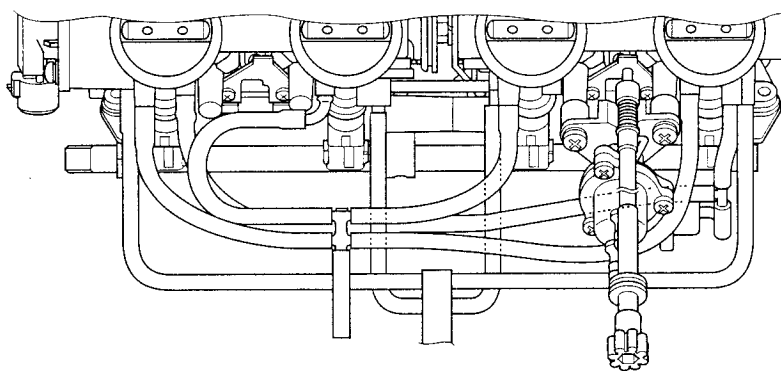

## INSTALLATION

Check the insulator band angle.

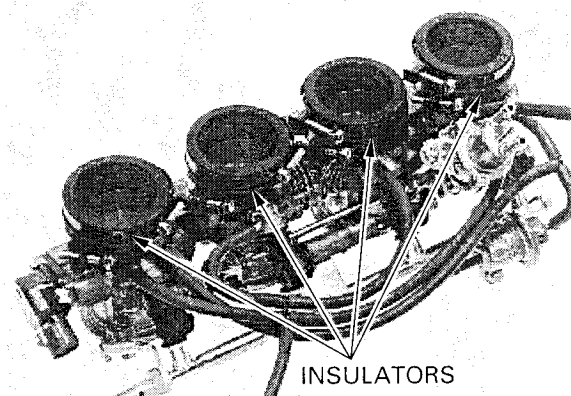


Apply oil to the insulator inside surfaces for ease of throttle body installation.

Install the throttle body onto the cylinder head.

### NOTICE


*Do not hold the fuel pipe on the throttle body while installing the throttle body.*

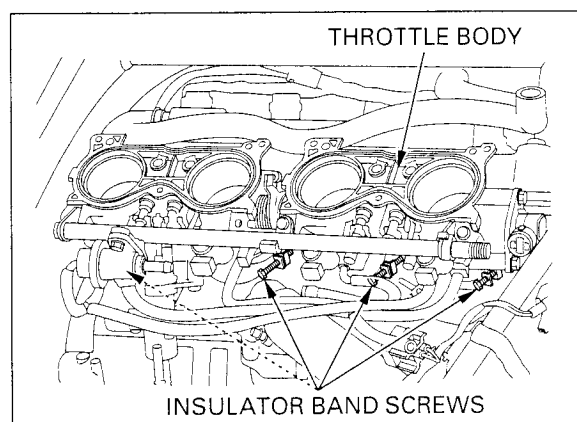




## FUEL SYSTEM (Programmed Fuel Injection)


Tighten the insulator band so that the insulator band distance is  $12 \pm 1$  mm ( $0.5 \pm 0.04$  in).

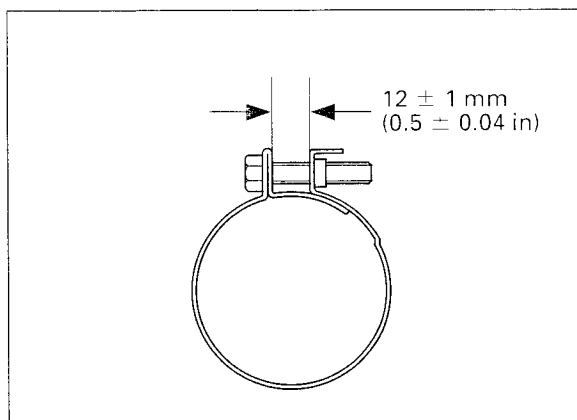

Route the injector sub-harness referring the wiring diagram (page 1-23).  
Connect the fuel injector connectors and TP sensor connector.

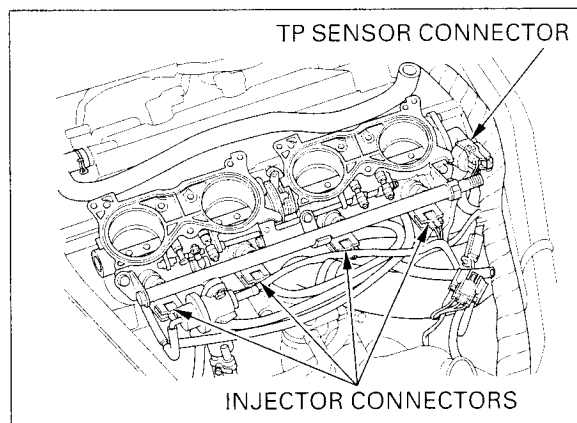


Connect the fast idle wax unit water hoses to the unit, then tighten the tube bands securely.

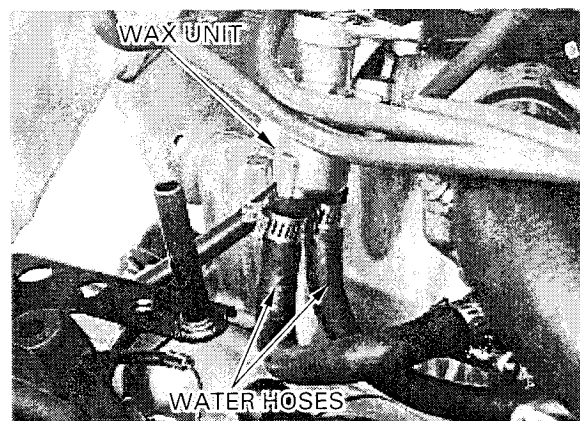

Install the throttle cable guide bracket to the throttle body, then tighten the bolts to the specified torque.

**TORQUE:** 3 N·m (0.35 kgf·m , 2.5 lbf·ft)

Install the removed parts in the reverse order of removal.

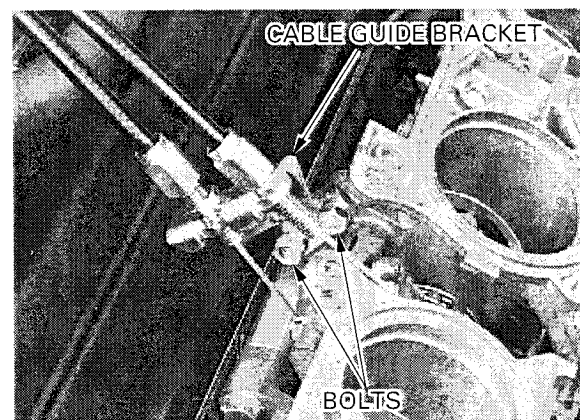


## INJECTOR

### INSPECTION

Start the engine and let it idle.  
Confirm the injector operating sounds with a sounding rod or stethoscope.


If the injector does not operate, replace the injector.

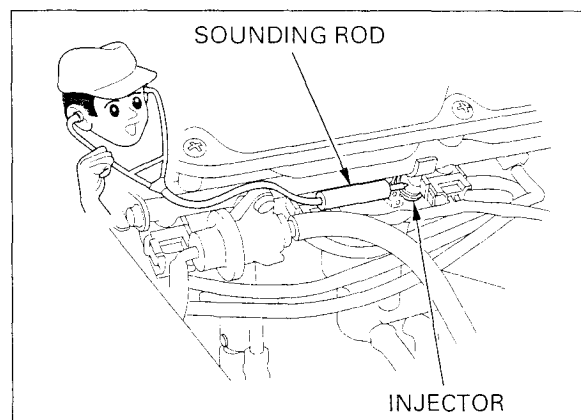


### REMOVAL

Remove the throttle body (page 5-68).


Remove the bolts and fuel pipe assembly.

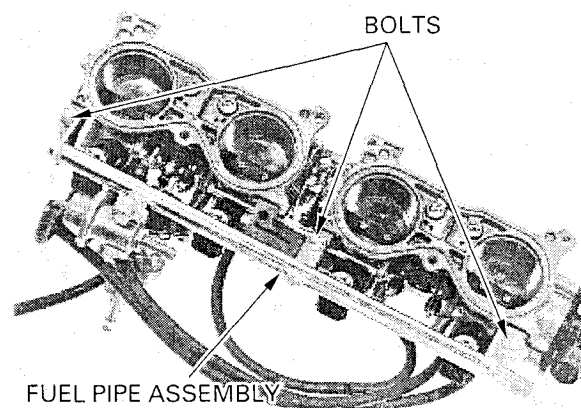

Remove the injectors from the fuel pipe.

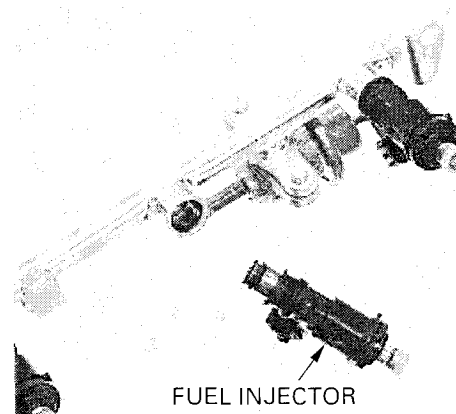

Remove the seal ring, O-ring and cushion ring.

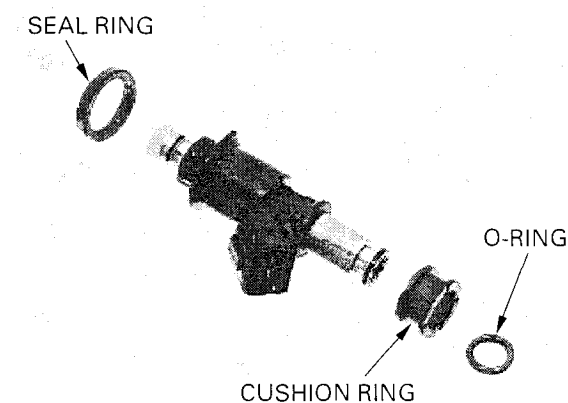


## FUEL SYSTEM (Programmed Fuel Injection)


### INSTALLATION

*Replace the seal ring, cushion ring and O-ring with new ones as a set.*


Apply oil to the new O-ring.  
Install the new seal ring, cushion ring and O-ring, being careful not to damage the O-ring.

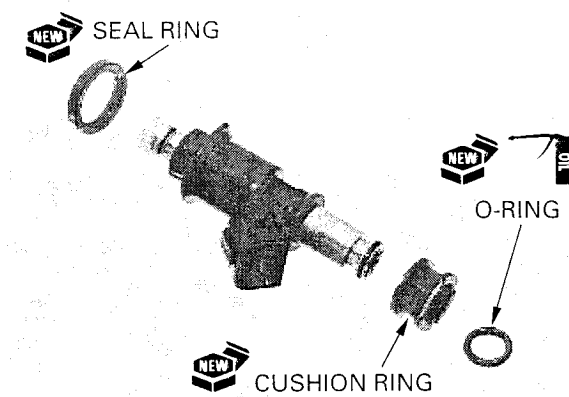

Install the fuel injectors into the fuel pipe, being careful not to damage the O-ring and cushion ring.

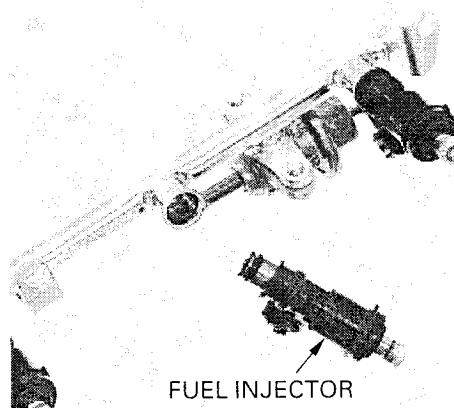


Install the fuel pipe assembly onto the throttle body, being careful not to damage the seal rings.

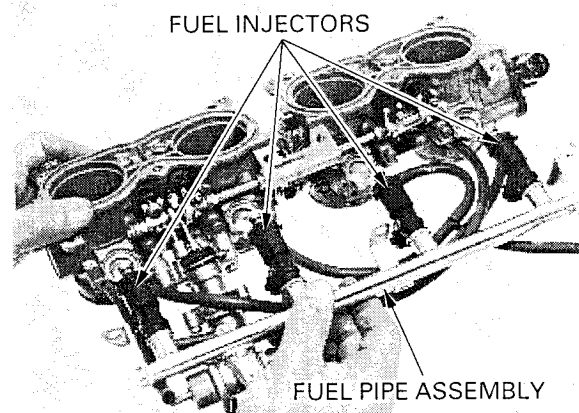

Install and tighten the fuel pipe mounting bolts to the specified torque.

**TORQUE:** 10 N·m (1.0 kgf·m, 7 lbf·ft)

Install the throttle body (page 5-71).

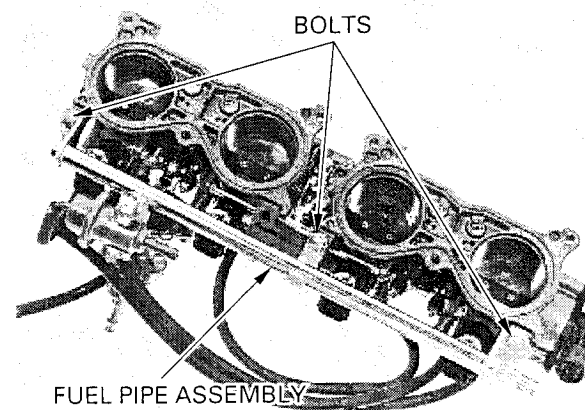

## PRESSURE REGULATOR

### REMOVAL/INSTALLATION

#### NOTICE

*Do not apply excessive force to the fuel pipe.*

Disconnect the vacuum tube from the pressure regulator.

Hold the fuel pipe securely, remove the pressure regulator mounting bolts, then remove the pressure regulator.




Install a new O-ring into the pressure regulator body.

Install the pressure regulator onto the fuel pipe.

Hold the fuel pipe securely, tighten the pressure regulator mounting bolts to the specified torque.

**TORQUE:** 10 N·m (1.0 kgf·m , 7 lbf·ft)

Connect the vacuum tube to the pressure regulator.

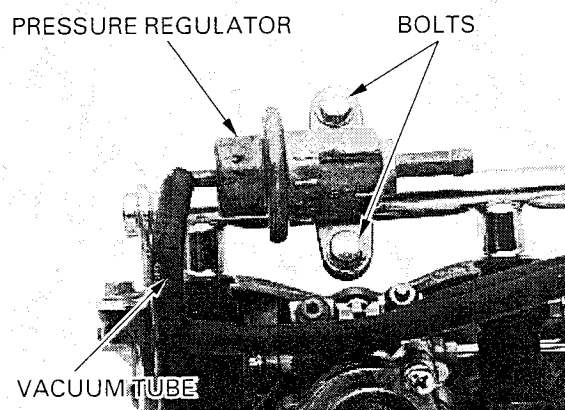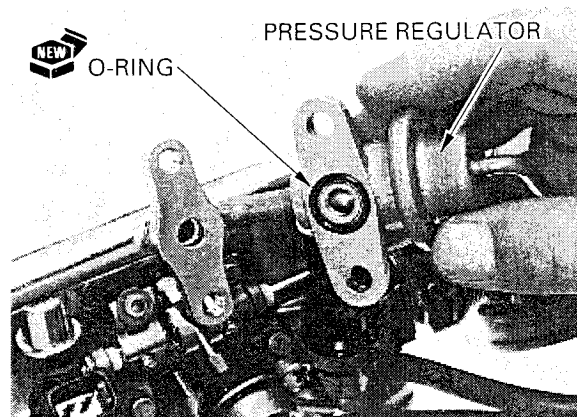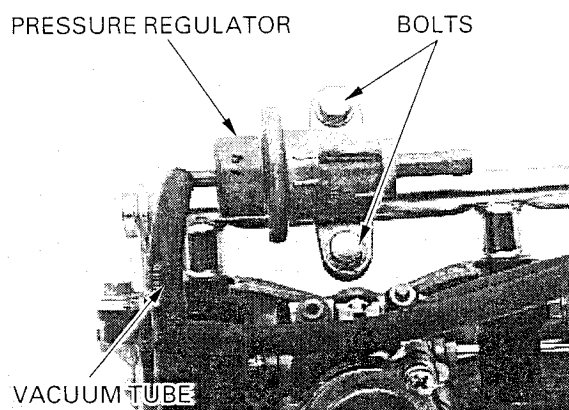


## FAST IDLE WAX UNIT

### DISASSEMBLY

*Do not loosen or remove the wax unit shaft lock nut and adjusting nut.*


Remove the wax unit mounting screws.

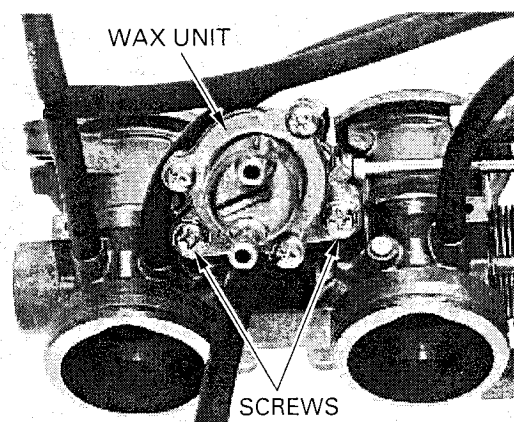




## FUEL SYSTEM (Programmed Fuel Injection)


Release the wax unit shaft joint piece from the wax unit link arm, then remove the wax unit assembly.

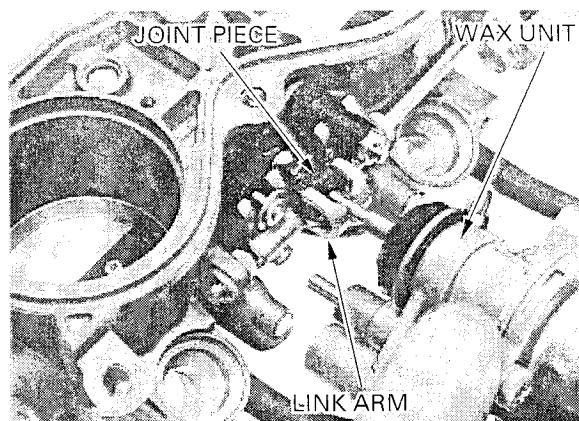

Remove the three wax element cover mounting screws in a criss-cross pattern in 2 – 3 steps.

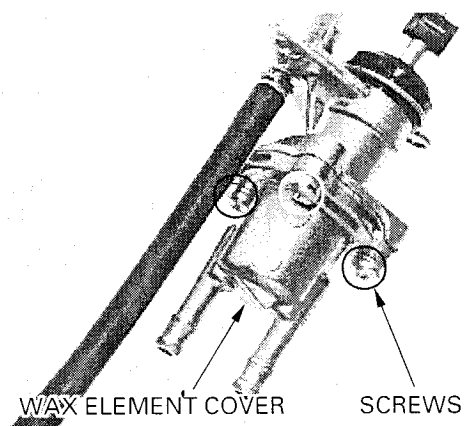


Remove the wax element, spring seat and compression spring.

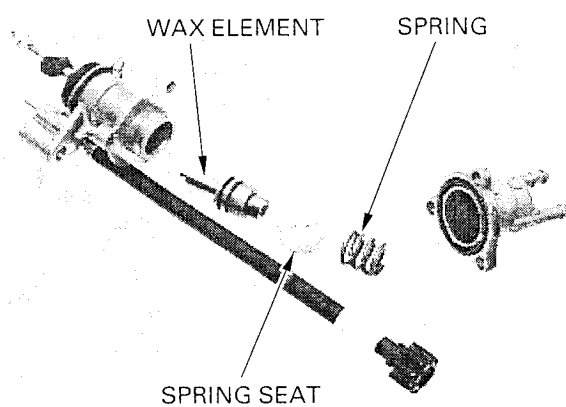

### INSPECTION

Visually inspect the wax element for damage and return spring for fatigue or damage.

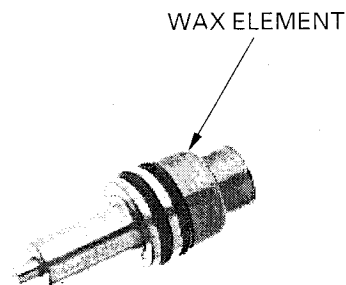


## FUEL SYSTEM (Programmed Fuel Injection)


### ASSEMBLY

Install new O-rings onto the wax element grooves.  
Install a new O-ring into the groove of the wax element cover.


Install the wax element, spring seat and compression spring.

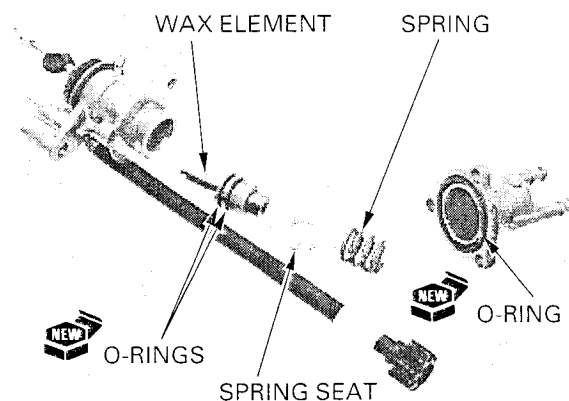

Install the wax element cover and mounting screws.  
Tighten the screws in a criss-cross pattern in 2—3 steps.

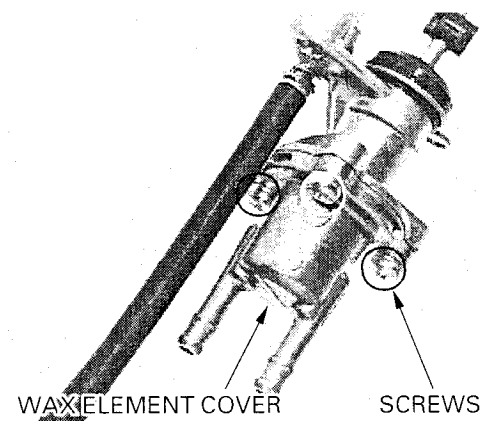


Install the wax unit shaft joint piece to the wax unit link arm.

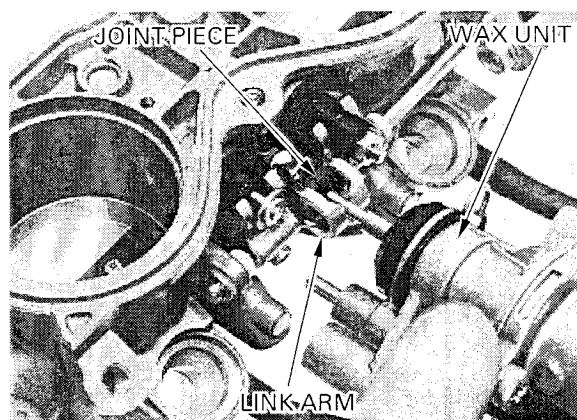

Install and tighten the wax unit mounting screws to the specified torque.

**TORQUE:** 5 N·m (0.5 kgf·m , 3.6 lbf·ft)

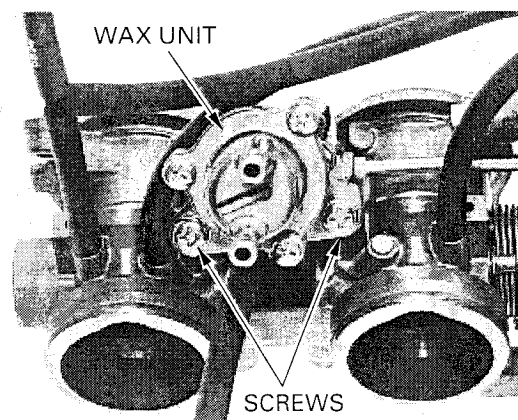



## FUEL SYSTEM (Programmed Fuel Injection)


### STARTER VALVE

#### DISASSEMBLY

Remove the fuel pipe and injectors (page 5-73).

Turn each starter valve adjusting screw in, counting number of turns until it seats lightly.


Record the number of turns.

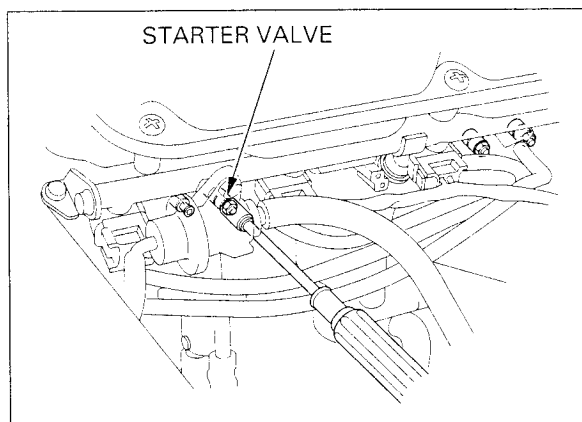

#### No. 3/4 starter valve:

Remove the starter valve arm screws and starter valve arm.

#### No. 3/4 STARTER VALVE:

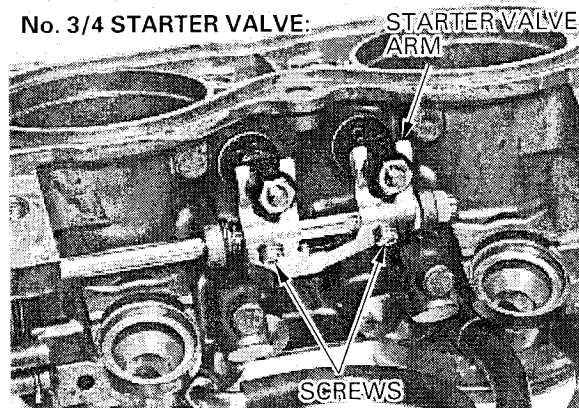


#### No. 1/2 starter valve:

Remove the fast idle wax unit (page 5-75).


Remove the starter valve arm screws and starter valve arms.

Remove the screw and fast idle wax unit link arm.

#### No. 1/2 STARTER VALVE:

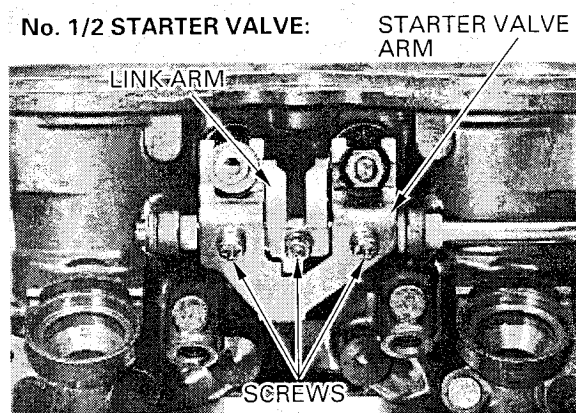


Loosen the lock nut and remove the starter valve assembly.

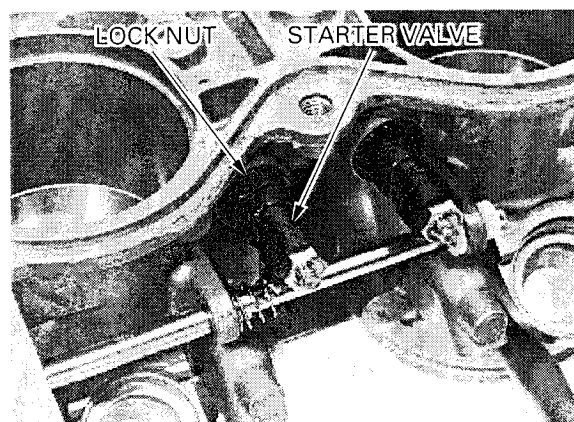


## FUEL SYSTEM (Programmed Fuel Injection)

Do not apply commercially available carburetor cleaners to the inside of the throttle bore, which is coated with molybdenum.


Clean the starter valve bypass using compressed air.

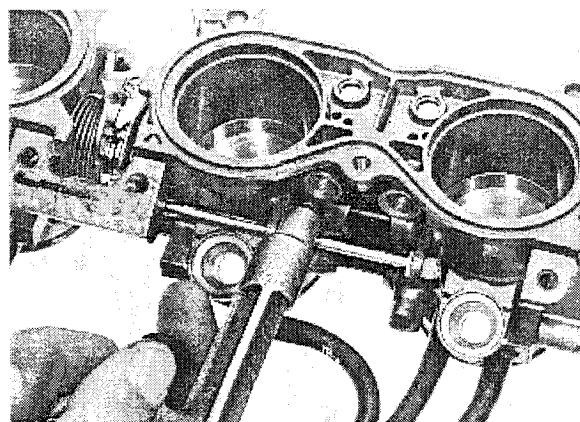

Remove the starter valve shaft, three collars and thrust spring.

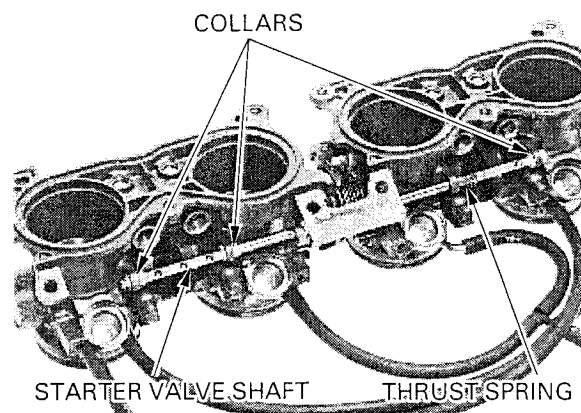


### ASSEMBLY

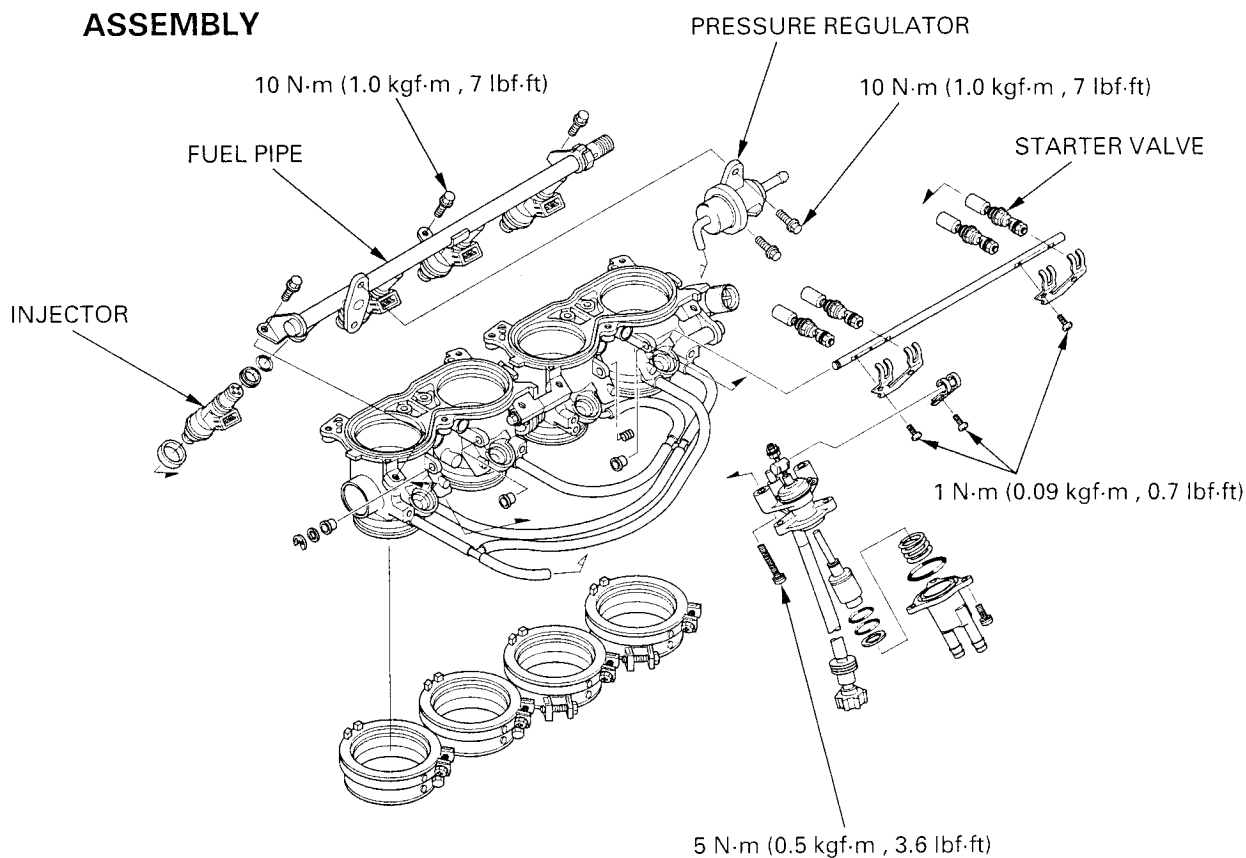




## FUEL SYSTEM (Programmed Fuel Injection)

Install the three collars, thrust spring and starter valve shaft.

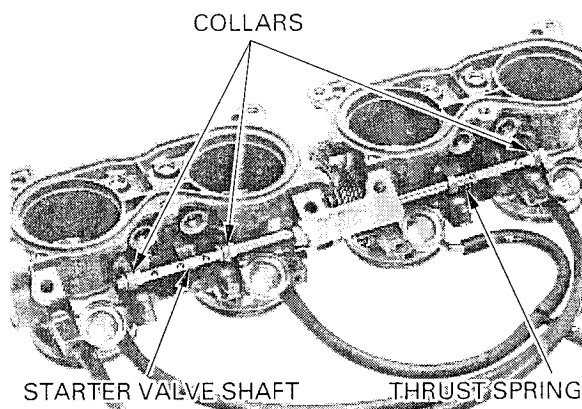


Install the starter valve assembly into the valve hole.

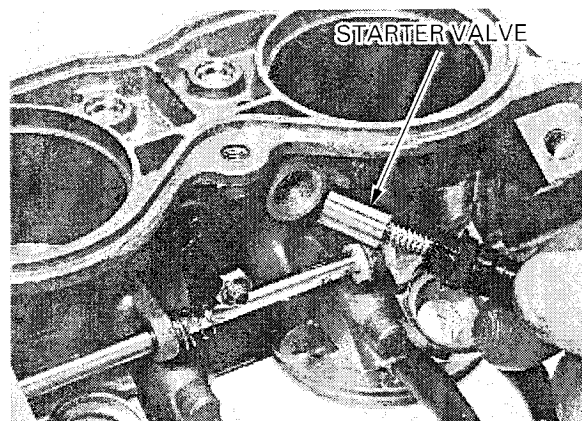

Tighten the starter valve lock nut to the specified torque.


**TORQUE:** 2 N·m (0.18 kgf·m , 1.3 lbf·ft)

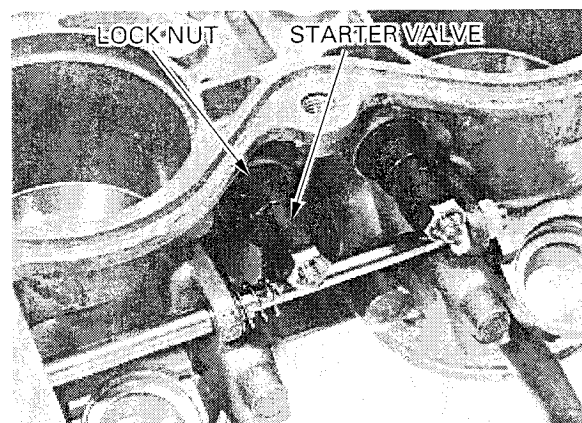

### No. 3/4 starter valve:

Compress the thrust spring and install the No. 3/4 starter valve arm onto the starter valves. Install and tighten the starter valve arm mounting screws to the specified torque.

**TORQUE:** 1 N·m (0.09 kgf·m , 0.7 lbf·ft)

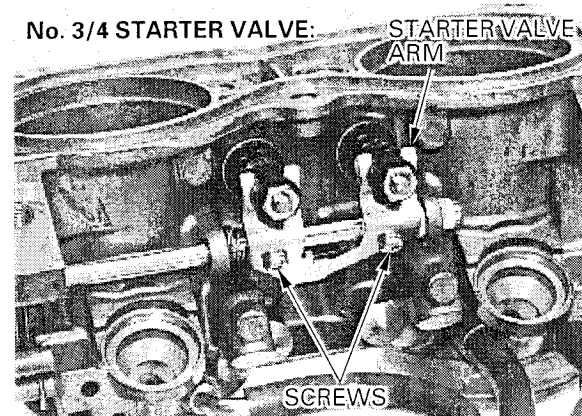

## FUEL SYSTEM (Programmed Fuel Injection)

### No. 1/2 starter valve:

Install the No. 1/2 starter valve arm to the starter valves.

Install and tighten the starter valve arm mounting screws to the specified torque.

**TORQUE:** 1 N·m (0.09 kgf·m , 0.7 lbf·ft)

Install the fast idle wax unit link arm and tighten the screw to the specified torque.


**TORQUE:** 1 N·m (0.09 kgf·m , 0.7 lbf·ft)

Install the fast idle wax unit (page 5-77).


Turn the starter valve screw until it seats lightly, then back it out as noted during removal.

Install the throttle body (page 5-71).

No. 1/2 STARTER VALVE: STARTER VALVE ARM

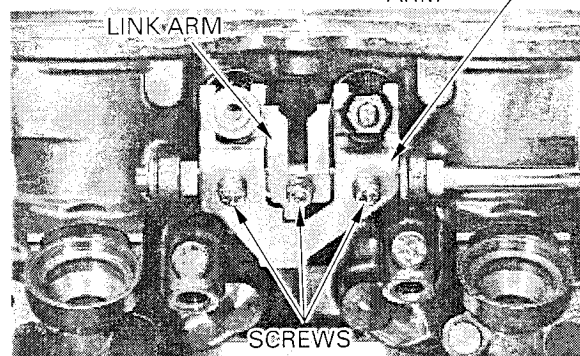

STARTER VALVE

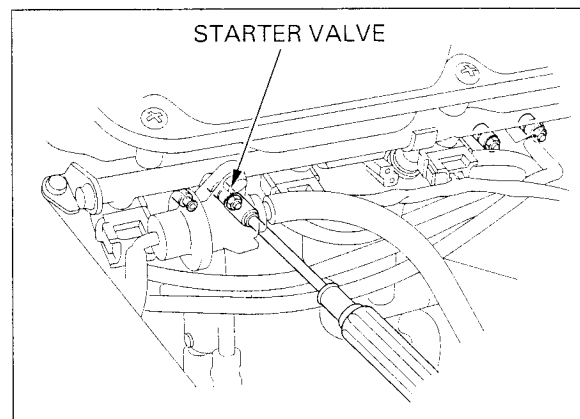

## STARTER VALVE SYNCHRONIZATION

- Synchronize the starter valve with the engine at the normal operating temperature and with the transmission in neutral.
- Use a tachometer with graduations of 50 rpm or smaller that will accurately indicate 50 rpm change.


Open and support the front end of fuel tank (page 3-4).

Remove the vacuum joint screws.


Connect the vacuum gauge adaptors to the vacuum joints, then connect the tubes to the vacuum gauge.

Connect the tachometer.

VACUUM JOINT SCREWS

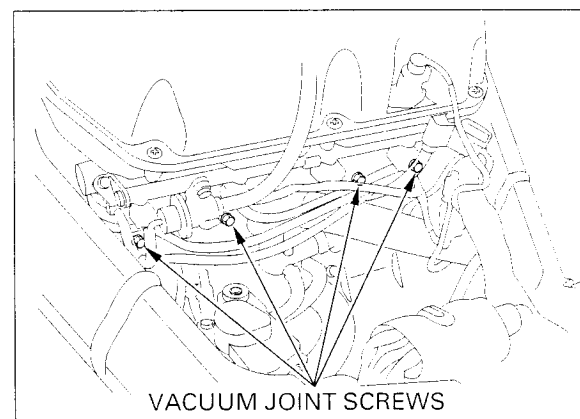


VACUUM GAUGE

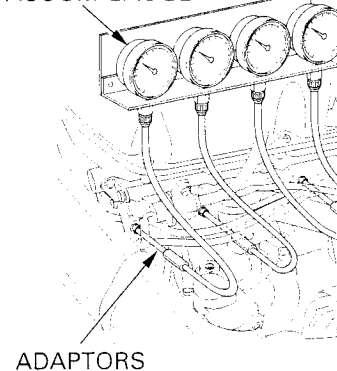


## FUEL SYSTEM (Programmed Fuel Injection)

Disconnect the PAIR air suction hoses from the reed valve covers and plug the cover.

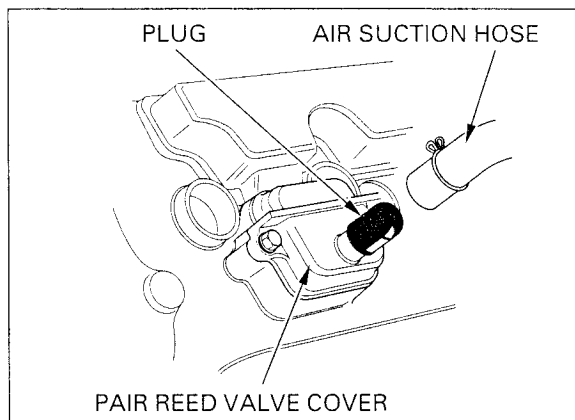


Start the engine and adjust the idle speed.

**IDLE SPEED:**  $1,200 \pm 100$  rpm

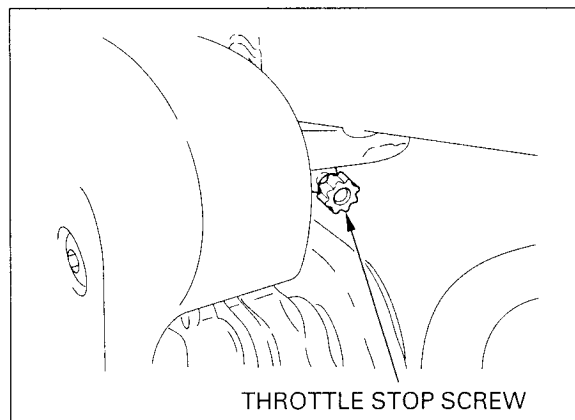


*The No. 1 starter valve cannot be adjusted, it is the base starter valve.*

Adjust each intake vacuum pressure with the No. 1 cylinder.

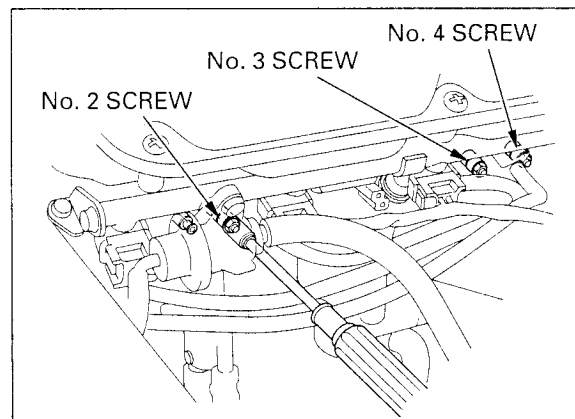


Remove the plugs and connect the PAIR air suction hoses to the reed valve covers.

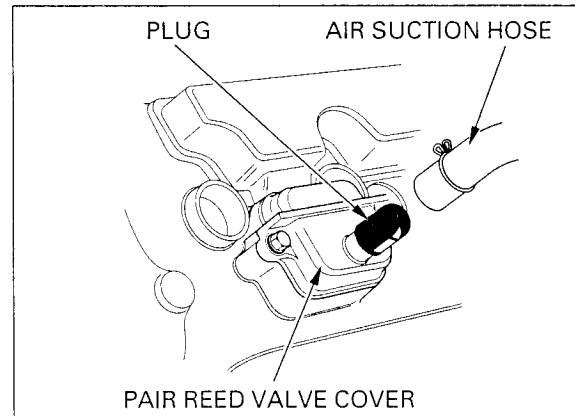

## FUEL SYSTEM (Programmed Fuel Injection)


Adjust the idle speed if the idle speed differs from the specified speed.

**IDLE SPEED:**  $1,200 \pm 100$  rpm

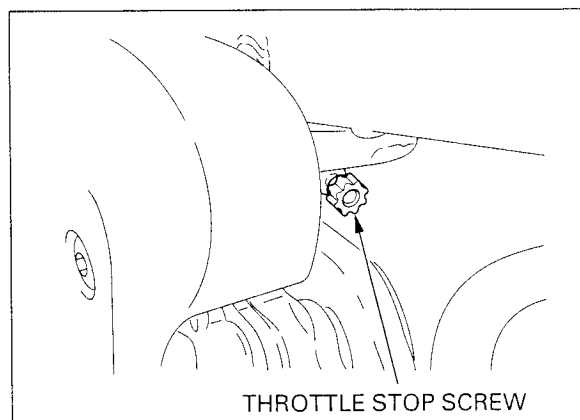

Remove the vacuum gauge and adaptors. Install and tighten the intake port vacuum joint screws to the specified torque.

**TORQUE:** 3 N·m (0.3 kgf·m , 2.2 lbf·ft)

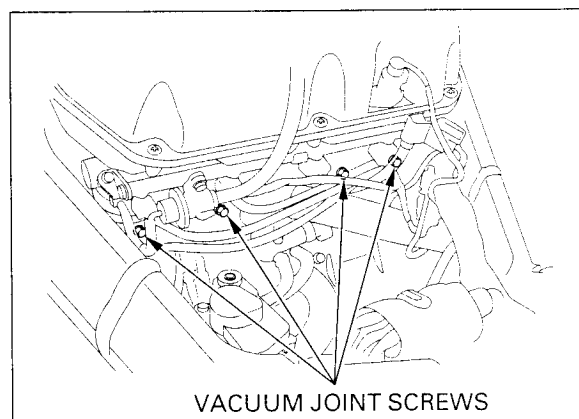

## MAP SENSOR

### OUTPUT VOLTAGE INSPECTION

Connect the test harness to the ECM (page 5-8).

Measure the voltage at the test harness terminals (page 5-9).


**CONNECTION:** B7 (+) – B1 (–)

**STANDARD:** 2.7 – 3.1 V

The MAP sensor output voltage (above) is measured under the standard atmosphere (1 atm = 1,030 hPa).

The MAP sensor output voltage is affected by the distance above sea level, because the output voltage is changed by atmosphere.

Check the sea level measurement and be sure that the measured voltage falls within the specified value.

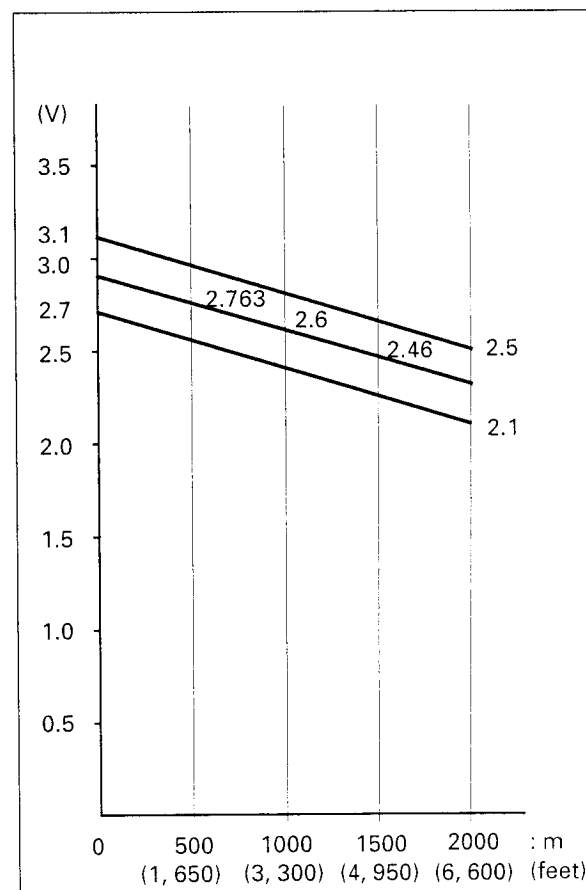




## FUEL SYSTEM (Programmed Fuel Injection)

### MAP SENSOR REMOVAL/INSTALLATION

Open and support the front end of fuel tank (page 3-4).


Disconnect the MAP sensor connector.

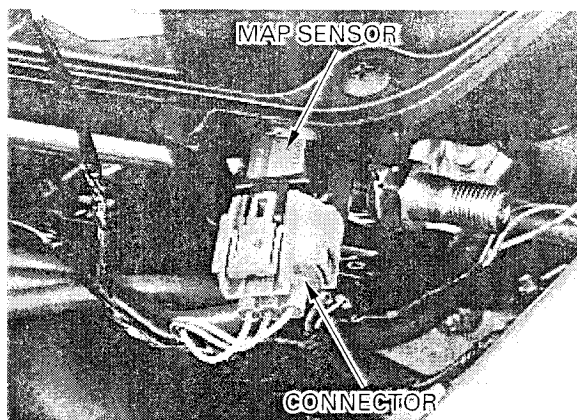

Disconnect the vacuum tube.

Remove the screw and MAP sensor from the air cleaner housing.

Installation is in the reverse order of removal.

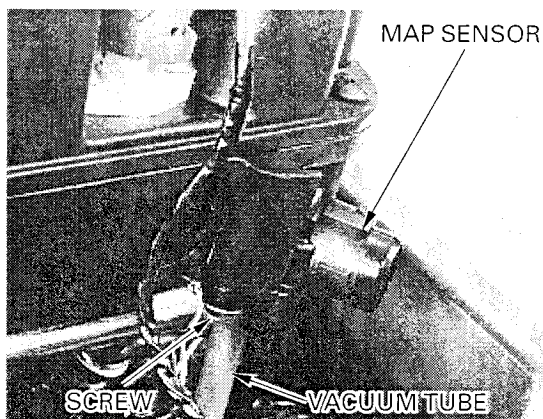


## IAT SENSOR

### REMOVAL/INSTALLATION

Open and support the front end of fuel tank (page 3-4).

Disconnect the IAT sensor connector.

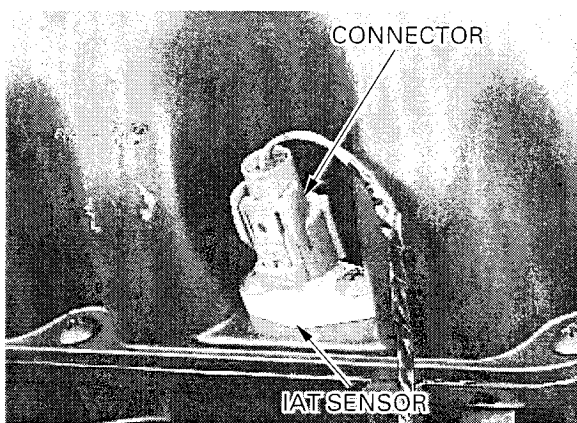

Remove the screws and IAT sensor from the air cleaner housing cover.

Installation is in the reverse order of removal.




## ECT SENSOR

*Replace the ECT sensor while the engine is cold.*

### REMOVAL/INSTALLATION

Drain the coolant from the system (page 6-5).  
Open and support the front end of fuel tank (page 3-4).

Disconnect the ECT sensor connector from the sensor.  
Remove the ECT sensor and sealing washer.

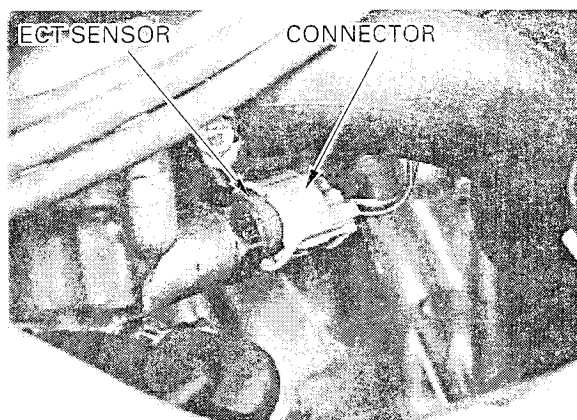


*Always replace a sealing washer with a new one.*

Install the new sealing washer and ECT sensor.  
Tighten the ECT sensor to the specified torque.

**TORQUE:** 23 N·m (2.3 kgf·m , 17 lbf·ft)

Connect the ECT sensor connector.

Fill the cooling system with recommended coolant (page 6-5).

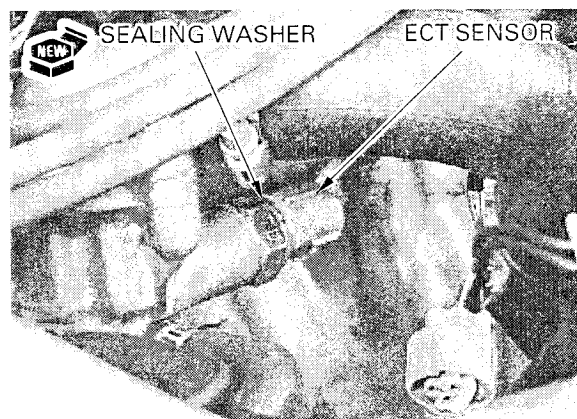


## CAM PULSE GENERATOR


### REMOVAL/INSTALLATION

Remove the air cleaner housing (page 5-66).

Disconnect the cam pulse generator 2P (Natural) connector.

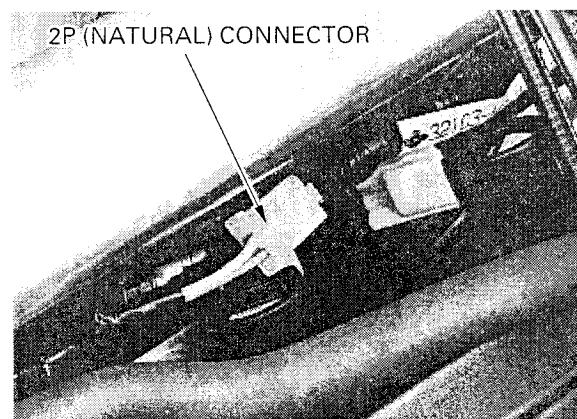

Remove the bolt and cam pulse generator from the cylinder head.

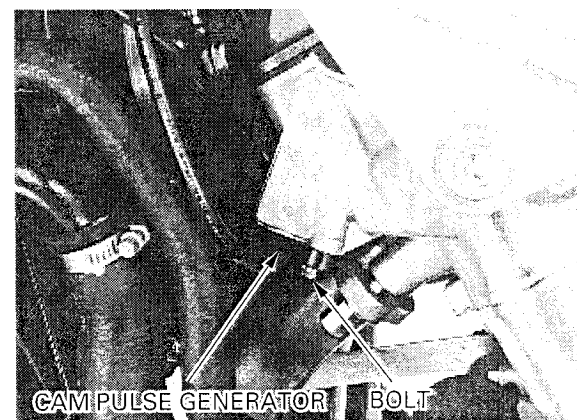




## FUEL SYSTEM (Programmed Fuel Injection)


Install the new O-ring onto the cam pulse generator.  
Install the cam pulse generator into the cylinder head.

Install and tighten the mounting bolt securely.

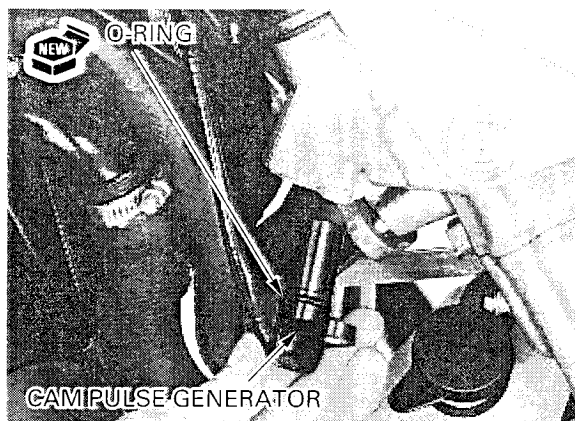

Route the cam pulse generator wire properly, connect the 2P (Natural) connector.

Install the removed parts in the reverse order of removal.

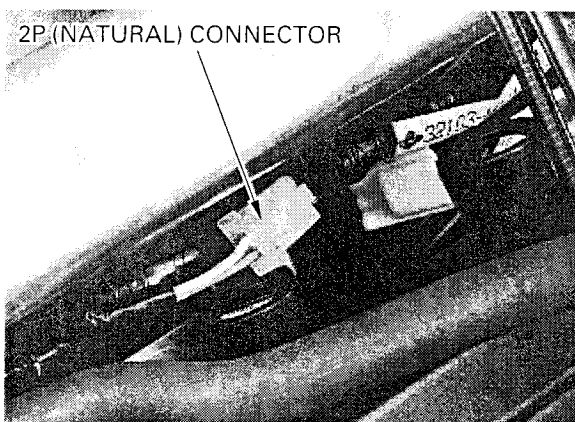

## TP SENSOR

### INSPECTION

Remove the ECM cover (page 5-89).


Disconnect the ECM 22P (Black) and 22P (Light gray) connectors.

Check the connector for loose or corroded terminals.

Connect the ECU test harness between the ECM and main wire harness.

### TOOLS:

**ECU test harness** 07YMZ-0010100  
(two required)

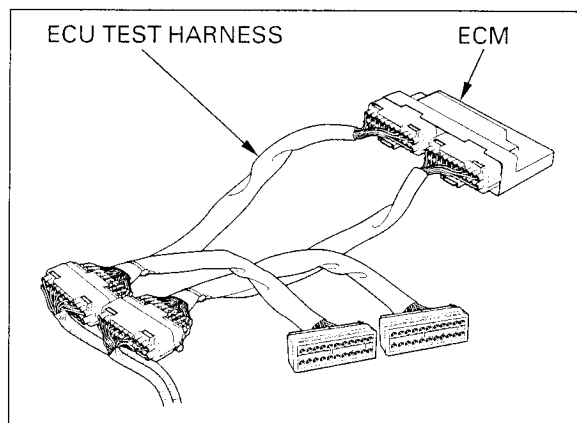

### 1. INPUT VOLTAGE INSPECTION

Turn the ignition switch ON and measure and record the input voltage at the test harness terminals using a digital multimeter.


### CONNECTION :

B5 (+) – B1 (–)

**Standard:** 4.5 – 5.5 V

If the measurement is out of specification, check the following:

- Loose connection of the ECM multi-connector
- Open circuit in wire harness

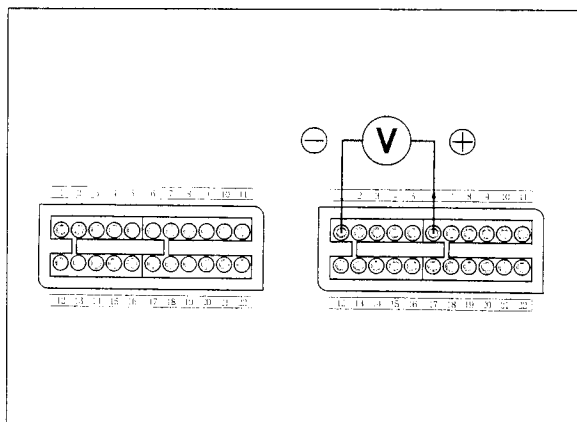

**2. OUTPUT VOLTAGE INSPECTION WITH THROTTLE FULLY OPEN**


Turn the ignition switch ON and measure and record the output voltage at the test harness terminals.

**CONNECTION :**

B8 (+) – B1 (–)

**MEASURING CONDITION:**

At throttle fully open

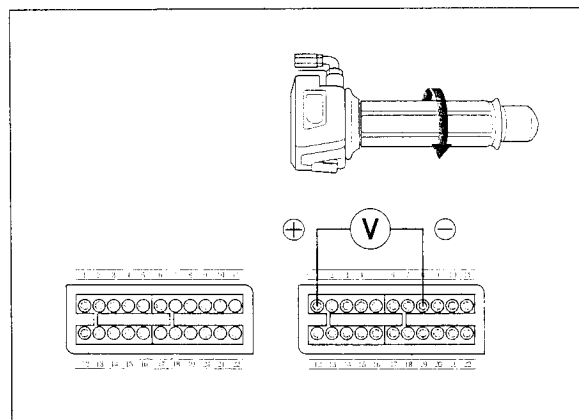**3. OUTPUT VOLTAGE INSPECTION WITH THROTTLE FULLY CLOSED**


Turn the ignition switch ON and measure and record the output voltage with the throttle fully closed.

**CONNECTION :**

B8 (+) – B1 (–)

**MEASURING CONDITION:**

At throttle fully closed

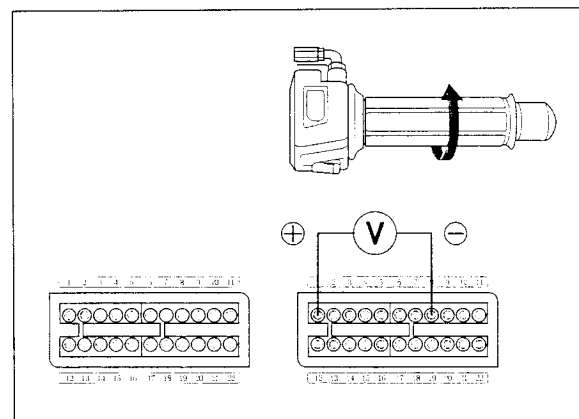**4. CALCULATE RESULT COMPARISON**

Compare the measurement to the result of the following calculation.

With the throttle fully open:

$$\text{Measured input voltage} \times 0.824 = V_o$$

The sensor is normal if the measurement output voltage measured in step 2 is within 10% of  $V_o$ .

With the throttle fully closed:

$$\text{Measured input voltage} \times 0.1 = V_c$$

The sensor is normal if the throttle closed output voltage measured in step 3 is within 10% of  $V_c$ .

Using an analog meter, check that the needle of the voltmeter swings slowly when the throttle is opened gradually.


**CONTINUITY INSPECTION**

Open and support the front end of fuel tank (page 3-4).

Disconnect the ECM 22P (Light gray) connector and the TP sensor 3P connector.

Check for continuity between the ECM and TP sensor.

If there is no continuity, check the open or short circuit in wire harness.

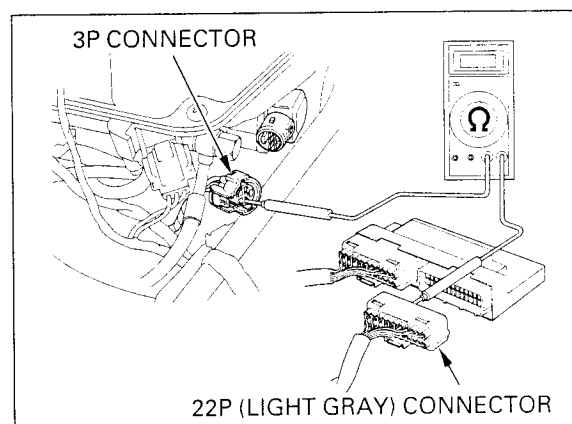

**FUEL SYSTEM (Programmed Fuel Injection)****BANK ANGLE SENSOR****INSPECTION**

Support the motorcycle level surface.

Open and support the front end of fuel tank (page 3-4).

*Do not disconnect the bank angle sensor connector during inspection.*

Turn the ignition switch ON and measure the voltage between the following terminals of the bank angle sensor connector with the connector connected.

TERMINAL	STANDARD
White (+) – Green (–)	Battery voltage
Red/White (+) – Green (–)	0 – 1 V

Turn the ignition switch OFF.

Remove the screws and bank angle sensor.

Connect the bank angle sensor 3P (Green) connector and place the bank angle sensor horizontal as shown, and ignition switch ON.

The bank angle sensor is normal if the engine stop relay clicks and power supply is closed.

Incline the bank angle sensor approximately 60 degrees to the left or right with the ignition switch ON.





The bank angle sensor is normal if the engine stop relay clicks and power supply is open.

If you repeat this test, first turn the ignition switch OFF, then turn the ignition switch ON.

**REMOVAL/INSTALLATION**


Disconnect the bank angle sensor 3P (Green) connector.

Remove the two screws, nuts and bank angle sensor.

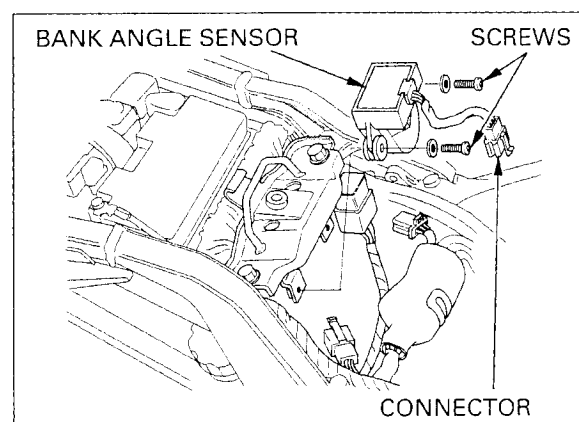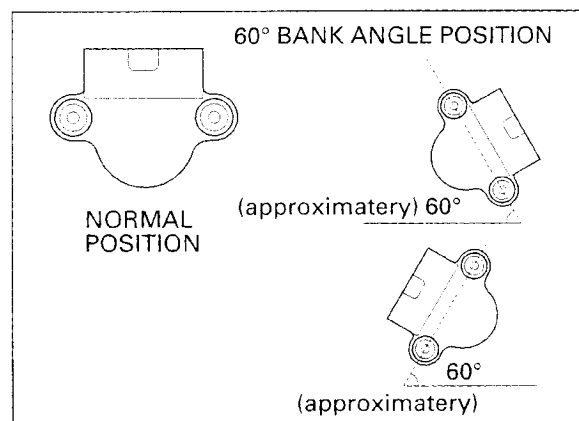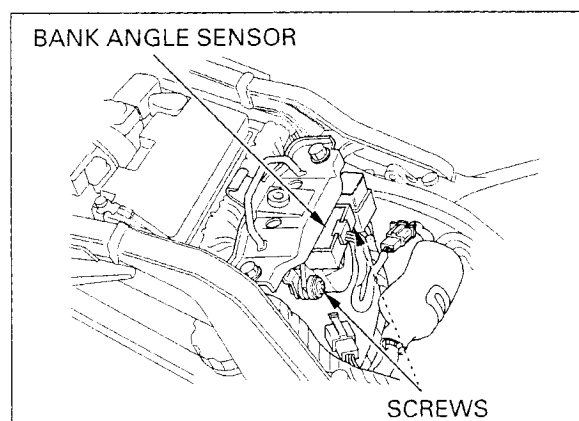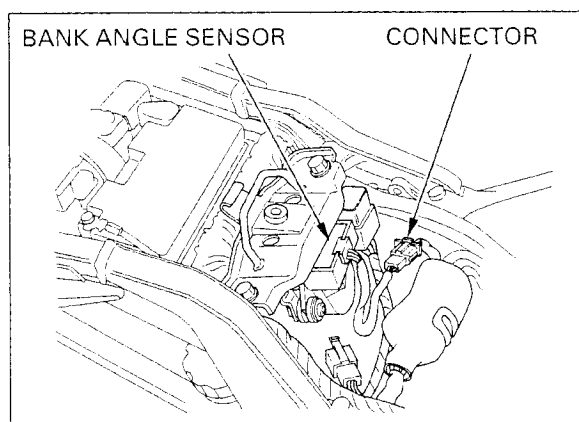

## FUEL SYSTEM (Programmed Fuel Injection)


Install the bank angle sensor with its "UP" mark facing up.  
Installation is in the reverse order of removal.  
Tighten the mounting screws securely.

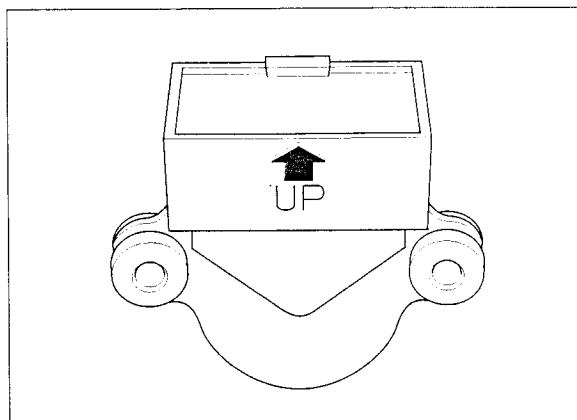

## ENGINE STOP RELAY

### INSPECTION

Disconnect the engine stop relay 4P connector, remove the engine stop relay.

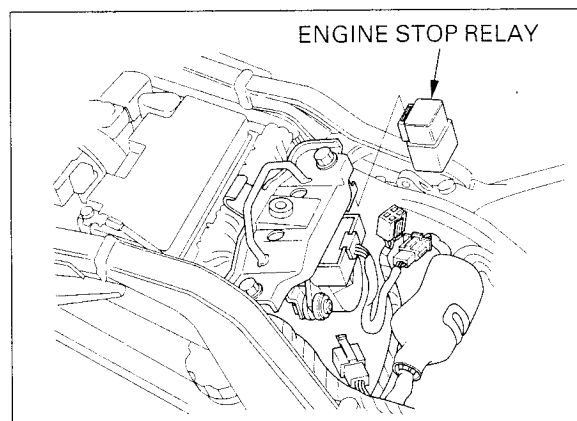


Connect the ohmmeter to the engine stop relay connector terminals.

**CONNECTION:** Red/White – Black/White

Connect the 12V battery to the following engine stop relay connector terminals.

**CONNECTION:** Red/Orange – Black

There should be continuity only when the 12V battery is connected.  
If there is no continuity when the 12V battery is connected, replace the engine stop relay.

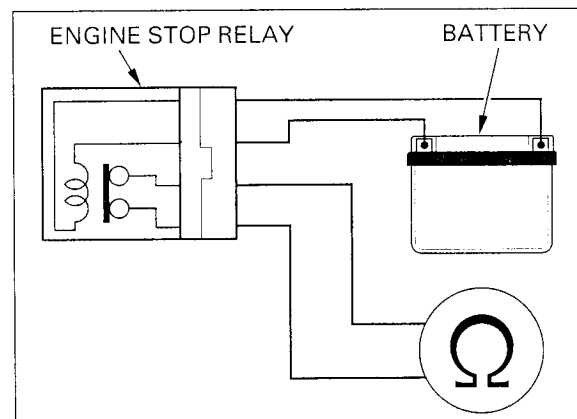


## ECM (ENGINE CONTROL MODULE)

### SYSTEM INSPECTION

Remove the fuel tank mounting bolts (page 5-61).


Remove the bolts and fuel tank rear bracket.

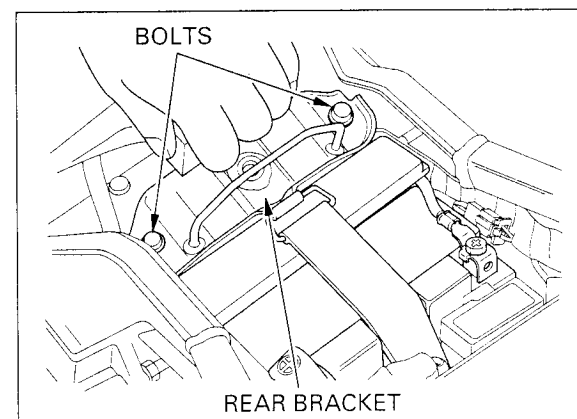



## FUEL SYSTEM (Programmed Fuel Injection)

Remove the ECM cover.

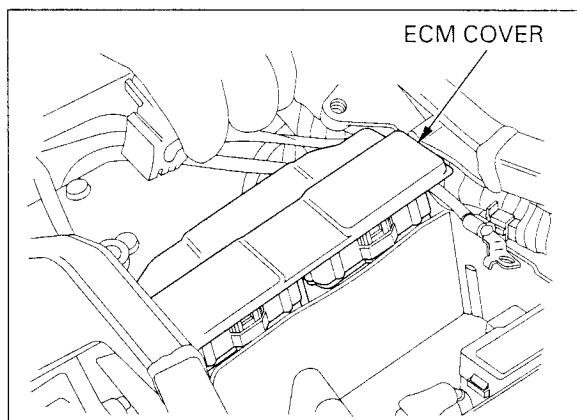

Disconnect the ECM 22P (Black) and 22P (Light gray) connectors.

### POWER /GROUND LINE INSPECTION


Connect the test harness between the main wire harness and ECM (page 5-7).

Connect the test harness (page 5-7).

#### TOOL:

ECU test harness

07YMZ-0010100  
(two required)

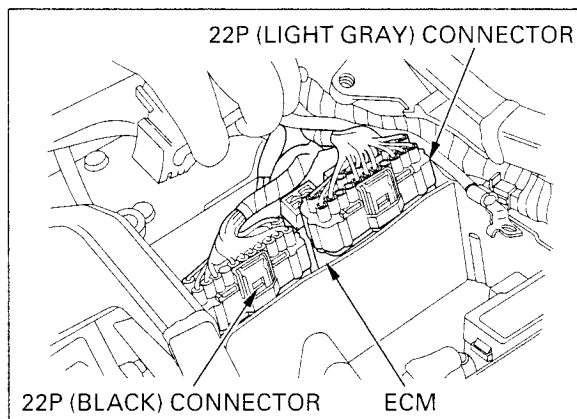

### GROUND LINE

Check for continuity between the ECM test harness connector A9 terminal and ground, between the A20 terminal and ground, between the B1 terminal and ground, and between the B12 terminal and ground.

There should be continuity at all times.

If there is no continuity, check for open circuit in Green/Pink wire and Green wire.

### POWER INPUT LINE



Turn the ignition switch ON wire the engine stop switch in RUN position.

Measure the voltage between the ECM test harness connector B6 terminal (+) and ground.

There should be battery voltage.

If there is no voltage, check for open circuit in Black /White wire between the ECM and bank angle sensor/relay.

If the wire is OK, check for the bank angle sensor/relay (page 5-88).

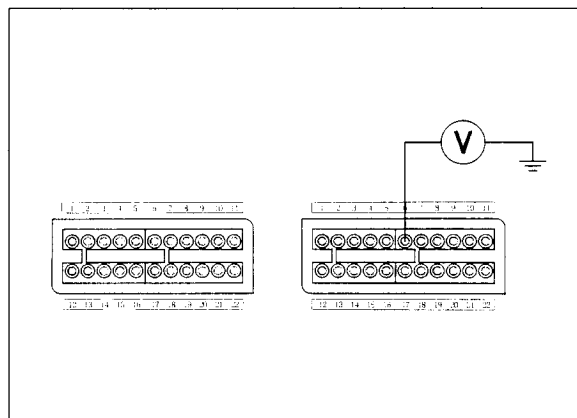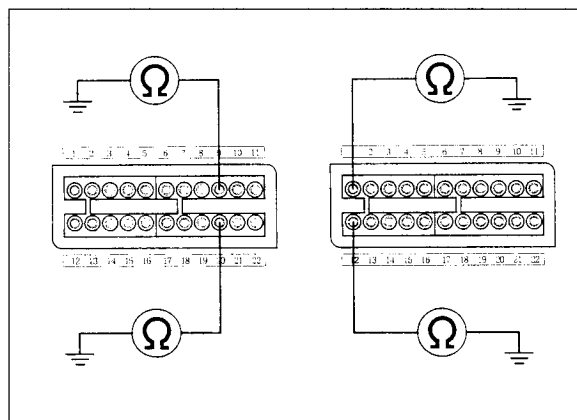


## PAIR SOLENOID VALVE

### REMOVAL/INSTALLATION


Remove the air cleaner housing (page 5-66).

Disconnect the PAIR solenoid valve 2P (Natural) connector.

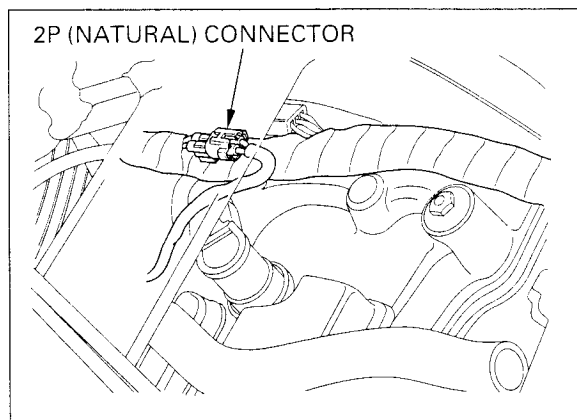

Disconnect the PAIR air suction hoses.  
Remove the bolt and PAIR solenoid valve.


Installation is in the reverse order of removal.

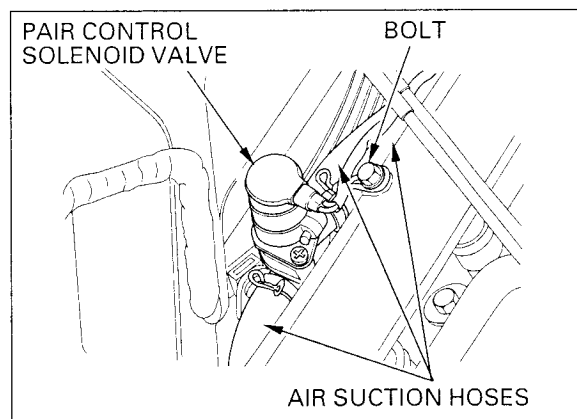

### INSPECTION

Remove the PAIR solenoid valve.


Check that the air should not flow (A) to (B), only when the 12 V battery is connected to the PAIR solenoid valve terminals.

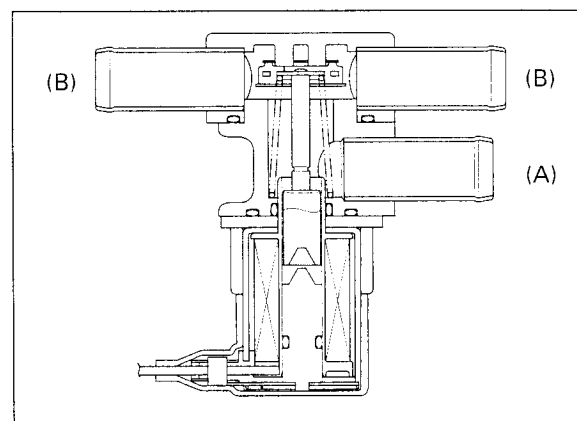

Check the resistance between the terminals of the PAIR solenoid valve.

**STANDARD:** 20 – 24 k $\Omega$  (20°C/68°F)

If the resistance is out of specification, replace the PAIR solenoid valve.

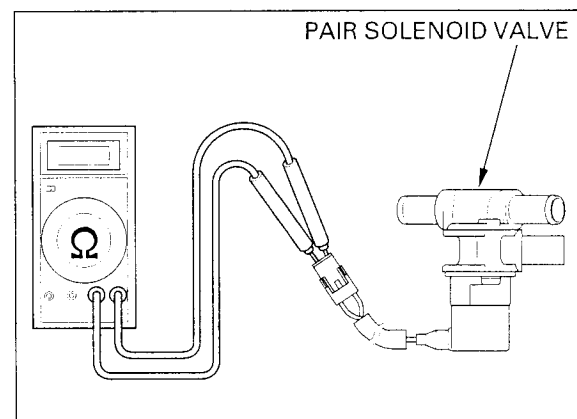

## FUEL SYSTEM (Programmed Fuel Injection)

### EVAP PURGE CONTROL VALVE (CALIFORNIA TYPE ONLY)

#### REMOVAL

Open and support the front end of fuel tank (page 3-4).

Disconnect the EVAP purge control valve 2P connector.

Disconnect the air tubes from the EVAP purge control valve.



Remove the bolt and EVAP purge control valve bracket assembly.

Installation is in the reverse order of removal.

#### INSPECTION

Remove the EVAP purge control valve.


Check that the air should not flow (A) to (B), only when the 12 V battery is connected to the EVAP purge control valve terminals.

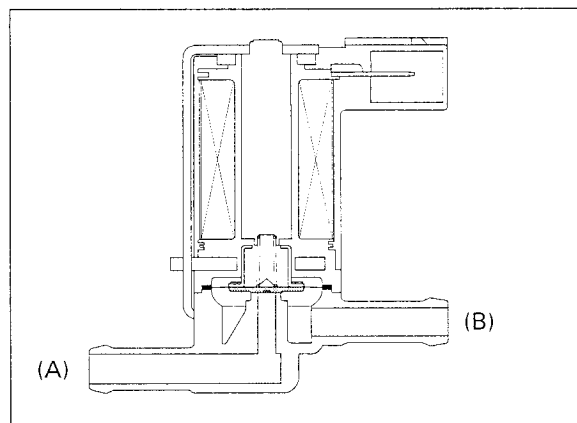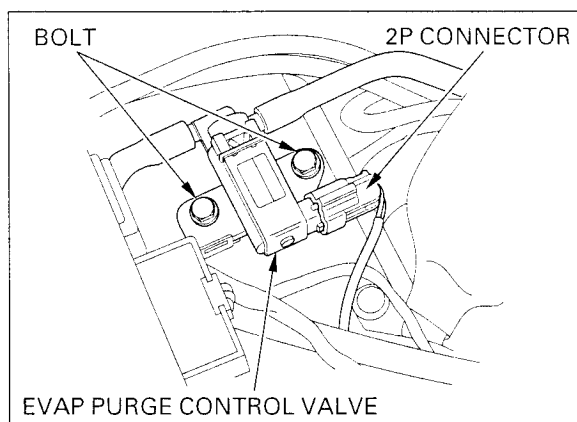

Check the resistance between the terminals of the EVAP purge control valve.

**STANDARD:** 30 -- 34 k  $\Omega$  (20 °C/68°F)

If the resistance is out of specification, replace the EVAP purge control valve.

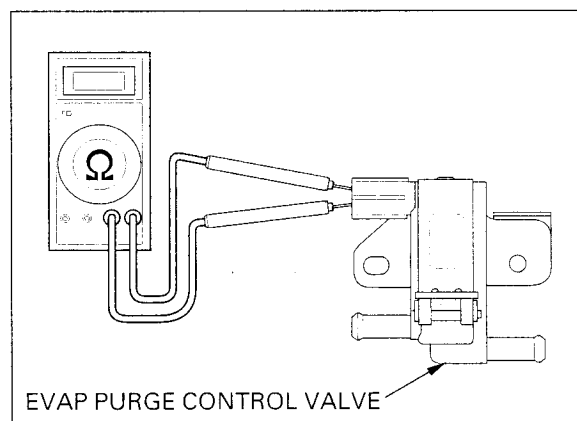

### O<sub>2</sub> SENSOR (CALIFORNIA TYPE ONLY)

#### REMOVAL


Do not service the O<sub>2</sub> sensor while it is hot.

#### NOTICE

- Handle the O<sub>2</sub> sensor with care.
- Do not get grease, oil or other materials in the O<sub>2</sub> sensor air hole.


Open and support the front end of fuel tank (page 3-4).

Disconnect the O<sub>2</sub> sensor 4P (Natural) connector.  
Remove the O<sub>2</sub> sensor wire from the frame.

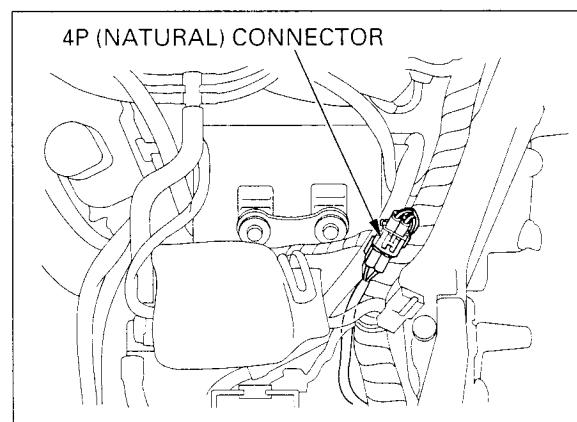


## FUEL SYSTEM (Programmed Fuel Injection)

Remove the O<sub>2</sub> sensor wire clamp.  
Remove the right step guard mounting bolts.

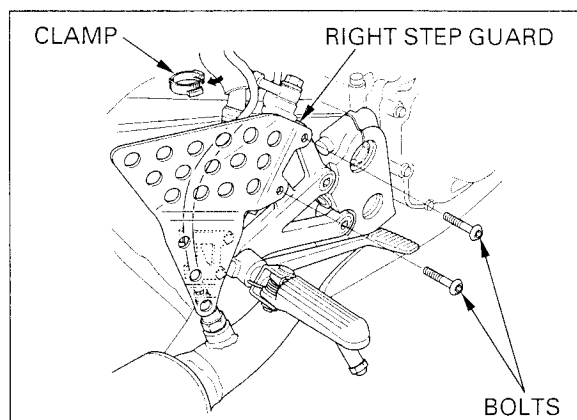


Release the O<sub>2</sub> sensor wire from the right step guard.

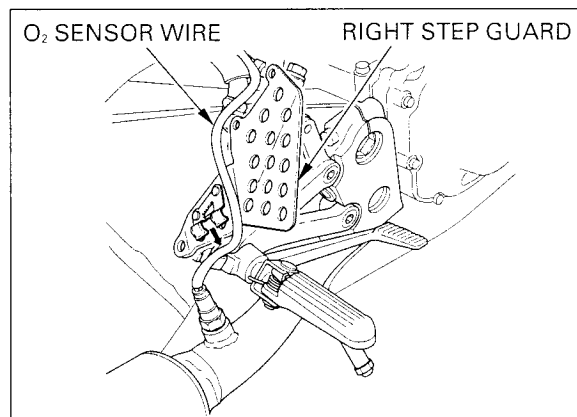

Remove the O<sub>2</sub> sensor unit.


### NOTICE

- *Be careful not to damage the sensor wire.*
- *Do not use an impact wrench while removing or installing the O<sub>2</sub> sensor.*

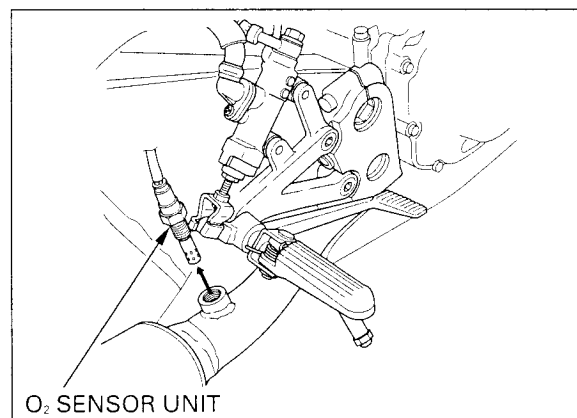


Install the O<sub>2</sub> sensor unit.  
Tighten the unit to the specified torque.

**TORQUE:** 25 N·m (2.6 kgf·m , 19 lbf·ft)

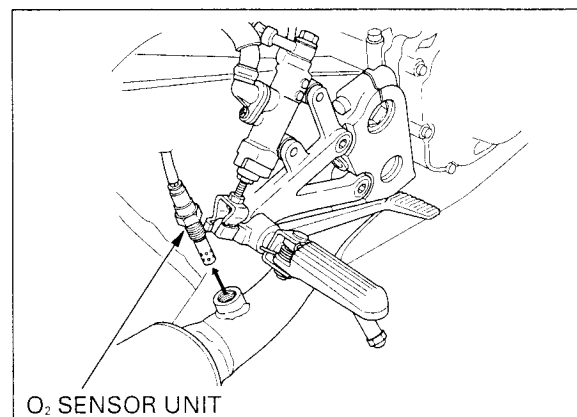


## FUEL SYSTEM (Programmed Fuel Injection)

Clamp the O<sub>2</sub> sensor wire to the right step guard.

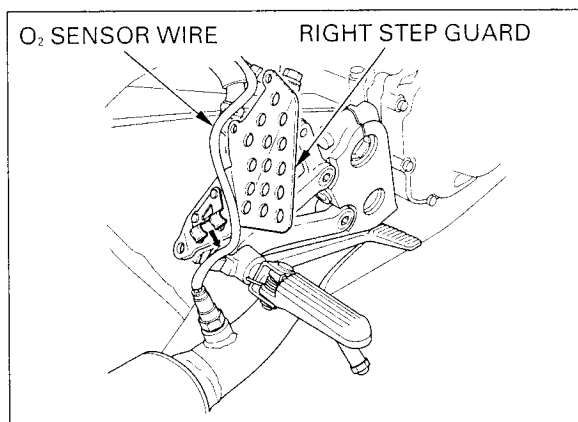


Install the right step guard and rear master cylinder, then tighten the mounting bolts.

Clamp the O<sub>2</sub> sensor wire with the rear brake reservoir hose using the hose clamp.

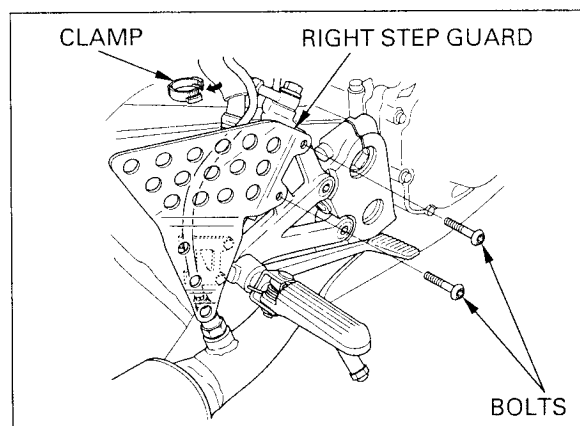

Route the O<sub>2</sub> sensor wire into the frame.

Connect the O<sub>2</sub> sensor 4P (Natural) connector.

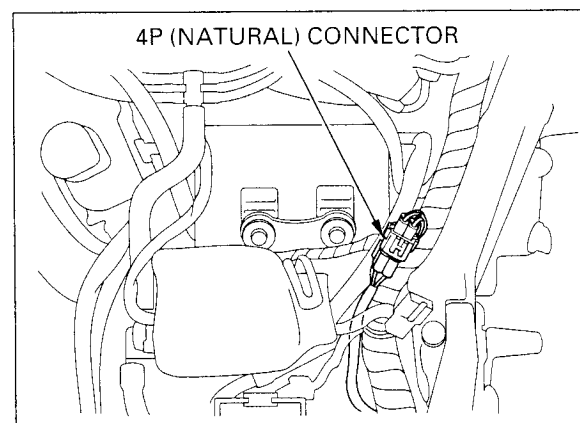


## EGCV AND AIR INTAKE VALVE INSPECTION

Before operating inspection, check that the PGM-FI warning indicator does not indicate EGCV failure.

Remove the middle/lower cowl (page 2-5).  
Remove the air cleaner element (page 3-5).


Remove the bolts and EGCV pulley cover.

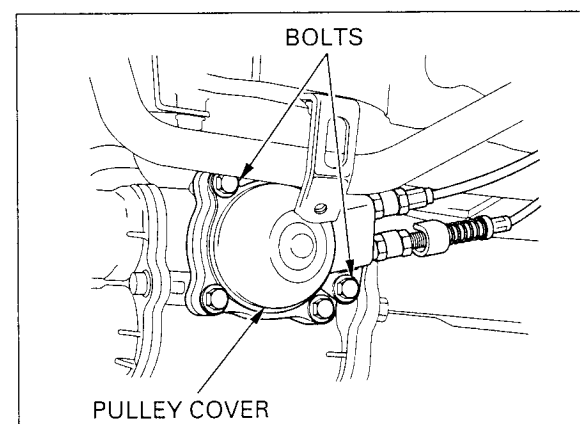




## FUEL SYSTEM (Programmed Fuel Injection)

Turn the ignition switch ON and check for EGCV cable guide pulley position.  
Make sure that the pulley index line is positioned 90° (facing forward) as shown.

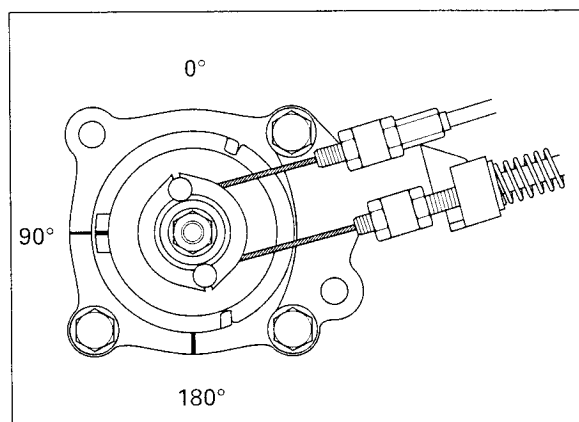


Start the engine, warm up the engine to operating temperature.  
Gradually increase the engine rev up.  
Make sure that the EGCV cable pulley is moved to 0° (pulley index line facing up) at about 3,000 rpm as shown.

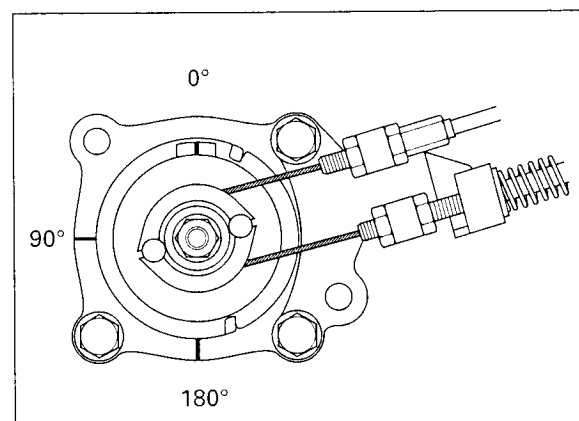

Check that the EGCV cable pulley is moved to 180° (pulley index line facing down) at about 8,000 rpm.  
Also check that the intake flap valve is opened at the same time.


If the intake and EGCV position is incorrect, adjust the cables (see following steps).  
If the intake and EGCV operation is incorrect, check for each related parts.

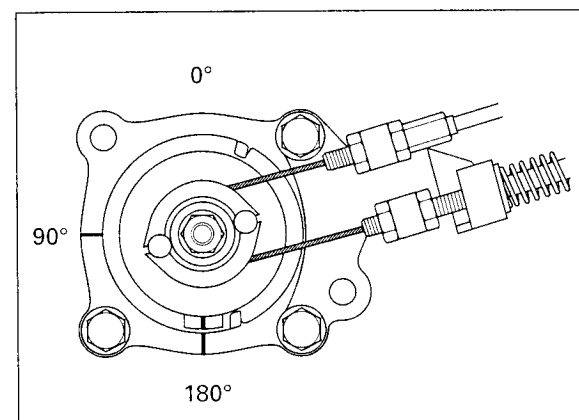

### CABLE ADJUSTMENT

Remove the seat (page 2-2).


Turn the ignition switch ON and engine stop switch in RUN.  
Short the service check connector with a jumper wire.

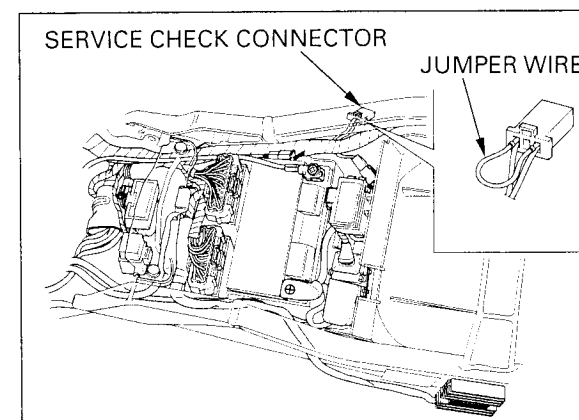


## FUEL SYSTEM (Programmed Fuel Injection)

### EGCV CONTROL CABLE ADJUSTMENT

Make sure that the EGCv cable guide pulley index line is aligned with the EGCv cover index line.  
If the index lines do not align, adjust the EGCv control cables.

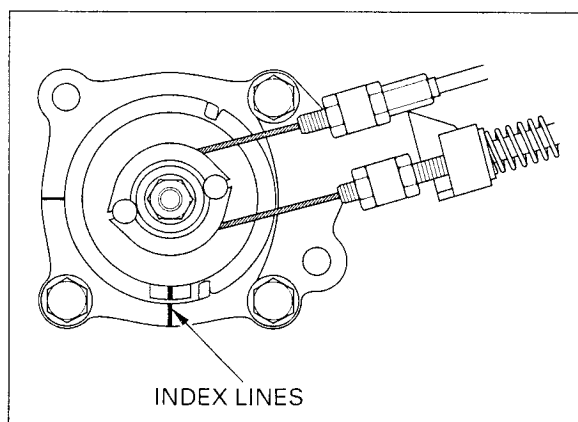


Fully loosen the No. 1 adjusting cable (spring equipped cable) lock nut and adjusting nut.

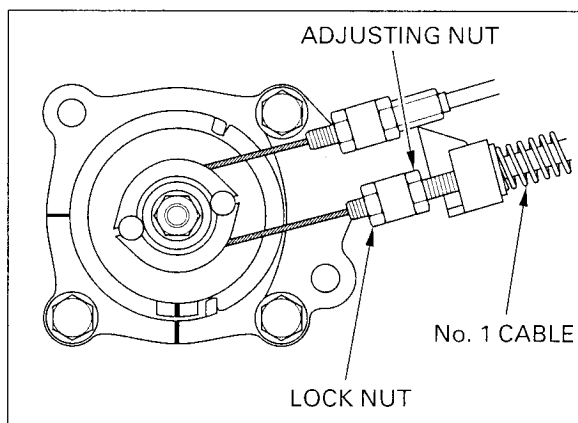

Adjust the EGCv position by loosening the No. 1 adjusting cable lock nut and turning the adjusting nut.

Move the cable several times and recheck the index line.


Hold the No. 1 cable adjusting nut, then tighten the lock nut securely.

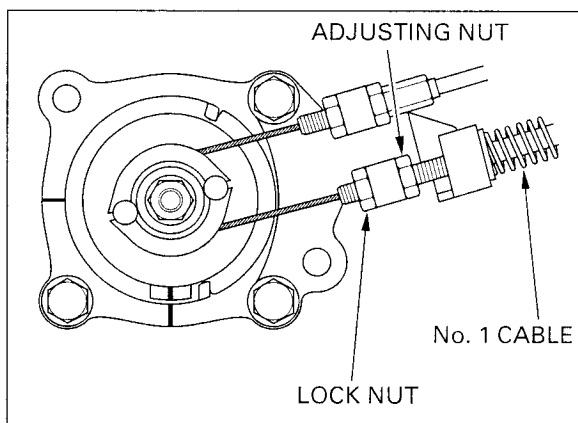

Turn the No. 2 cable lock nut and adjust the cable so that there is no free play.

Tighten the No. 2 cable lock nut securely.

Remove the jumper wire from the service check connector.

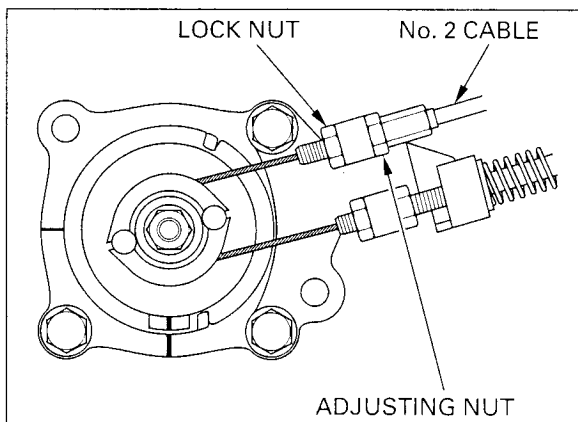


## FUEL SYSTEM (Programmed Fuel Injection)

### INTAKE VALVE CONTROL CABLE ADJUSTMENT

Turn the ignition switch ON and short the service check connector with a jumper wire (page 5-95).  
Remove the air cleaner element (page 3-5).

Make sure the index lines between the intake valve shaft pulley and air guide are aligned.

If the index lines are not aligned, adjust as follows.

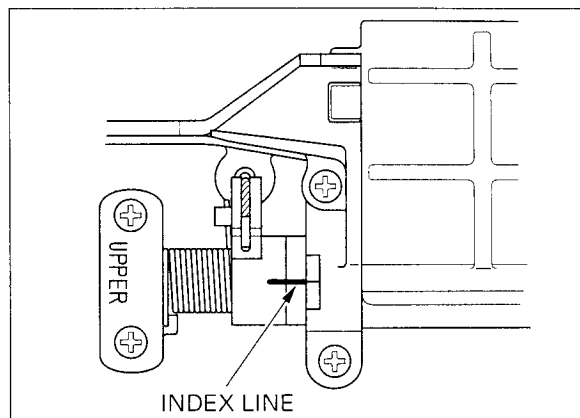


Loosen the intake valve cable adjuster lock nut.

Turn the intake valve cable adjuster, align the intake valve cable guide pulley index line with the index line on the valve shaft.

At this point, turn back the cable adjuster 1/2 turn.  
Tighten the lock nut securely.

Remove the jumper wire from the service check connector.

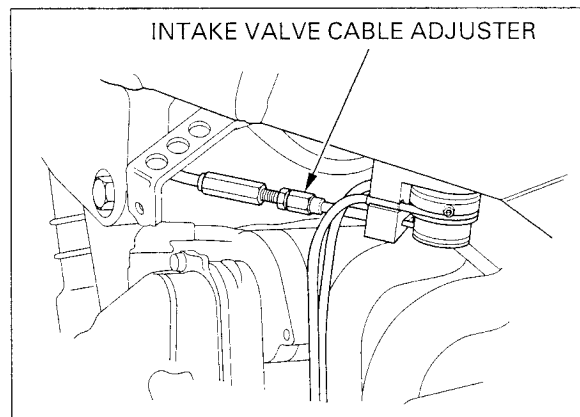


## EGCV AND AIR INTAKE VALVE SERVO MOTOR


### REMOVAL

Open and support the front end of fuel tank (page 3-4).

Disconnect the servo motor 6P (Natural) connector.

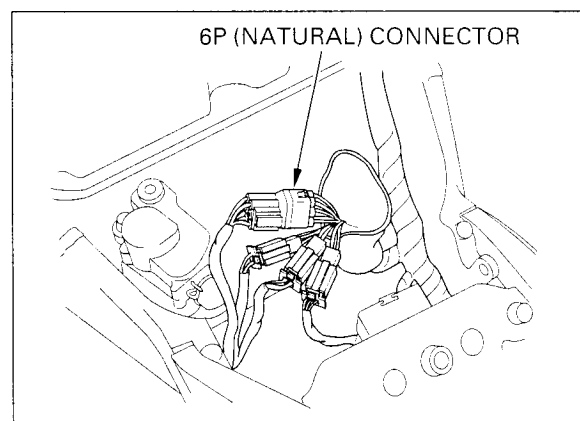


Remove the servo motor mounting bolt and pull out the servo motor from the bracket.

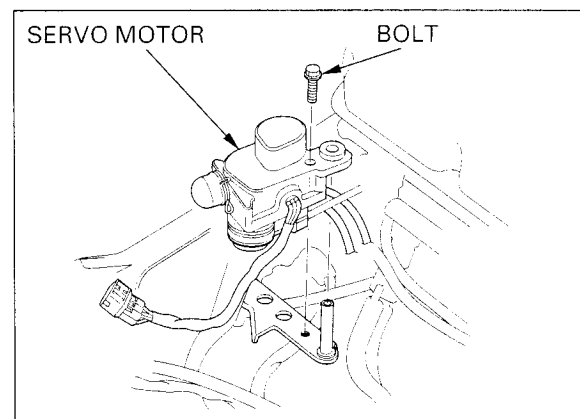

## FUEL SYSTEM (Programmed Fuel Injection)

Disconnect the intake air valve and EGCV control cables from the servo motor pulley, then remove the servo motor.

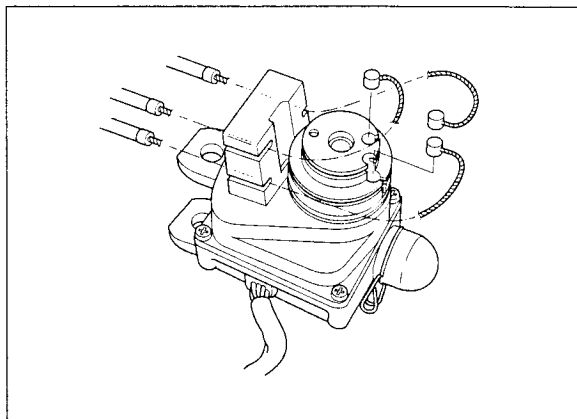


### INSPECTION

Connect the 12 V battery to the servo motor 6P (Natural) connector terminals and check that the motor operation.

**Connection:** Red (+) – Blue (–)

If the servo motor does not turn, replace the servo motor with a new one.

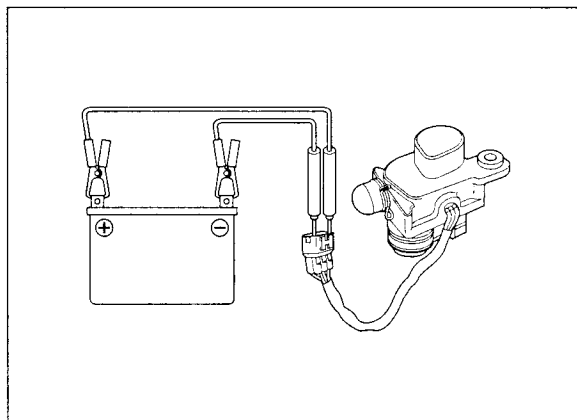


Measure the resistance between the servo motor 6P (Natural) connector terminals.

**Connection:** Yellow/Red – Green/Orange  
**Standard:** 5 k $\Omega$


**Connection:** Light green/Pink – Green/Orange  
**Standard:** 0 – 5 k $\Omega$

If the resistance is out of range, replace the servo motor.

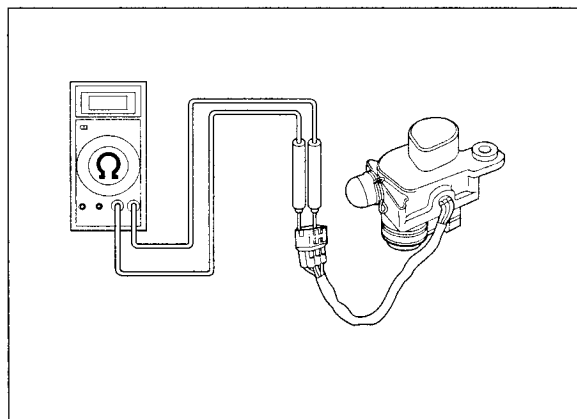

### INSTALLATION

Connect the servo motor 6P (Natural) connector.

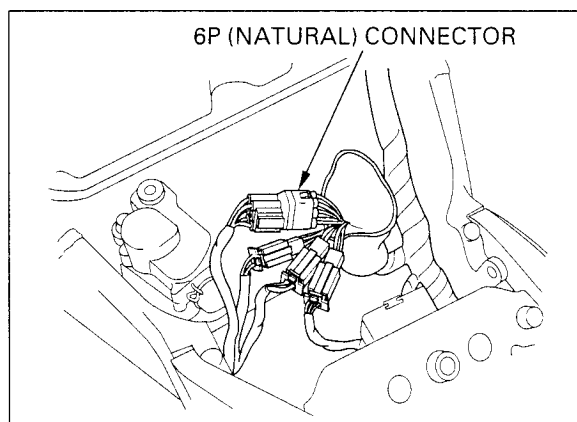

## FUEL SYSTEM (Programmed Fuel Injection)

*If you using the new servo motor, it is not necessary to do this procedures.*

Short the service check connector (page 5-95).

Turn the ignition switch ON.

The servo motor turns, then stops.


Secure the servo motor pulley at this position using a 3 mm socket bolt as shown.

**Socket bolt, 3 × 28 mm:**

**Part number:** 31420-MCJ-640

3 mm SOCKET BOLT


PULLEY

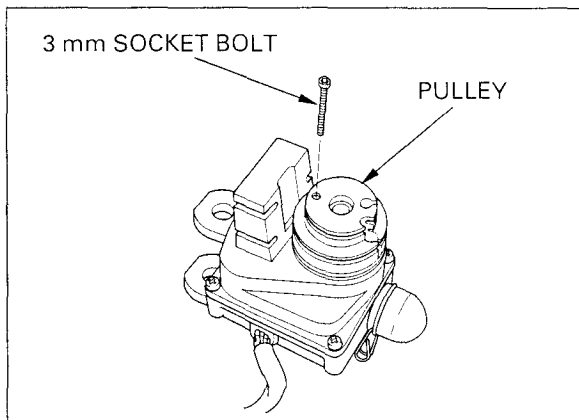

Connect the EGCV control cables to each position, then connect the intake valve control cable.

Adjust the intake and exhaust valve control cables (page 5-95).

Remove the 3 mm socket bolt from the servo motor pulley.

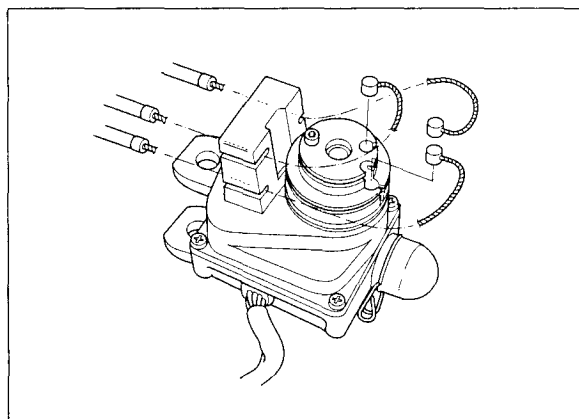


Install the servo motor onto the bracket.

Install and tighten the servo motor mounting bolt.


SERVO MOTOR

BOLT

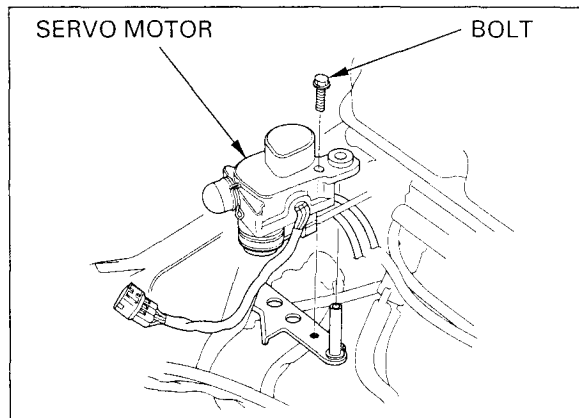

Connect the servo motor 6P (Natural) connector.

6P (NATURAL) CONNECTOR

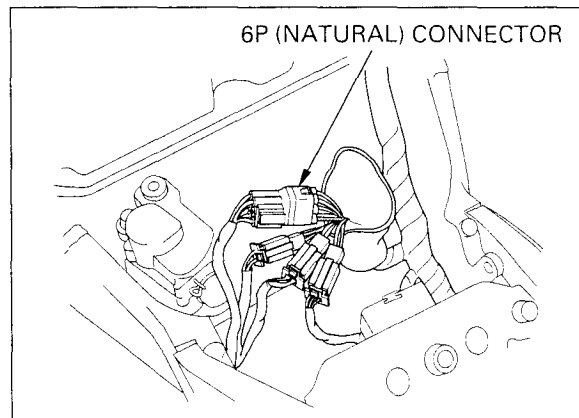



## FUEL SYSTEM (Programmed Fuel Injection)

*If you using the new servo motor, it is not necessary to do this procedures.*

Short the service check connector (page 5-95).

Turn the ignition switch ON.

The servo motor turns, then stops.


Secure the servo motor pulley at this position using a 3 mm socket bolt as shown.

**Socket bolt, 3 × 28 mm:**

**Part number: 31420-MCJ-640**

3 mm SOCKET BOLT


PULLEY

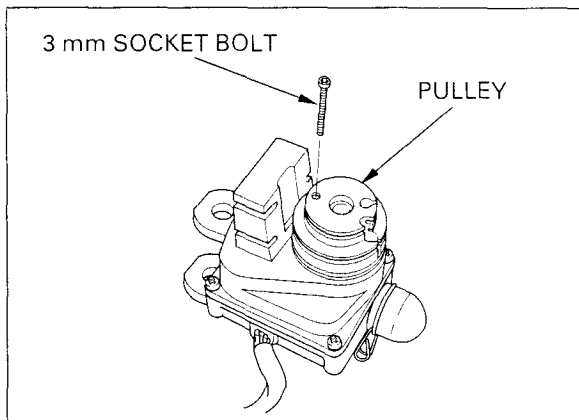

Connect the EGCV control cables to each position, then connect the intake valve control cable.

Adjust the intake and exhaust valve control cables (page 5-95).

Remove the 3 mm socket bolt from the servo motor pulley.

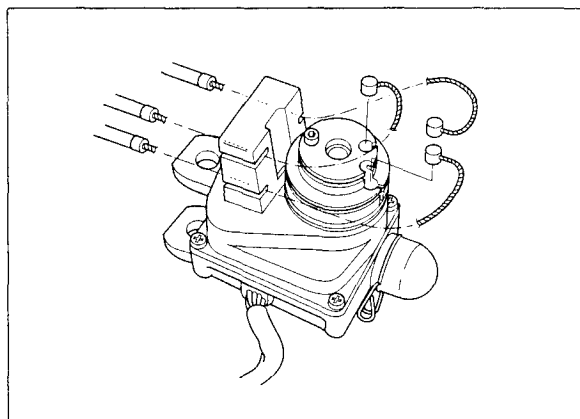


Install the servo motor onto the bracket.

Install and tighten the servo motor mounting bolt.


SERVO MOTOR

BOLT

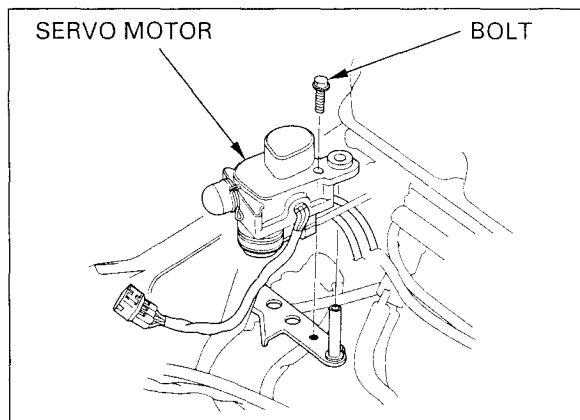

Connect the servo motor 6P (Natural) connector.

6P (NATURAL) CONNECTOR

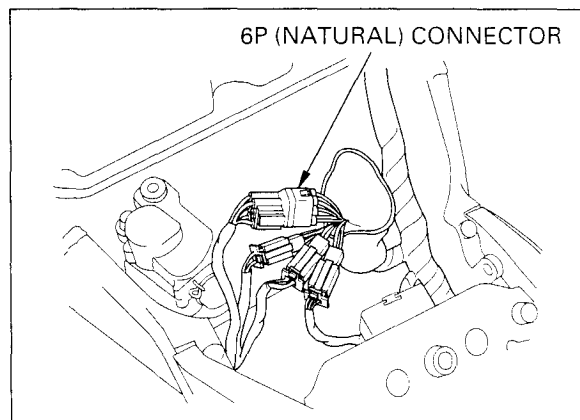

## FUEL SYSTEM (Programmed Fuel Injection)


### EGCV

#### OPERATING INSPECTION

Disconnect the EGCV control cables (page 2-18).

Turn the EGCV pulley from 0 to 180° and check the smooth operation.


If operation is not smooth, check for carbon deposits in the EGCV and valve body (page 5-90).

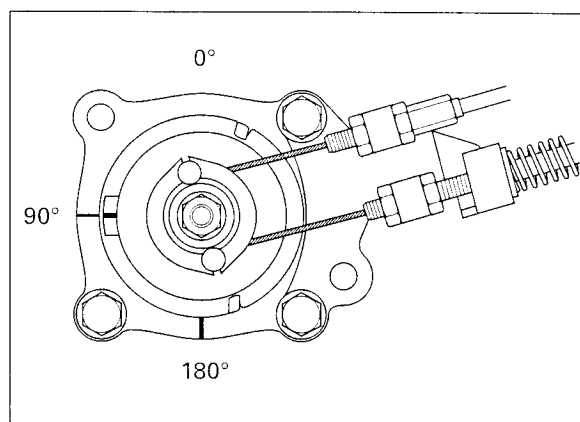

Check the EGCV pre-load using a torque wrench.

**PRE-LOAD:** 34 N·m (3.5 kgf·m, 25 lbf·ft) maximum


If pre-load is excessive, disassemble and inspect the EGCV.

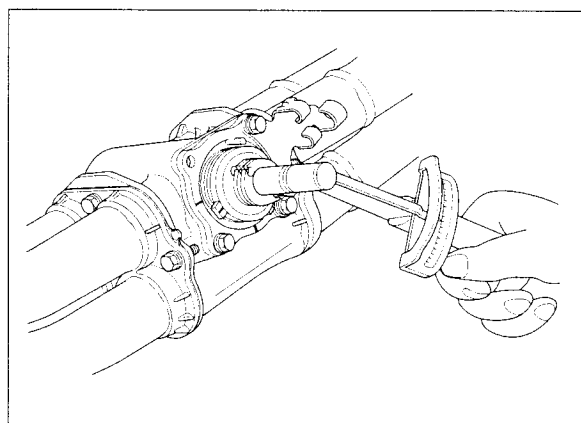


#### REMOVAL

Remove the exhaust pipe assembly (page 2-18).

Remove the bolts, front exhaust pipe and gasket.

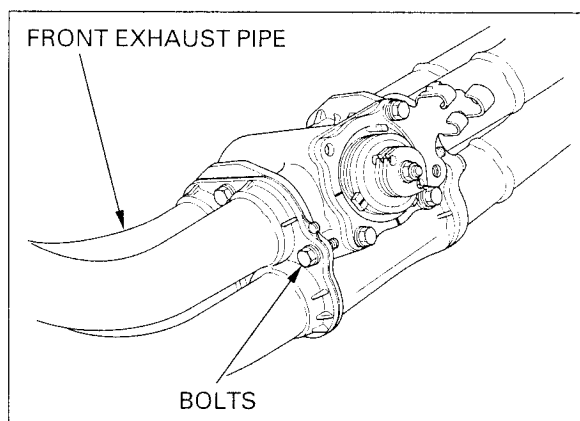


Remove the bolts, rear exhaust pipe and gasket.

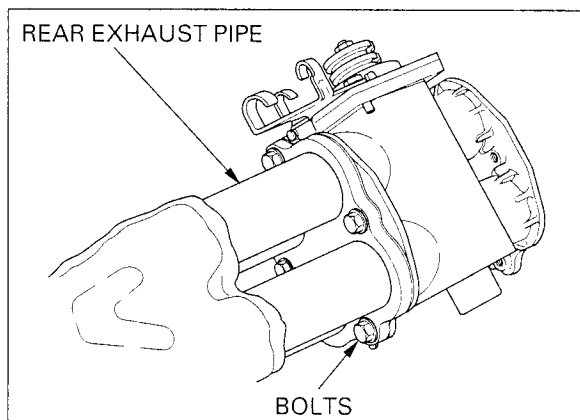

**FUEL SYSTEM (Programmed Fuel Injection)****DISASSEMBLY**

Turn the EGCV cable guide pulley counterclockwise, and seat its tab with the stopper on the valve cover. Loosen and remove the nut, then remove the valve cable guide pulley.

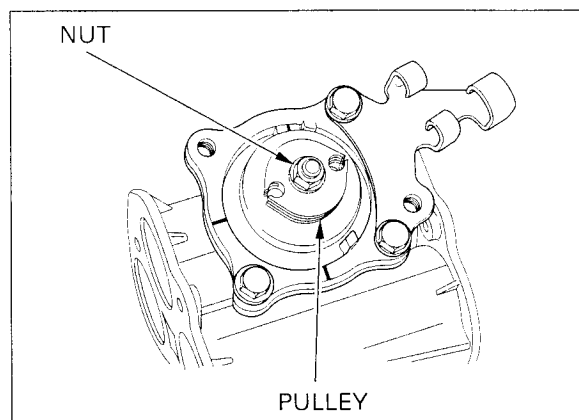**NOTICE**



- *Be careful not to damage the thrust washer B.*
- *Do not use any cleaning solution to clean the thrust washer B.*
- *Do not apply any lubricant to the thrust washer B.*

Remove the following:

- Spring retainer
- Thrust washer B
- Thrust washer A
- Thrust spring

Check the thrust washer B for wear or damage.  
Replace the thrust washer B if it is wear or damage.

Remove the EGCV cover mounting bolts, cable stay, EGCV cover and metal gasket.

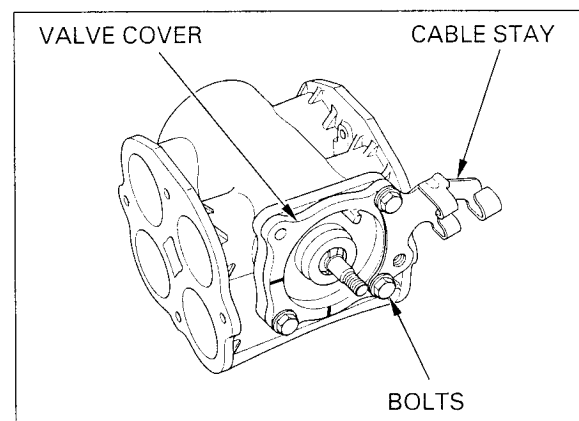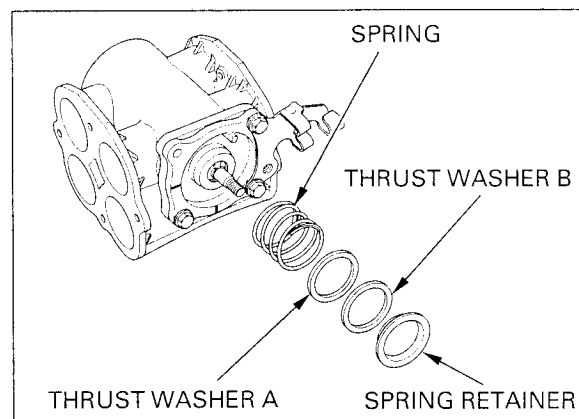


Remove the EGCV from the valve body.

Remove carbon deposits from the EGCV and valve body.

**NOTICE**

- *Do not use any cleaning solution to clean the EGCV bushings.*
- *Do not apply any lubricant to the EGCV bushings.*

Check that the EGCV for wear or damage.  
Check that the EGCV body for wear or damage.

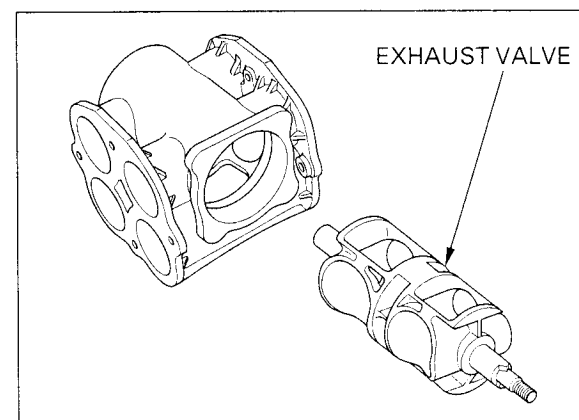


## FUEL SYSTEM (Programmed Fuel Injection)

### EGCV SHAFT BUSHING REPLACEMENT

Remove the valve body side EGCV bushing and cap using the following tools.

**TOOL:**

**Remover, 14 × 16 mm** 07YMF-MCJ0400

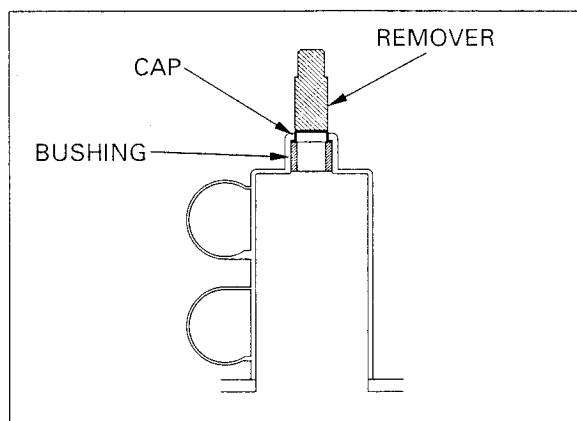


Install the EGCV cap into the EGCV body until it seats using the special tools.

**TOOLS:**

**Installer shaft guide** 07YMF-MCJ0100

**Installer shaft** 07YMF-MCJ0200

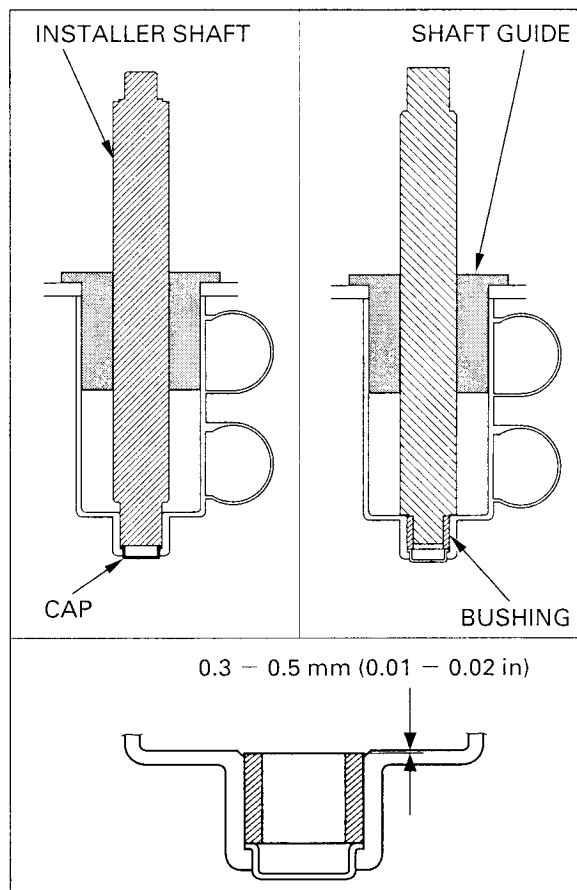

*Press the EGCV bushing until its end below 0.3 – 0.5 mm (0.01 – 0.02 in) from the valve body surface as shown.*

Press the EGCV bushing in using the special tool.

**TOOLS:**


**Installer shaft guide** 07YMF-MCJ0100

**Installer shaft** 07YMF-MCJ0200

Press the valve cover side EGCV bushing out using the following tool.

**TOOL:**

**Remover, 14 × 16 mm** 07YMF-MCJ0400

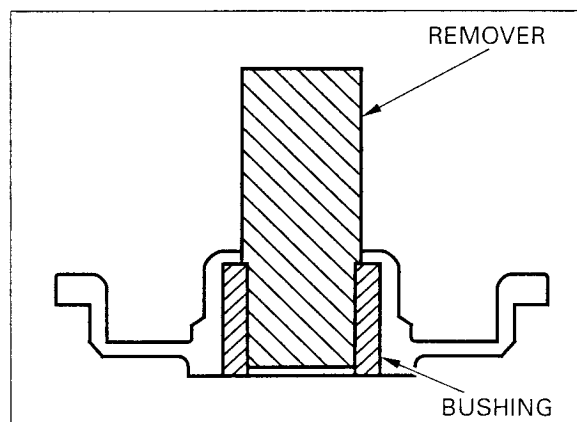


## FUEL SYSTEM (Programmed Fuel Injection)

Press the EGCV bushing until its end projected 0.3 – 0.5 mm (0.01 – 0.02 in) from the valve cover surface as shown.


Press the EGCV bushing in using the special tool.

### TOOL:


Installer shaft, 14 × 30 mm 07YMF-MCJ0300

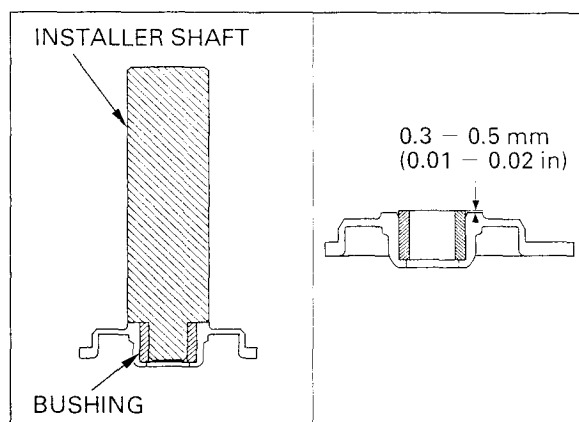

## ASSEMBLY

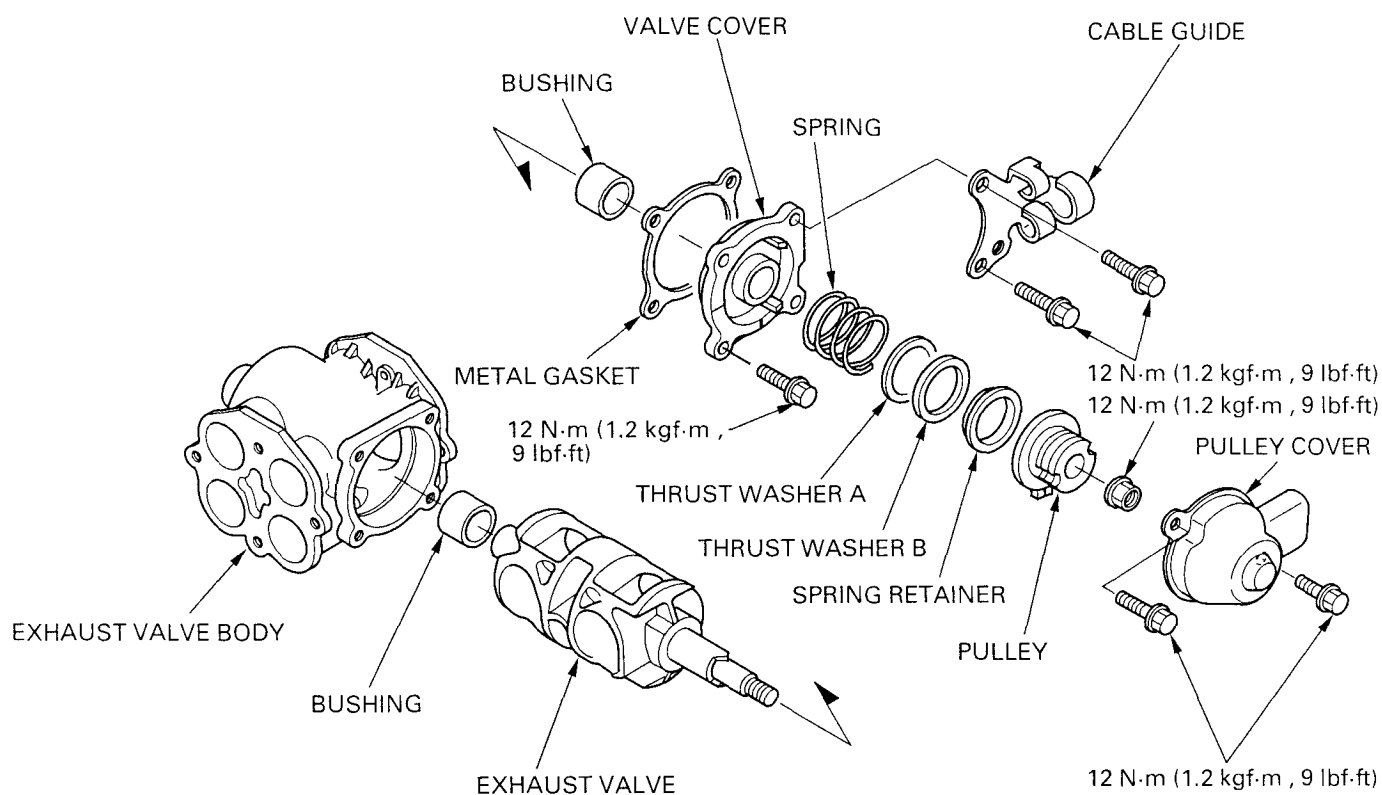

Install the EGCV into the EGCV body.

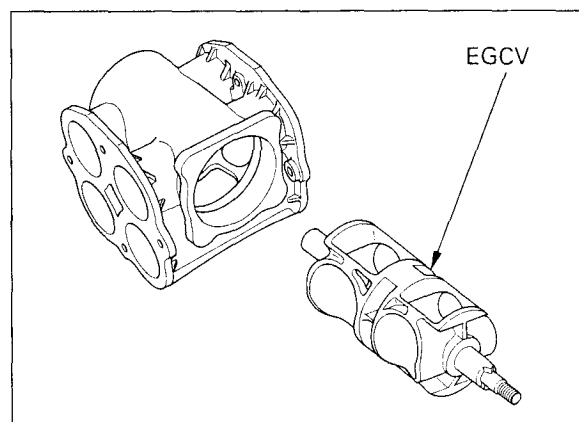







## FUEL SYSTEM (Programmed Fuel Injection)

*Install the EGCV cover with its index line facing down.* Install the metal gasket and EGCV cover.

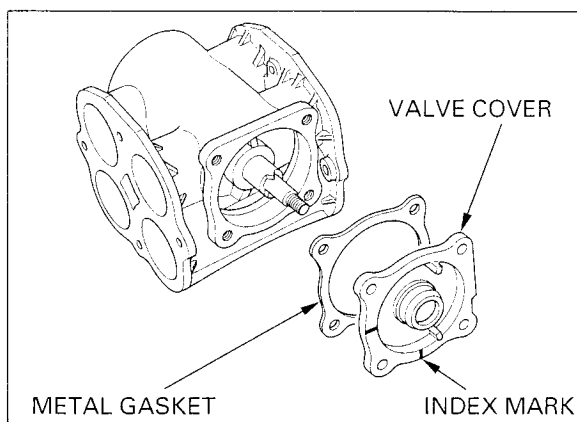

Install the EGCV cable stay and tighten the four EGCV cover mounting bolts to the specified torque.


**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

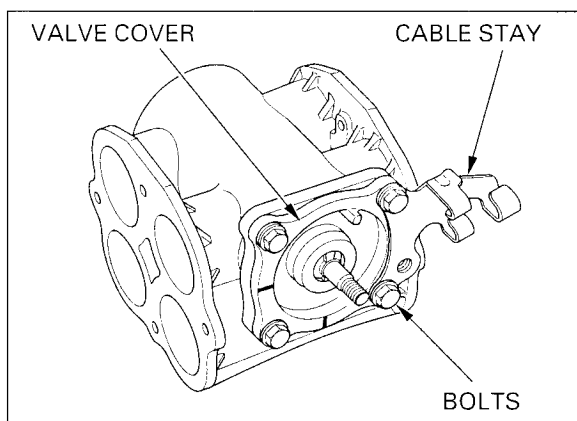


### NOTICE

- Be careful not to damage the thrust washer B.
- Do not use any cleaning solution to clean the thrust washer B.
- Do not apply any lubricant to the thrust washer B.

*Install the thrust washer B with its chamfered side facing to the spring retainer.* Install the thrust washer B and A onto the spring retainer.

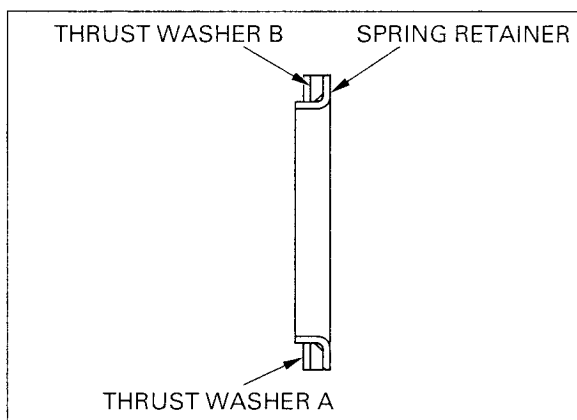


*Make sure that the thrust spring is seated on the exhaust valve cover boss.* Install the thrust spring onto the EGCV cover. Install the spring retainer assembly onto the thrust spring.

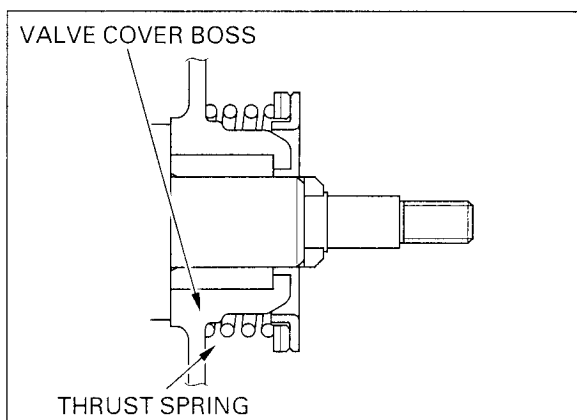


## FUEL SYSTEM (Programmed Fuel Injection)

Install the valve cable guide pulley by aligning its cut-out with the valve shaft tab as shown.

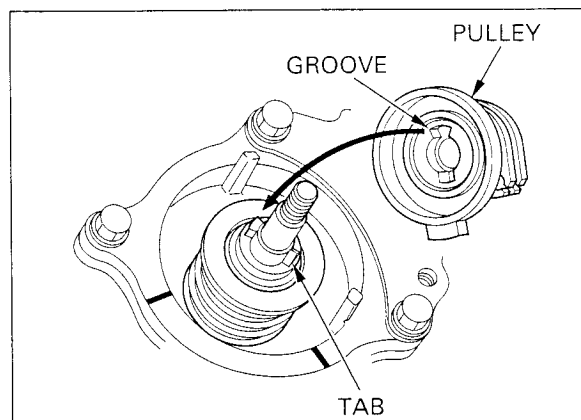

Install the valve cable guide pulley flange nut. Turn the valve cable guide pulley clockwise, seat the pulley tab with the stopper on the valve cover. Tighten the nut to the specified torque.


**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

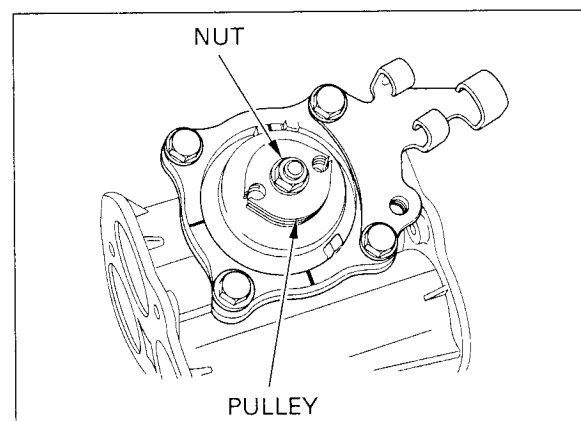

Check the EGCV pre-load using a torque wrench.


**PRE-LOAD:** 34 N·m (3.5 kgf·m, 25 lbf·ft) maximum

If pre-load is excessive, reassemble the EGCV.

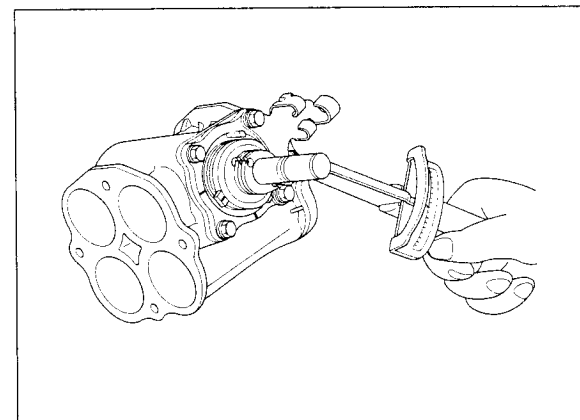

## EGCV INSTALLATION


Install the metal gasket and rear exhaust pipe onto the EGCV body.

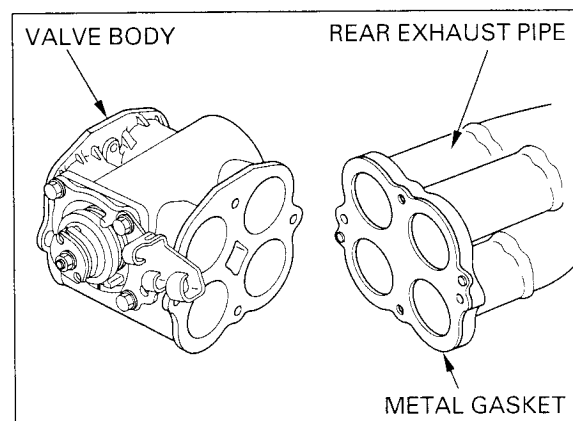


## FUEL SYSTEM (Programmed Fuel Injection)

Tighten the EGCV mounting bolt to the specified torque.

**TORQUE:** 14 N·m (1.4 kgf·m , 10 lbf·ft)

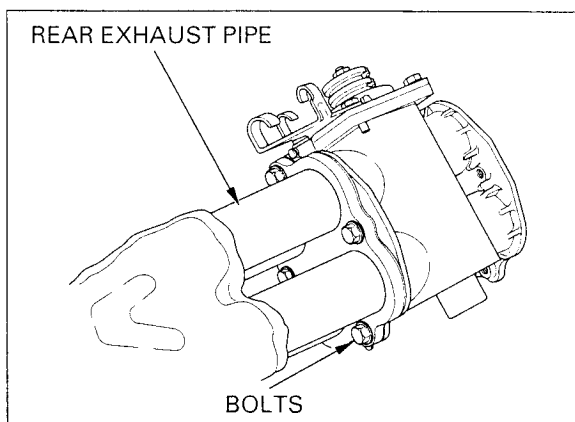


Install the metal gasket and front exhaust pipe onto the EGCV body.

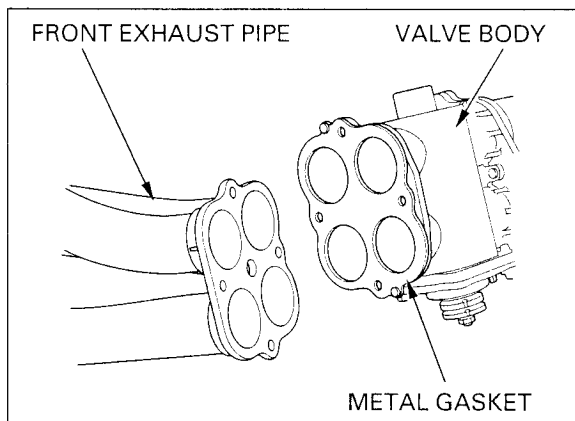

Tighten the EGCV mounting bolt to the specified torque.


**TORQUE:** 14 N·m (1.4 kgf·m , 10 lbf·ft)

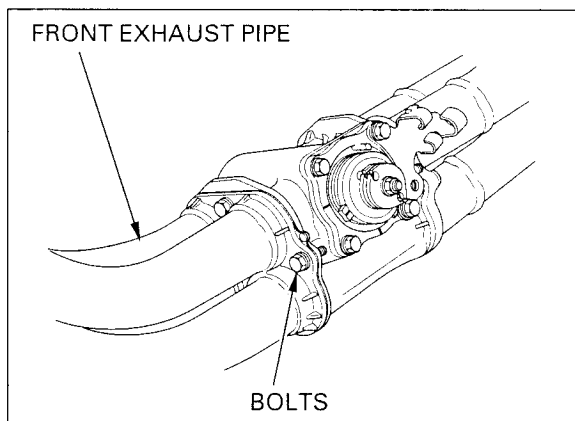

Install the exhaust pipe assembly (page 2-20).  
Connect the EGCV control cables and adjust the control cables (page 5-95).

Remove the EGCV cover front upper bolt.  
Install EGCV cable guide pulley cover and tighten the bolts to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

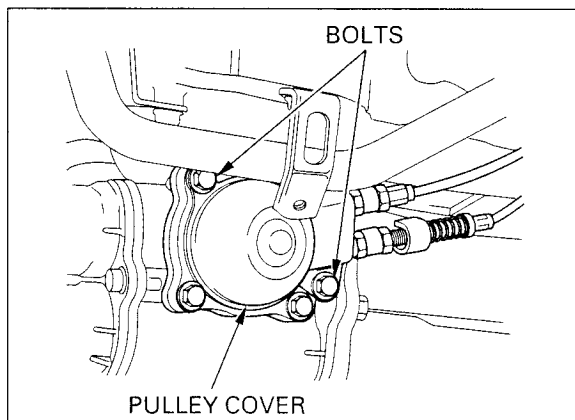




## VARIABLE AIR INTAKE VALVE


### DISASSEMBLY

Remove the air cleaner housing (page 5-66).


Open the intake valve flap by hand, disconnect the intake valve cable end from the drum.

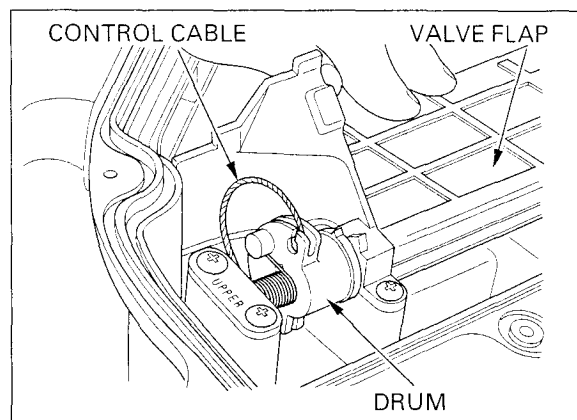

Unhook the return spring ends from the hooks.

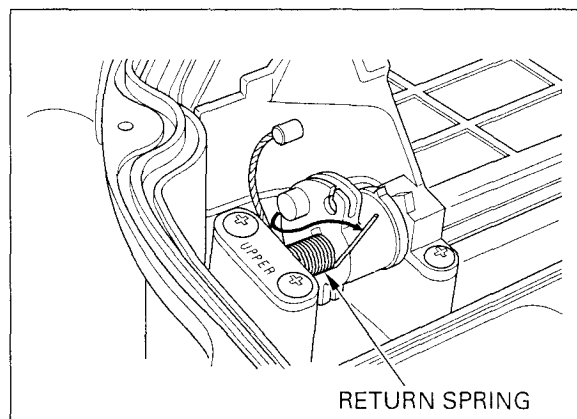


If necessary, loosen the control cable nut and remove the control cable from the air cleaner housing.

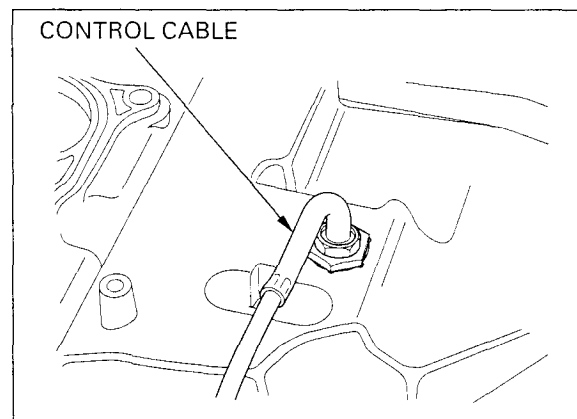

Remove the intake valve shaft holder mounting screws and holder.  
Remove the air guide A and B mounting screws.


Remove the intake valve flap/shaft assembly, air guide A and B.

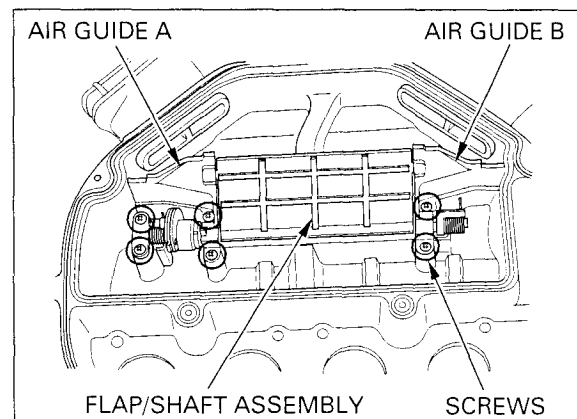




## FUEL SYSTEM (Programmed Fuel Injection)

### ASSEMBLY

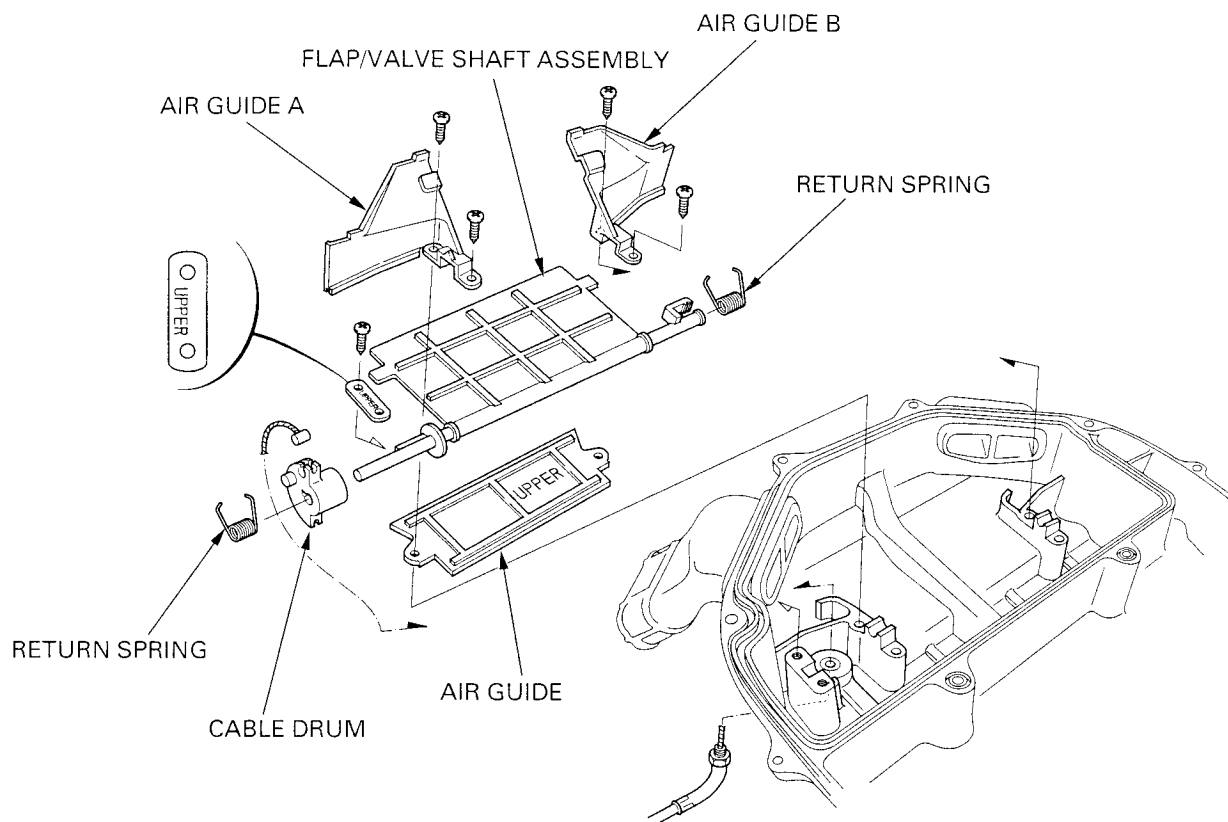


Install the intake valve drum onto the shaft aligning its groove with the intake valve shaft boss.  
Install the return spring on both sides.

Install the air guide with its "UPPER" mark facing up.  
Install the intake valve flap/shaft assembly onto the air cleaner housing.

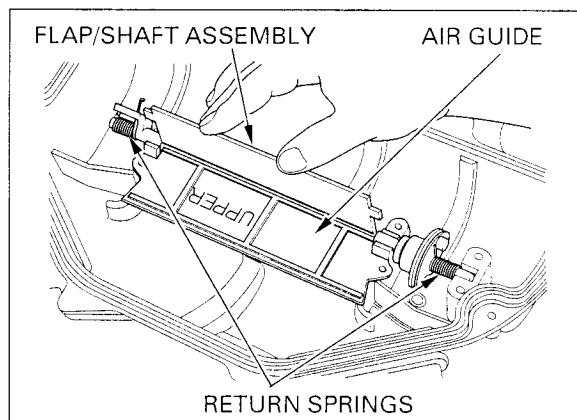


Install the air guide A and B, then tighten the mounting screws.  
Install the intake valve shaft holder plate with its "UPPER" mark facing up.  
Install and tighten the mounting screws.

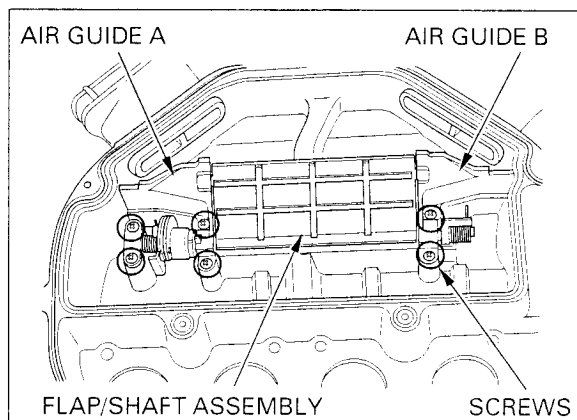


## FUEL SYSTEM (Programmed Fuel Injection)

Open the intake valve flap by hand, connect the intake valve control cable end to the drum.

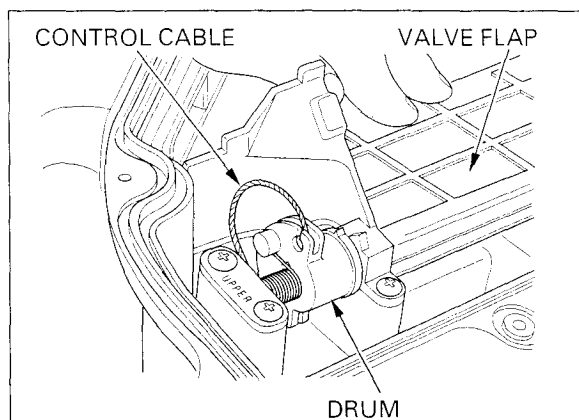


Turn the return spring end counterclockwise turn and then install it onto the hook as shown.

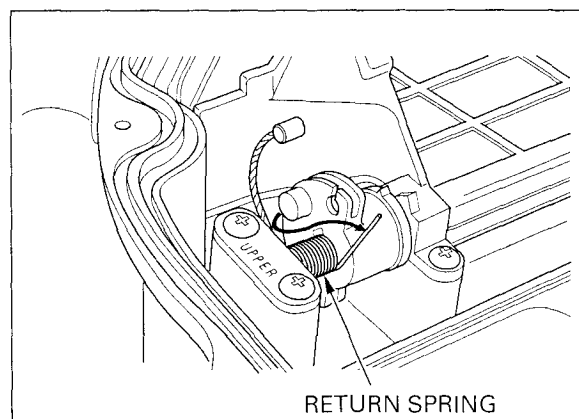


*Face the control cable to the left, then tightening the lock nut.*

Tighten the cable lock nut securely if it is removed.

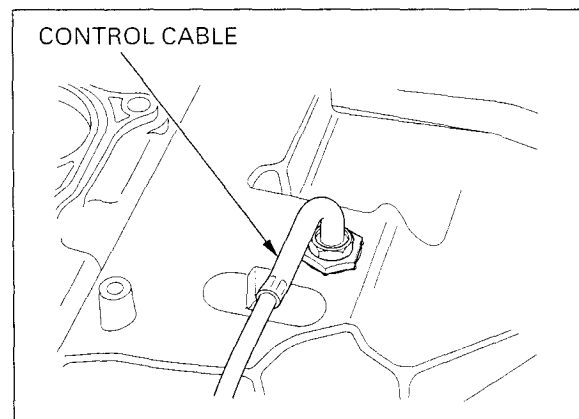

Install the air cleaner housing (page 5-67).

Adjust the variable air intake valve control cable (page 5-95).

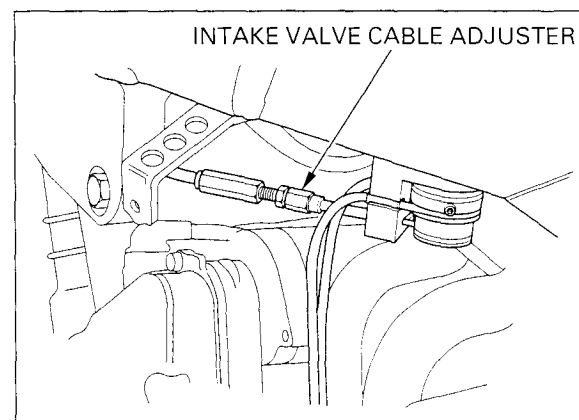

# 6. COOLING SYSTEM

SYSTEM FLOW PATTERN	6-0	THERMOSTAT	6-6
SERVICE INFORMATION	6-1	RADIATOR	6-8
TROUBLESHOOTING	6-2	WATER PUMP	6-13
SYSTEM TESTING	6-3	RADIATOR RESERVE TANK	6-16
COOLANT REPLACEMENT	6-4		

## SERVICE INFORMATION

### GENERAL

6

#### ⚠ WARNING

Wait until the engine is cool before slowly removing the radiator cap.

Removing the cap while the engine is hot and the coolant is under pressure may cause serious scalding.

#### ⚠ CAUTION

Radiator coolant is toxic. Keep it away from eyes, mouth, skin and clothes.

- If any coolant gets in your eyes, rinse them with water and consult a doctor immediately.
- If any coolant is swallowed, induce vomiting, gargle and consult a physician immediately.
- If any coolant gets on your skin or clothes, rinse thoroughly with plenty of water.

#### NOTICE

*Using coolant with silicate inhibitors may cause premature wear of water pump seals or blockage of radiator passages.  
Using tap water may cause engine damage.*

- Add cooling system at the reserve tank. Do not remove the radiator cap except to refill or drain the system.
- All cooling system services can be done with the engine in the frame.
- Avoid spilling coolant on painted surfaces.
- After servicing the system, check for leaks with a cooling system tester.
- Refer to section 19 for fan motor switch and coolant temperature sensor inspection.

## COOLING SYSTEM

### SPECIFICATIONS

ITEM		SPECIFICATIONS
Coolant capacity	Radiator and engine	3.2 l (3.4 US qt, 2.8 Imp qt)
	Reserve tank	0.4 l (0.4 US qt, 0.4 Imp qt)
Radiator cap relief pressure		108 – 137 kPa (1.1 – 1.4 kgf/cm <sup>2</sup> , 16 – 20 psi)
Thermostat	Begin to open	80.5 – 83.5 °C (177 – 182 °F)
	Fully open	95 °C (203 °F)
	Valve lift	8 mm (0.3 in) minimum
Recommended antifreeze		High quality ethylene glycol antifreeze containing corrosion protection inhibitors
Standard coolant concentration		50 % mixture with soft water

### TORQUE VALUES

Water pump cover SH bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)	CT bolt
ECT (Engine Coolant Temperature)/thermo sensor	23 N·m (2.3 kgf·m, 17 lbf·ft)	Apply sealant to the threads
Cooling fan nut	3 N·m (0.27 kgf·m, 2.0 lbf·ft)	Apply a locking agent to the threads
Fan motor nut	5 N·m (0.5 kgf·m, 3.6 lbf·ft)	
Fan motor switch	18 N·m (1.8 kgf·m, 13 lbf·ft)	Apply sealant to the threads

## TROUBLESHOOTING

#### Engine temperature too high

- Faulty radiator cap
- Insufficient coolant
- Passages blocked in radiator, hoses or water jacket
- Air in system
- Faulty water pump
- Thermostat stuck closed
- Faulty temperature gauge or coolant temperature sensor
- Faulty cooling fan motor
- Faulty fan motor switch

#### Engine temperature too low

- Faulty temperature gauge or ECT/thermo sensor
- Thermostat stuck open
- Faulty cooling fan motor switch


#### Coolant leak

- Faulty water pump mechanical seal
- Deteriorated O-rings
- Damaged or deteriorated gasket
- Loose hose connection or clamp
- Damaged or deteriorated hose
- Faulty radiator cap

**SYSTEM TESTING****COOLANT (HYDROMETER TEST)**

Remove the right heat guard (page 2-9).


Remove the radiator cap.

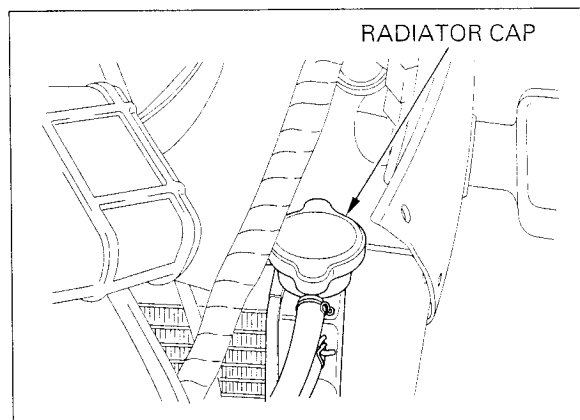

Test the coolant gravity using a hydrometer (see below for "Coolant gravity chart").

For maximum corrosion protection, a 50 – 50% solution of ethylene glycol and distilled water is recommended (page 6-4).

Look for contamination and replace the coolant if necessary.

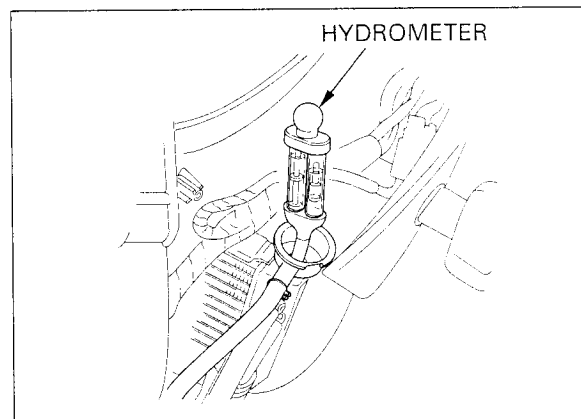**COOLANT GRAVITY CHART**

Coolant temperature °C (°F)	0	5	10	15	20	25	30	35	40	45	50
Coolant ratio %	(32)	(41)	(50)	(59)	(68)	(77)	(86)	(95)	(104)	(113)	(122)
5	1.009	1.009	1.008	1.008	1.007	1.006	1.005	1.003	1.001	0.999	0.997
10	1.018	1.017	1.017	1.016	1.015	1.014	1.013	1.011	1.009	1.007	1.005
15	1.028	1.027	1.026	1.025	1.024	1.022	1.020	1.018	1.016	1.014	1.012
20	1.036	1.035	1.034	1.033	1.031	1.029	1.027	1.025	1.023	1.021	1.019
25	1.045	1.044	1.043	1.042	1.040	1.038	1.036	1.034	1.031	1.028	1.025
30	1.053	1.052	1.051	1.047	1.046	1.045	1.043	1.041	1.038	1.035	1.032
35	1.063	1.062	1.060	1.058	1.056	1.054	1.052	1.049	1.046	1.043	1.040
40	1.072	1.070	1.068	1.066	1.064	1.062	1.059	1.056	1.053	1.050	1.047
45	1.080	1.078	1.076	1.074	1.072	1.069	1.066	1.063	1.060	1.057	1.054
50	1.086	1.084	1.082	1.080	1.077	1.074	1.071	1.068	1.065	1.062	1.059
55	1.095	1.093	1.091	1.088	1.085	1.082	1.079	1.076	1.073	1.070	1.067
60	1.100	1.098	1.095	1.092	1.089	1.086	1.083	1.080	1.077	1.074	1.071



## COOLING SYSTEM

### RADIATOR CAP/SYSTEM PRESSURE INSPECTION

*Before installing the cap in the tester, wet the sealing surfaces.*

Remove the radiator cap (see previous page).  
Pressure test the radiator cap.  
Replace the radiator cap if it does not hold pressure, or if the relief pressure is too high or too low.  
It must hold the specified pressure for at least 6 seconds.

#### RADIATOR CAP RELIEF PRESSURE:

108 – 137 kPa (1.1 – 1.4 kgf/cm<sup>2</sup>, 16 – 20 psi)

Pressure the radiator, engine and hoses, and check for leaks.


#### NOTICE

*Excessive pressure can damage the cooling system components. Do not exceed 137 kPa (1.4 kgf/cm<sup>2</sup>, 20 psi).*


Repair or replace components if the system will not hold specified pressure for at least 6 seconds.

RADIATOR CAP TESTER

RADIATOR CAP

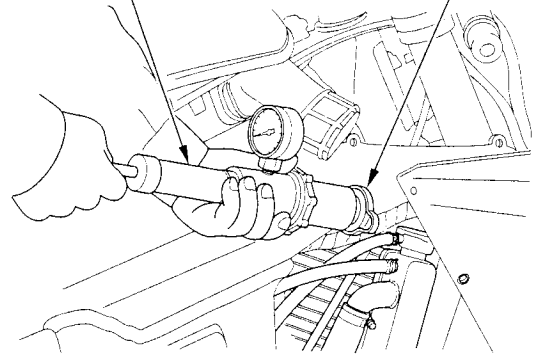

RADIATOR CAP TESTER

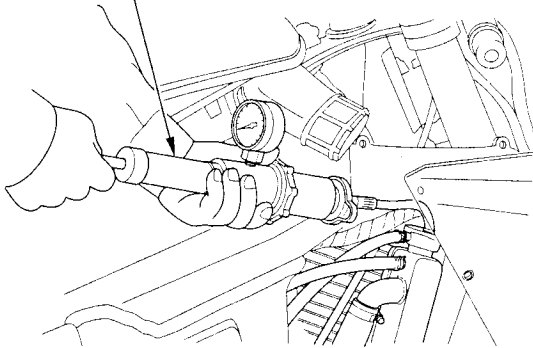

## COOLANT REPLACEMENT

### PREPARATION

- The effectiveness of coolant decreases with the accumulation of rust or if there is a change in the mixing proportion during usage. Therefore, for best performance change the coolant regularly as specified in the maintenance schedule.
- Mix only distilled, low mineral water with the antifreeze.

#### RECOMMENDED ANTIFREEZE:

High quality ethylene glycol antifreeze containing corrosion protection inhibitors

#### RECOMMENDED MIXTURE:

50 – 50 (Distilled water and antifreeze)

*When filling the system or reserve tank with a coolant (checking coolant level), place the motorcycle in a vertical position on a flat, level surface.*

### REPLACEMENT/AIR BLEEDING


Remove the radiator cap.

ANTIFREEZE SOLUTION

(ETHYLENE GLYCOL BASE SOLUTION)

LOW MINERAL OR DISTILLED WATER

COOLANT

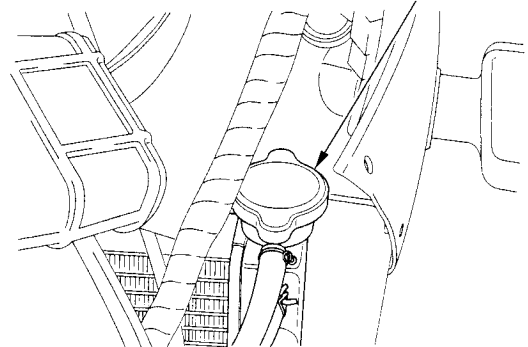


Remove the middle/lower cowl (page 2-5).

Remove the drain bolt on the water pump cover and drain the system coolant.

Remove the cylinder drain bolt and drain the coolant from the cylinder.

Reinstall the drain bolt with the new sealing washer.

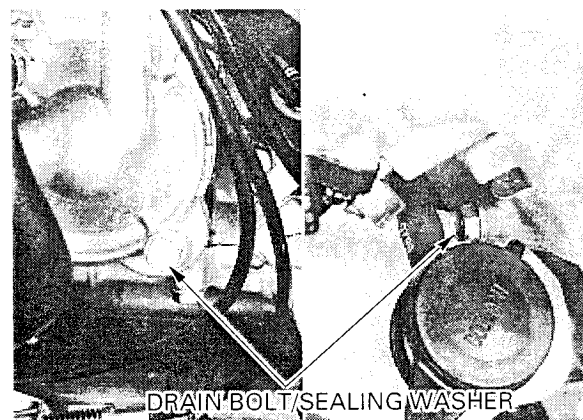


Open and support the front end of fuel tank (page 3-4).


Disconnect the siphon tube from the radiator.

Drain the reserve tank coolant.  
Empty the coolant and rinse the inside of the reserve tank with water.

Reinstall the radiator siphon tube.

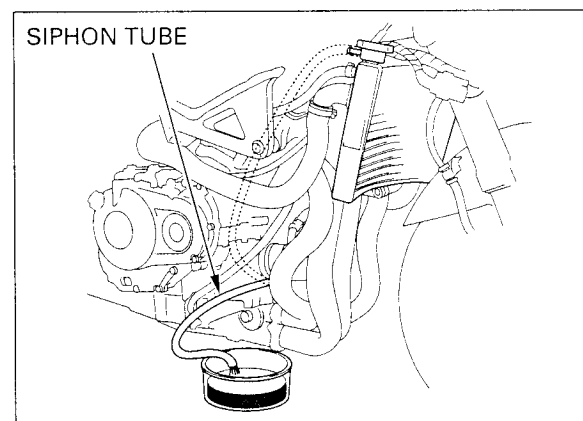


Fill the system with the recommended coolant through the filler opening up to filler neck.

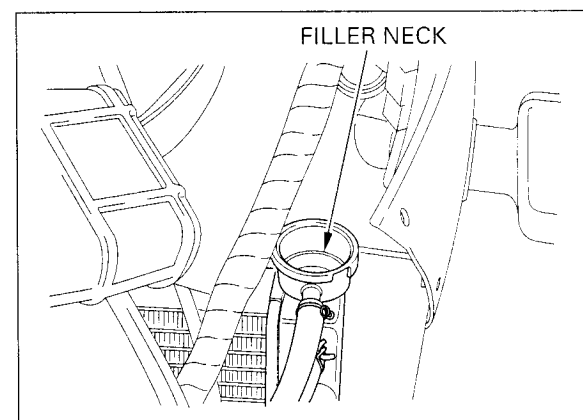

Remove the radiator reserve tank cap and fill the reserve tank to the upper level line.

Bleed air from the system as follow:

1. Shift the transmission into neutral. Start the engine and let it idle for 2 – 3 minutes.
2. Snap the throttle 3 – 4 times to bleed air from the system.
3. Stop the engine and add coolant up to the proper level if necessary. Reinstall the radiator cap.
4. Check the level of coolant in the reserve tank and fill to the upper level if it is low.

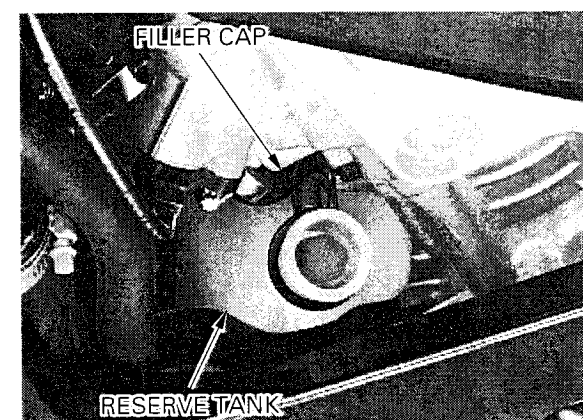

## COOLING SYSTEM


### THERMOSTAT

#### THERMOSTAT REMOVAL


Drain the coolant (page 6-5).

Remove the throttle body (page 5-68).

Remove the bolts and thermostat housing cover.

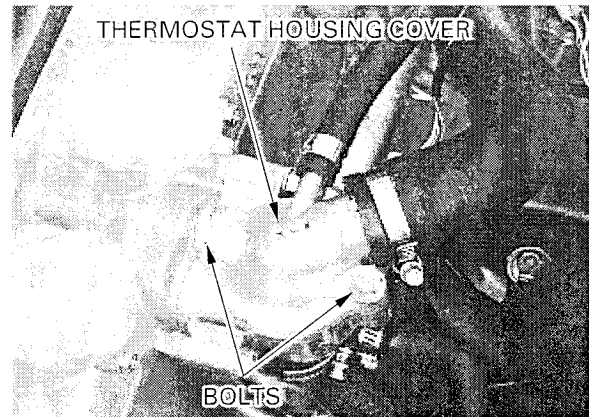


Remove the thermostat from the housing.

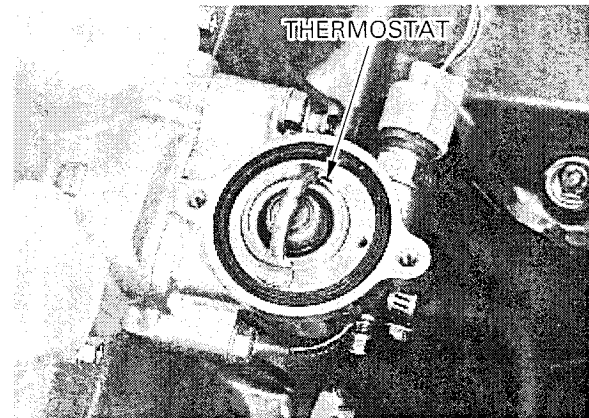

#### INSPECTION

Wear insulated gloves and adequate eye protection.  
Keep flammable materials away from the electric heating element

Visually inspect the thermostat for damage.  
Check for damage of the seal ring.

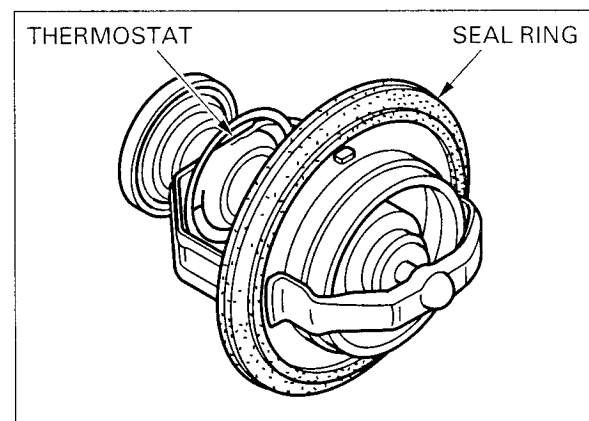

*Do not let the thermostat or thermometer touch the pan, or you will get false reading.*

Heat the water with an electric heating element to operating temperature for 5 minutes.  
Suspend the thermostat in heated water to check its operation.


Replace the thermostat if the valve stays open at room temperature, or if it responds at temperatures other than those specified.

#### THERMOSTAT BEGIN TO OPEN:

80.5 – 83.5 °C (177 – 182 °F)

#### VALVE LIFT:

8 mm (0.3 in) minimum at 95°C (203°F)

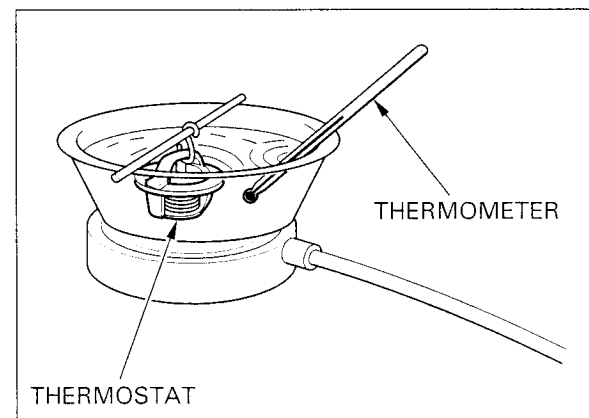




## THERMOSTAT HOUSING REMOVAL


Disconnect the ECT sensor connector.  
Disconnect the fast idle wax unit water hose and bypass hose from the thermostat housing.

Remove the bolts and thermostat housing from the cylinder head.

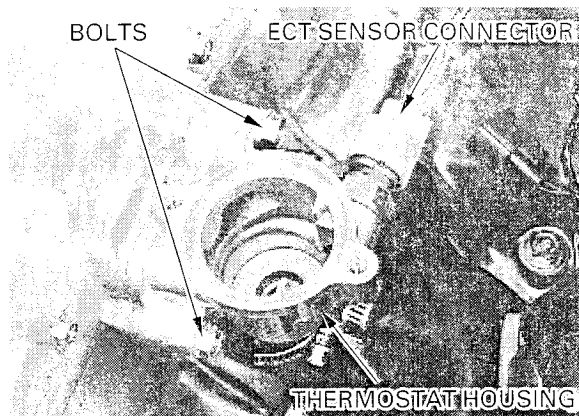


## THERMOSTAT HOUSING INSTALLATION

Install a new O-ring into the groove of the thermostat body.  
Install the thermostat housing onto the cylinder head.

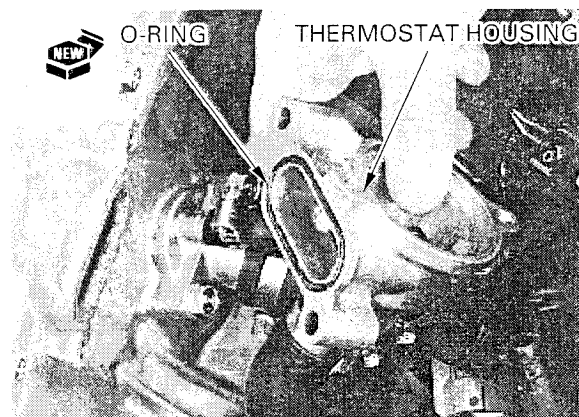


Install and tighten the thermostat housing mounting bolts.

Connect the fast idle wax unit water hose and bypass hose.  
Connect the ECT sensor connector.

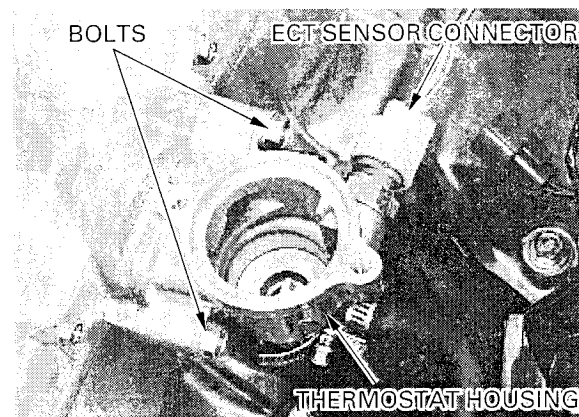

## THERMOSTAT INSTALLATION

Install the thermostat into the housing with its air bleed hole facing rearward.

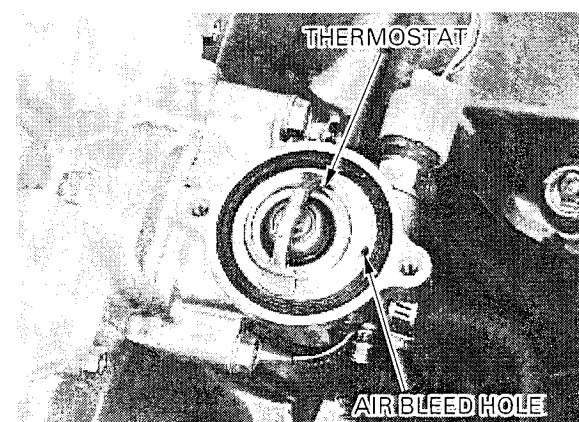


## COOLING SYSTEM

Install the thermostat housing cover onto the housing.

Install and tighten the housing cover bolts.

Fill the system with recommended coolant and bleed the air (page 6-5).

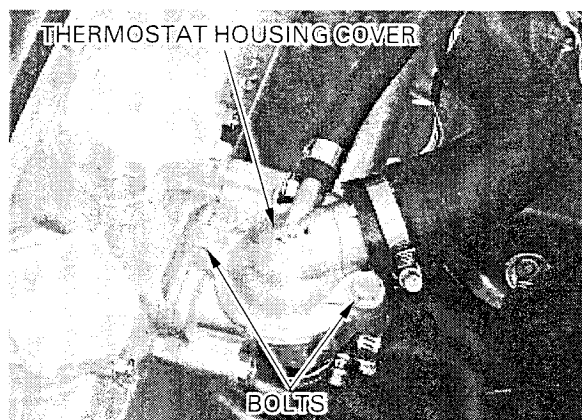

## RADIATOR

### REMOVAL


Remove the following:

- Middle/lower cowl (page 2-5)
- Heat guard (page 2-9)


Drain the coolant (page 6-4).

Disconnect the siphon tube and air bleed tube from the radiator.

Disconnect the upper radiator hose.

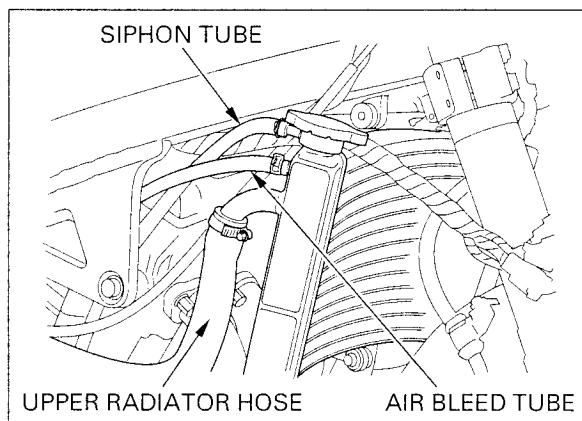


Disconnect the fan motor switch connector from the switch, release the wire from the inner middle cowl.

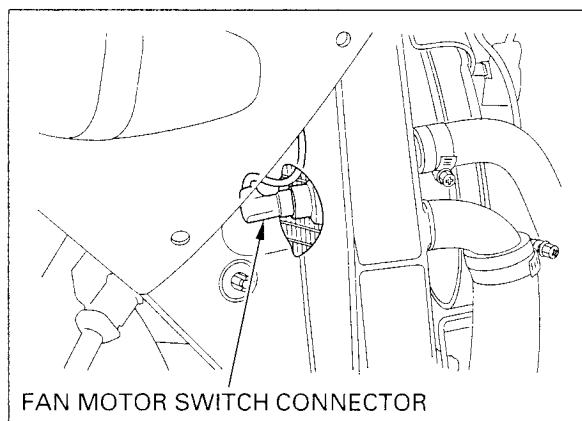

Disconnect the radiator sub-harness 2P (Black) connector.


Disconnect the lower radiator hose and oil cooler water hose.

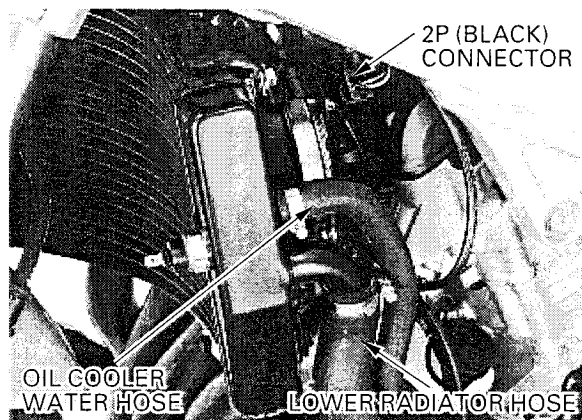




## COOLING SYSTEM


Remove the radiator lower mounting bolt/nut.

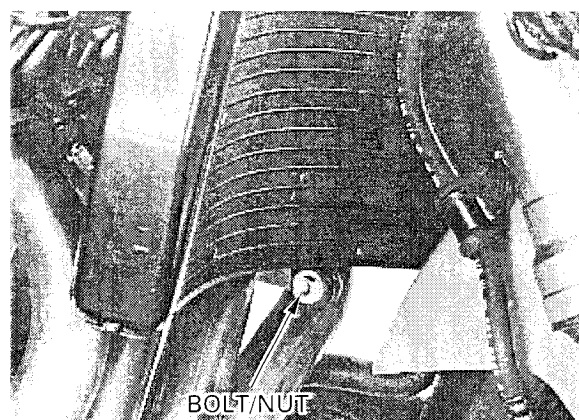

Remove the radiator upper mounting bolt and washer.

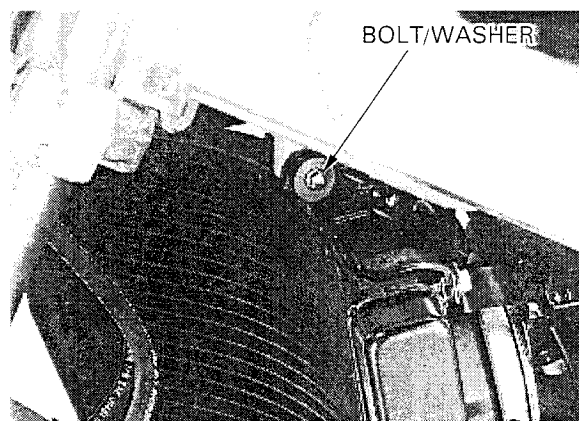


Slide the radiator to the right, then release the upper grommet from the frame boss.  
*Be careful not to damage the radiator core.*  
Remove the radiator assembly.

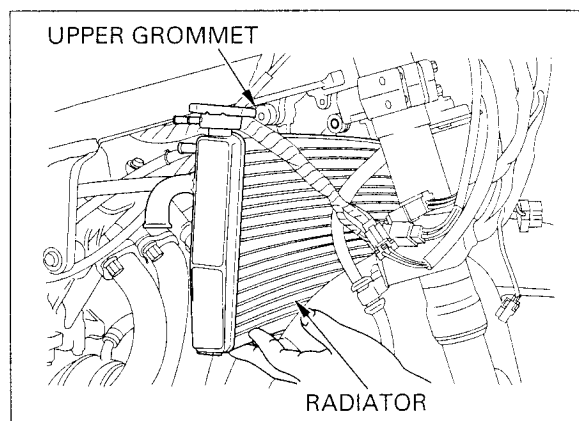

### DISASSEMBLY

Release the fan motor sub-harness connector from the fan motor bracket.


Remove the three bolts, ground eyelet and cooling fan/motor assembly.

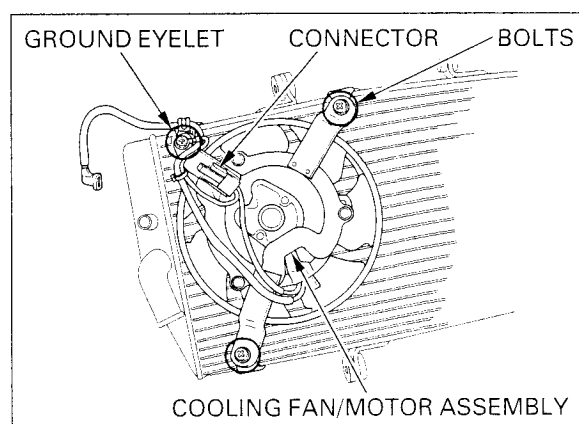




## COOLING SYSTEM

Remove the nut, cooling fan and distance collar.

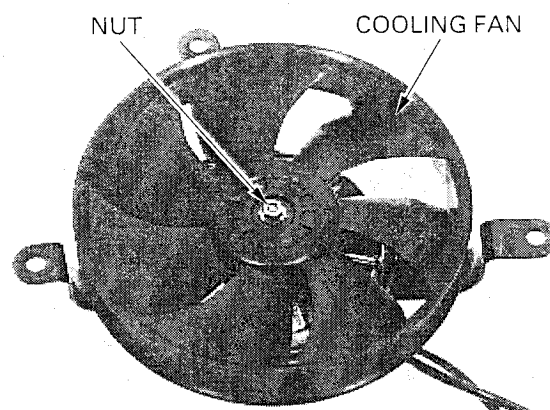


Remove the flange nuts and fan motor from the fan motor bracket.

For fan motor switch information, refer to page 19-14.

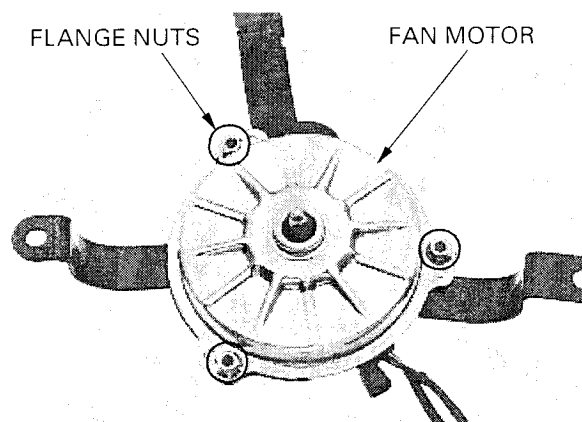


## ASSEMBLY

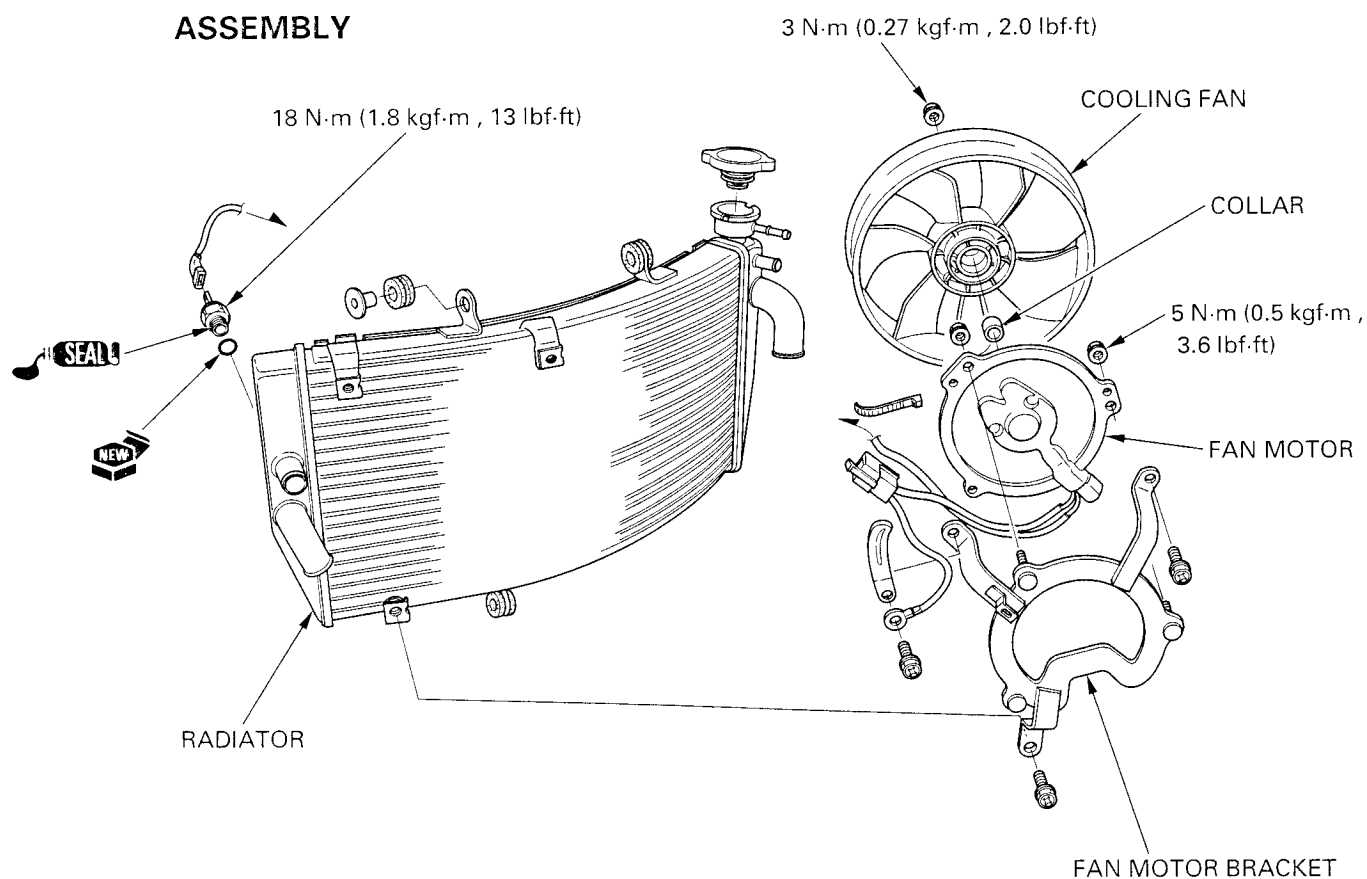


## COOLING SYSTEM

Install the fan motor onto the fan motor bracket and tighten the flange nuts to the specified torque.

**TORQUE:** 5 N·m (0.5 kgf·m , 3.6 lbf·ft)

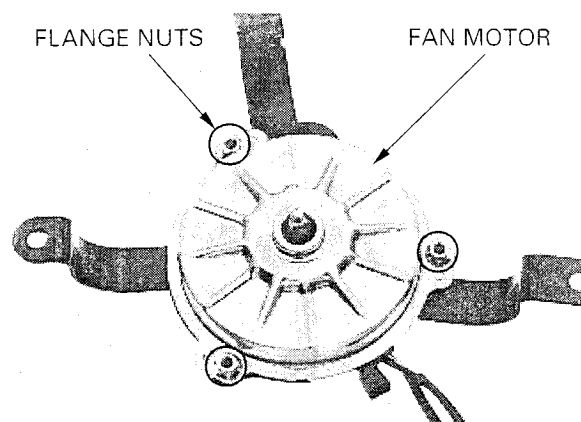


Install the distance collar onto the fan motor shaft. Install the cooling fan onto the fan motor shaft by aligning the flat surfaces.

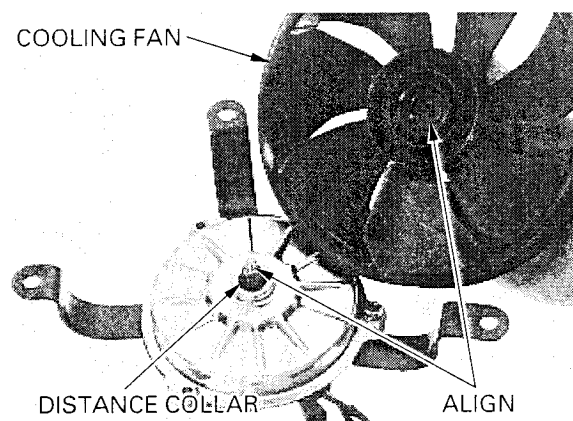


Apply a locking agent to the cooling fan nut threads. Install and tighten the nut to the specified torque.

**TORQUE:** 3 N·m (0.27 kgf·m , 2.0 lbf·ft)

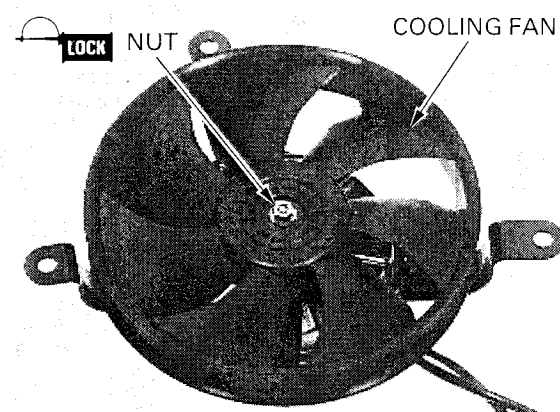

Install the cooling fan/motor assembly onto the radiator. Route the ground eyelet properly. Install and tighten the bolts.

Install the radiator sub-harness connector to the fan motor bracket.

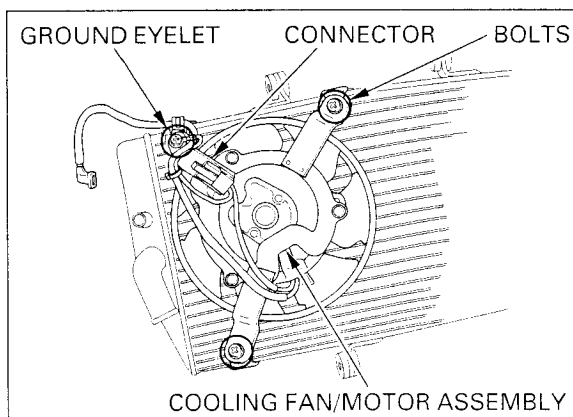


## COOLING SYSTEM


*Be careful not to  
damage the  
radiator core.*

### INSTALLATION


Install the radiator assembly, aligning its grommet with the frame boss.

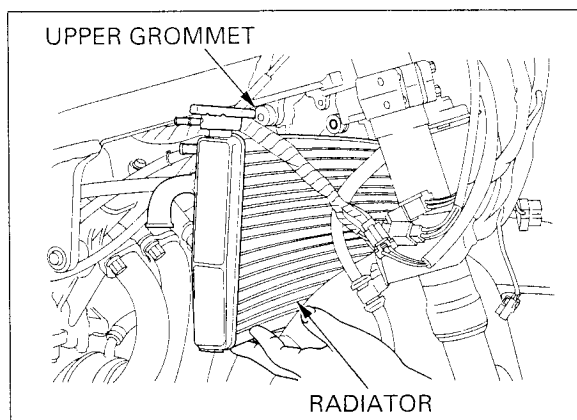


Install the washer and upper mounting bolt, then tighten the bolt.

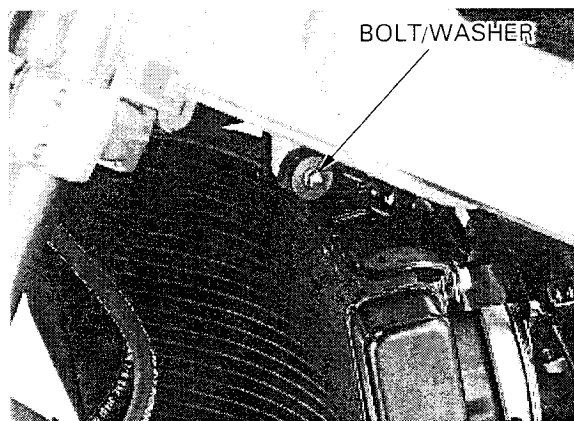


Install the radiator lower mounting bolt/nut, tighten the nut securely.

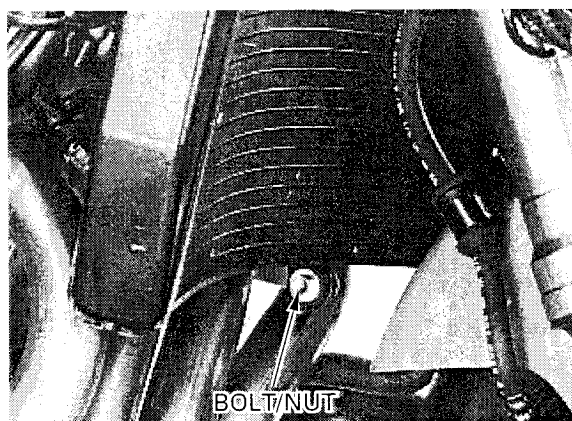

Connect the fan motor sub-harness 2P (Black) connector.  
Connect the lower radiator hose and oil collar water hose.

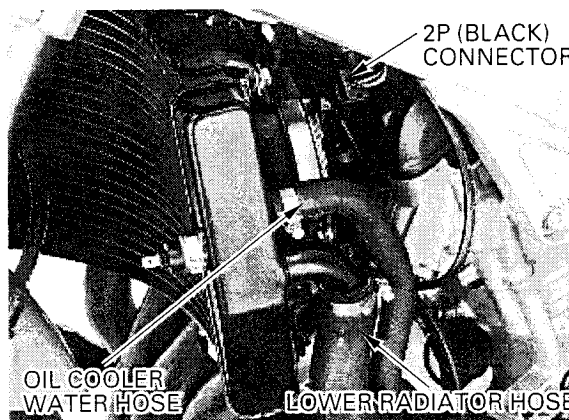

Connect the upper radiator hose.  
Connect the siphon tube and air bleed tube to the radiator.

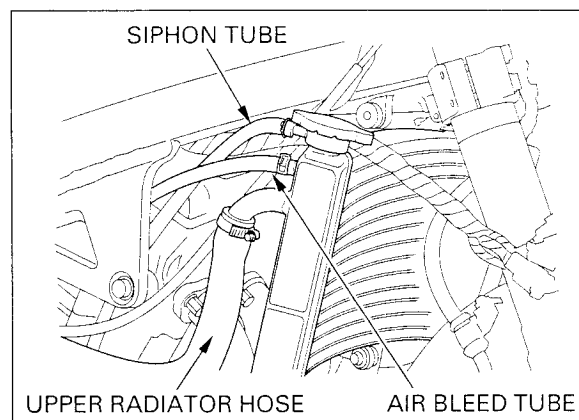


Route the fan motor switch wire properly, connect the connector to the switch.

Fill the system with recommended coolant (page 6-5).

Install the following:

- Heat guard (page 2-15)
- Middle/lower cowl (page 2-7)

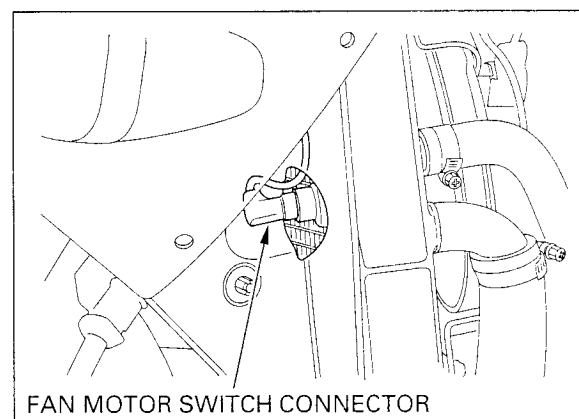


## WATER PUMP

### MECHANICAL SEAL INSPECTION

Inspect the inspection hole for signs of coolant leakage.


If there is leakage, the mechanical seal is defective and replace the water pump as an assembly.

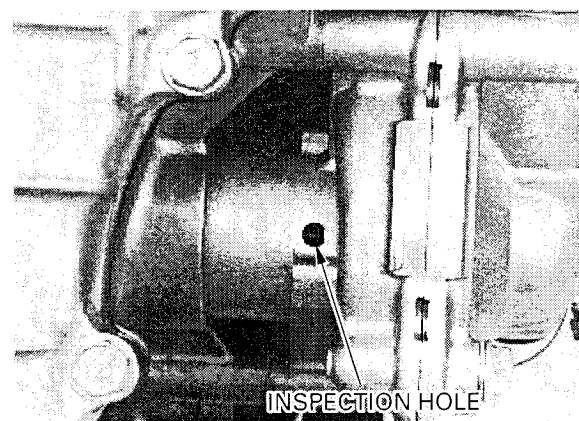

### REMOVAL

Drain the coolant (page 6-4).


Disconnect the lower radiator hose, bypass hose and oil cooler water hose from the water pump cover.

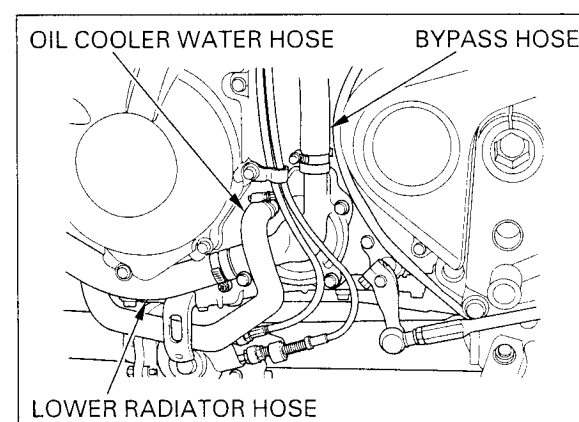




## COOLING SYSTEM


Remove the two SH bolts, two flange bolts and water pump cover.

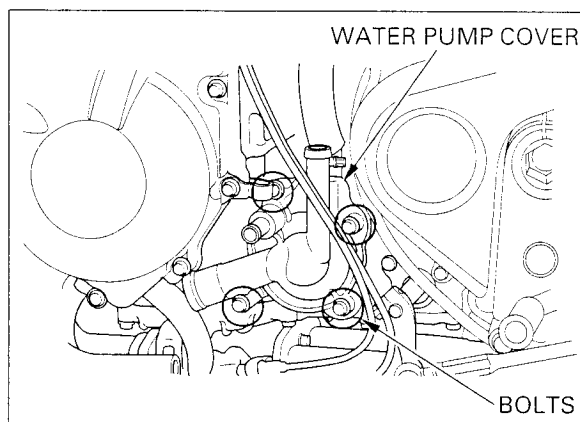


Remove the O-ring from the water pump body.  
Remove the water pump body from the crankcase.

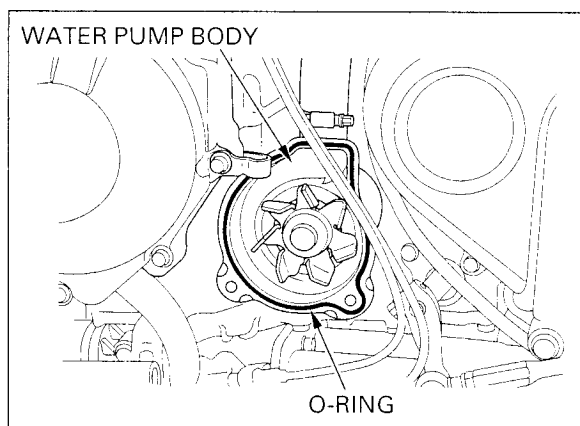


Disconnect the water pump-to-water joint hose from the water pump body.

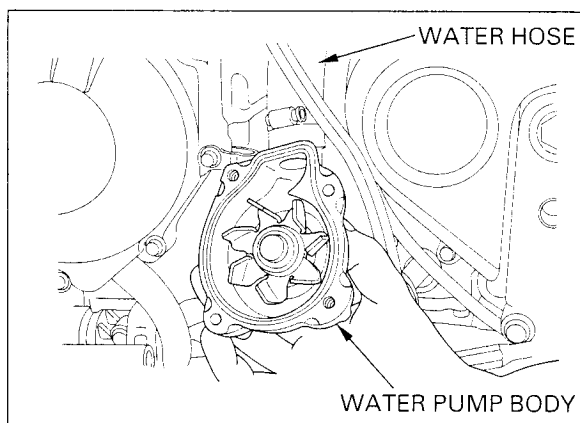

## INSTALLATION

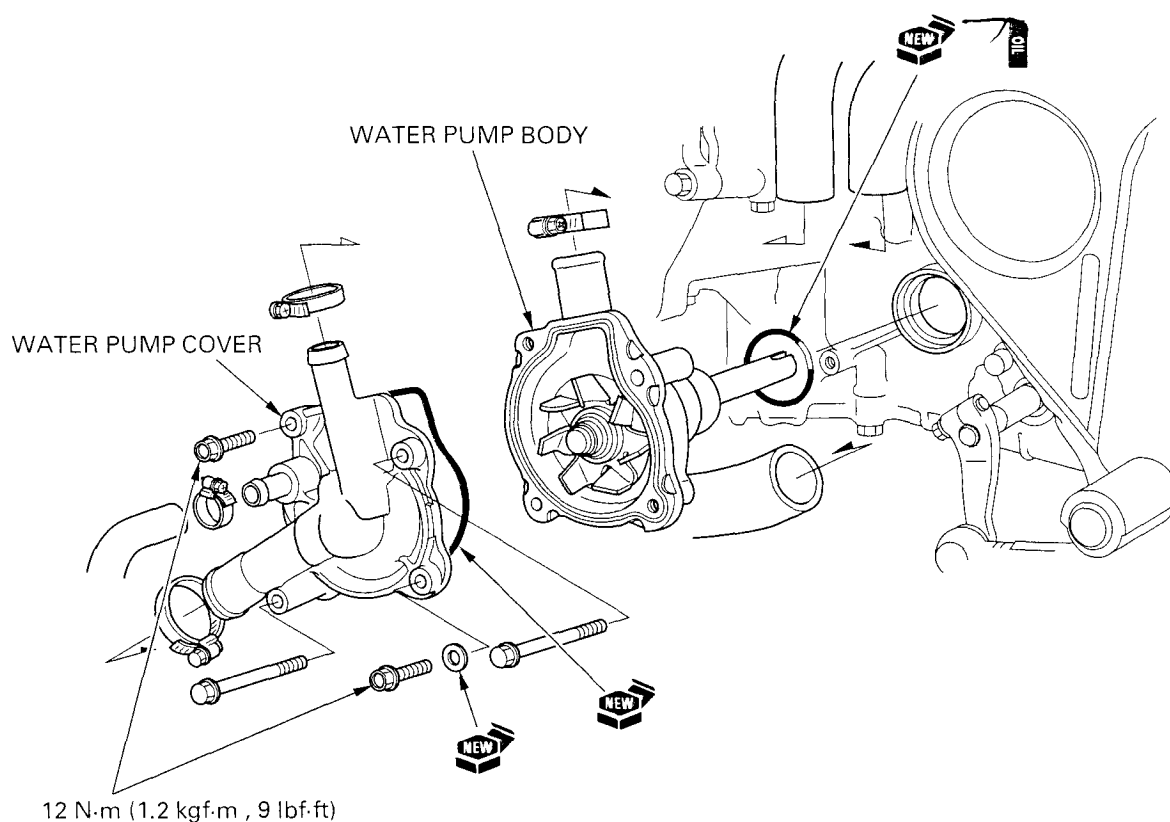


Connect the water pump-to-water joint hose to the water pump and tighten the clamp screw.

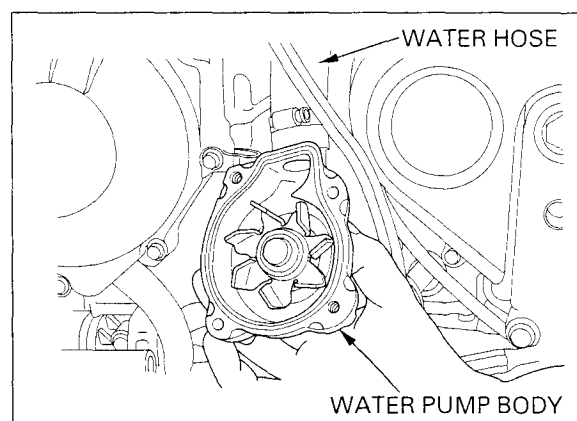

Apply engine oil to a new O-ring and install it onto the stepped portion of the water pump.

Install the water pump into the crankcase while aligning the water pump shaft groove with the oil pump shaft end.

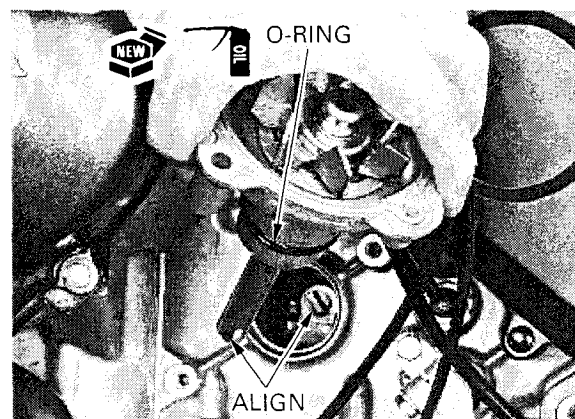




## COOLING SYSTEM

Align the mounting bolt holes in the water pump and crankcase and make sure the water pump is securely installed.

Install a new O-ring into the groove in the water pump body.

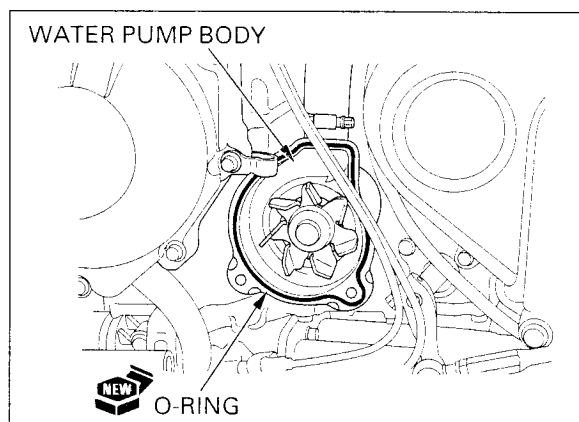


Install the water pump cover, two SH bolts and two flange bolts.

Tighten the flange bolts to the specified torque.


**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

Tighten the two SH bolts.

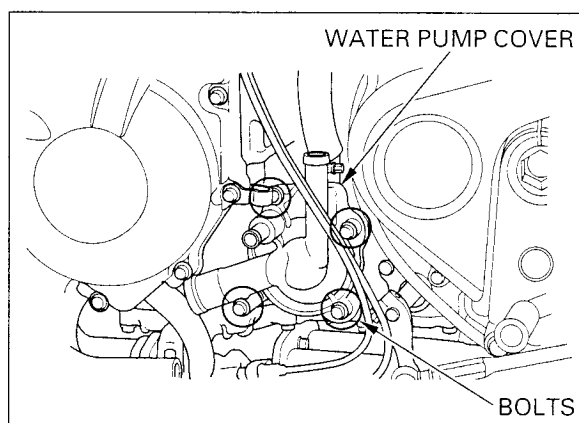

Connect the lower radiator hose, bypass hose and oil cooler water hose, then tighten the clamp screws.

Fill the system with recommended coolant (page 6-5).

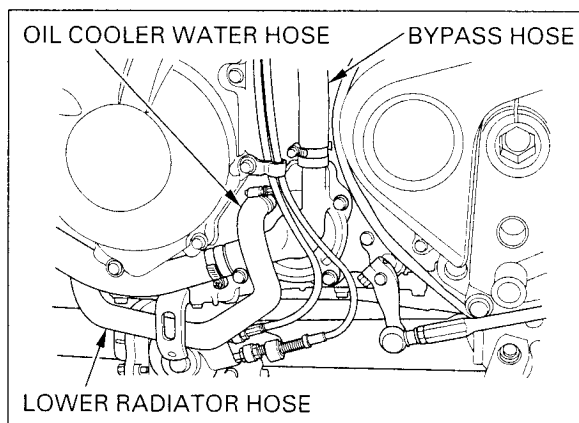


## RADIATOR RESERVE TANK

### REMOVAL

Remove the middle/lower cowl (page 2-5).


Disconnect the siphon tube and drain coolant from the reserve tank.

Remove the radiator reserve tank lower mounting bolt.

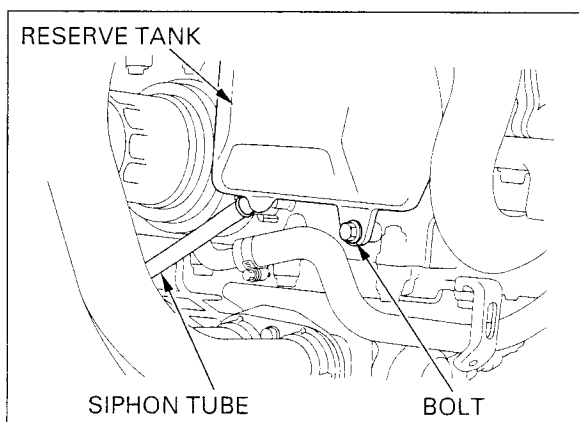


## COOLING SYSTEM

Remove the reserve tank upper mounting bolt and reserve tank.  
Disconnect the overflow tube.

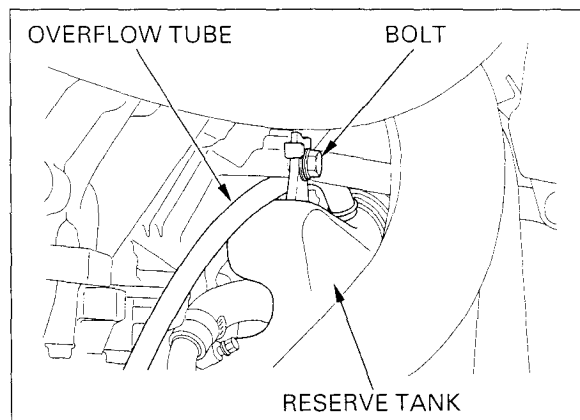


## INSTALLATION

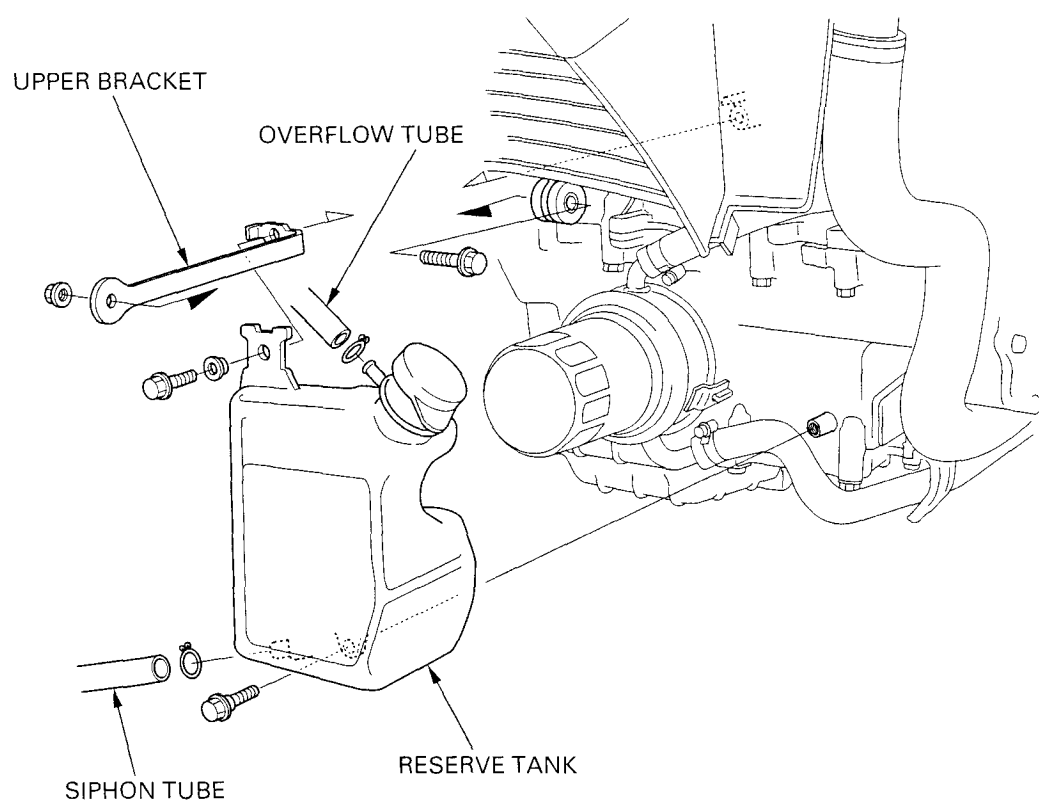

Route the overflow tube properly (page 1-23).

Install and tighten the reserve tank upper mounting bolt.

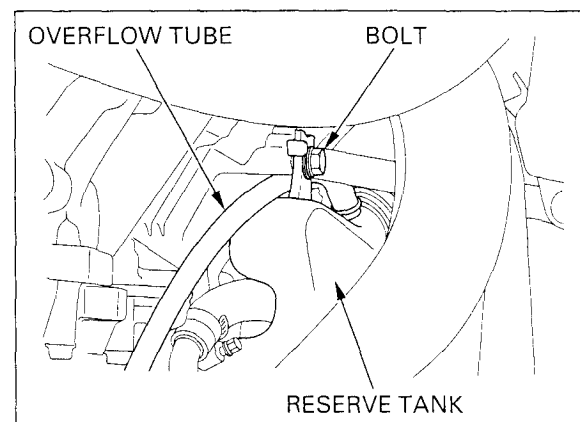


## COOLING SYSTEM

---

Install and tighten the lower mounting bolt.  
Connect the siphon tube to the reserve tank.

Install the removed parts in the reverse order of removal.

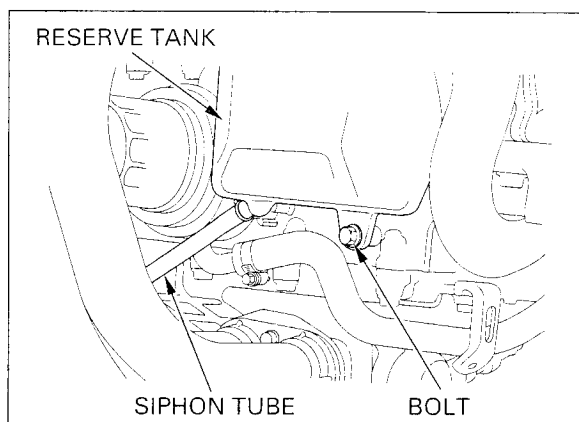

# 7. ENGINE REMOVAL/INSTALLATION

SERVICE INFORMATION	7-1	ENGINE INSTALLATION	7-6
LOWER BRACKET REMOVAL	7-2	LOWER BRACKET INSTALLATION	7-11
ENGINE REMOVAL	7-3		

## SERVICE INFORMATION

### GENERAL

- During engine removal and installation, support the motorcycle using a hoist or equivalent.
- Support the engine using a jack or other adjustable support to ease of engine hanger bolts removal.

### NOTICE

*Do not use the oil filter as a jacking point.*

- The following components can be serviced with the engine installed in the frame.
  - Alternator (Section 10)
  - Camshaft (Section 8)
  - Clutch (Section 9)
  - Gearshift linkage (Section 9)
  - Oil cooler (Section 4)
  - Oil pump (Section 4)
  - Shift forks/shift drum (Section 9)
  - Water pump (Section 6)
- The following components require engine removal for service.
  - Crankshaft/transmission (Section 12)
  - Cylinder head/valves (Section 8)
  - Piston/cylinder (Section 11)

### SERVICE DATA

ITEM		SPECIFICATIONS
Engine dry weight		62.1 kg (136.9 lbs)
Coolant capacity	Radiator and engine	3.2 ℓ (3.4 US qt , 2.8 Imp qt)
Engine oil capacity	At disassembly	4.0 ℓ (4.2 US qt , 3.5 Imp qt)

### TORQUE VALUES

Main step bracket mounting socket bolt	39 N·m (4.0 kgf·m , 29 lbf·ft)	
Main step mounting bolt	44 N·m (4.5 kgf·m , 33 lbf·ft)	ALOC bolt
Bank sensor	12 N·m (1.2 kgf·m , 9 lbf·ft)	
Lower bracket mounting nut, 10 mm	42 N·m (4.3 kgf·m , 31 lbf·ft)	U-nut, see page 7-11
Lower bracket mounting pinch bolt	26 N·m (2.7 kgf·m , 20 lbf·ft)	
Engine hanger nut (front)	39 N·m (4.0 kgf·m , 29 lbf·ft)	See page 7-6
Engine hanger nut (middle)	54 N·m (5.5 kgf·m , 40 lbf·ft)	
Engine hanger nut (rear)	54 N·m (5.5 kgf·m , 40 lbf·ft)	
Rear engine hanger pinch bolt	26 N·m (2.7 kgf·m , 20 lbf·ft)	
Side stand bracket bolt	44 N·m (4.5 kgf·m , 33 lbf·ft)	ALOC bolt
Drive sprocket special bolt	54 N·m (5.5 kgf·m , 40 lbf·ft)	

## ENGINE REMOVAL/INSTALLATION


### LOWER BRACKET REMOVAL

Open and support the front end of fuel tank (page 3-4).


Remove the following:

- Muffler/exhaust pipe (page 2-19)
- Rear fender (page 2-14)
- Suspension linkage (page 14-9)
- Rear shock absorber (page 14-11)
- Swingarm (page 14-14)


Disconnect the side stand 2P (Green) connector.

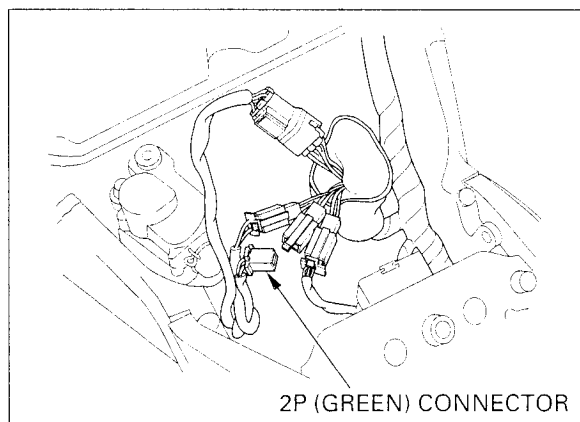


Remove the bolts and side stand bracket assembly.

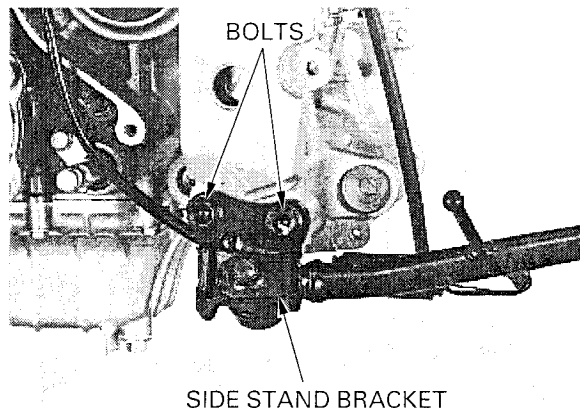

Remove the lower bracket front socket bolt and nut.

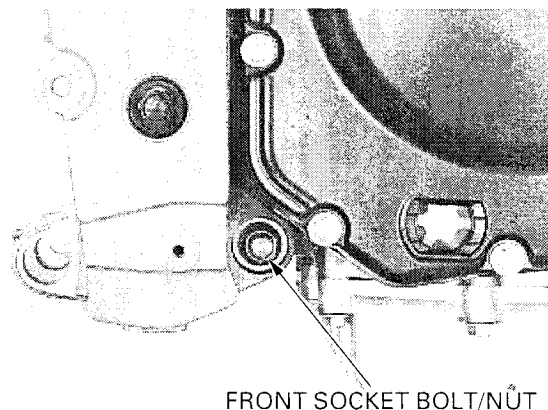


Loosen the rear socket bolt pinch bolt.

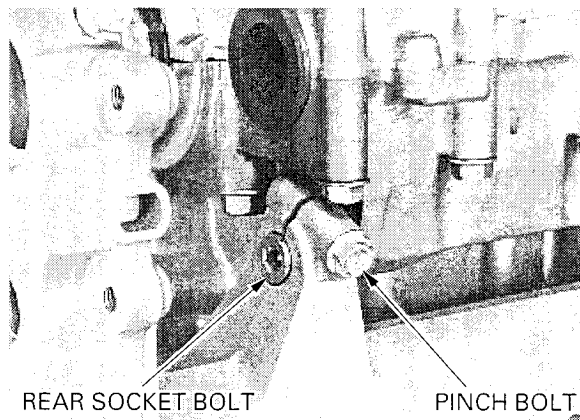



## ENGINE REMOVAL/INSTALLATION


Remove the lower bracket rear socket bolt and nut then remove the lower bracket from the engine.

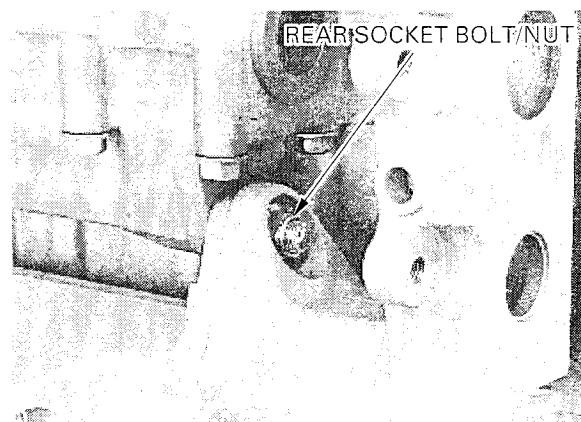

## ENGINE REMOVAL


Remove the following:

- Fuel tank (page 5-61)
- EGCV and air intake valve servo motor (page 5-97)
- Throttle body (page 5-68)
- Lower bracket (page 7-2)
- PAIR control solenoid valve assembly (page 8-5)
- Ignition coil/spark plug sub-harness (page 8-5)

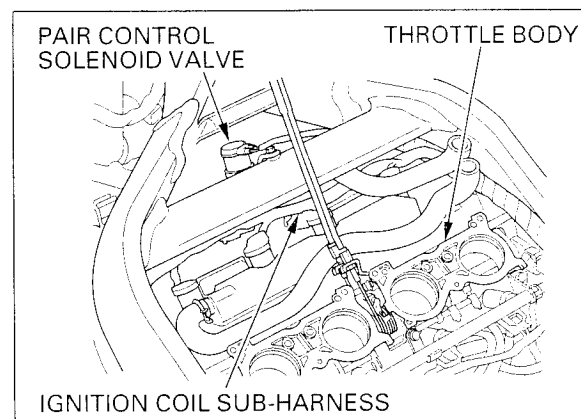


Disconnect the following connectors:

- Ignition pulse generator 2P (Red) connector
- Speed sensor 3P (Natural) connector
- Engine sub-harness 2P (Blue) connector

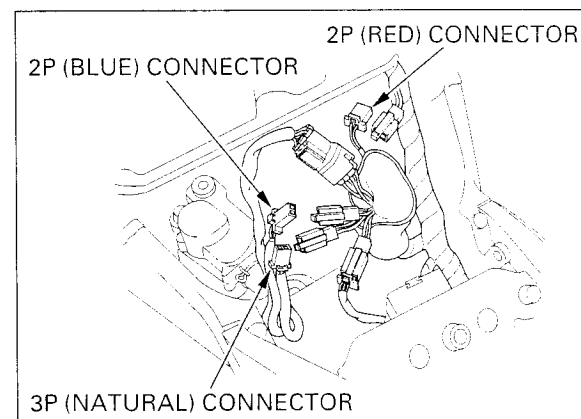

Disconnect the alternator 3P (White) connector.

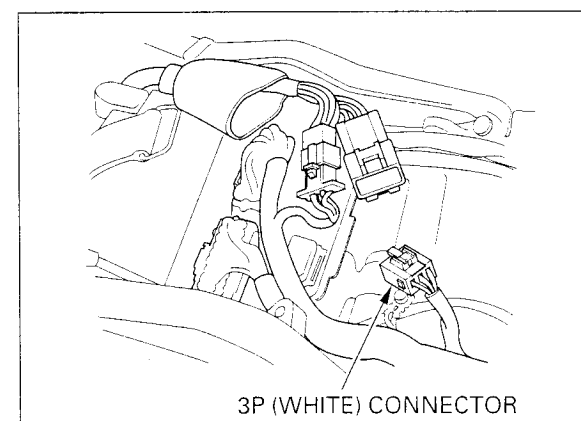

## ENGINE REMOVAL/INSTALLATION


Disconnect the air bleed tube and upper radiator hose from the thermostat housing cover.

Remove the thermostat housing cover and thermostat (page 6-6).




Disconnect the ECT sensor connector.

Remove the bolts and thermostat housing from the cylinder head.

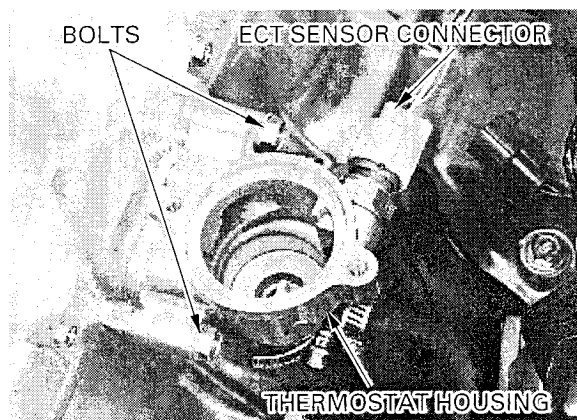


Remove the starter motor mounting bolt and starter motor ground cable.

Remove the terminal nut and starter motor cable.

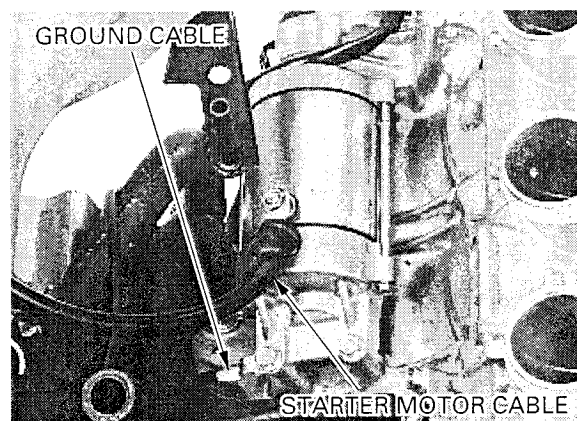

Remove the bolts and clutch cable guide, then disconnect the clutch cable from the clutch lifter lever.

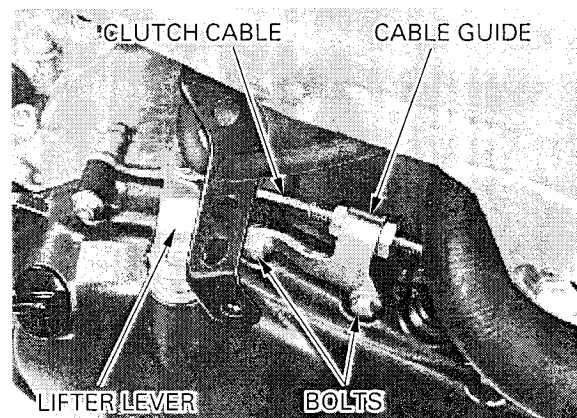


## ENGINE REMOVAL/INSTALLATION

Remove the radiator lower mounting bracket bolt/nut.


Disconnect the siphon tube from the radiator reserve tank.

Remove the bolts, radiator reserve tank and radiator lower mounting bracket.

Disconnect the oil cooler-to-radiator water hose from the oil cooler.

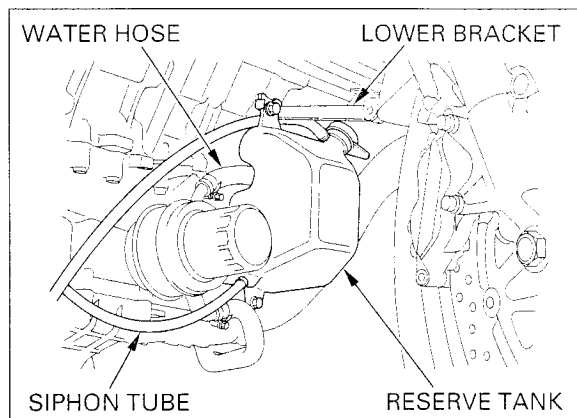


Disconnect the lower radiator hose from the water pump cover.

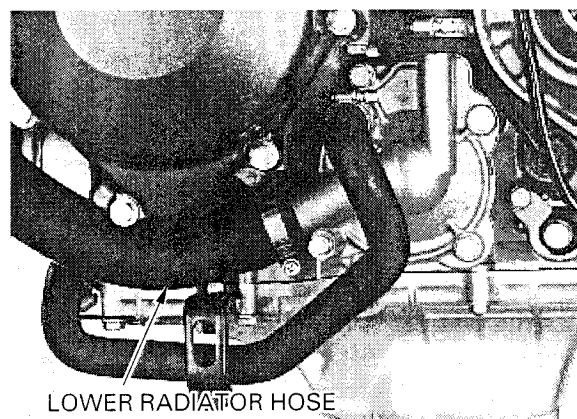


Support the engine using a jack or other adjustable support to ease of engine hanger bolts removal.

Remove left side of the front (10 mm) and middle (12 mm) engine hanger bolts.

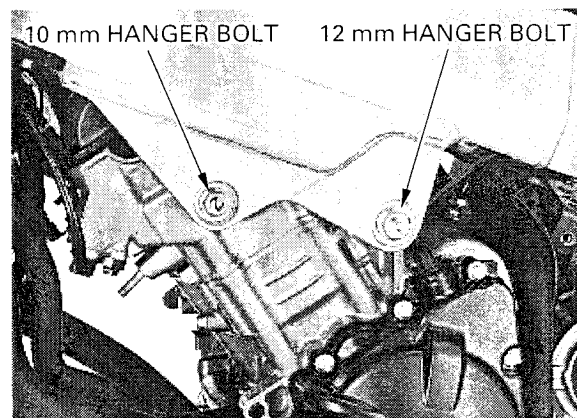


Remove the right side of the front (10 mm) and middle (12 mm) engine hanger bolts and distance collars.

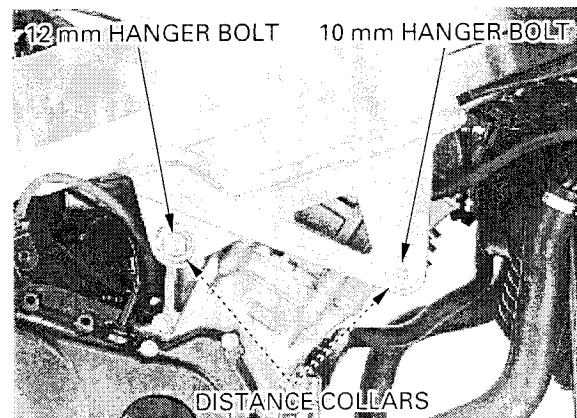




## ENGINE REMOVAL/INSTALLATION

Loosen the rear engine hanger pinch bolt.

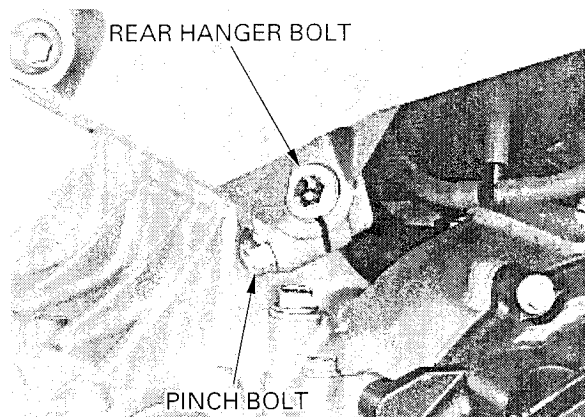


Remove the rear engine hanger socket bolt and nut, then remove the engine from the frame.

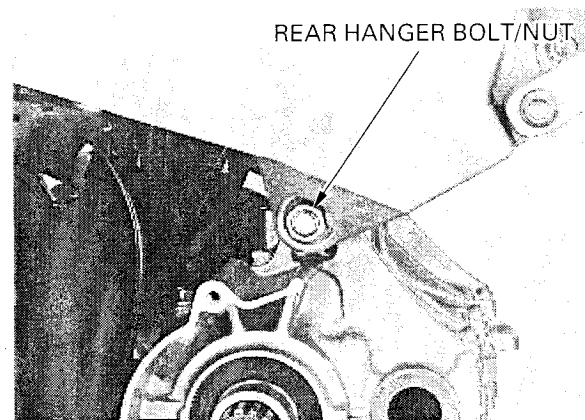

## ENGINE INSTALLATION


- Note the direction of the hanger bolts.
- Use a floor jack or other adjustable support to carefully maneuver the engine into place.

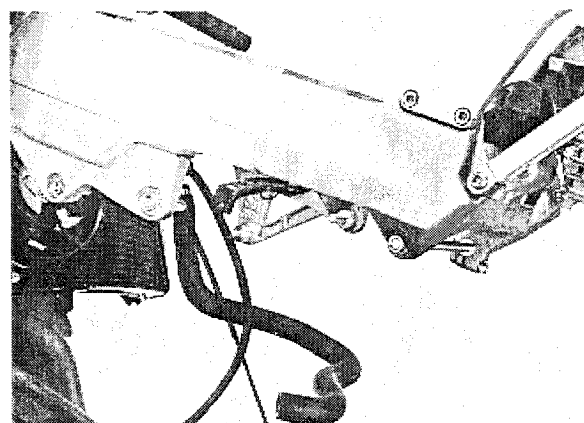

*Be careful not to damage the cam chain tensioner lifter.*


Install the engine into the frame.

Install the rear engine hanger socket bolt and nut.

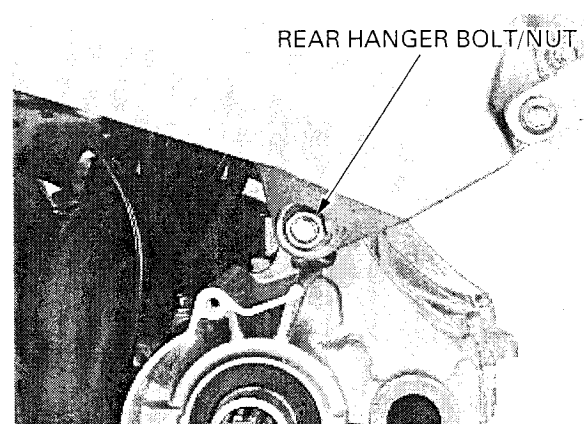

## ENGINE REMOVAL/INSTALLATION


Install the right side of the front (10 mm) and middle (12 mm) engine hanger bolts with the distance collars.

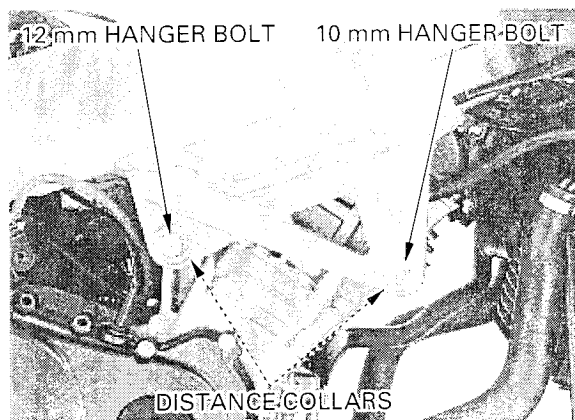

Install the left side of the front (10 mm) and middle (12 mm) engine hanger bolts.


### NOTICE

*Install the right and left front engine hanger bolts in their proper locations. Improper installation will damage the cylinder head.*

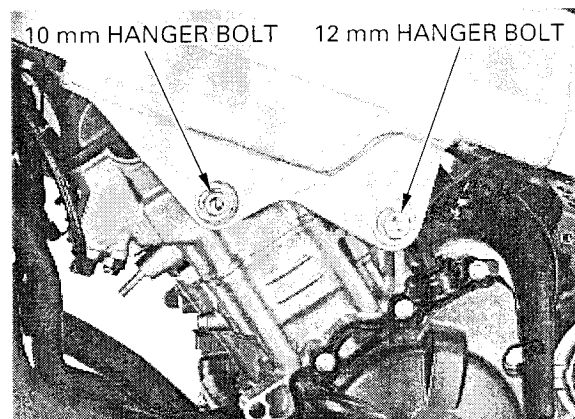


Hold the rear engine hanger socket bolt, then tighten the nut to the specified torque.

**TORQUE:** 54 N·m (5.5 kgf·m , 40 lbf·ft)

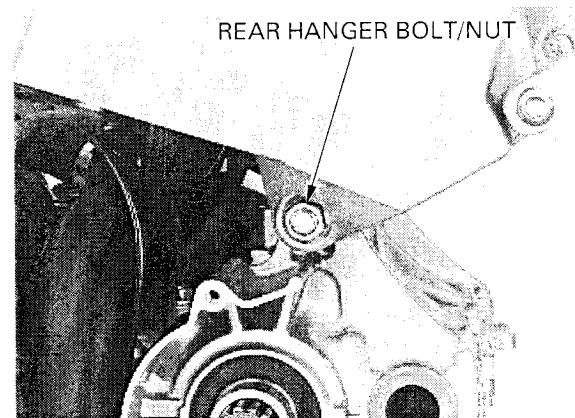

Tighten the rear engine hanger pinch bolt to the specified torque.

**TORQUE:** 26 N·m (2.7 kgf·m , 20 lbf·ft)

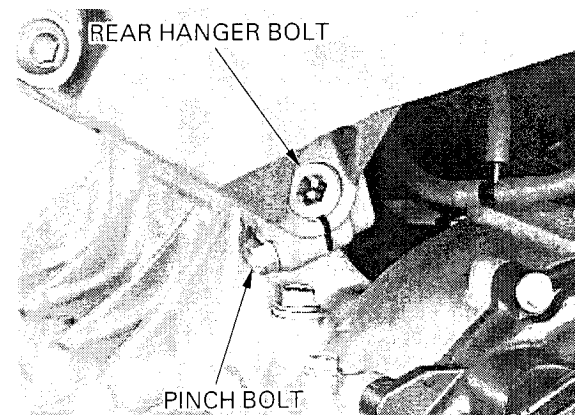




## ENGINE REMOVAL/INSTALLATION

Tighten the left side of the front (10 mm) and middle (12 mm) engine hanger bolt to the specified torque.

**TORQUE:**

**Front (10 mm):** 39 N·m (4.0 kgf·m , 29 lbf·ft)

**Middle (12 mm):** 54 N·m (5.5 kgf·m , 40 lbf·ft)

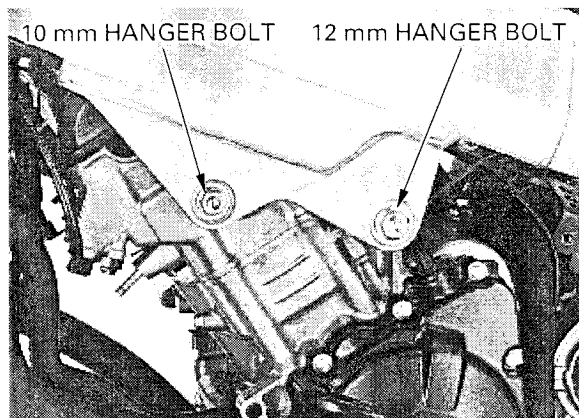


Tighten the right side of the front (10 mm) and middle (12 mm) engine hanger bolt to the specified torque.


**TORQUE:**

**Front (10 mm):** 39 N·m (4.0 kgf·m , 29 lbf·ft)

**Middle (12 mm):** 54 N·m (5.5 kgf·m , 40 lbf·ft)

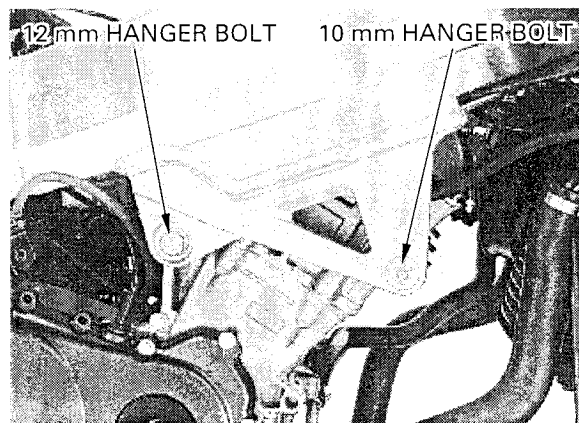

Connect the lower radiator hose to the water pump cover and tighten the hose band screw.

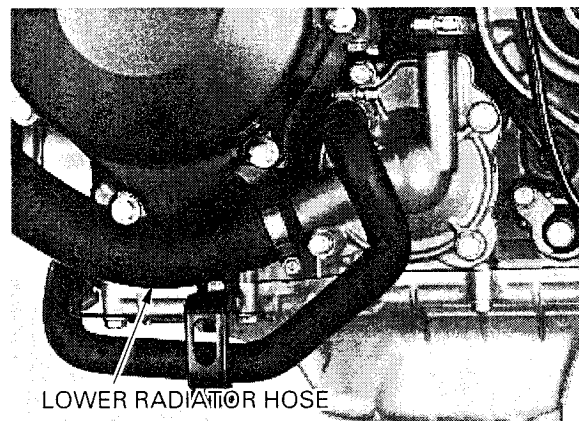


Connect the oil cooler-to-radiator water hose to the oil cooler, tighten the hose band securely.

Install the radiator reserve tank and mounting bolts, tighten the bolts.

Connect the siphon tube to the reserve tank.


Install the radiator lower mounting bolt/nut, tighten the nut securely.

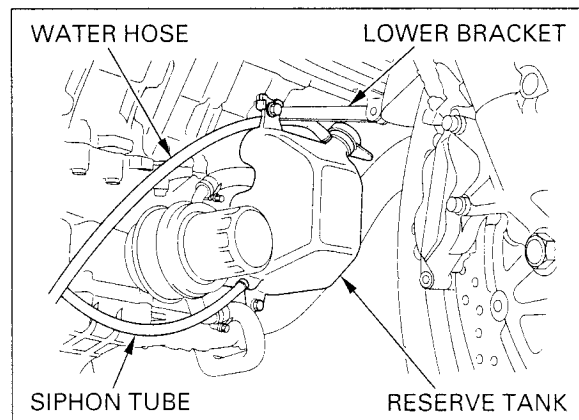

## ENGINE REMOVAL/INSTALLATION


Connect the clutch cable end to the clutch lifter lever.

Install the clutch cable guide to the right crankcase cover and tighten the mounting bolts securely.

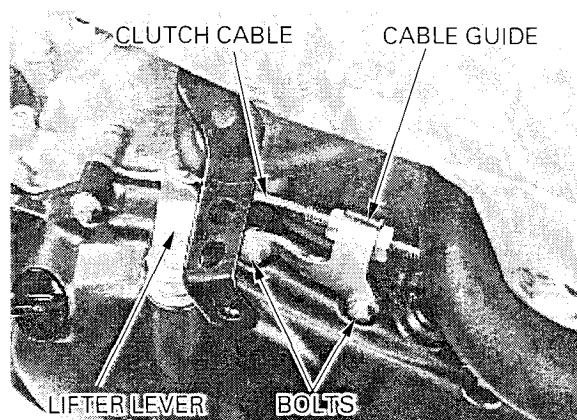


Connect the starter motor ground cable and install and tighten the starter motor mounting bolt.

Connect the starter motor cable to the motor terminal, tighten the terminal nut.

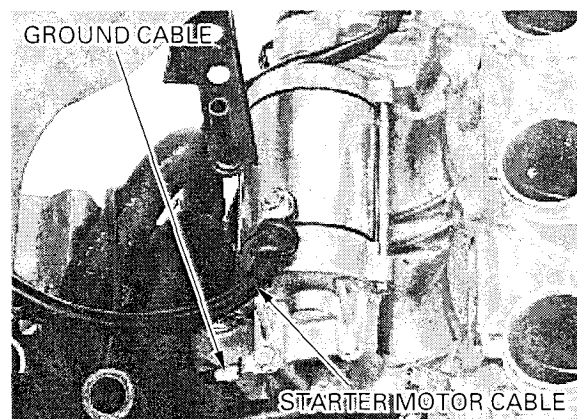


Install a new O-ring into the thermostat housing groove.

Install the thermostat housing to the cylinder head.

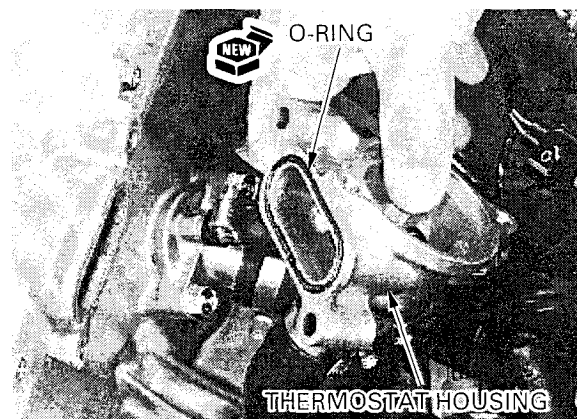

Install and tighten the thermostat housing mounting bolts.


Connect the ECT sensor connector.

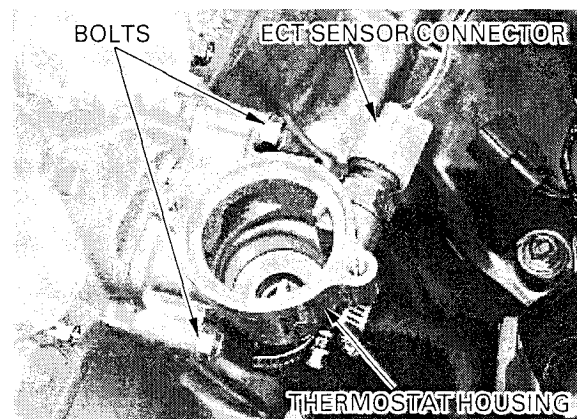


## ENGINE REMOVAL/INSTALLATION

Install the thermostat and thermostat housing cover (page 6-7).

Connect the air bleed tube and upper radiator hose to the thermostat housing cover and tighten the hose band screw.

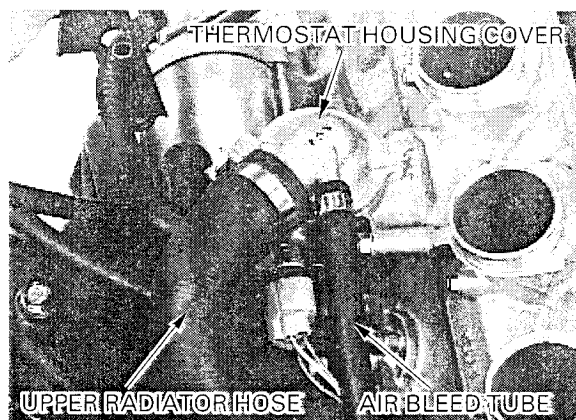


Route the alternator wire, connect the alternator 3P (White) connector.

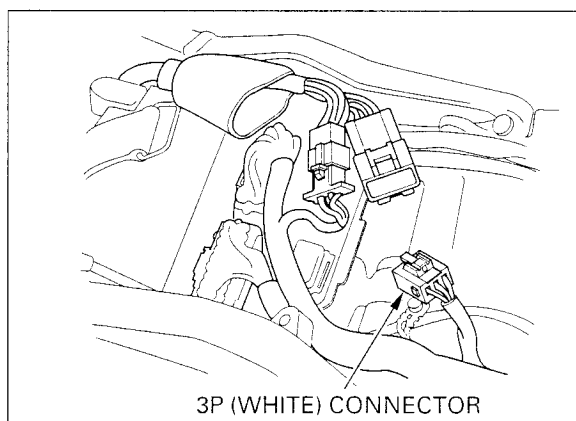

Connect the following connector:

- Ignition pulse generator 2P (Red) connector
- Speed sensor 3P (Natural) connector
- Engine sub-harness 2P (Blue) connector

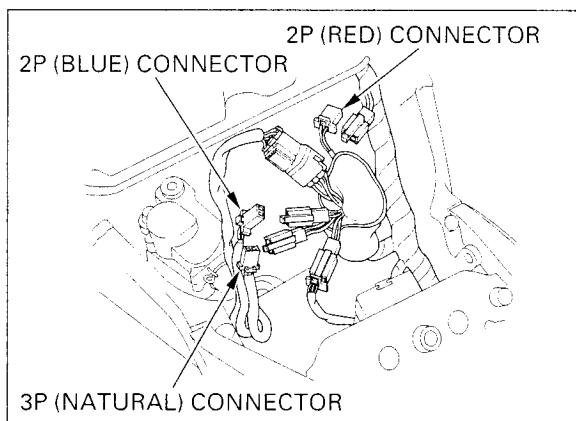


Install the following:

- Ignition coil/spark plug sub-harness (page 8-31)
- PAIR control solenoid valve assembly (page 8-31)
- Lower bracket (page 7-11)
- Throttle body (page 5-71)
- EGCv and air intake valve servo motor (page 5-98)
- Fuel tank (page 5-63)


Pour recommended engine oil up to the proper level (page 3-15).

Fill the cooling system with recommended coolant and bleed the air (page 6-4).

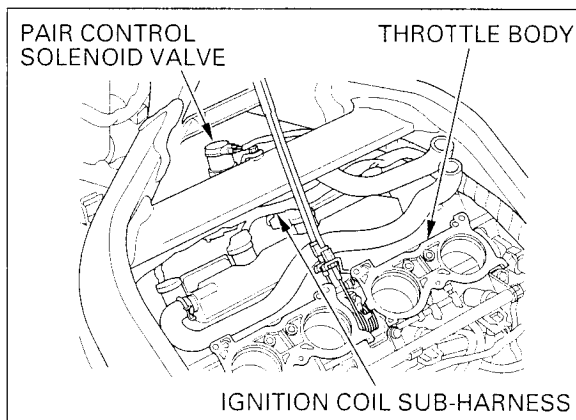




## LOWER BRACKET INSTALLATION

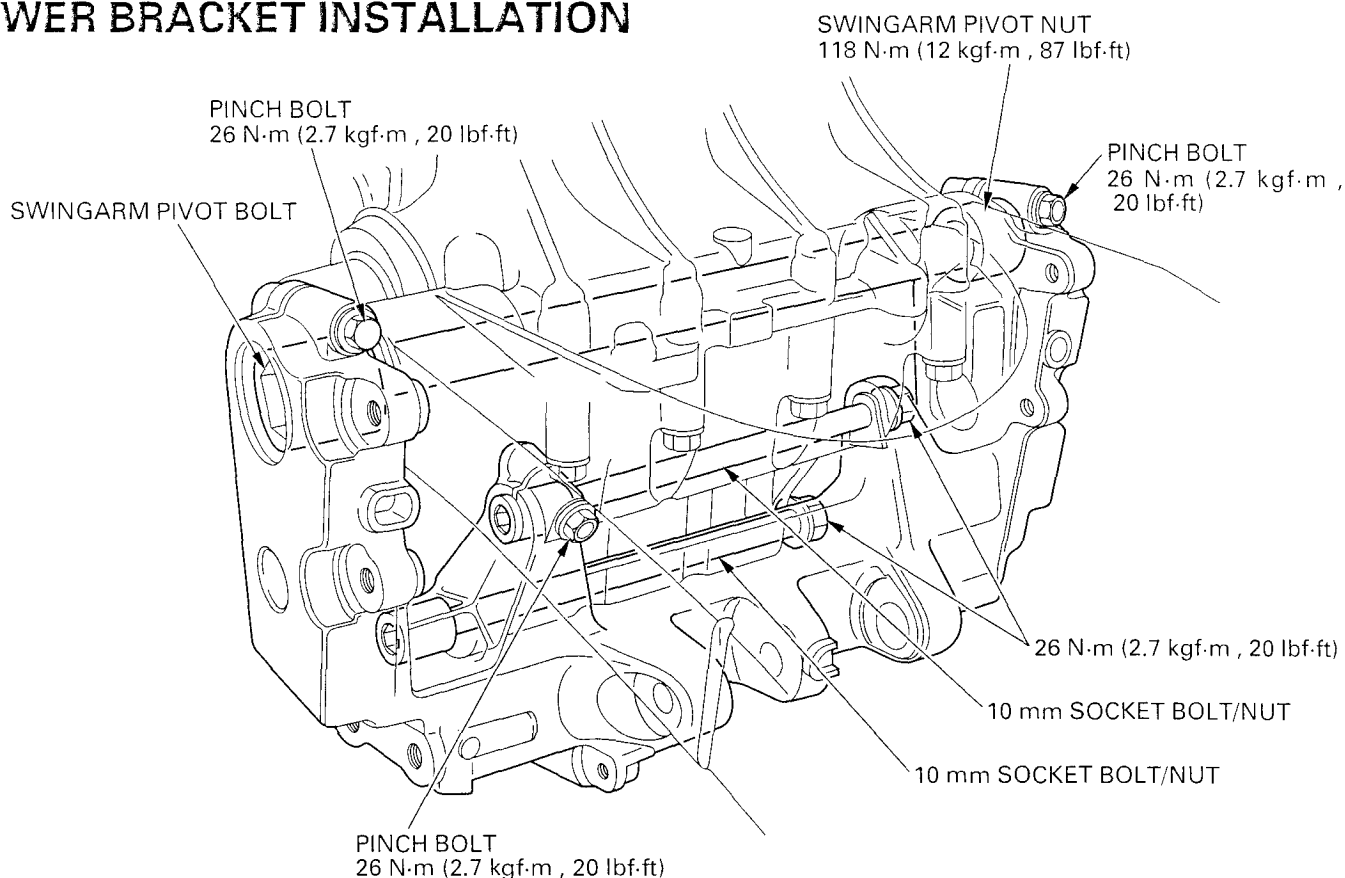


Install the lower bracket onto the engine.  
Temporarily install the front and rear 10 mm bolts and nuts.  
Temporarily tighten the 10 mm nuts.

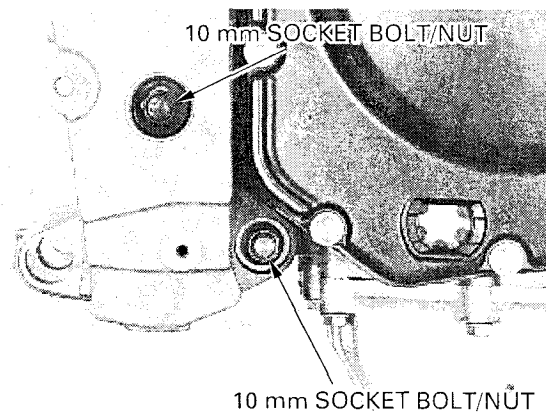

Install the swingarm (page 14-23).

Hold the swingarm pivot bolt, then tighten the pivot nut to the specified torque.


**TORQUE:** 118 N·m (12.0 kgf·m , 87 lbf·ft)

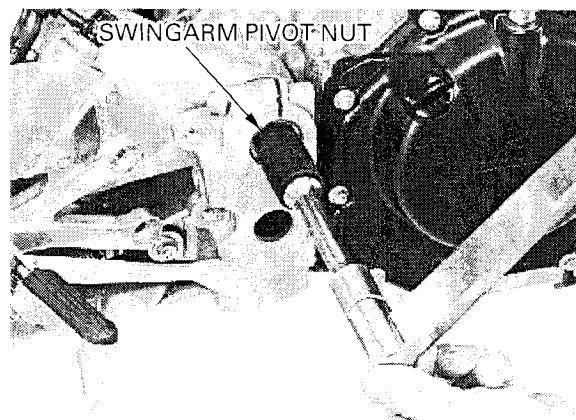

## ENGINE REMOVAL/INSTALLATION


Tighten the front 10 mm socket bolt and nut to the specified torque.

**TORQUE:** 42 N·m (4.3 kgf·m , 31 lbf·ft)

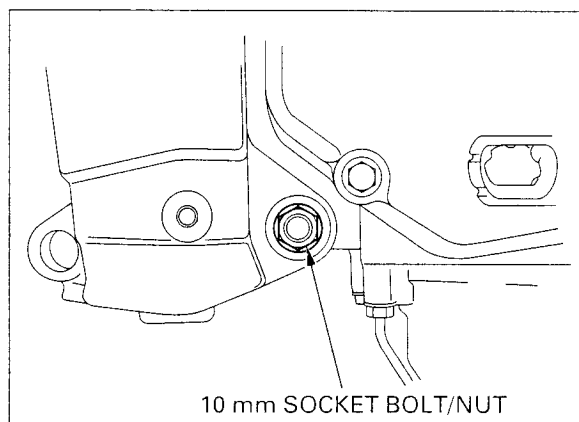


Hold the rear 10 mm socket bolt, tighten the nut to the specified torque.

**TORQUE:** 42 N·m (4.3 kgf·m , 31 lbf·ft)

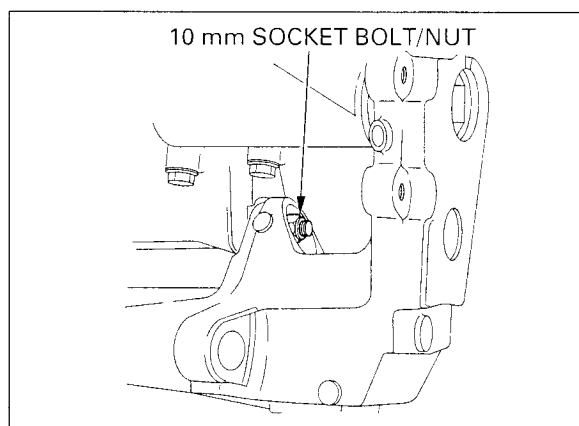


Tighten the 10 mm socket pinch bolt to the specified torque.

**TORQUE:** 26 N·m (2.7 kgf·m , 20 lbf·ft)

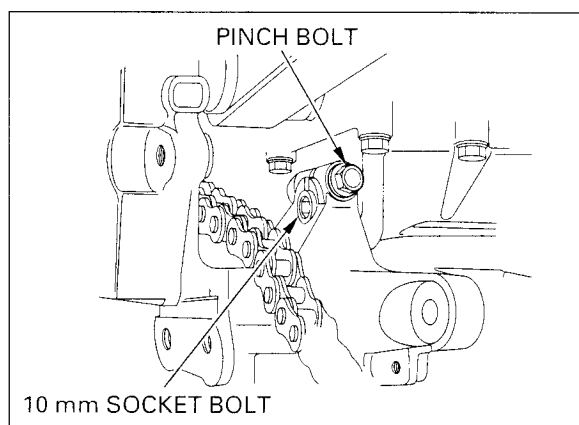

Install the side stand bracket assembly, tighten the new bolts to the specified torque.

**TORQUE:** 44 N·m (4.5 kgf·m , 33 lbf·ft)

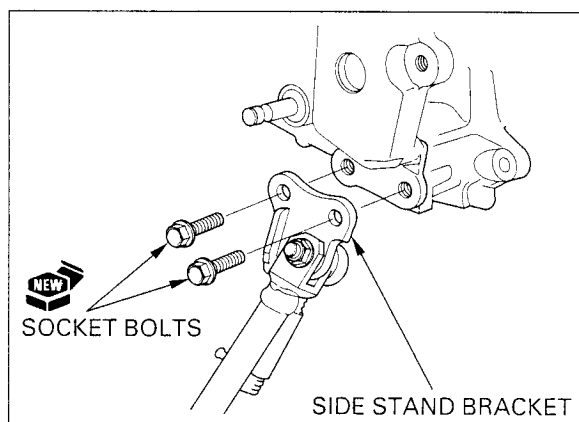




## ENGINE REMOVAL/INSTALLATION

Route the side stand wire properly, connect the side stand switch 2P (Green) connector.

Install the following:

- Rear shock absorber (page 14-13)
- Suspension linkage (page 14-11)
- Rear fender (page 2-16)
- Muffler/exhaust pipe (page 2-20)

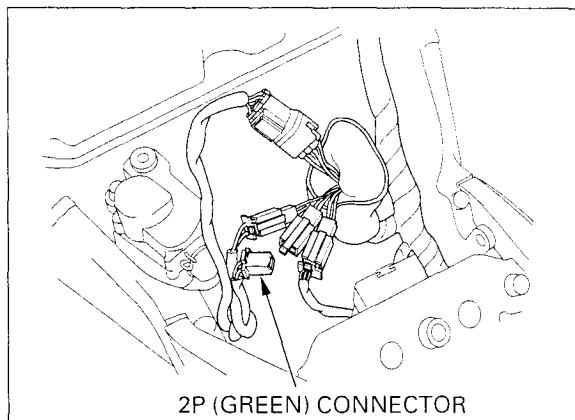

# 8. CYLINDER HEAD/VALVES

SERVICE INFORMATION	8-1	VALVE GUIDE REPLACEMENT	8-17
TROUBLESHOOTING	8-3	VALVE SEAT INSPECTION/REFACING	8-18
CYLINDER COMPRESSION TEST	8-4	CYLINDER HEAD ASSEMBLY	8-20
CYLINDER HEAD COVER REMOVAL	8-5	CYLINDER HEAD INSTALLATION	8-22
CYLINDER HEAD COVER DISASSEMBLY	8-6	CAMSHAFT INSTALLATION	8-24
CAMSHAFT REMOVAL	8-7	CYLINDER HEAD COVER ASSEMBLY	8-29
CYLINDER HEAD REMOVAL	8-12	CYLINDER HEAD COVER INSTALLATION	8-30
CYLINDER HEAD DISASSEMBLY	8-13	CAM CHAIN TENSIONER LIFTER	8-32
CYLINDER HEAD INSPECTION	8-14		

## SERVICE INFORMATION

### GENERAL

- This section covers service of the cylinder head, valves and camshaft.
- The camshaft services can be done with the engine installed in the frame. The cylinder head service required engine removal.
- When disassembling, mark and store the disassembled parts to ensure that they are reinstalled in their original locations.
- Clean all disassembled parts with cleaning solvent and dry them by blowing them off with compressed air before inspection.
- Camshaft lubricating oil is fed through oil passages in the cylinder head. Clean the oil passages before assembling cylinder head.
- Be careful not to damage the mating surfaces when removing the cylinder head cover and cylinder head.

**CYLINDER HEAD/VALVES****SPECIFICATIONS**

Unit: mm (in)

ITEM			STANDARD	SERVICE LIMIT
Cylinder compression			1,226 kPa (12.5 kgf/cm <sup>2</sup> , 178 psi) at 350 rpm	_____
Cylinder head warpage			_____	0.10 (0.004)
Valve, valve guide	Valve clearance	IN	0.16 ± 0.03 (0.006 ± 0.001)	_____
		EX	0.27 ± 0.03 (0.011 ± 0.001)	_____
	Valve stem O.D.	IN	4.475 – 4.490 (0.1762 – 0.1768)	4.465 (0.1758)
		EX	4.465 – 4.480 (0.1758 – 0.1764)	4.455 (0.1754)
	Valve guide I.D.	IN	4.500 – 4.512 (0.1772 – 0.1776)	4.540 (0.1787)
		EX	4.500 – 4.512 (0.1772 – 0.1776)	4.540 (0.1787)
	Stem-to-guide clearance	IN	0.010 – 0.037 (0.0004 – 0.0015)	_____
		EX	0.020 – 0.047 (0.0008 – 0.0019)	_____
	Valve guide projection above cylinder head	IN	14.3 – 14.6 (0.56 – 0.57)	_____
Valve spring free length	Inner	IN/EX	34.80 (1.370)	34.1 (1.34)
	Outer	IN/EX	37.97 (1.495)	37.2 (1.46)
Valve lifter	Valve lifter O.D.	IN/EX	25.978 – 25.993 (1.0228 – 1.0233)	25.97 (1.022)
	Valve lifter bore I.D.	IN/EX	26.010 – 26.026 (1.0240 – 1.0246)	26.04 (1.025)
Camshaft	Cam lobe height	IN	36.48 – 36.72 (1.436 – 1.446)	36.45 (1.435)
		EX	36.08 – 36.32 (1.420 – 1.430)	36.50 (1.437)
	Runout	_____	_____	0.05 (0.002)
	Oil clearance	_____	0.020 – 0.062 (0.0008 – 0.0024)	0.10 (0.004)

**TORQUE VALUES**

Cylinder head cover bolt	10 N·m (1.0 kgf·m, 7 lbf·ft)	
PAIR reed valve cover flange bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)	
Breather plate flange bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)	Apply a locking agent to the threads
Camshaft holder flange bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)	Apply oil to the threads
Cylinder head sealing bolt	27 N·m (2.8 kgf·m, 20 lbf·ft)	Apply a locking agent to the threads
Cylinder head mounting socket bolt/washer	51 N·m (5.2 kgf·m, 38 lbf·ft)	Apply molybdenum disulfide oil to the threads and seating surface (after removing anti-rust oil additive)
Cylinder head mounting bolt, 8 mm	24 N·m (2.4 kgf·m, 17 lbf·ft)	Apply oil to the threads
Cam sprocket bolt	20 N·m (2.0 kgf·m, 14 lbf·ft)	Apply a locking agent to the threads
Cam pulse generator rotor dowel bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)	Apply a locking agent to the threads
Cam chain tensioner pivot socket bolt	10 N·m (1.0 kgf·m, 7 lbf·ft)	Apply a locking agent to the threads
Cam chain guide mounting socket bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)	Apply a locking agent to the threads
Cylinder head stud bolt (exhaust pipe stud bolt)	See page 1-14	
Vacuum joint plug for synchronization	3 N·m (0.3 kgf·m, 2.2 lbf·ft)	

## TOOLS

Compression gauge attachment	07RMJ-MY50100	Equivalent commercially available in U.S.A.
Valve spring compressor	07757-0010000	
Valve spring compressor attachment	07959-KM30101	
Tappet hole protector	07HMG-MR70002	Not available in U.S.A.
Valve guide driver	07HMD-ML00101	
Valve guide reamer, 4.508 mm	07HMH-ML00101	07HMH-ML0010A (U.S.A. only)
Valve seat cutters		— these are commercially available in U.S.A.
Seat cutter, 24.5 mm (45° IN)	07780-0010100	
Seat cutter, 29 mm (45° EX)	07780-0010300	
Flat cutter, 25 mm (32° IN)	07780-0012000	
Flat cutter, 33 mm (32° EX)	07780-0012900	
Interior cutter, 26 mm (60° IN)	07780-0014500	
Interior cutter, 30 mm (60° EX)	07780-0014000	
Cutter holder, 4.5 mm	07781-0010600	

## TROUBLESHOOTING

- Engine top-end problems usually affect engine performance. These problem can be diagnosed by a compression test or by tracing engine noises to the top-end with a sounding rod stethoscope.
- If the performance is poor at low speeds, check for white smoke in the crankcase breather tube. If the tube is smoky, check for a seized piston ring (Section 11).

### Compression too low, hard starting or poor performance at low speed

- Valves:
  - Incorrect valve adjustment
  - Burned or bent valve
  - Incorrect valve timing
  - Broken valve spring
  - Uneven valve seating
- Cylinder head:
  - Leaking or damaged head gasket
  - Warped or cracked cylinder head
- Worn cylinder, piston or piston rings (section 11)

### Compression too high, overheating or knocking

- Excessive carbon build-up on piston crown or on combustion chamber

### Excessive smoke

- Cylinder head:
  - Worn valve stem or valve guide
  - Damaged stem seal
- Worn cylinder, piston or piston rings (section 11)

### Excessive noise

- Cylinder head:
  - Incorrect valve adjustment
  - Sticking valve or broken valve spring
  - Damaged or worn camshaft
  - Loose or worn cam chain
  - Worn or damaged cam chain
  - Worn or damaged cam chain tensioner
  - Worn cam sprocket teeth
- Worn cylinder, piston or piston rings (section 11)

### Rough idle

- Low cylinder compression

## CYLINDER HEAD/VALVES

### CYLINDER COMPRESSION TEST

Warm up the engine to normal operating temperature.

Stop the engine and remove the all direct ignition coil/spark plug caps and spark plugs (page 3-6).

Open and support the front end of fuel tank (page 3-4).

Disconnect the fuel pump/reserve sensor 3P (Black) connector.

Install a compression gauge into the spark plug hole.

#### TOOL:

**Compression gauge attachment** 07RMJ-MY50100  
(Equivalent commercially available in U.S.A.)

Open the throttle all the way and crank the engine with the starter motor until the gauge reading stops rising.

The maximum reading is usually reached within 4 – 7 seconds.

#### Compression pressure:

1,226 kPa (12.5 kgf/cm<sup>2</sup> , 178 psi) at 350 rpm


Low compression can be caused by:

- Blown cylinder head gasket
- Improper valve adjustment
- Valve leakage
- Worn piston ring or cylinder


High compression can be caused by:

- Carbon deposits in combustion chamber or on piston head

*To avoid discharging the battery, do not operate the starter motor for more than seven seconds.*

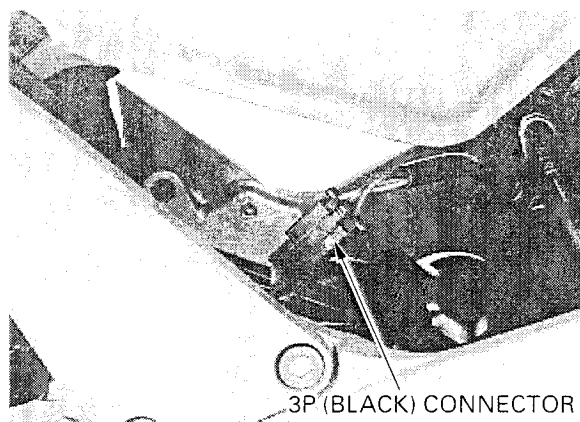

COMPRESSION GAUGE

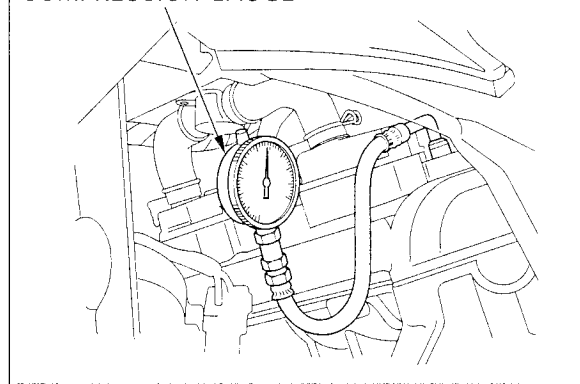




## CYLINDER HEAD COVER REMOVAL


Remove the following:

- Middle cowl (page 2-5)
- Air cleaner housing (page 5-66)

Remove the heat guard rubber.

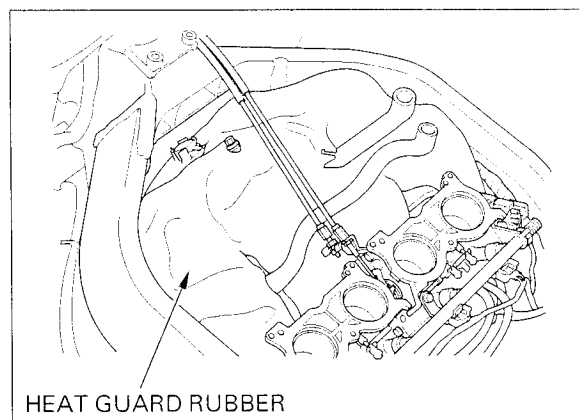

Disconnect the radiator sub-harness 2P (Black) connector.

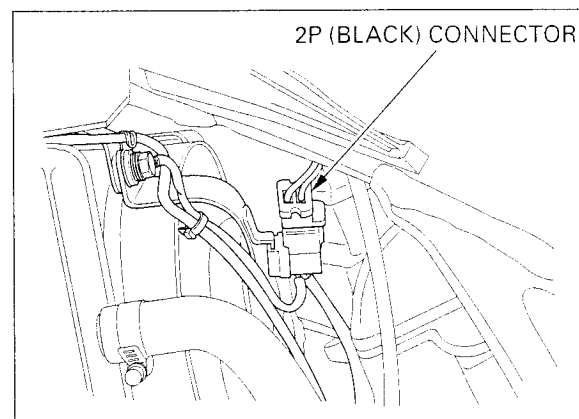

Disconnect the cam pulse generator 2P (Natural) connector.


Disconnect the PAIR control solenoid valve 2P (Natural) connector.

Disconnect the PAIR control solenoid valve air suction hoses.

Remove the mounting bolt and PAIR control solenoid valve assembly.

Disconnect the crankcase breather tube.


Disconnect the ignition coil sub-harness 9P (Black) connector and sub-harness.

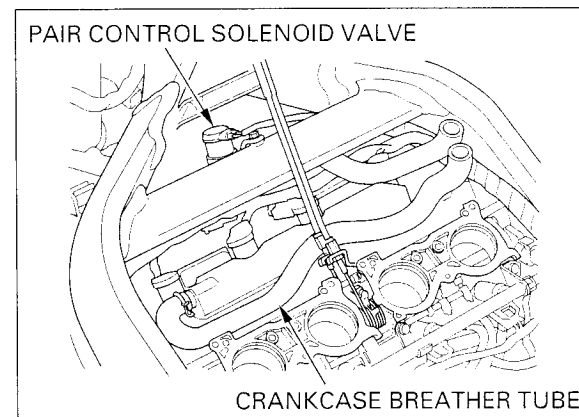

*Place a cloth underneath the bolts to avoid dropping them into the engine area.*


Remove the throttle cable guide bracket mounting bolts and washers.

Disconnect the throttle cable ends from the throttle drum.

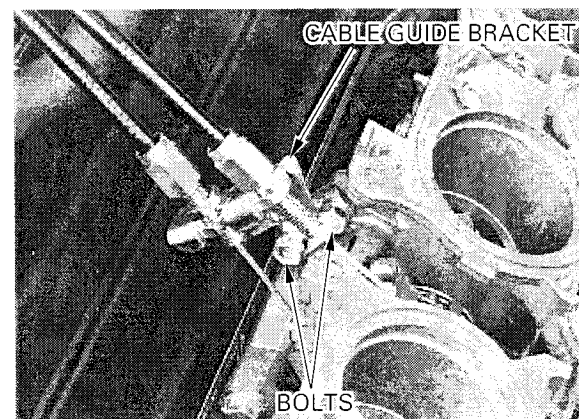


## CYLINDER HEAD/VALVES


Remove the SH bolts and PAIR reed valve covers from the cylinder head.

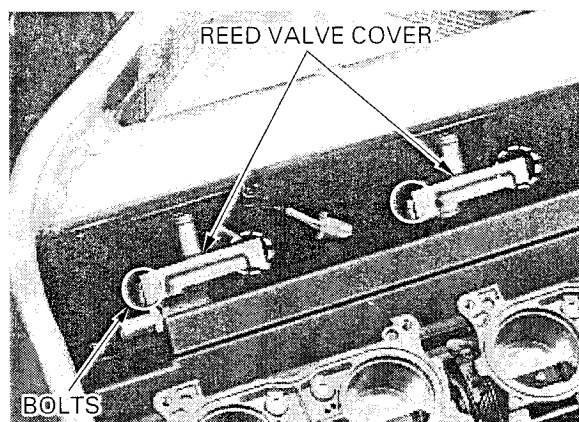

Remove the cylinder head cover bolts and washers.

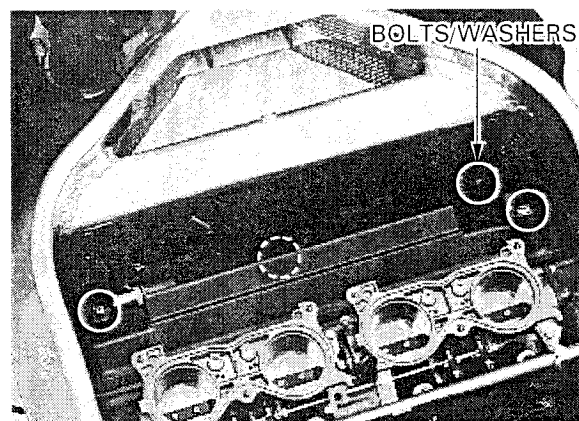


Remove the cylinder head cover rearward.

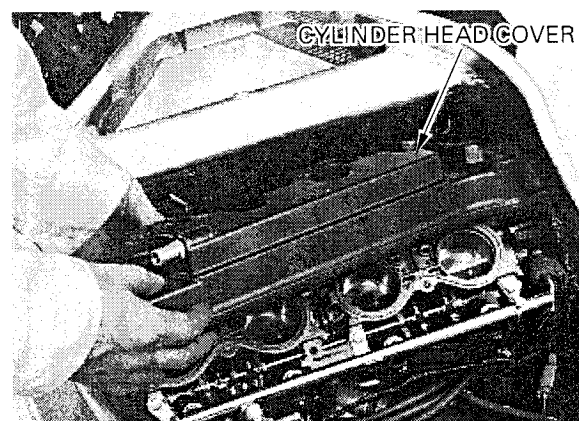


## CYLINDER HEAD COVER DISASSEMBLY

Remove the cylinder head cover packing.

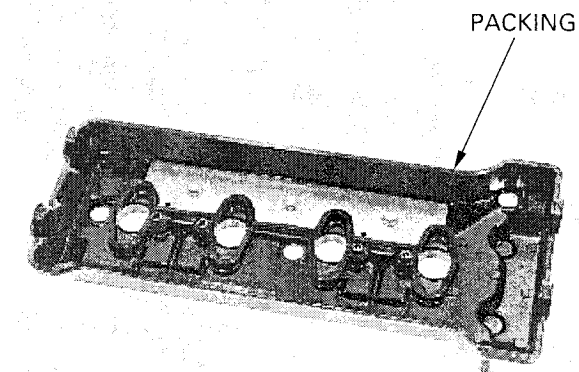




Remove bolts and breather separator and gasket.

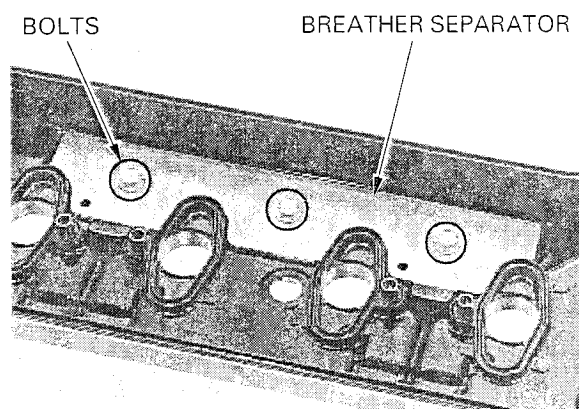


Check the PAIR check valves for wear or damage, replace if necessary.

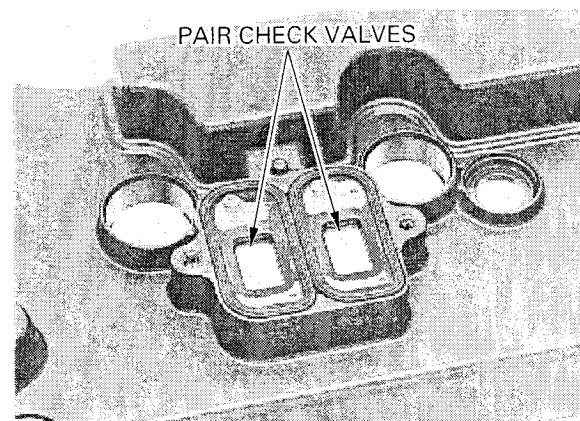


## **CAMSHAFT REMOVAL**

Remove the cylinder head cover (page 8-5).

To avoid damaging the cam pulse generator while removing the camshafts, remove the bolt and cam pulse generator from the cylinder head.

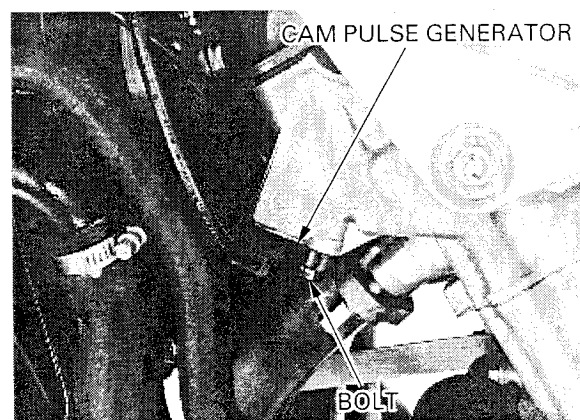


Remove the timing hole cap and O-ring.

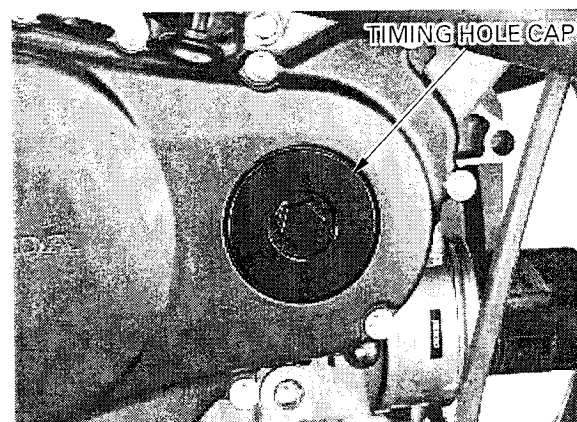


## CYLINDER HEAD/VALVES



Turn the crankshaft clockwise, align the "T" mark on the ignition pulse generator rotor with the index mark on the right crankcase cover.  
Make sure the No.1 piston is at TDC (Top Dead Center) on the compression stroke.

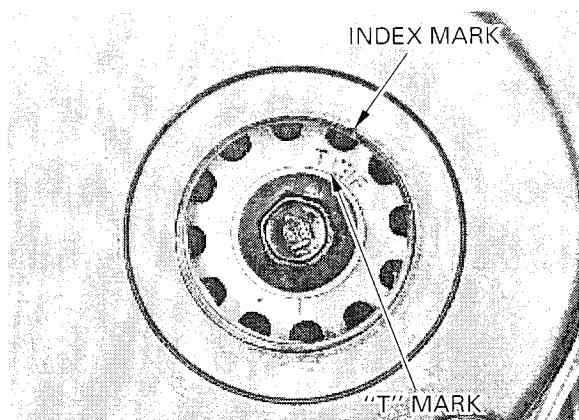

Remove the cam chain tensioner lifter sealing bolt and sealing washer.

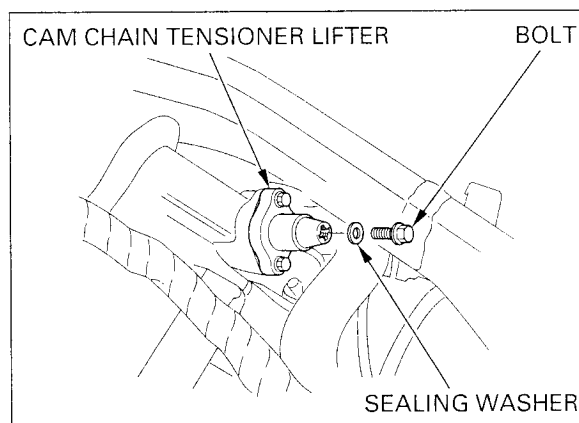

Turn the tensioner lifter shaft fully in (clockwise) and secure it using the stopper tool.  
This tool can easily be made from a thin (1 mm thickness) piece of steel.

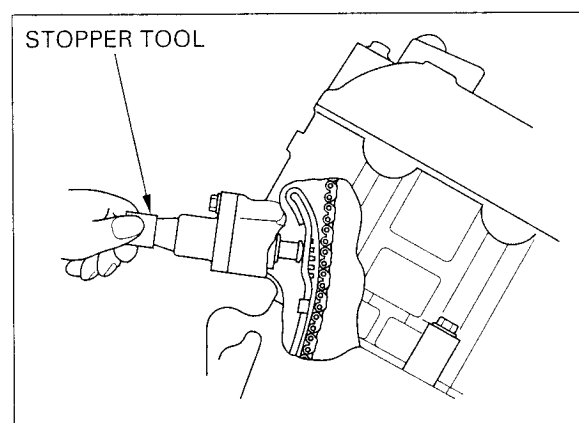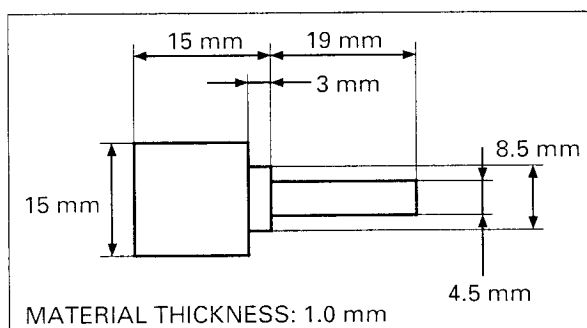


*It is not necessary to remove the cam sprocket from the camshaft except when replacing the camshaft and/or cam sprocket.*

If you plan to replace the camshaft and/or cam sprocket, remove the cam sprocket bolts as follows:


*Be careful not to drop the cam sprocket bolts into the crankcase.*

— Remove the cam sprocket bolts from intake and exhaust camshafts.

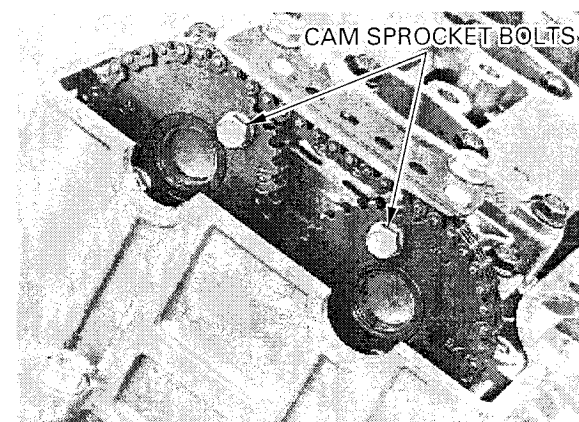


## CYLINDER HEAD/VALVES

- Turn the crankshaft one full turn (360°), remove the other cam sprocket bolts from the camshafts.

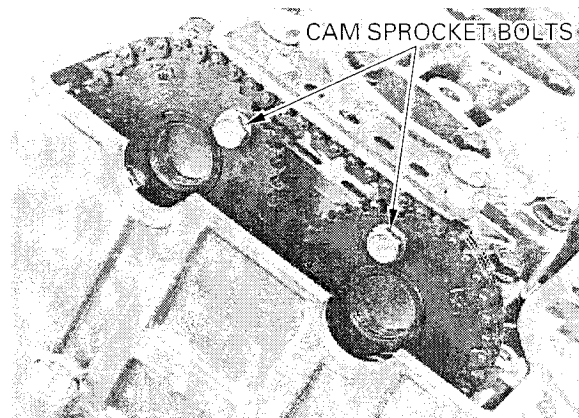


*Be careful not to drop the rotor or bolts into the crankcase.*

- Remove the bolts and cam pulse generator rotor.

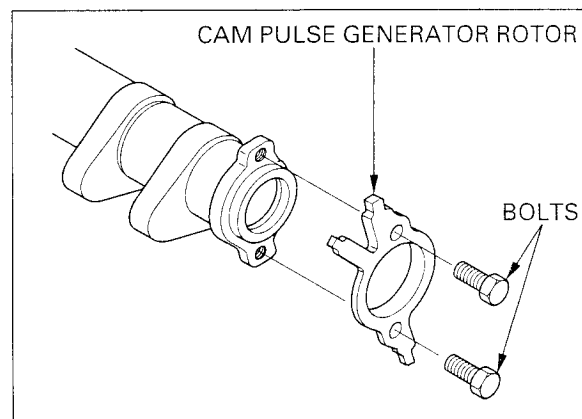

- Remove the bolts and cam chain guide B.
- Remove the cam sprocket from the camshaft.

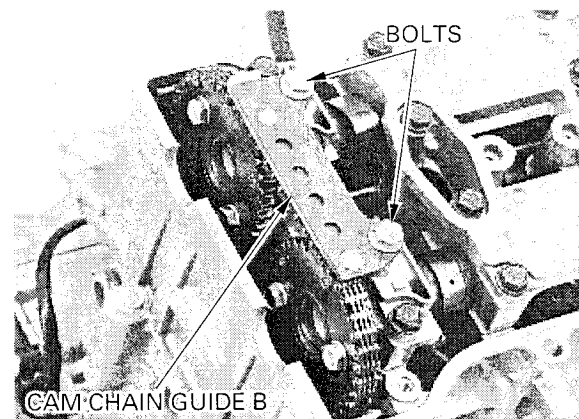


*Suspend the cam chain with a piece of wire to prevent the chain from falling into the crankcase.*

- Remove the bolts and camshaft holder A first. Loosen and remove the remaining camshaft holder bolts, then remove the camshaft holders and camshafts.

### NOTICE

*From outside to inside, loosen the bolts in a criss-cross pattern in several steps or the camshaft holder might break.*

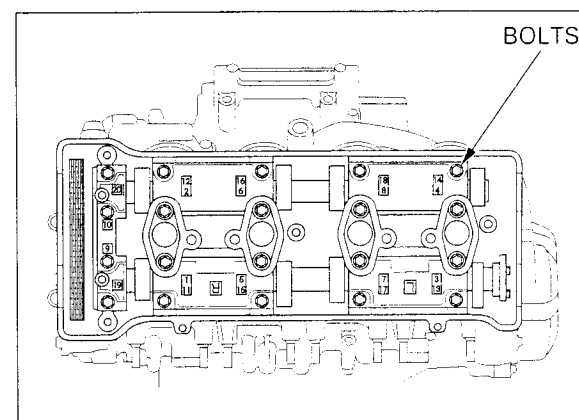




## CYLINDER HEAD/VALVES

Remove the valve lifters and shims.

- Be careful not to damage the valve lifter bore.
- Shim may stick to the inside of the valve lifter. Do not allow the shims to fall into the crankcase.
- Mark all valve lifters and shims to ensure correct reassembly in their original locations.
- The valve lifter can be easily removed with a valve lapping tool or magnet.
- The shims can be easily removed with a tweezers or magnet.

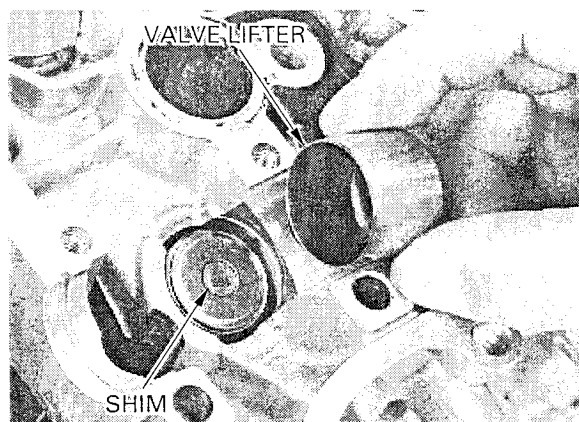


## INSPECTION

### CAMSHAFT HOLDER

Inspect the bearing surface of each camshaft holder for scoring, scratches, or evidence of insufficient lubrication.

Inspect the oil orifices of the holders for clogging.


CAMSHAFT HOLDER B CAMSHAFT HOLDER C

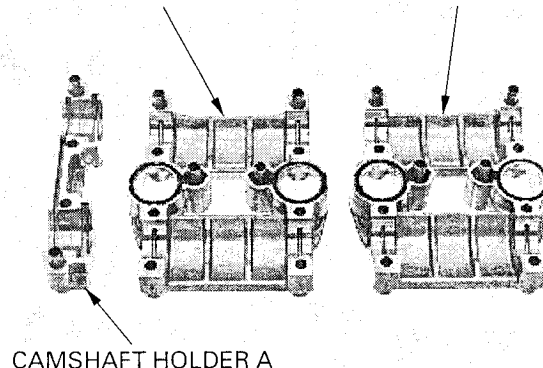

### CAMSHAFT RUNOUT

Support both ends of the camshaft with V-blocks and check the camshaft runout with a dial gauge.

**SERVICE LIMIT:** 0.05 mm (0.002 in)




### CAM LOBE HEIGHT

Using a micrometer, measure each cam lobe height.

#### SERVICE LIMITS:

**IN:** 36.45 mm (1.435 in)

**EX:** 36.50 mm (1.437 in)

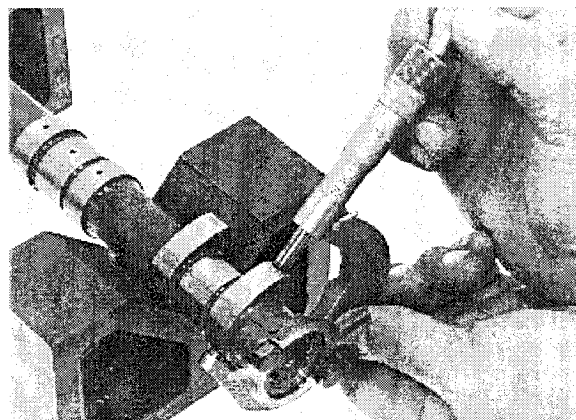


### CAMSHAFT OIL CLEARANCE

Remove the cylinder head and valves (page 8-12).

Wipe any oil from the journals of the camshaft, cylinder head and camshaft holders.


Lay a strip of plastigauge lengthwise on top of each camshaft journal.

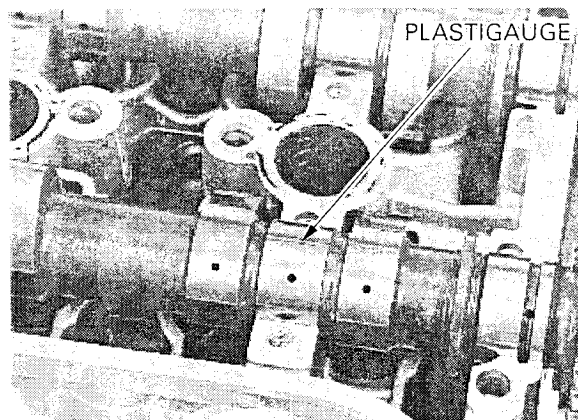

*Do not rotate the camshaft when using plastigauge.*

Install the camshaft holders and tighten the bolts in a crisscross pattern in 2–3 steps.

**TORQUE:** 12 N·m (1.2 kgf·m, 9 lbf·ft)

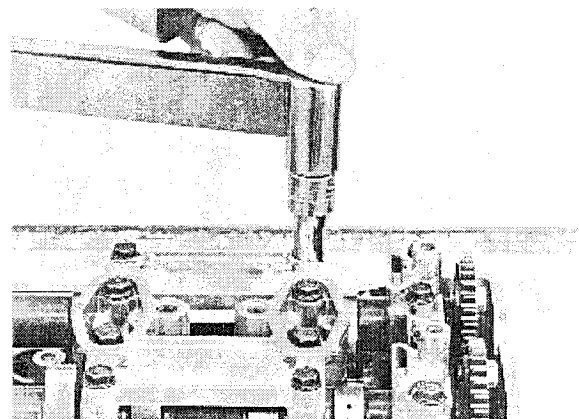


Remove the camshaft holders and measure the width of each plastigauge. The widest thickness determines the oil clearance.

**SERVICE LIMIT:** 0.10 mm (0.004 in)


When the service limits are exceeded, replace the camshaft and recheck the oil clearance.

Replace the cylinder head and camshaft holders as a set if the clearance still exceeds the service limit.

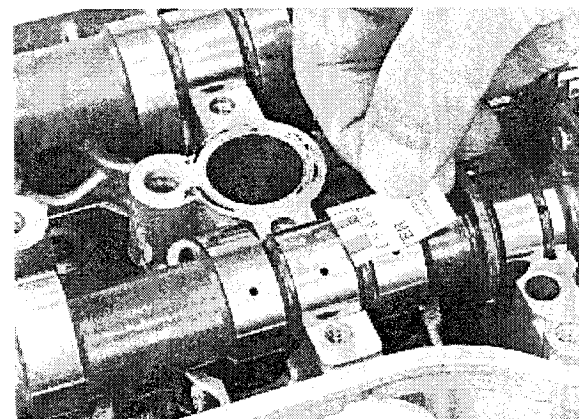

### CAM CHAIN GUIDE B

Inspect the cam chain slipper surface of the cam chain guide for wear or damage.

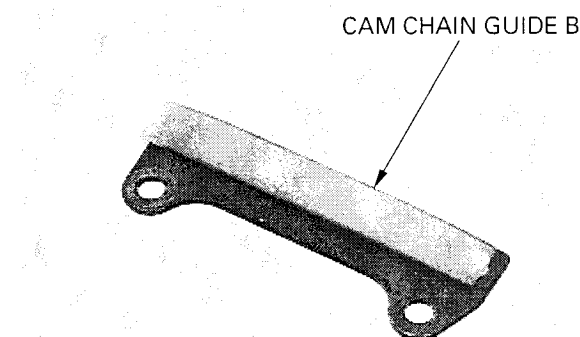

## CYLINDER HEAD/VALVES

### CYLINDER HEAD REMOVAL


Remove the engine from the frame (page 7-2).  
Remove the camshaft (page 8-7).

Remove the cylinder drain bolt and sealing washer.  
Drain coolant from cylinder head and cylinder block.

Check the sealing washer is in good condition, replace if necessary.  
Reinstall the sealing washer and drain bolt.




Remove the bolts and cam chain tensioner lifter and gasket.

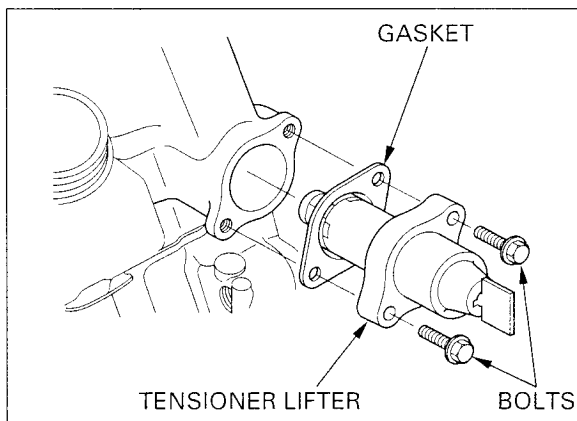


*Loosen the 9 mm bolts in a crisscross pattern in 2 - 3 steps.*

Remove the two 8 mm flange bolts.  
Remove the ten 9 mm bolts/washers.  
Remove the cylinder head.

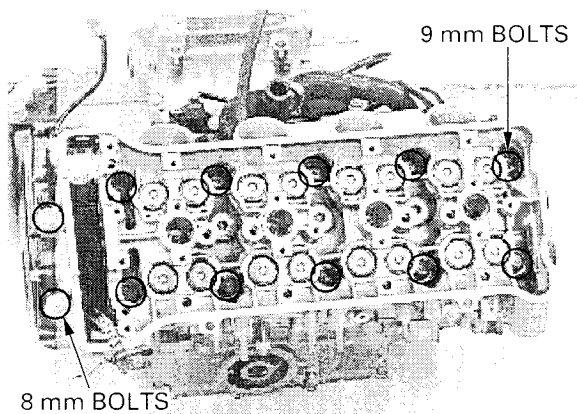

Remove the dowel pins and cylinder head gasket.

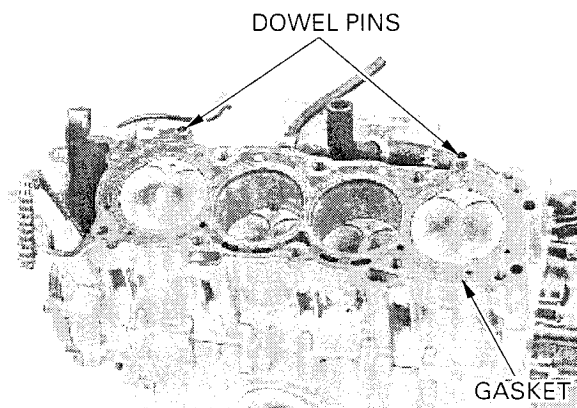




## CYLINDER HEAD/VALVES


Remove the right crankcase cover and ignition pulse generator rotor (page 17-7).

Remove the socket bolt, washer, cam chain guide and collar.

Remove the socket bolt, cam chain tensioner and washer.

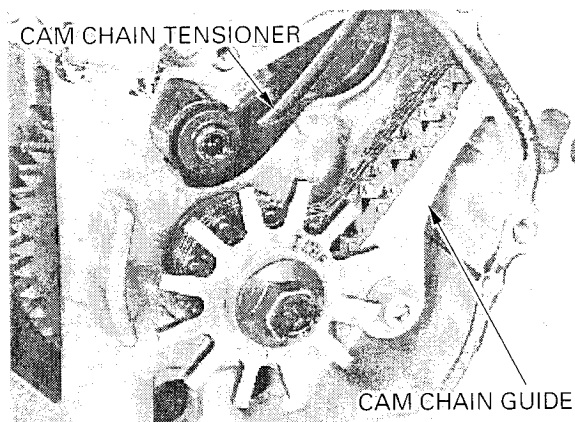

Remove the cam chain and timing sprocket from the crankshaft.

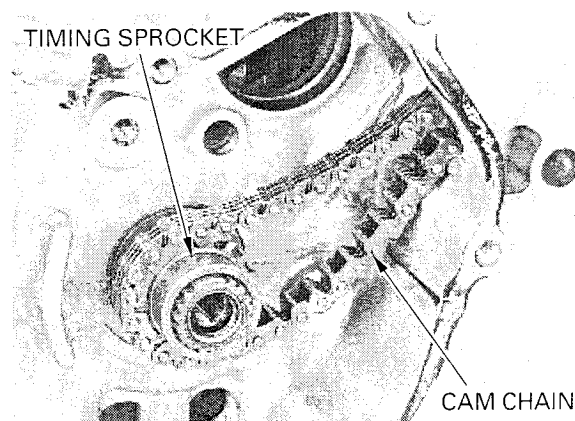

## CYLINDER HEAD DISASSEMBLY


Remove the spark plugs from the cylinder head.

Install the tappet hole protector into the valve lifter bore.


### TOOL:

**Tappet hole protector**

07HMG-MR70002  
(Not available in U.S.A.)

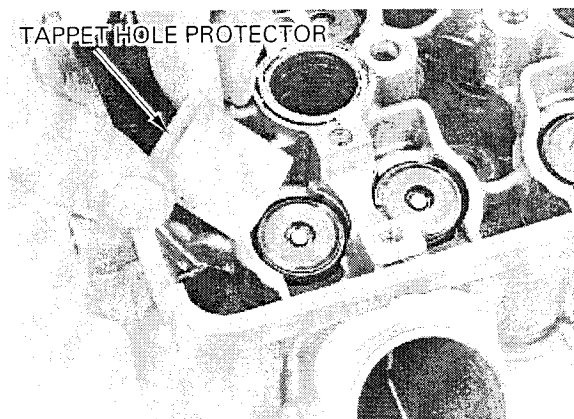

An equivalent tool can easily be made from a plastic 35 mm film container as shown.

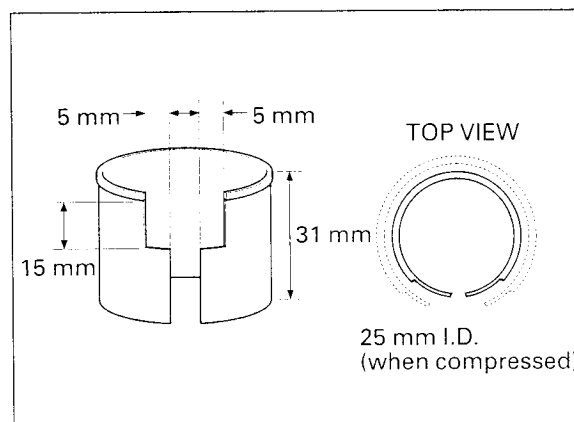

## CYLINDER HEAD/VALVES

Remove the valve spring cotters using the special tools as shown.


### TOOLS:

Valve spring compressor 07757-0010000

Valve spring compressor attachment 07959-KM30101

### NOTICE


To prevent loss of tension, do not compress the valve springs more than necessary to remove the cotters.

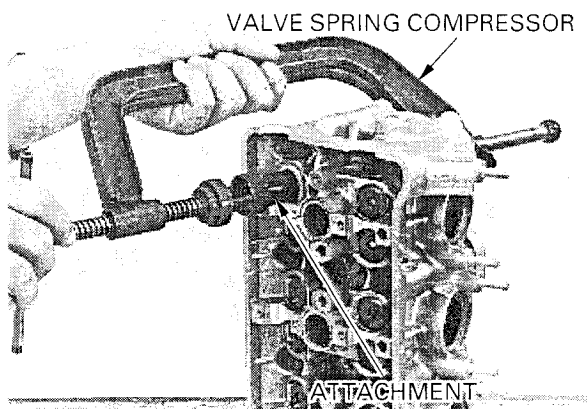

Mark all parts during disassembly so they can be placed back in their original locations.

Remove the following:

- Spring retainer
- Outer and inner valve springs
- Valve
- Stem seal
- Valve spring seat

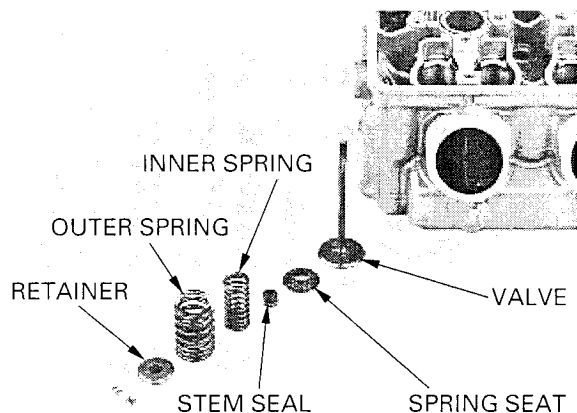


## CYLINDER HEAD INSPECTION

### CYLINDER HEAD

Avoid damaging the gasket surface.


Remove carbon deposits from the combustion chambers.

Check the spark plug hole and valve areas for cracks.

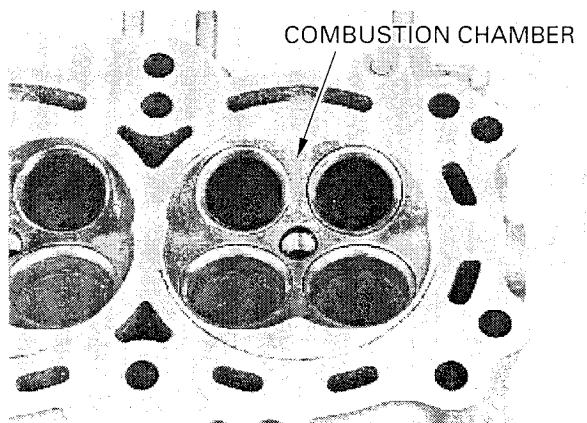

Check the cylinder head for warpage with a straight edge and feeler gauge.

**SERVICE LIMIT:** 0.10 mm (0.004 in)

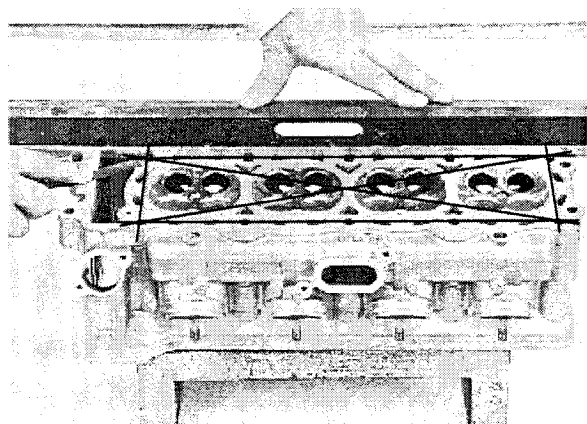




### CAM CHAIN TENSIONER/ CAM CHAIN GUIDE

Inspect the cam chain tensioner and cam chain guide for excessive wear or damage, replace if necessary.

CAM CHAIN TENSIONER

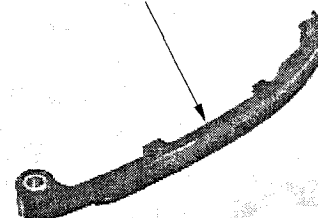

CAM CHAIN GUIDE

### VALVE SPRING


Measure the free length of the inner and outer valve springs.

#### SERVICE LIMITS:

Inner : 34.1 mm (1.34 in)

Outer : 37.2 mm (1.46 in)

Replace the springs if they are shorter than the service limits.

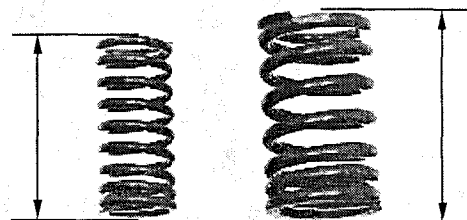


### VALVE LIFTER

Inspect each valve lifter for scratches or abnormal wear.

Measure the each valve lifer O.D.

**SERVICE LIMIT:** 25.97 mm (1.022 in)

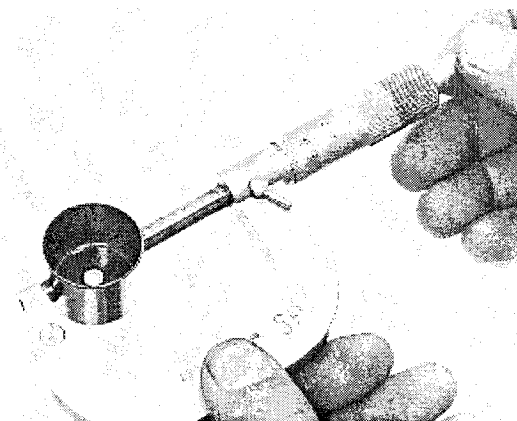


### VALVE LIFTER BORE

Inspect each valve lifter bore for scratches or abnormal wear.

Measure the each valve lifter bore I.D.

**SERVICE LIMIT:** 26.04 mm (1.025 in)

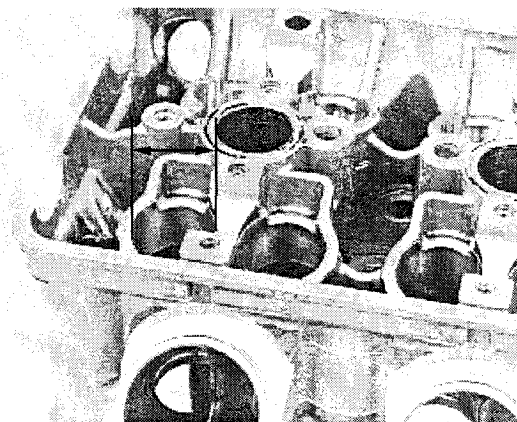

## CYLINDER HEAD/VALVES


### VALVE/VALVE GUIDE

Inspect each valve for bending, burning, or abnormal stem wear.  
Check valve movement in the guide, measure and record each valve stem O.D.

#### SERVICE LIMITS:

**IN:** 4.465 mm (0.1758 in)

**EX:** 4.455 mm (0.1754 in)

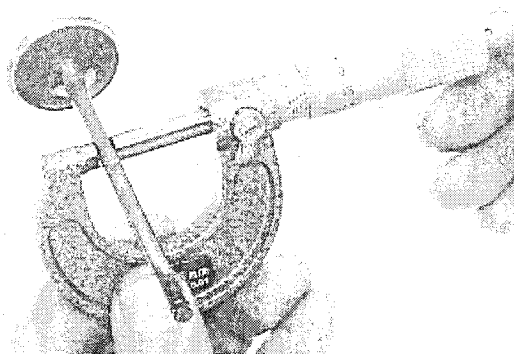


Ream the guides to remove any carbon deposits before checking clearances.  
Insert the reamer from the combustion chamber side of the head and always rotate the reamer clockwise.

#### TOOL:

Valve guide reamer,  
4.508 mm

07HMH-ML00101  
07HMH-ML0010A  
(U.S.A. only)

VALVE GUIDE REAMER

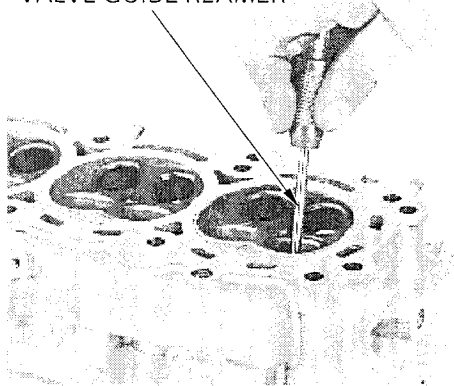

Measure and record each valve guide I.D.

**SERVICE LIMIT: IN/EX:** 4.540 mm (0.1787 in)

Subtract each valve stem O.D. from the corresponding guide I.D. to obtain the stem-to-guide clearance.


#### STANDARDS:

**IN:** 0.010 – 0.037 mm (0.0004 – 0.0015 in)

**EX:** 0.020 – 0.047 mm (0.0008 – 0.0019 in)

*Reface the valve seats whenever the valve guides are replaced (page 8-18).*

If the stem-to-guide clearance is out of standard, determine if a new guide with standard dimensions would bring the clearance within tolerance. If so, replace any guides as necessary and ream to fit.  
If the stem-to-guide clearance is out of standard with the new guides, replace the valves and guides.

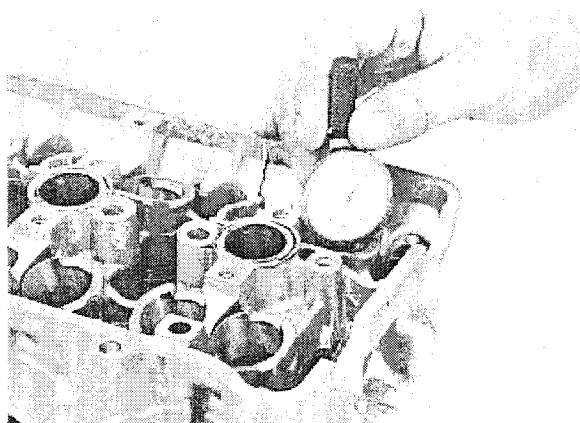

## VALVE GUIDE REPLACEMENT

Chill the replacement valve guides in the freezer section of a refrigerator for about an hour.  
Heat the cylinder head to 100 – 150°C (212 – 300°F) with a hot plate or oven.  
To avoid burns, wear heavy gloves when handling the heated cylinder head.


### NOTICE

*Do not use a torch to heat the cylinder head; it may cause warping.*

Support the cylinder head and drive out the valve guides from combustion chamber side of the cylinder head.

#### TOOL:

Valve guide driver 07HMD-ML00101

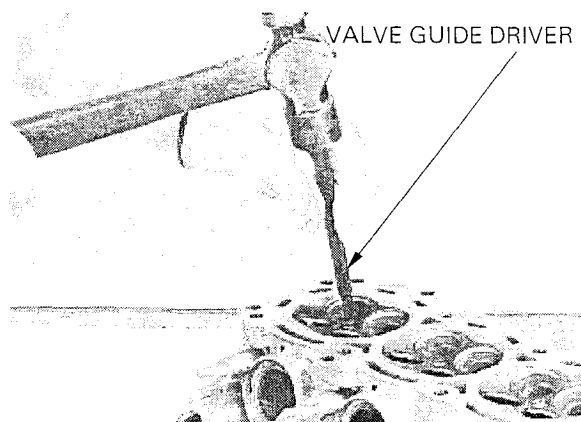

Drive in the guide to the specified depth from the top of the cylinder head.


#### SPECIFIED DEPTH:

IN: 14.3 – 14.6 mm (0.56 – 0.57 in)

EX: 12.4 – 12.7 mm (0.49 – 0.50 in)

#### TOOL:

Valve guide driver 07HMD-ML00101

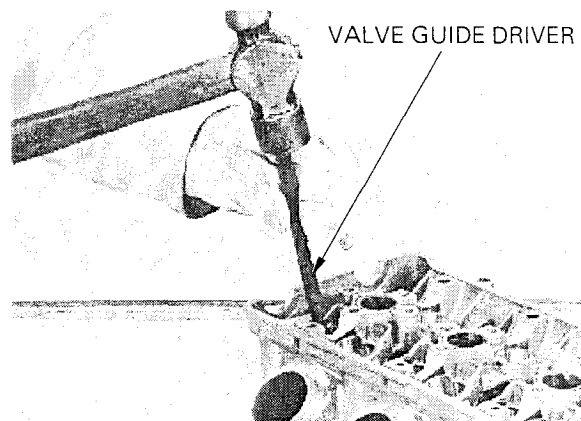

Let the cylinder head cool to room temperature.


*Use cutting oil on the reamer during this operation.*

Ream the new valve guide after installation.  
Insert the reamer from the combustion chamber side of the head and also always rotate the reamer clockwise.

#### TOOL:

Valve guide reamer,  
4.508 mm

07HMH-ML00101  
07HMH-ML0010A  
(U.S.A. only)

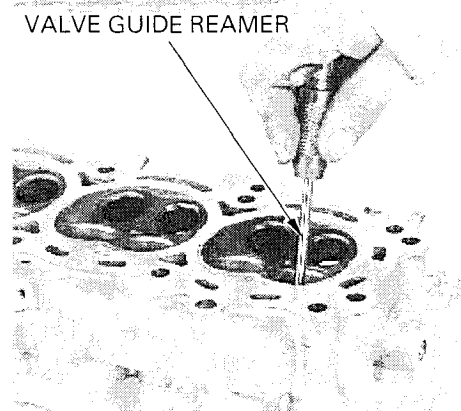

Clean the cylinder head thoroughly to remove any metal particles.  
Reface the valve seat (see next page).

## CYLINDER HEAD/VALVES

### VALVE SEAT INSPECTION/REFACING

Clean the intake and exhaust valves thoroughly to remove carbon deposits.

Apply a light coating of Prussian Blue to the valve seats.

Lap the valves and seats using a rubber hose or other hand-lapping tool.

Remove and inspect the valves.

*The valves cannot be ground. If a valve face is burned or badly worn or if it contacts the seat unevenly, replace the valve.*



Inspect the width of each valve seat.

**STANDARD:** 0.90 – 1.10 mm (0.035 – 0.043 in)

**SERVICE LIMIT:** 1.5 mm (0.06 in)

If the seat is too wide, too narrow or has low stops, the seat must be ground.


HAND-LAPPING TOOL

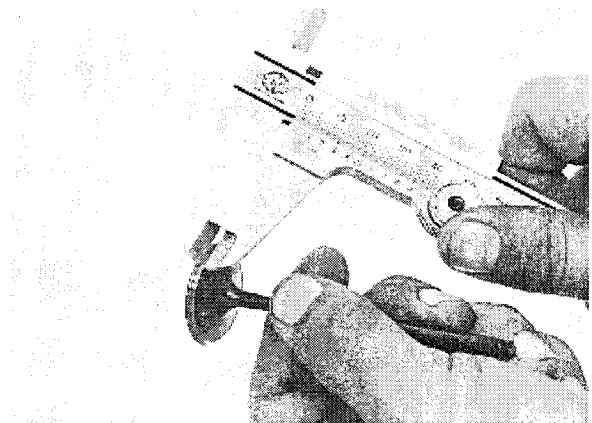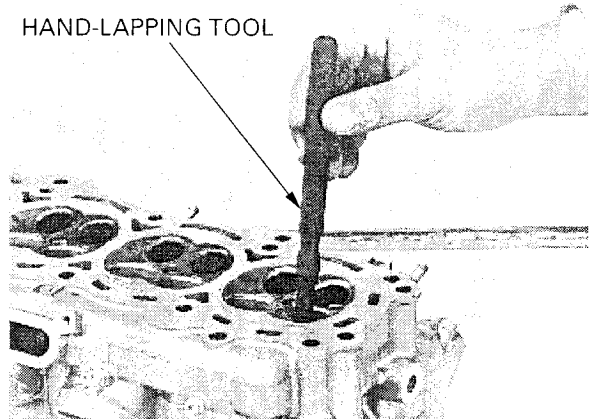

### VALVE SEAT REFACING


*Follow the refacing manufacturer's operating instructions.*

Valve seat cutters/grinders or equivalent valve seat refacing equipment are recommended to correct worn valve seats.

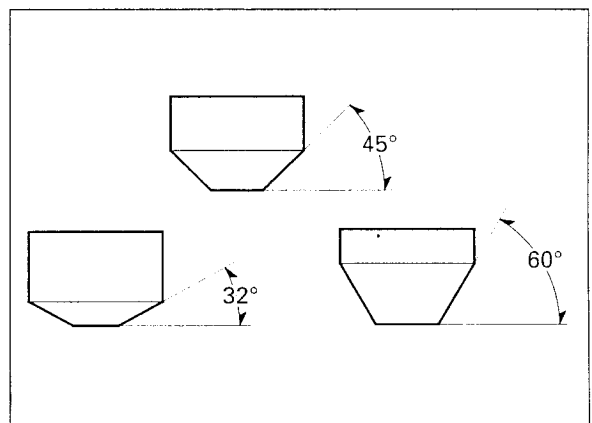


*Reface the seat with a 45-degree cutter whenever a valve guide is replaced.*


Use a 45-degree cutter to remove any roughness or irregularities from the seat.

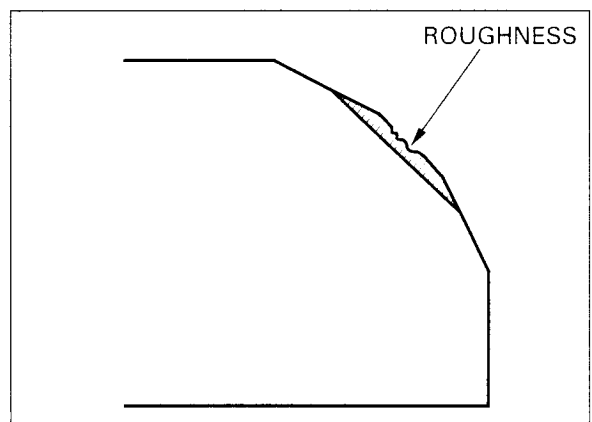


Use a 32-degree cutter to remove the top 1/4 of the existing valve seat material.

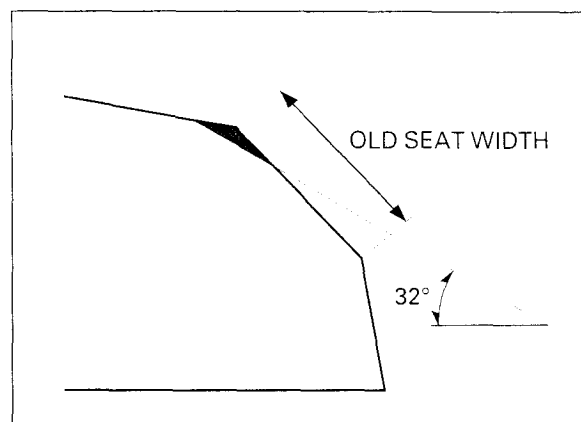

Use a 60-degree cutter to remove the bottom 1/4 of the old seat.  
Remove the cutter and inspect the area you have refaced.

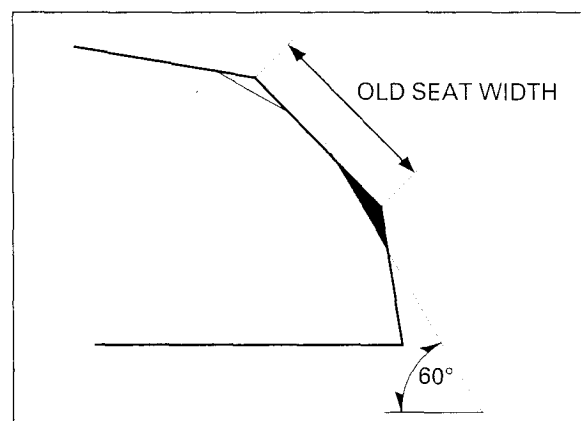


Install a 45-degree finish cutter and cut the seat to the proper width.  
Make sure that all pitting and irregularities are removed.  
Refinish if necessary.

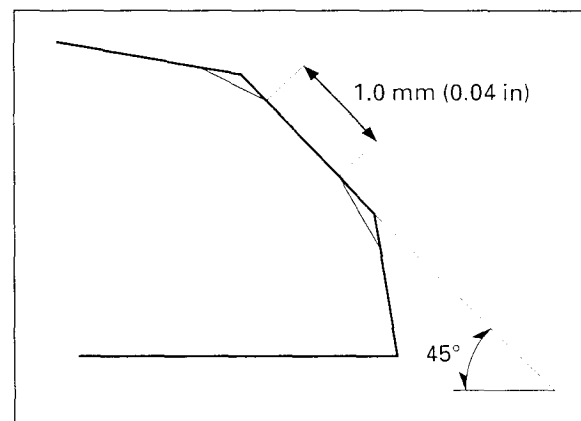

*The location of the valve seat in relation to the valve face is very important for good sealing.*

Apply a thin coating of Prussian Blue to the valve seat.  
Press the valve through the valve guide and onto the seat to make a clear pattern.

If the contact area is too high on the valve, the seat must be lowered using a 32 degrees flat cutter.

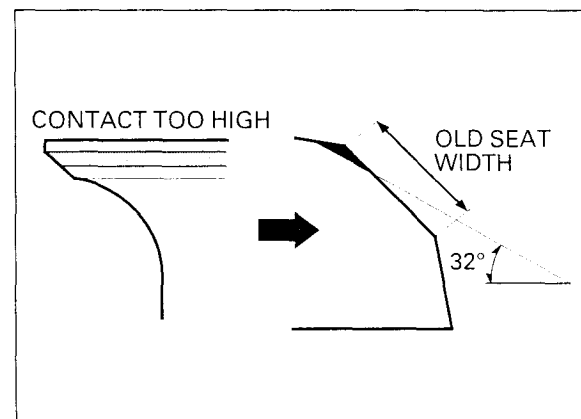



## CYLINDER HEAD/VALVES


Clean the cylinder head assembly with solvent and blow through all oil passages with compressed air.

Install the tappet hole protector into the valve lifter bore.

**TOOL:**


**Tappet hole protector**

07HMG-MR70002  
(Not available in U.S.A.)

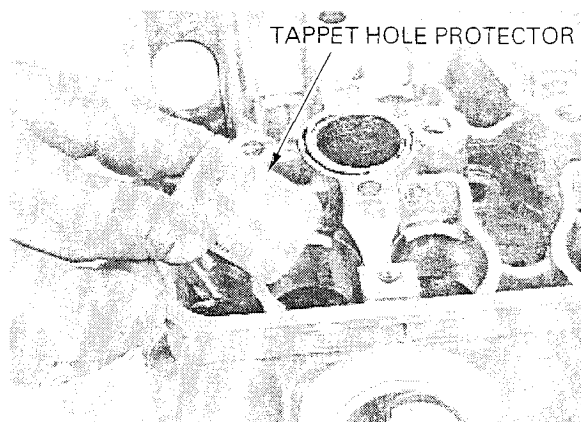


*Do not interchange  
the inlet and  
exhaust valve  
stem seal.*

Install the valve spring seats.  
Install the new stem seals.

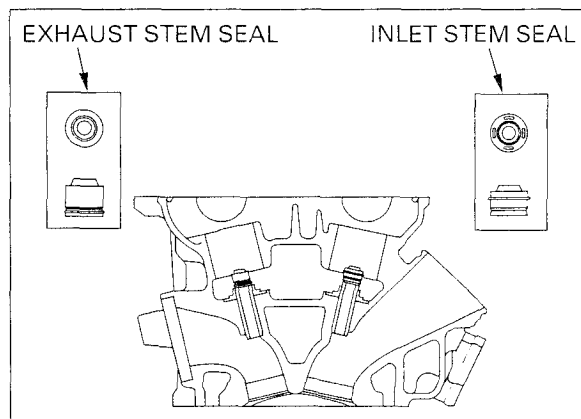


Lubricate the valve stems with molybdenum disulfide oil and insert the valve into the valve guide.

To avoid damage to the stem seal, turn the valve slowly when inserting.

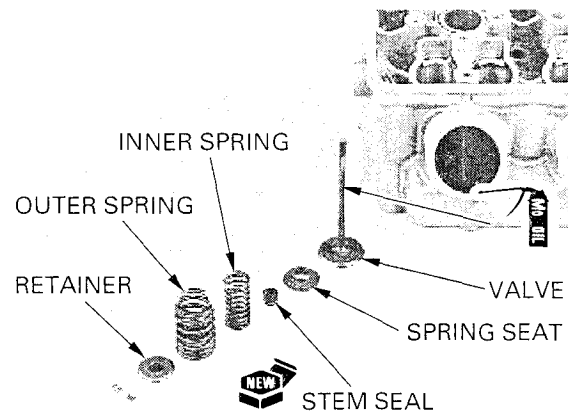

Install the valve springs with the tightly wound coils facing the combustion chamber.  
Install the valve spring retainer.

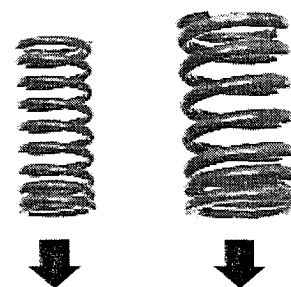

## CYLINDER HEAD/VALVES

Install the valve cotters using the special tool as shown.


### NOTICE

*To prevent loss of tension, do not compress the valve spring more than necessary.*

#### TOOLS:


Valve spring compressor 07757-0010000

Valve spring compressor attachment 07959-KM30101

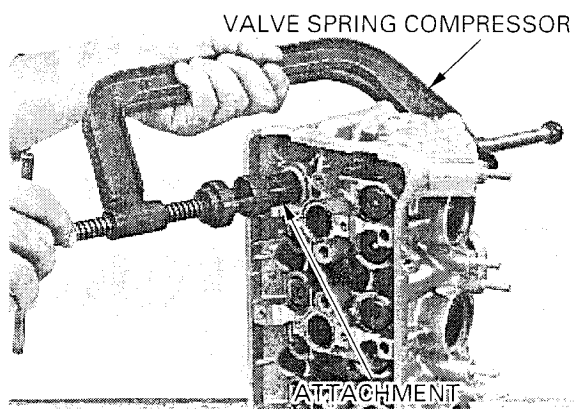


*Support the cylinder head above the work bench surface to prevent possible valve damage.*

Tap the valve stems gently with two plastic hammers as shown to seat the cotters firmly.

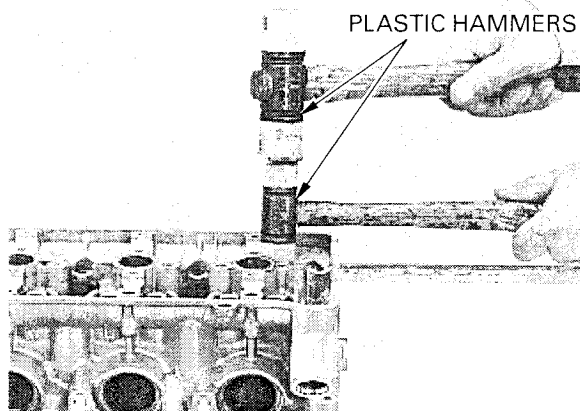


## CYLINDER HEAD INSTALLATION

Install the timing sprocket by aligning the wide teeth between the crankshaft and sprocket.

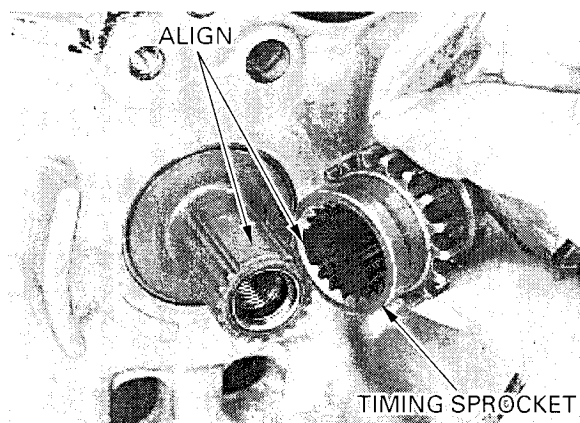


Install the cam chain.

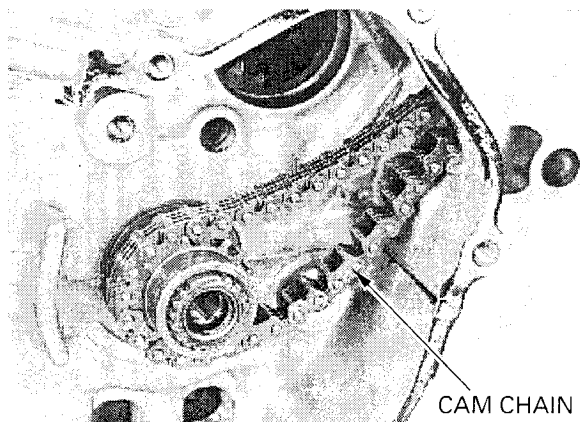


## CYLINDER HEAD/VALVES

Apply a locking agent to the cam chain guide socket bolt threads.  
Install the collar, cam chain guide, washer and socket bolt.

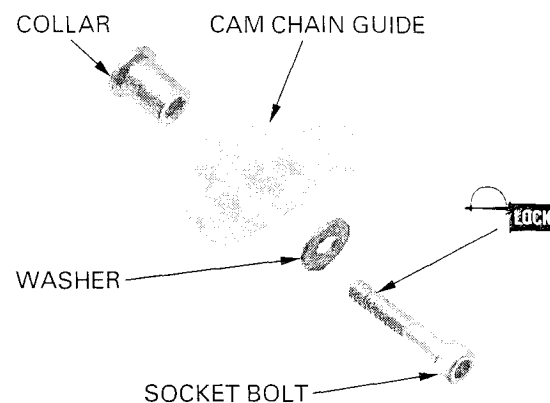

Apply a locking agent to the cam chain tensioner socket bolt threads.  
Install the washer, cam chain tensioner and socket bolt.

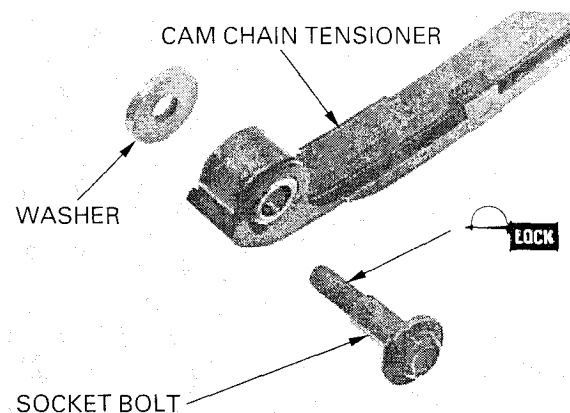

Tighten the cam chain guide and cam chain tensioner socket bolts to the specified torque.

### TORQUE:


**Cam chain tensioner socket bolt:**

10 N·m (1.0 kgf·m , 7 lbf·ft)


**Cam chain guide socket bolt:**

12 N·m (1.2 kgf·m , 9 lbf·ft)

Install the ignition pulse generator rotor and right crankcase cover (page 17-8).

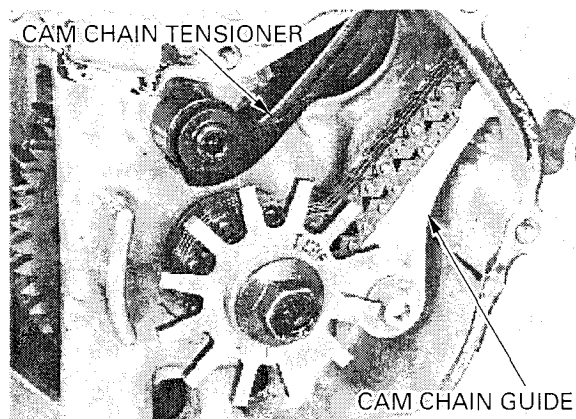

Install the dowel pins and a new cylinder head gasket as shown.

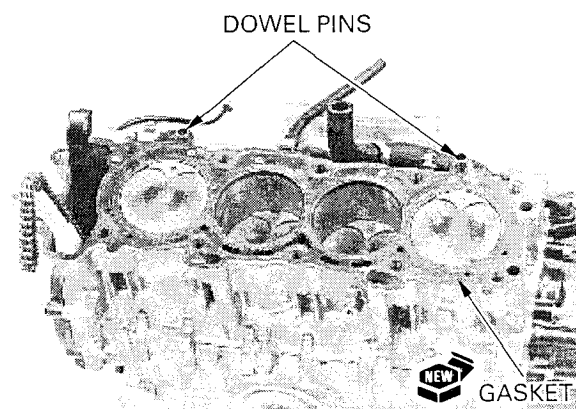

## CYLINDER HEAD/VALVES

Install the cylinder head.

If using the new bolt, remove anti-rust additive from the bolt.

Apply molybdenum disulfide oil to the threads and seating surface of the 9 mm bolts/washers and install them.

Apply oil to the 8 mm flange bolt threads and seating surface.


Install the two 8 mm flange bolts.

Tighten the 9 mm bolts in a crisscross pattern in 2-3 steps to the specified torque.

**TORQUE:** 51 N·m (5.2 kgf·m , 38 lbf·ft)


Tighten the 8 mm flange bolts to the specified torque.

**TORQUE:** 24 N·m (2.4 kgf·m , 17 lbf·ft)

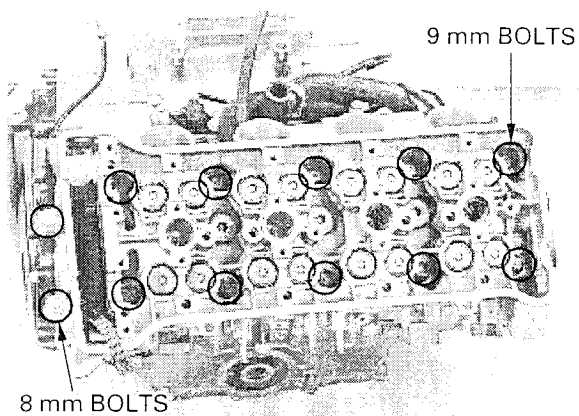

Install the cam chain tensioner lifter onto the cylinder head with new gasket.  
Install and tighten the mounting bolts.


Install the engine into the frame (page 7-6).

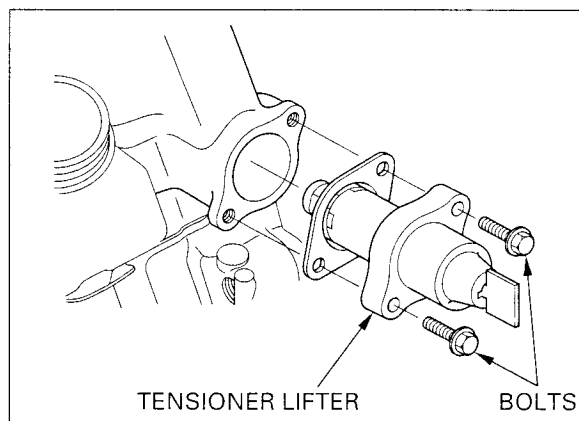

## CAMSHAFT INSTALLATION

Apply molybdenum disulfide oil to the outer surface of the each valve lifter.

Install the shims and valve lifters into the valve lifter bores.

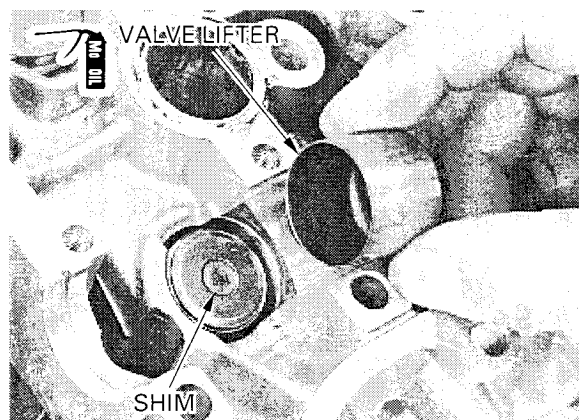





## CYLINDER HEAD/VALVES

If the cam sprockets are removed, install the cam sprockets onto the camshafts.

- Install the intake cam sprocket with the timing mark (IN) facing outward and the No.1 cam lobes facing up and out as shown.
- Install the exhaust cam sprocket with the timing mark (EX) facing outward and the No.1 cam lobes facing up and out as shown.

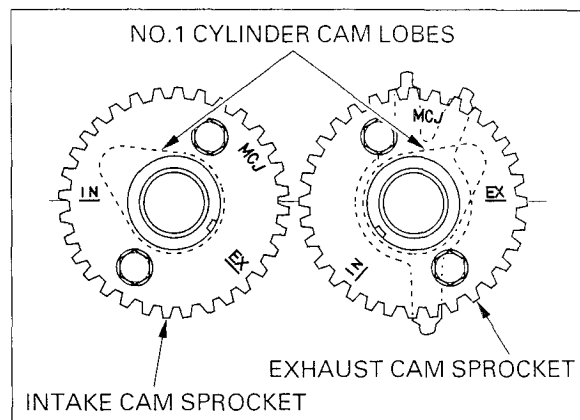


Clean and apply a locking agent to the cam sprocket bolt threads.  
Install the cam sprocket bolts.

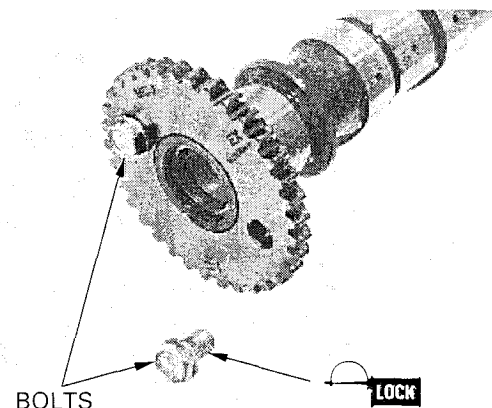


Clean and apply a locking agent to the cam pulse generator rotor threads.  
Install the cam pulse generator rotor and mounting bolts.

*Install the cam pulse generator rotor with the No.1 camshaft lobes facing up and rotor "OUT" mark facing down as shown.*

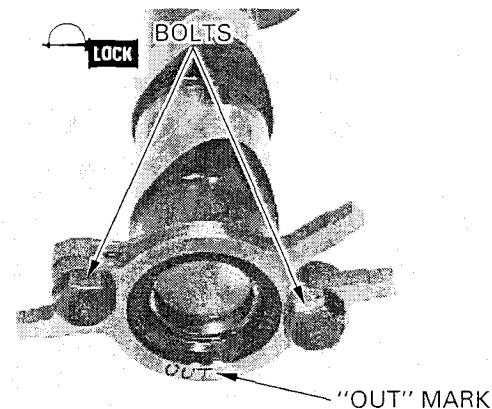


Turn the crankshaft clockwise and align the "T" mark on the ignition pulse generator rotor with the index mark on the right crankcase cover.

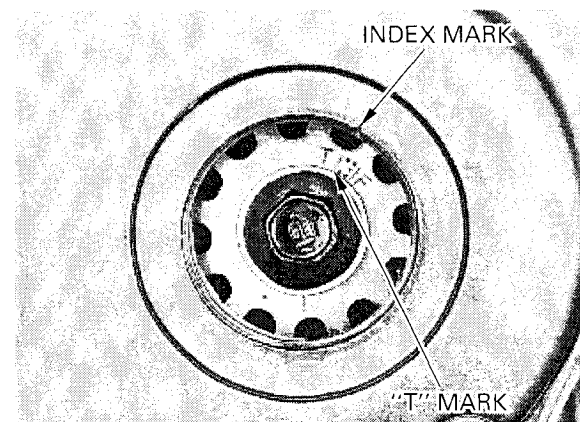




## CYLINDER HEAD/VALVES

Apply molybdenum disulfide oil to the camshaft journals of the cylinder head and camshaft holder.

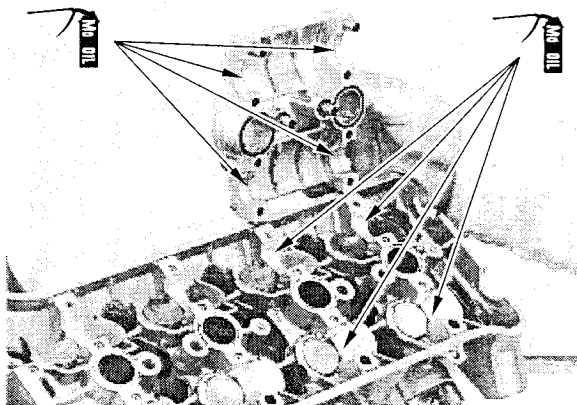

Install the cam chain over the cam sprockets and then install the intake and exhaust camshafts.


- Install the each camshaft to the correct locations with the identification marks.  
"IN": Intake camshaft  
"EX": Exhaust camshaft
- Make sure that the timing marks on the cam sprockets are facing outward and flush with the cylinder head upper surface as shown.

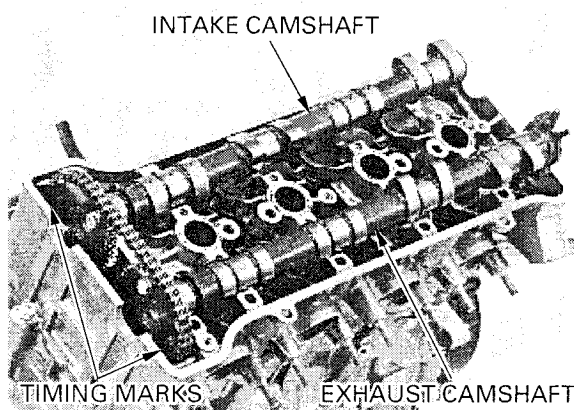

Install the each camshaft holder onto the camshafts.


Install the each camshaft holder to the correct locations with the identification marks.

- "A": Right camshaft holder
- "B": Center camshaft holder
- "C": Left camshaft holder

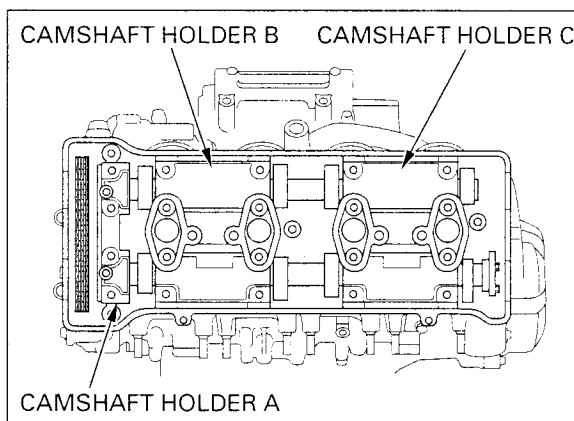

*Install the sealing washers onto the camshaft holder B and C's center four bolts as shown.*

Temporarily install the twelve holder bolts and sealing washers.

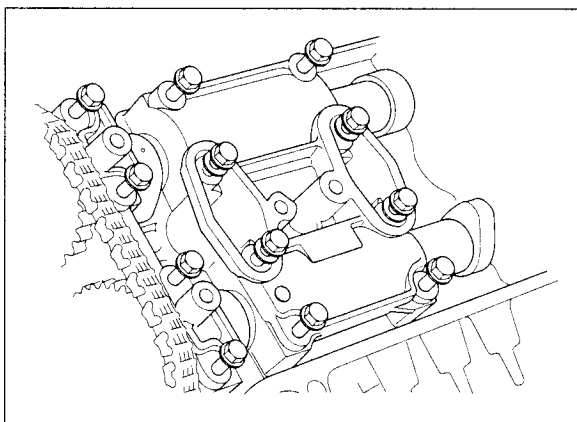

First, gradually tighten the four bolts (No.5 – No.6 – No.7 – No.8) in the numerical order casted on the camshaft holders.

Gradually tighten the other camshaft holder bolts until the camshaft holders lightly contact the cylinder head surface.



### NOTICE

*Tightening the camshaft holder bolts on only one-side might cause a camshaft holder to break.*

Tighten all camshaft holder bolts in the numerical order casted on the camshaft holders.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)


Install the cam chain guide B, and tighten the bolts.

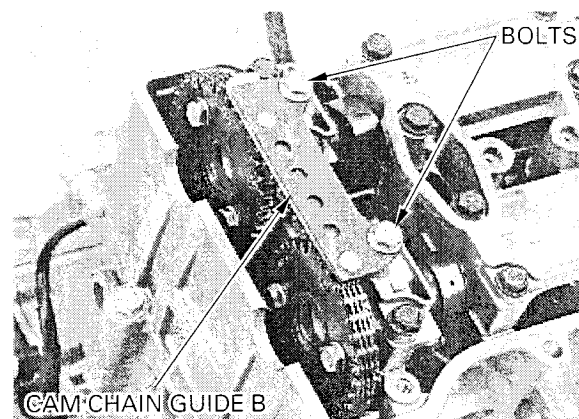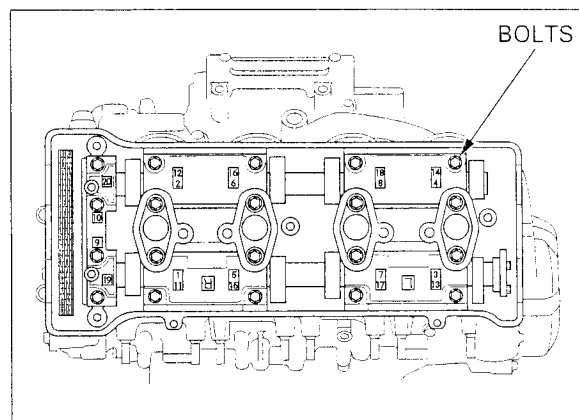

In case the cam sprockets were removed, tighten the cam sprocket bolts to the specified torque.

**TORQUE:** 20 N·m (2.0 kgf·m , 14 lbf·ft)


Turn the crankshaft clockwise one full turn (360°) and tighten the other cam sprocket bolts.

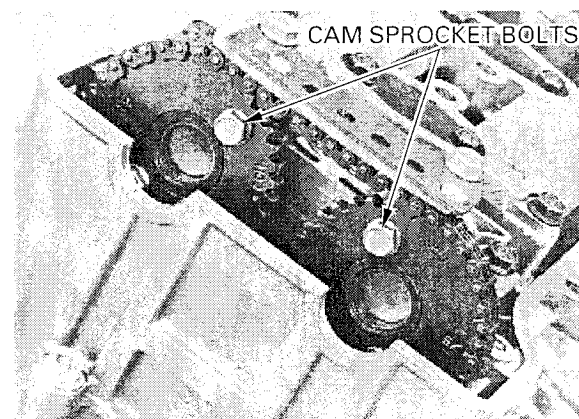

In case the cam pulse generator rotor bolts were removed, apply locking agent to the rotor bolt threads.


Install and tighten the rotor bolts to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

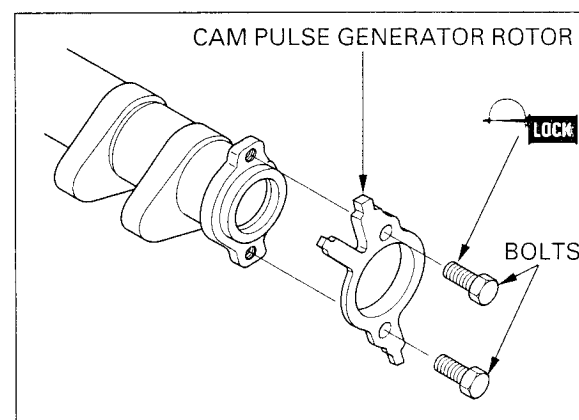


## CYLINDER HEAD/VALVES

Remove the stopper tool from the cam chain tensioner lifter.

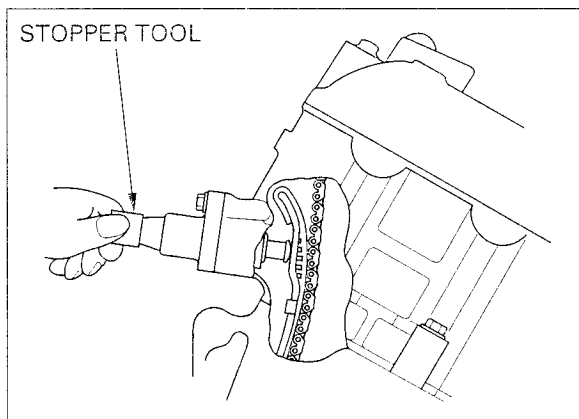


Install a new sealing washer and tighten the sealing bolt.

Recheck the valve timing.

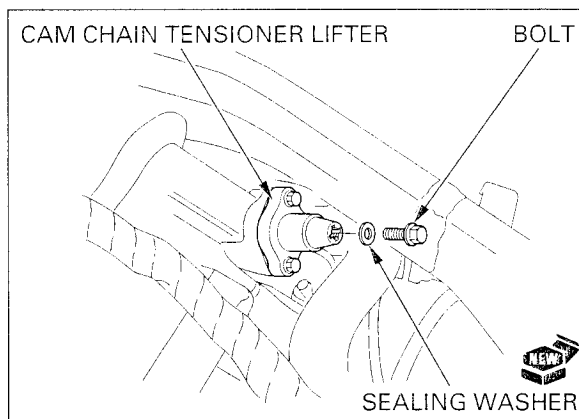


Apply oil to the new O-ring, and install it onto the cam pulse generator.

Install the cam pulse generator into the cylinder head.

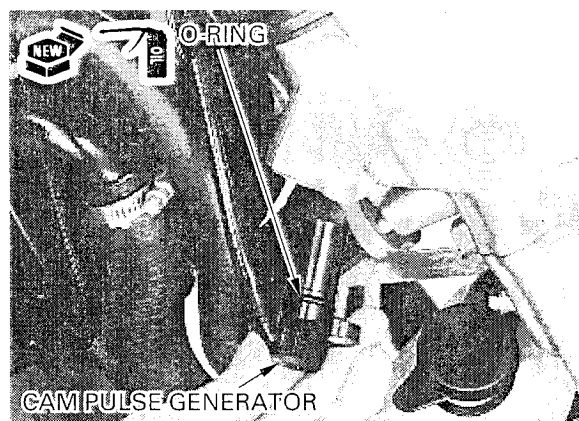


Install and tighten the mounting bolt securely.

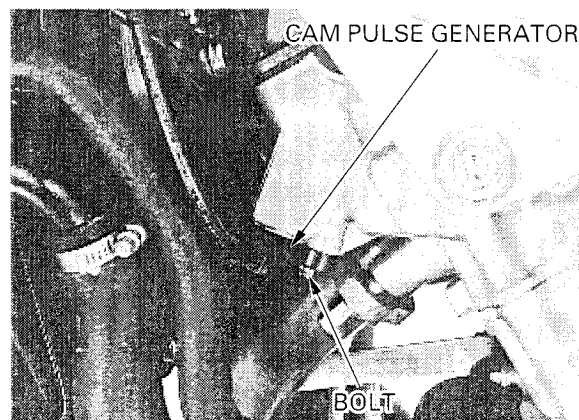




## CYLINDER HEAD COVER ASSEMBLY

Install the new gasket and crankcase breather separator to the cylinder head cover.

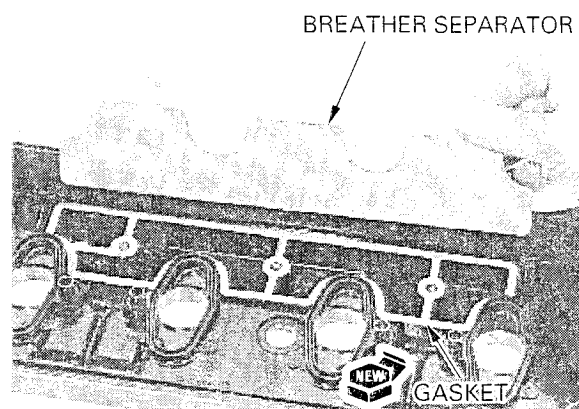


Apply a locking agent to the crankcase breather separator mounting bolt threads. Install and tighten the bolts to the specified torque.


**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

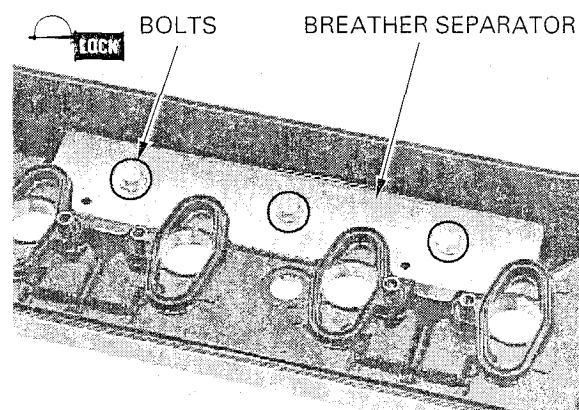

Install the PAIR check valve port plates into the cylinder head cover.

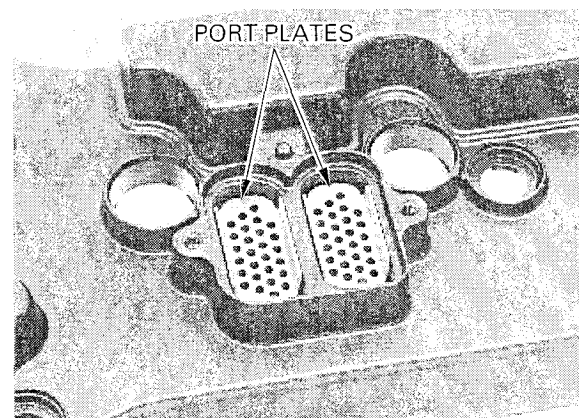


Install the PAIR check valves into the cylinder head cover.

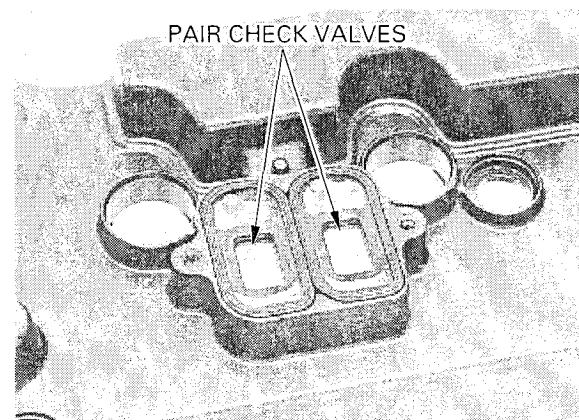


## CYLINDER HEAD/VALVES

### CYLINDER HEAD COVER INSTALLATION

Install the cylinder head packing into the groove of the cylinder head cover.

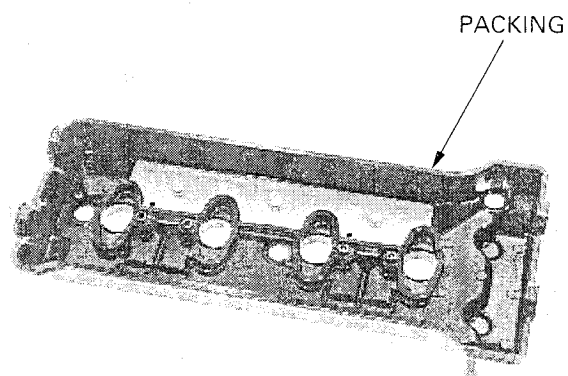


Apply sealant to the cylinder head semi-circular cutouts as shown.

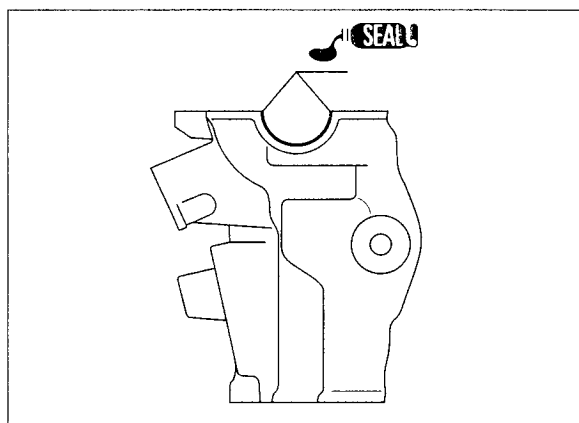

Install the cylinder head cover onto the cylinder head.



Install the washers with their "UP" mark facing up.

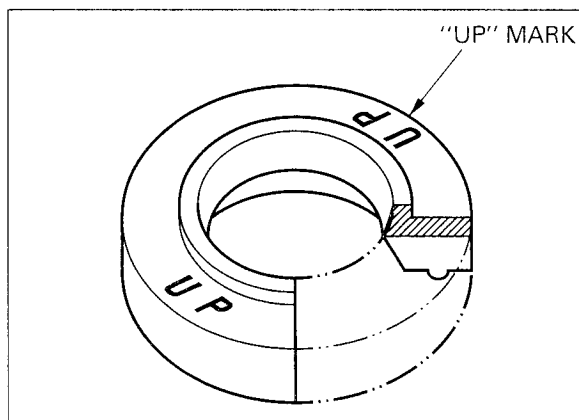




## CYLINDER HEAD/VALVES


Install and tighten the cylinder head cover special bolts to the specified torque.

**TORQUE:** 10 N·m (1.0 kgf·m , 7 lbf·ft)

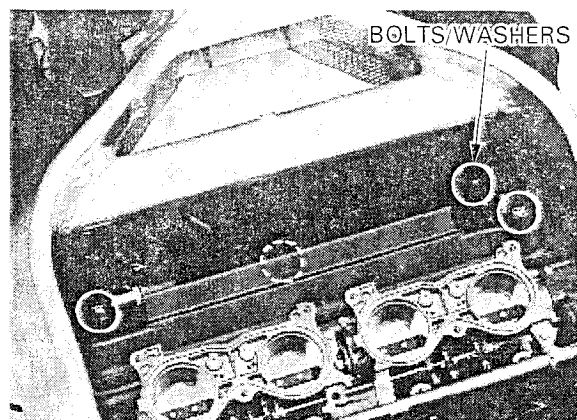


Install the PAIR reed valve covers and tighten the SH bolts to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

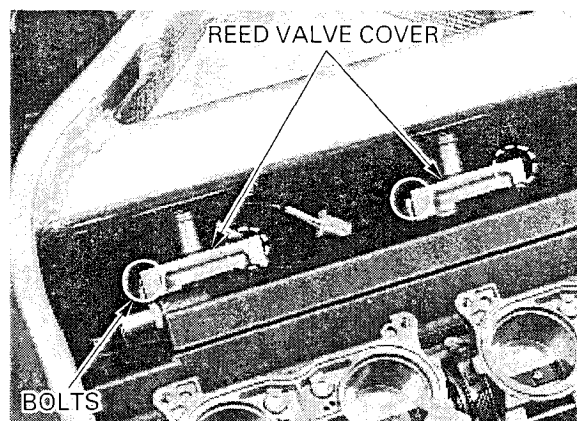

Connect the throttle cables from the throttle drum. Install and tighten the throttle cable guide bracket mounting bolts to the specified torque.


**TORQUE:** 3 N·m (0.35 kgf·m , 2.5 lbf·ft)

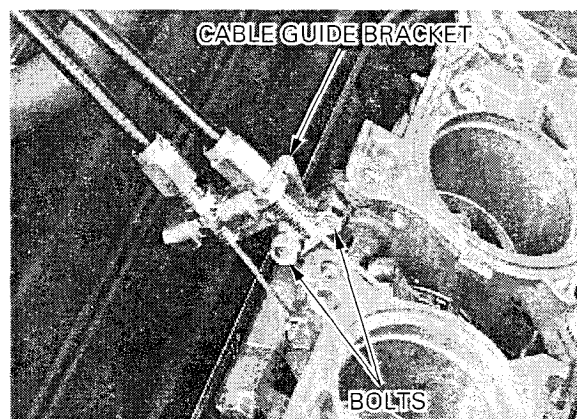

Install the direct ignition coils and spark plug sub-harness. Connect the cam pulse generator 2P (Natural) connector.


Install the PAIR solenoid valve assembly and connect the air suction hoses to the PAIR reed valve cover. Install and tighten the PAIR solenoid valve mounting bolt. Connect the PAIR solenoid valve 2P (Natural) connector.

Connect the crankcase breather tube.

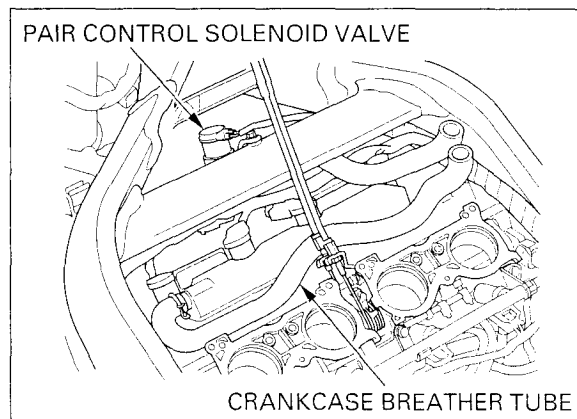


## CYLINDER HEAD/VALVES

Connect the radiator sub-harness 2P (Black) connector.

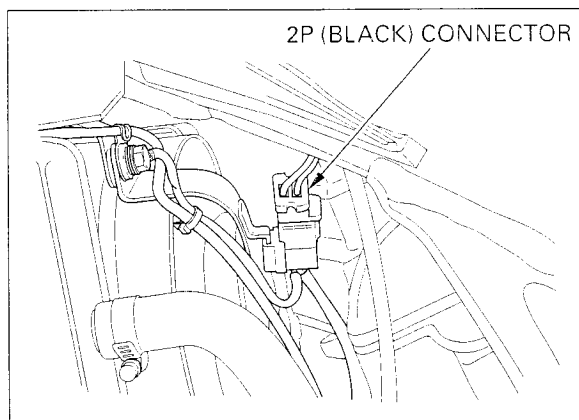

Install the heat guard rubber onto the cylinder head cover.

Install the air cleaner housing (page 5-59).

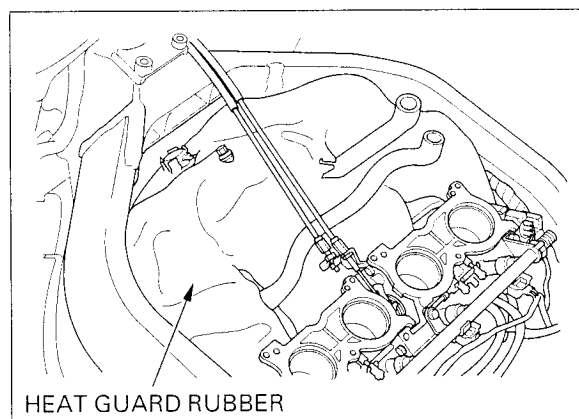


## CAM CHAIN TENSIONER LIFTER


### REMOVAL

Open and support the front end of fuel tank (page 3-4).


Remove the cam chain tensioner sealing bolt and sealing washer.

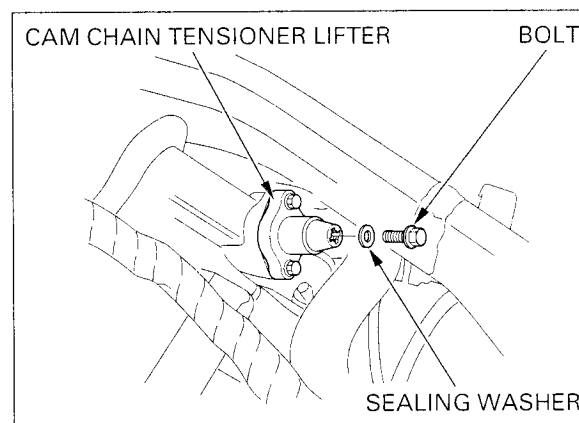

Turn the tensioner shaft fully in (clockwise) and secure it using the stopper tool to prevent damaging the cam chain.  
See page 8-8 for detail of the tool.

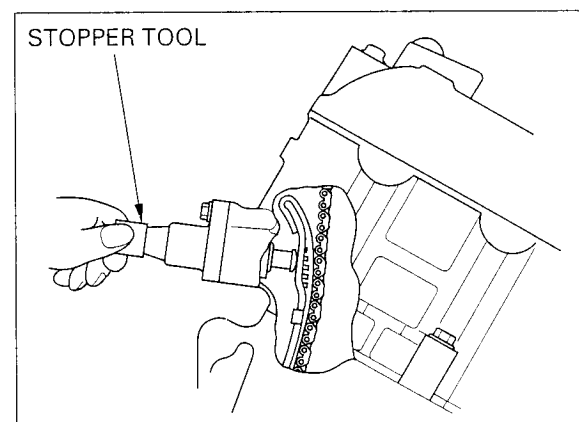


Remove the bolts and cam chain tensioner lifter.  
Remove the gasket.

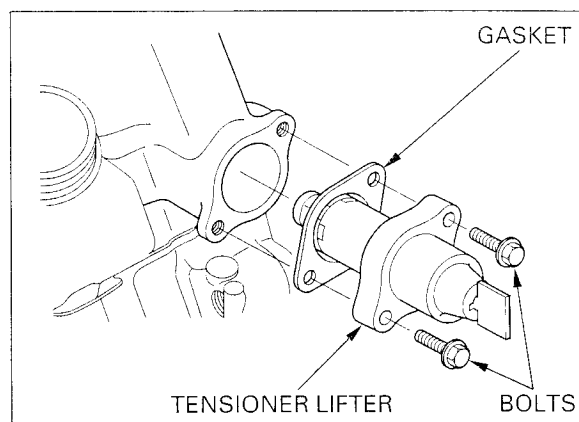


## INSTALLATION


Install the new gasket onto the cam chain tensioner lifter.

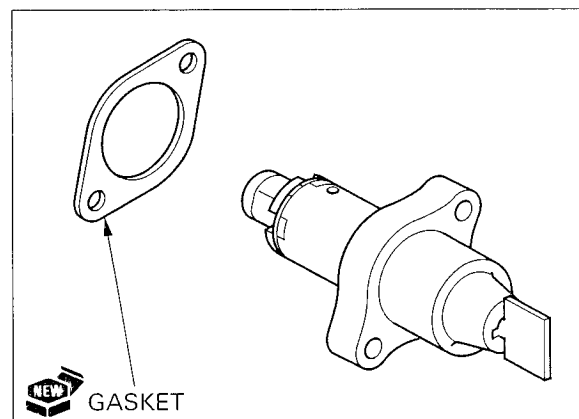

Install the cam chain tensioner lifter into the cylinder head.  
Install and tighten the mounting bolts.

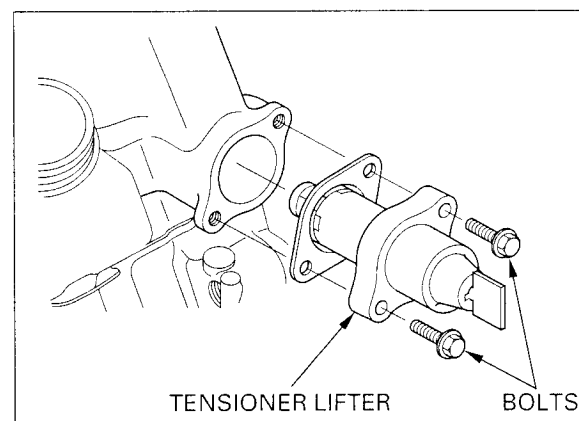


Remove the stopper tool.

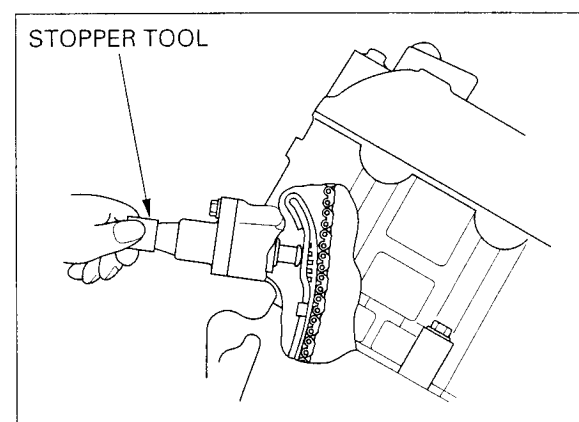

## CYLINDER HEAD/VALVES

---

Install a new sealing washer and tighten the sealing bolt securely.

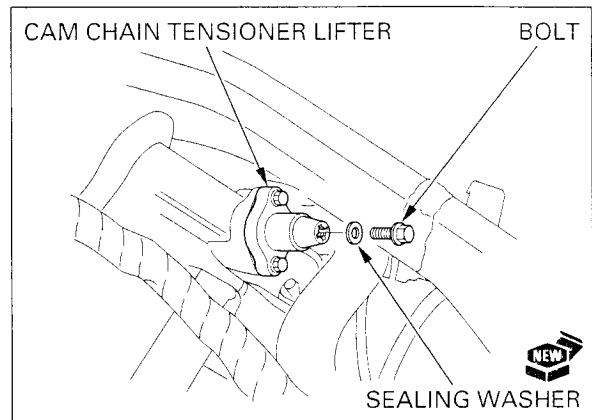

# 9. CLUTCH/GEARSHIFT LINKAGE

SERVICE INFORMATION	9-1	CLUTCH	9-4
TROUBLESHOOTING	9-2	GEARSHIFT LINKAGE	9-12
RIGHT CRANKCASE COVER REMOVAL	9-3	RIGHT CRANKCASE COVER INSTALLATION	9-17

## SERVICE INFORMATION

### GENERAL

- This section covers service of the clutch, gearshift linkage, shift drum and shift forks. All service can be done with the engine installed in the frame.
- Transmission oil viscosity and level have an effect on clutch disengagement. When the clutch does not disengage or the motorcycle creeps with clutch disengaged, inspect the transmission oil level before servicing the clutch system.

### SPECIFICATIONS

Unit: mm (in)

ITEM			STANDARD	SERVICE LIMIT
Clutch lever free play			10 – 20 (3/8 – 13/16)	
Clutch spring free length			48.8 (1.92)	47.4 (1.87)
Clutch disc thickness	Green color		2.92 – 3.08 (0.115 – 0.121)	2.6 (0.10)
	Purple color		2.92 – 3.08 (0.115 – 0.121)	2.6 (0.10)
Clutch plate warpage				0.30 (0.012)
Clutch outer guide	I.D.		25.000 – 25.021 (0.9843 – 0.9851)	25.03 (0.985)
	O.D.		34.975 – 34.991 (1.3770 – 1.3776)	34.97 (1.377)
Mainshaft O.D. at clutch outer guide			24.980 – 24.993 (0.9835 – 0.9840)	24.96 (0.983)
Shift fork, fork shaft	Fork	I.D.	12.000 – 12.018 (0.4724 – 0.4731)	12.03 (0.474)
		Claw thickness	5.93 – 6.00 (0.233 – 0.236)	5.9 (0.23)
	Fork shaft O.D.		11.957 – 11.968 (0.4707 – 0.4712)	11.95 (0.470)

### TORQUE VALUES

Clutch center lock nut	127 N·m (13.0 kgf·m , 94 lbf·ft)	Apply oil to the threads Stake the nut
Clutch spring bolt/washer	12 N·m (1.2 kgf·m , 9 lbf·ft)	
Shift drum center socket bolt	23 N·m (2.3 kgf·m , 17 lbf·ft)	Apply a locking agent to the threads
Shift drum stopper arm pivot bolt	12 N·m (1.2 kgf·m , 9 lbf·ft)	
Gearshift return spring pin	23 N·m (2.3 kgf·m , 17 lbf·ft)	
Gearshift drum bearing/shift fork retaining bolt/washer	12 N·m (1.2 kgf·m , 9 lbf·ft)	Apply a locking agent to the threads
Gearshift pedal link pinch bolt	10 N·m (1.0 kgf·m , 7 lbf·ft)	
Oil pump driven sprocket bolt	15 N·m (1.5 kgf·m , 11 lbf·ft)	Apply a locking agent to the threads



## CLUTCH/GEARSHIFT LINKAGE

---

### TOOLS

Clutch center holder	07724-0050002	Equivalent commercially available in U.S.A.
Driver	07749-0010000	
Attachment, 42 × 47 mm	07746-0010300	
Pilot, 35 mm	07746-0040800	

## TROUBLESHOOTING

### Clutch lever too hard to pull in

- Damaged clutch lifter mechanism
- Faulty clutch lifter bearing
- Clutch lifter piece installed improperly

### Clutch slips when accelerating

- Worn clutch disc
- Weak clutch springs
- Transmission oil mixed with molybdenum or graphite additive

### Clutch will not disengage or motorcycle creeps with clutch disengaged

- Clutch plate warped
- Loose clutch lock nut
- Oil level too high
- Improper oil viscosity
- Damaged clutch lifter mechanism
- Clutch lifter piece installed improperly

### Hard to shift

- Improper clutch operation
- Improper oil viscosity
- Bent shift fork
- Bent shift fork shaft
- Bent fork claw
- Damaged shift drum cam groove
- Loose stopper plate bolt
- Damaged stopper plate and pin
- Damaged gearshift spindle

### Transmission jumps out of gear

- Worn shift drum stopper arm
- Weak or broken shift arm return spring
- Loose stopper plate bolt
- Bent shift fork shaft
- Damaged shift drum cam groove
- Damaged or bent shift forks
- Worn gear engagement dogs or slots

### Gearshift pedal will not return

- Weak or broken gearshift spindle return spring
- Bent gearshift spindle


## RIGHT CRANKCASE COVER REMOVAL

Drain the engine oil (page 3-16).


Remove the middle/lower cowl (page 2-5).

Open and support the front end of fuel tank (page 3-4).

Disconnect the ignition pulse generator 2P (Red) connector.

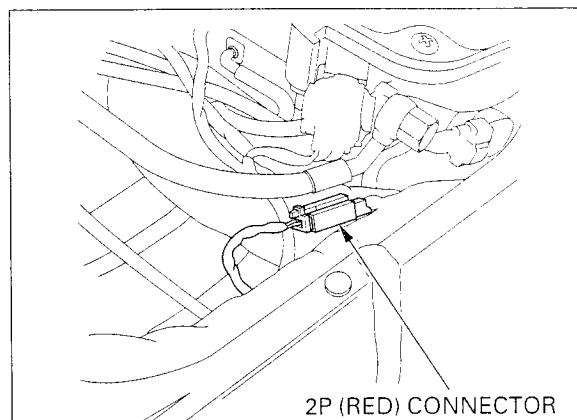


Remove the bolts and clutch cable guide, then disconnect the clutch cable end from the clutch lifter lever.

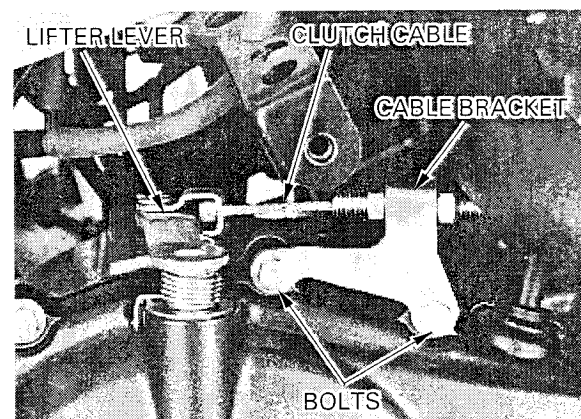

*The lifter arm spindle is engaged with the clutch lifter piece inside the right crankcase cover.*


Remove the right crankcase cover SH bolts.

Remove the right crankcase cover while turning the clutch lifter arm counterclockwise to disengage the lifter arm spindle from the lifter piece.

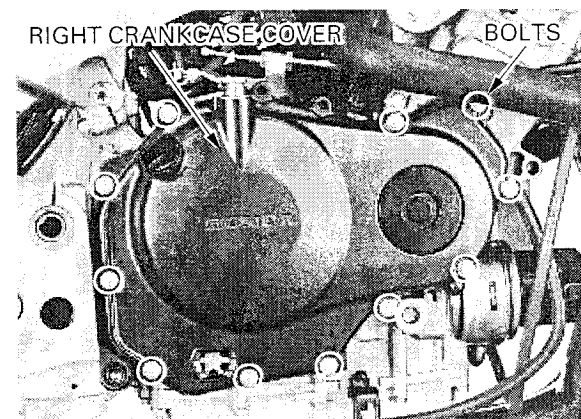

Remove the two dowel pins.

Clean any sealant off from the right crankcase cover mating surfaces.

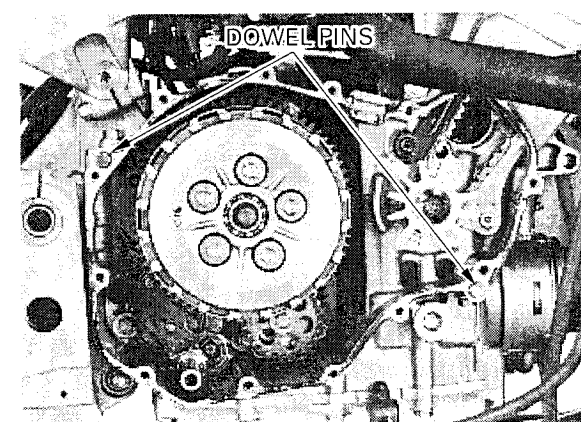


## CLUTCH/GEARSHIFT LINKAGE


### CLUTCH LIFTER LEVER

Remove the clutch lifter lever, return spring and washer from the right crankcase cover.

Check the lifter lever spindle for wear or damage.  
Check the return spring for fatigue or damage.

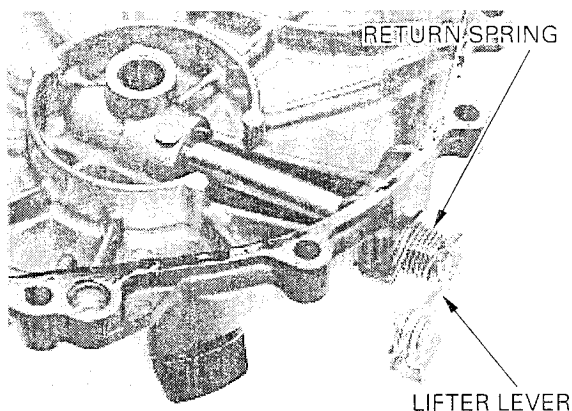

Check the lifter lever oil seal and needle bearings for wear or damage.  
Install the clutch lifter lever with the washer and spring in the reverse order of removal.

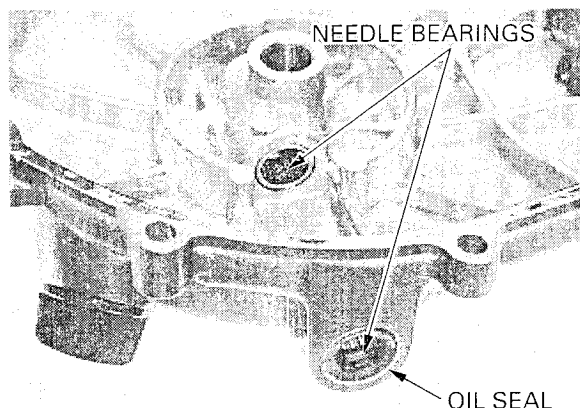


## CLUTCH

### REMOVAL

Remove the right crankcase cover (page 9-3).


Remove the clutch spring bolts, springs and pressure plate.

Remove the clutch lifter piece from the lifter bearing.

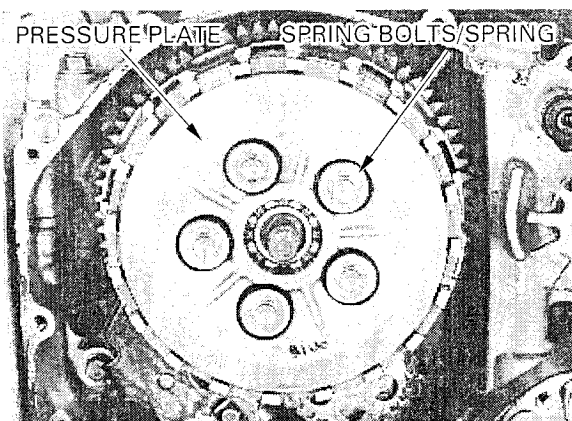

Remove the following:


- Nine clutch discs
- Eight clutch plates
- Judder spring
- Judder spring seat

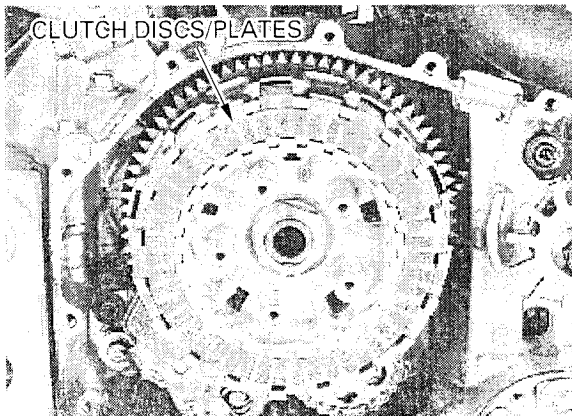



## CLUTCH/GEARSHIFT LINKAGE

Unstake the clutch center lock nut.

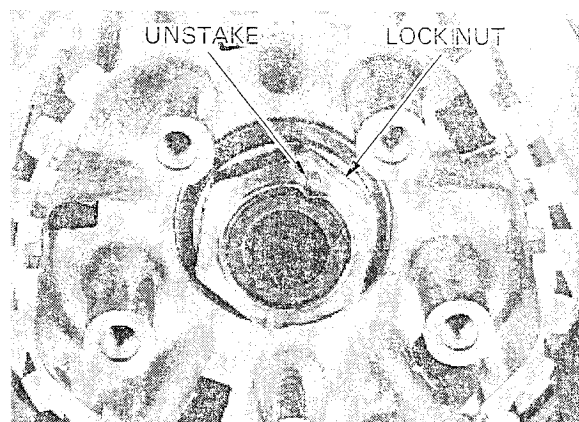

Hold the clutch center with the clutch center holder, then remove the lock nut.


**TOOL:**

**Clutch center holder**


07724-0050002

(Equivalent commercially available in U.S.A.)


Discard the lock nut.

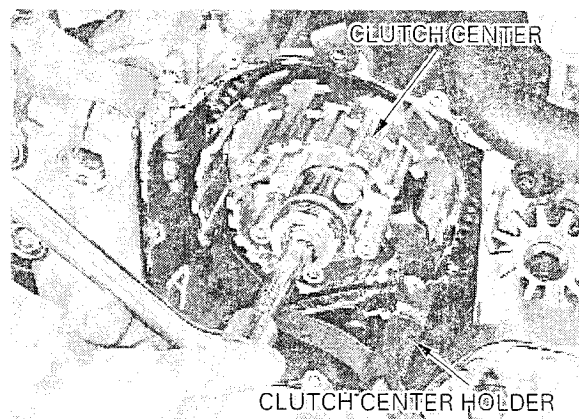

Remove the lock washer, thrust washer and clutch center.

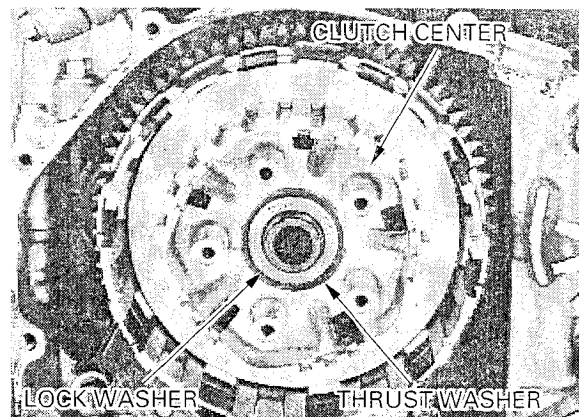


Remove the washer.

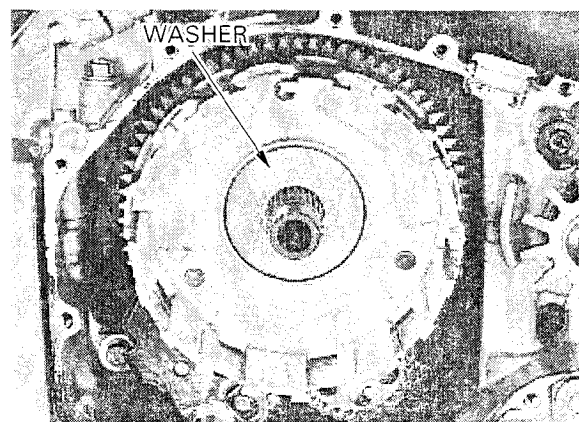


## CLUTCH/GEARSHIFT LINKAGE

Align the primary drive gear and sub-gear teeth with a screwdriver as shown.  
Pull out the clutch outer.

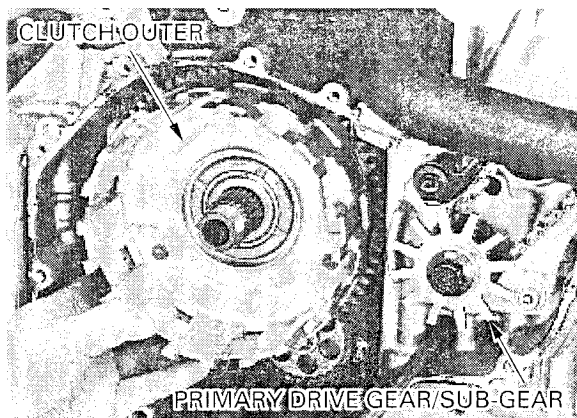

Remove the oil pump driven sprocket bolt/washer.  
Remove the oil pump drive/driven sprocket and drive chain as an assembly.

Remove the clutch outer guide.

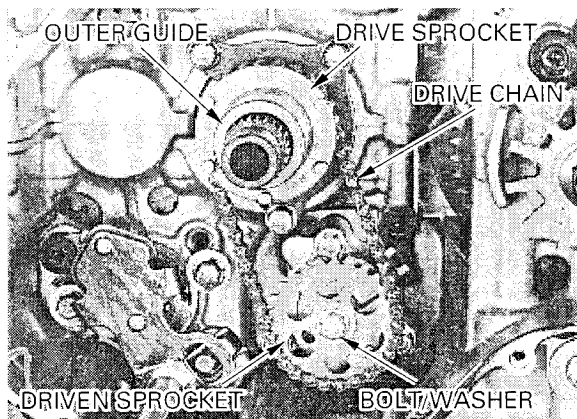


### INSPECTION

#### Clutch lifter bearing

Turn the inner race of the lifter bearing with your finger.

The bearing should turn smoothly and freely without excessive play.


If necessary replace the bearing.

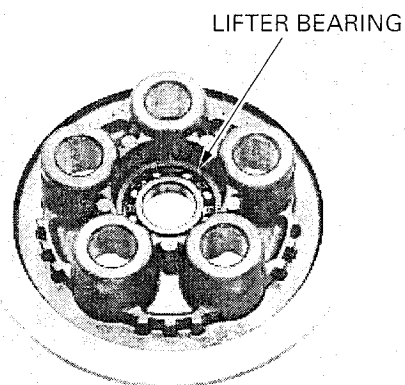

#### Clutch spring

Measure the clutch spring free length


**SERVICE LIMIT:** 47.4 mm (1.87 in)

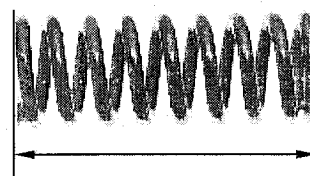




**Clutch center**

Check the grooves of the clutch center for damage or wear caused by the clutch plates.  
Replace if necessary.

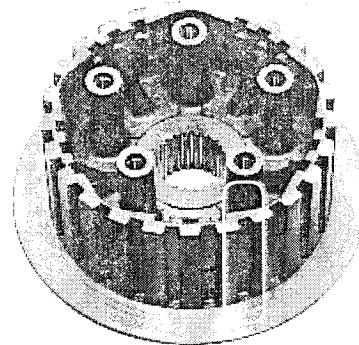

**Clutch lifter piece**

Check the clutch lifter piece for damage or abnormal wear.

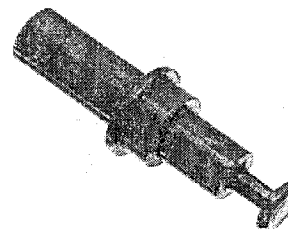


**Clutch disc**

Replace the clutch discs if they show signs of scoring or discoloration.

Measure the disc thickness of each disc.


**SERVICE LIMIT:** 2.6 mm (0.10 in)

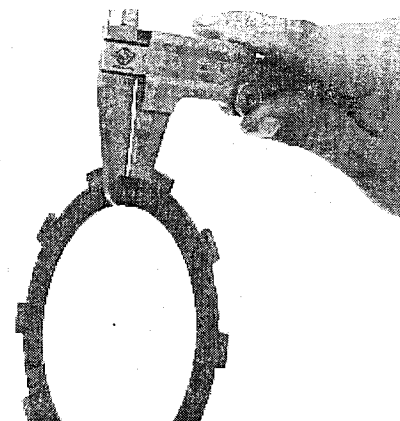

**Clutch plate**

Check each disc plate for warpage on a surface plate using a feeler gauge.

**SERVICE LIMIT:** 0.30 mm (0.012 in)

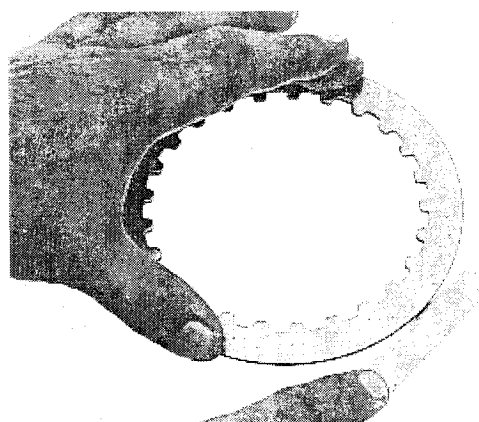


## CLUTCH/GEARSHIFT LINKAGE

---

### Clutch outer/clutch outer guide

Check the slots of the clutch outer for damage or wear caused by the clutch discs.  
Replace if necessary.

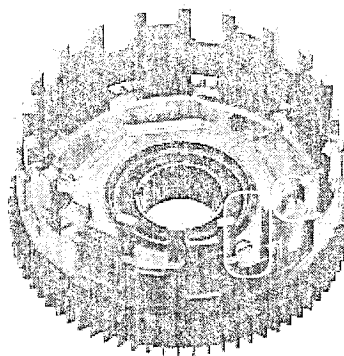


Measure the O.D. and I.D. of the clutch outer guide.

### SERVICE LIMITS:

O.D.: 34.97 mm (1.377 in)


I.D.: 25.03 mm (0.985 in)

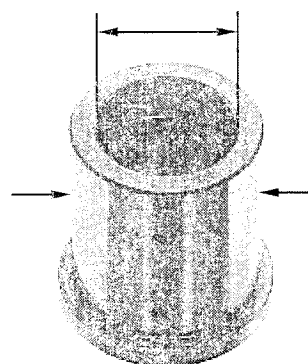

### Mainshaft

Measure the mainshaft O.D. at clutch outer guide sliding surface.

SERVICE LIMIT: 24.96 mm (0.983 in)

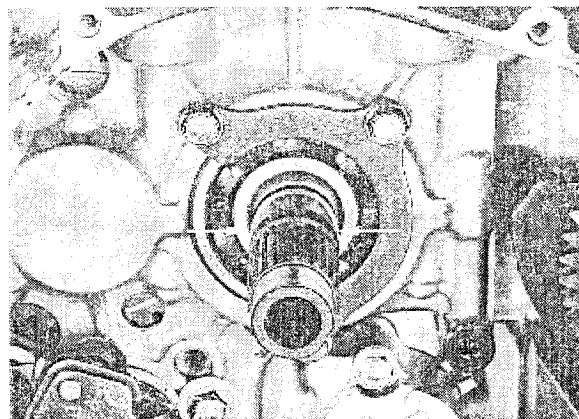

## CLUTCH OUTER NEEDLE BEARING REPLACEMENT


Press the needle bearing out of the clutch outer using the special tools.

### TOOLS:

Driver 07749-0010000

Attachment, 42 × 47 mm 07746-0010300

Pilot, 35 mm 07746-0040800

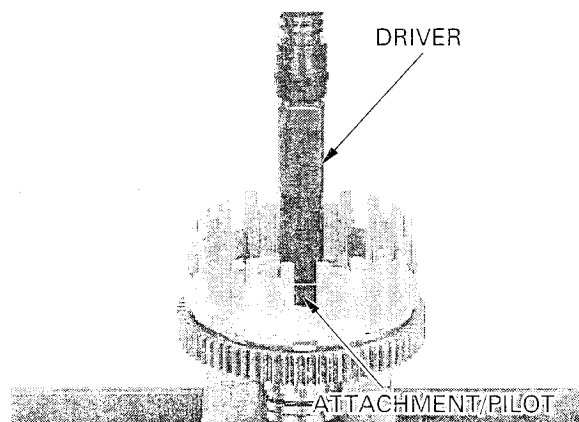


## CLUTCH/GEARSHIFT LINKAGE

Press the needle bearing into the clutch outer with the marked side facing up.


Press a new needle bearing into the clutch outer so that the casing of the needle bearing is flush with the clutch outer surface as shown.

### TOOLS:

Driver	07749-0010000
Attachment, 42 × 47 mm	07746-0010300
Pilot, 35 mm	07746-0040800

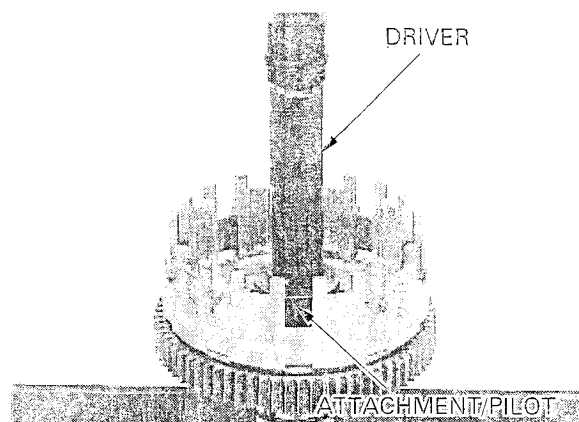


## INSTALLATION

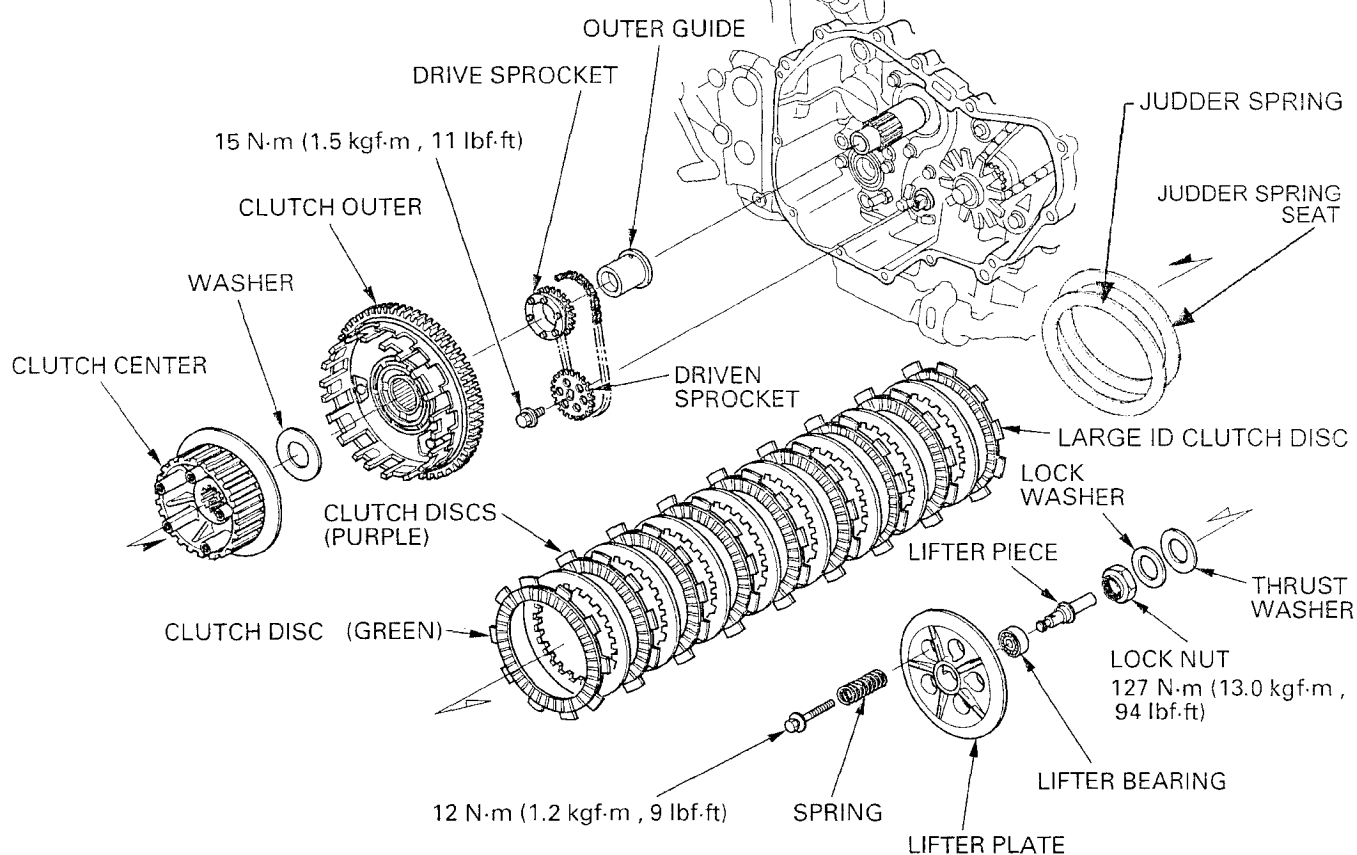

Install the oil pump driven sprocket with its "OUT" mark facing out.

Install the clutch outer guide, oil pump drive/driven sprocket and drive chain as an assembly.

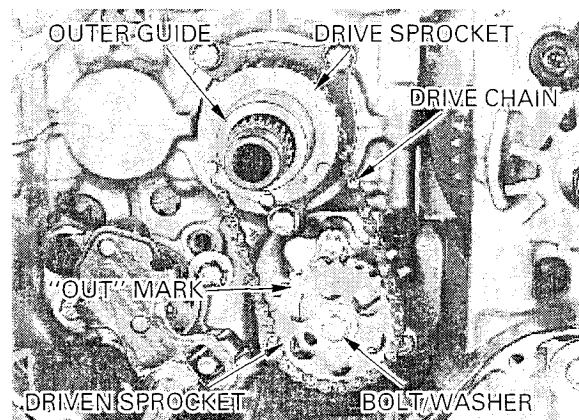




## CLUTCH/GEARSHIFT LINKAGE

Apply a locking agent to the threads of the oil pump driven sprocket bolt.  
Tighten the driven sprocket bolt to the specified torque.


**TORQUE:** 15 N·m (1.5 kgf·m , 11 lbf·ft)

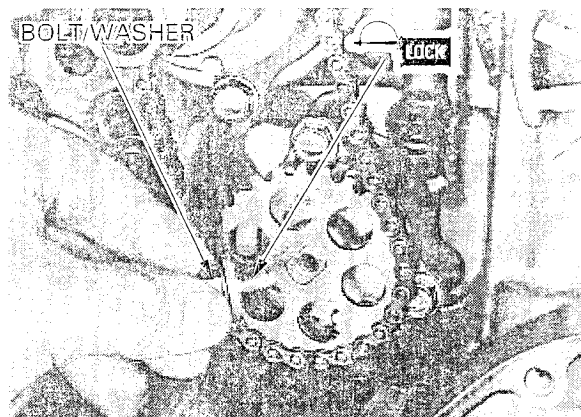


*Be sure the clutch outer sits securely onto the positioning tabs of the oil pump drive sprocket. Rotate the oil pump drive chain while installing the clutch outer to properly seat it.*

Align the primary drive gear and sub-gear teeth with a screwdriver as shown.

Install the clutch outer.

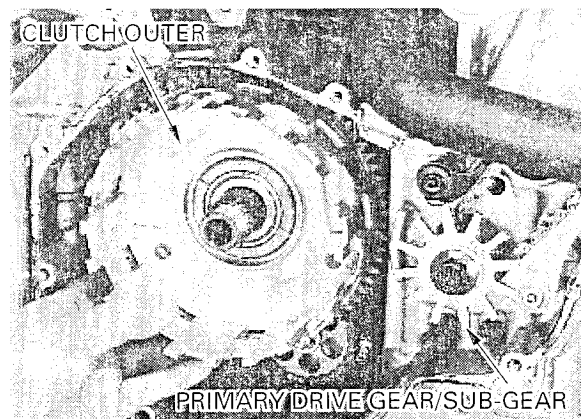


Install the washer onto the clutch outer.

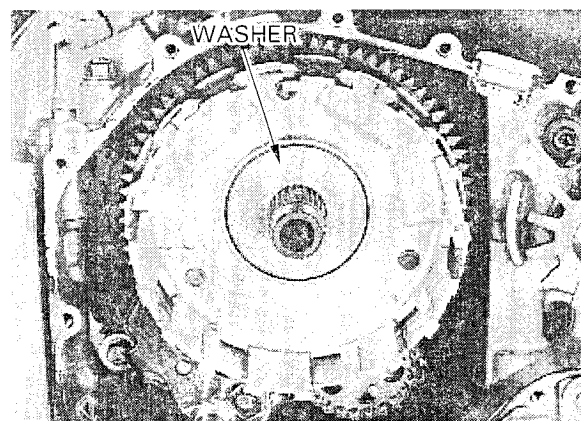

Install the clutch center.

Install the thrust washer.

Install the lock washer with its "OUTSIDE" mark facing out.

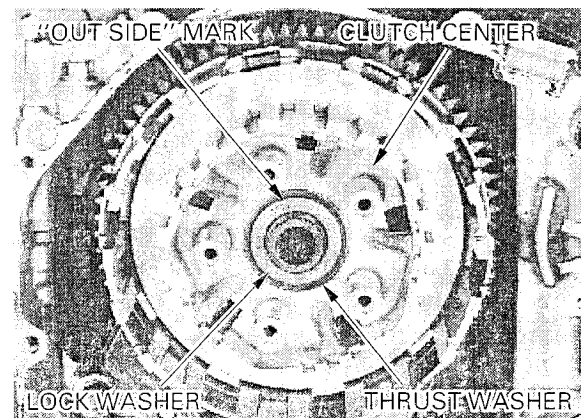

## CLUTCH/GEARSHIFT LINKAGE


Install the new lock nut.

Hold the clutch center with the clutch center holder, then tighten the lock nut to the specified torque.

**TOOL:**


**Clutch center holder** 07724-0050002  
(Equivalent commercially available in U.S.A.)

**TORQUE:** 127 N·m (13.0 kgf·m , 94 lbf·ft)

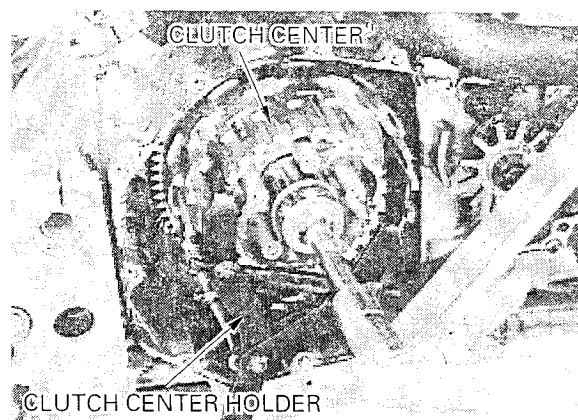

Stake lock nut into the mainshaft groove with a punch.


Install the judder spring seat and judder spring. Coat the large ID clutch disc with clean engine oil and install it.

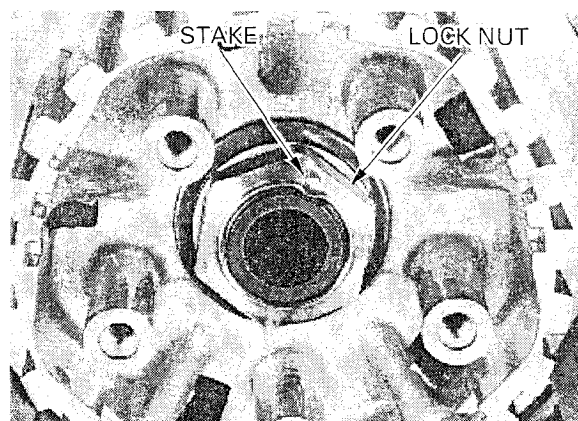


Coat the clutch discs and plates with clean engine oil.

*Install the green colored disc on the outside of the clutch assembly.*

Stack the clutch discs and plates alternately.

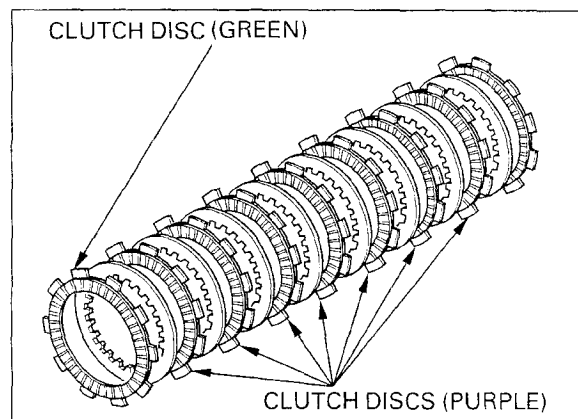


Install the green colored outer clutch disc in the shallow slot on the clutch outer.

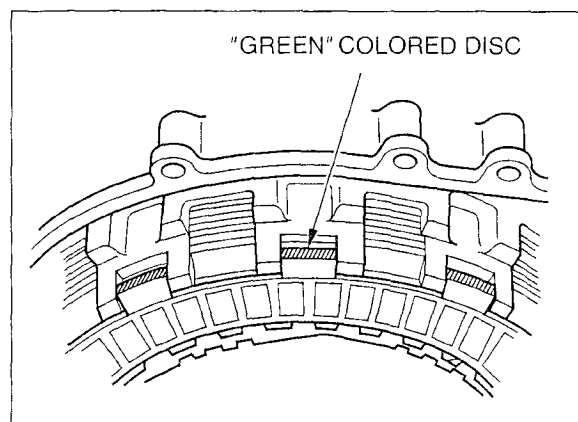



## CLUTCH/GEARSHIFT LINKAGE


Install the lifter bearing into the pressure plate.  
Install the clutch lifter piece into the lifter bearing.

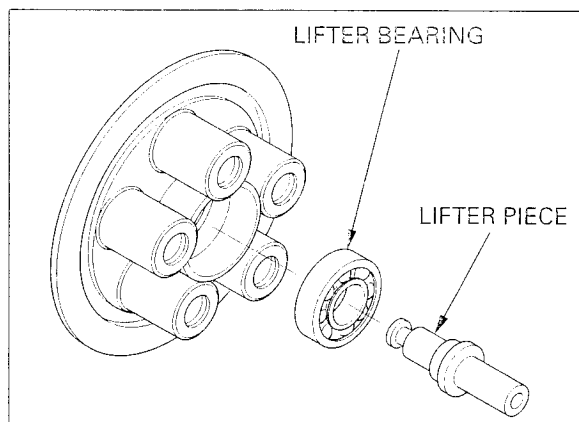

Install the pressure plate.  
Install the clutch springs and spring bolts.  
Tighten the bolts in a crisscross pattern in 2–3 steps then tighten them to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m, 9 lbf·ft)

Install the right crankcase cover (page 9-17).

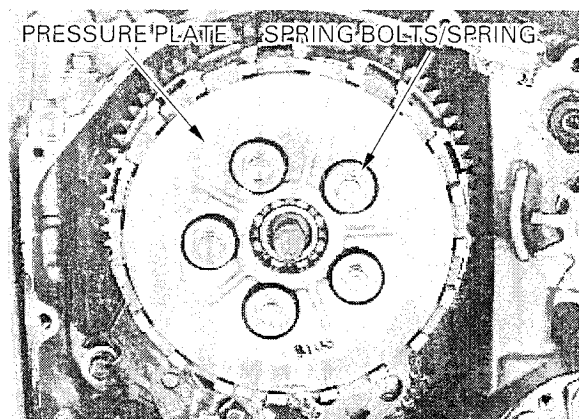


## GEARSHIFT LINKAGE


### GEARSHIFT LINKAGE REMOVAL

Remove the following:  
— Right crankcase cover (page 9-3)  
— Clutch assembly (page 9-4)

Remove the bolt and gearshift pedal link.

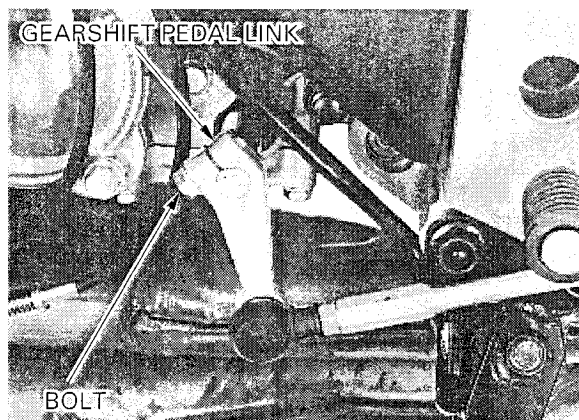


Pull the gearshift spindle assembly and thrust washer out of the crankcase.

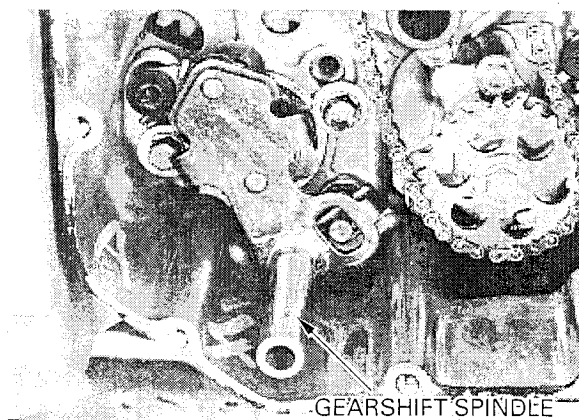

Remove the following:


- Stopper arm socket bolt
- Stopper arm
- Return spring
- Washer
- Dowel pins
- Socket bolt
- Gearshift cam

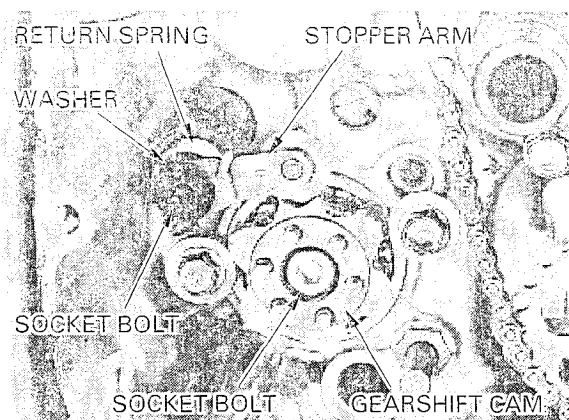

### GEARSHIFT LINKAGE INSPECTION

Check the gearshift spindle for wear, damage or bending.

Check the return spring for fatigue or damage.

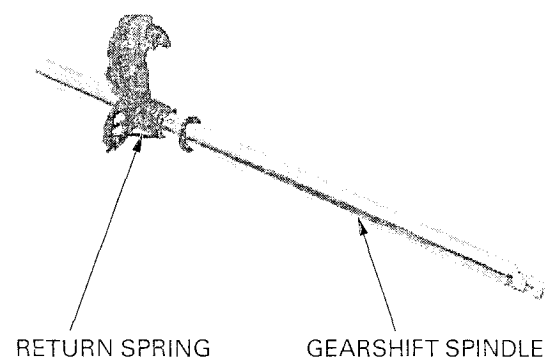


### SHIFT DRUM/SHIFT FORK REMOVAL


Remove the following:

- Gearshift linkage through socket bolt/gearshift cam removal (page 9-12)
- Oil pan (page 4-3)

Remove the bolts and shift drum bearing set plates.

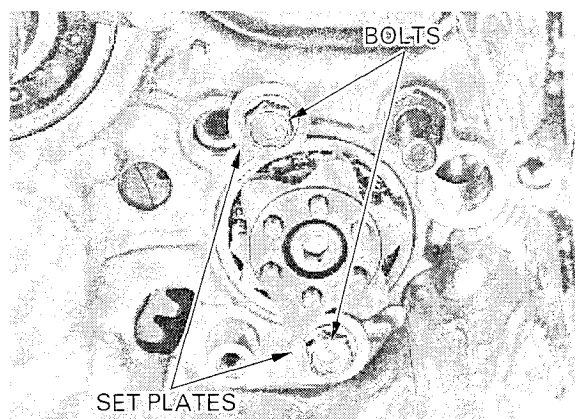


Remove the shift fork shaft and shift forks.

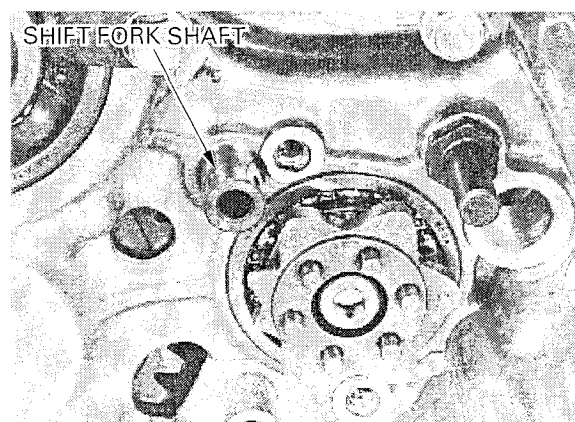

## CLUTCH/GEARSHIFT LINKAGE

Remove the shift drum bearing and shift drum.

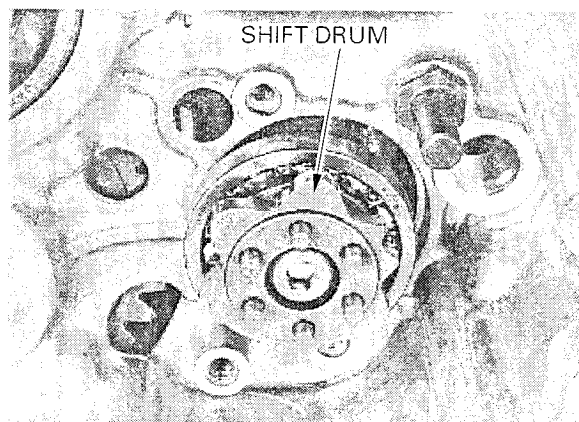

### SHIFT DRUM/SHIFT FORK INSPECTION

Check the shift fork and fork shaft for wear or damage.

Measure the I.D. of the shift fork.



**SERVICE LIMIT:** 12.03 mm (0.474 in)

Measure the shift fork claw thickness.


**SERVICE LIMIT:** 5.9 mm (0.23 in)

Measure the O.D. of the shift fork shaft.

**SERVICE LIMIT:** 11.95 mm (0.470 in)

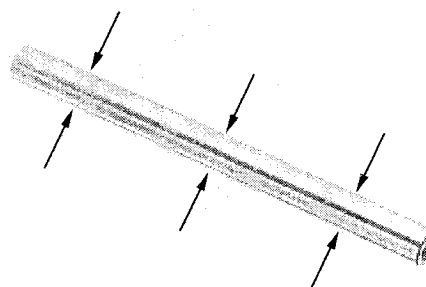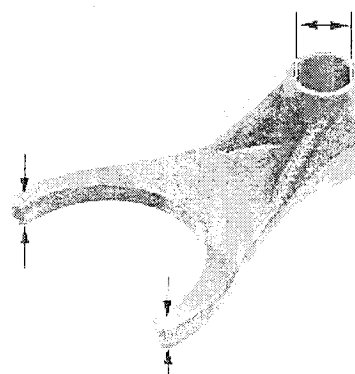


Inspect the shift drum grooves for wear or damage.

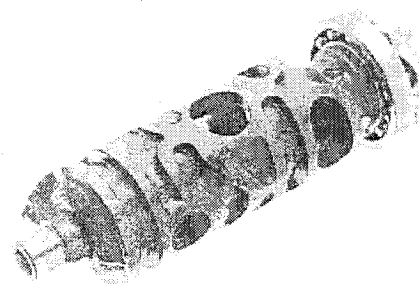




Turn the outer race of the shift drum bearing with your finger.  
The bearing should turn smoothly and freely without excessive play.  
If necessary replace the bearing.

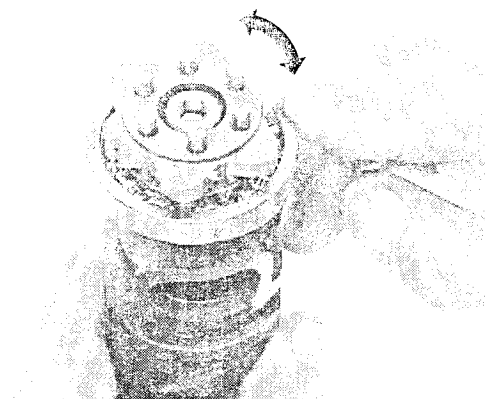


The shift forks have location marks.  
"R" for right  
"C" for center  
"L" for left

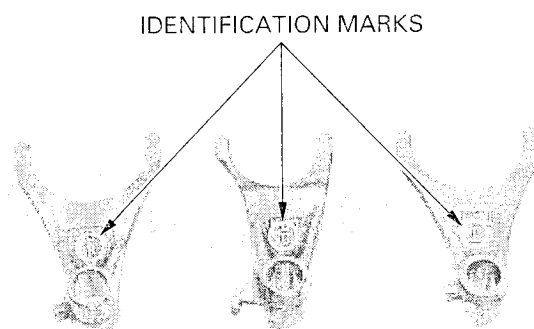


Apply molybdenum disulfide oil to shifter fork groove of the shift gears.  
Install the shift forks on the transmission.

Install the shift fork shafts with their identification mark facing to right.

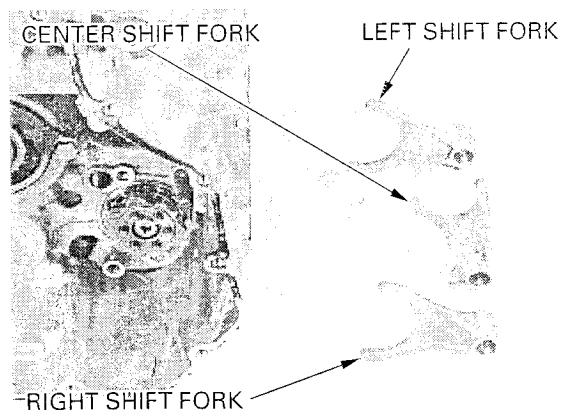


### SHIFT DRUM/SHIFT FORK INSTALLATION

Install the shift drum and shift drum bearing.

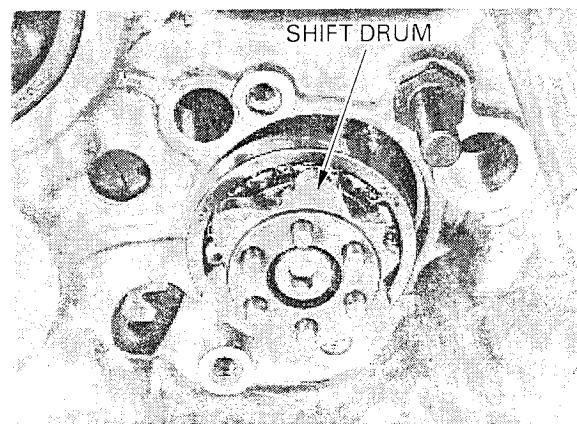

## CLUTCH/GEARSHIFT LINKAGE

Install the shift fork shaft.

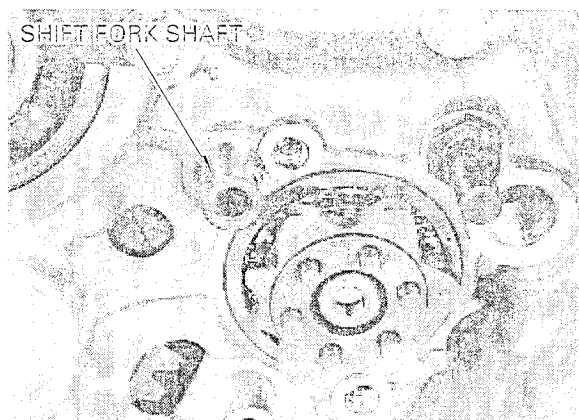


Apply a locking agent to the threads of the set plate bolts.

Install and set plates and bolts, tighten the bolts to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

Install the gearshift linkage (see following steps).

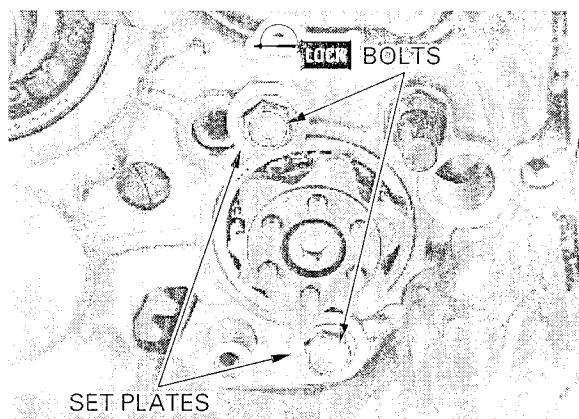



## GEARSHIFT LINKAGE INSTALLATION

Install the following:

- Washer
- Return spring
- Stopper arm
- Socket bolt

Tighten the stopper arm socket bolt to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

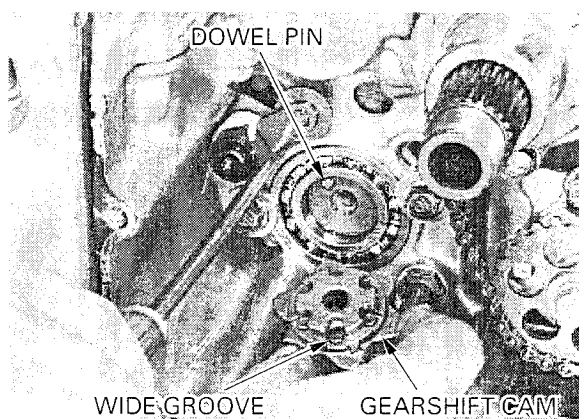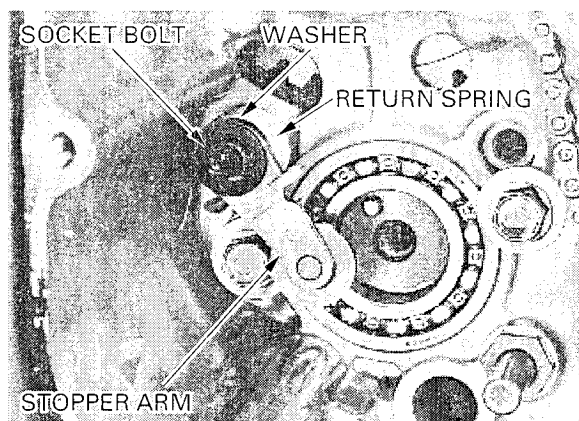


*Align the dowel pin on the shift drum center with the wide groove on the gearshift cam.*

Install the dowel pin onto the shift drum.  
Install the gearshift cam while holding the stopper arm using a screwdriver as shown.




Apply a locking agent to the gearshift cam socket bolt threads.  
Install and tighten the socket bolt to the specified torque.

**TORQUE:** 23 N·m (2.3 kgf·m , 17 lbf·ft)

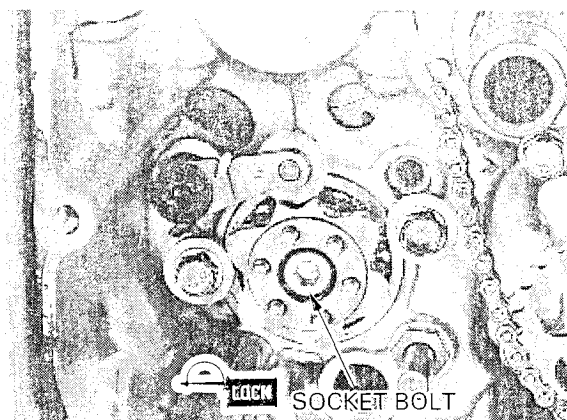


Install the thrust washer and gearshift spindle assembly into the crankcase while aligning the spring ends with the crankcase stopper pin.

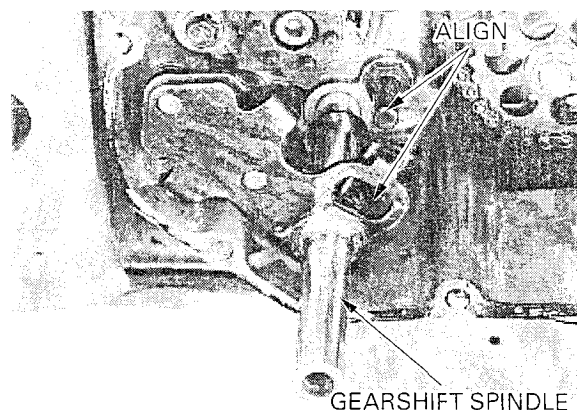

Install the gearshift pedal link by aligning its slit with the punch mark on the gearshift spindle. Install and tighten the pinch bolt to the specified torque.


**TORQUE:** 10 N·m (1.0 kgf·m , 7 lbf·ft)

Install the clutch assembly (page 9-8).

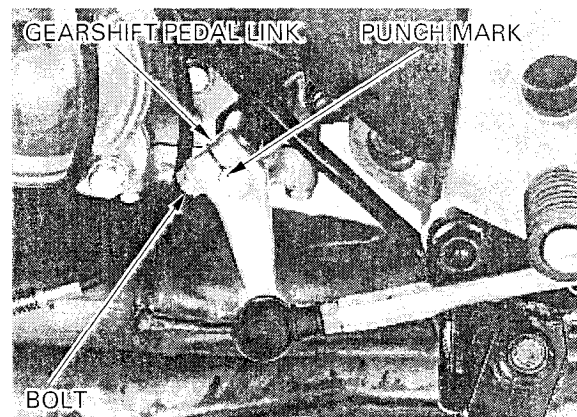


## RIGHT CRANKCASE COVER INSTALLATION

Apply a sealant to the mating surfaces of the crankcase as shown.

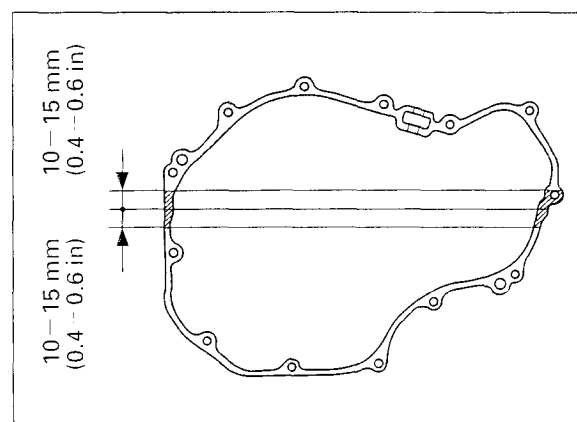


## CLUTCH/GEARSHIFT LINKAGE


Apply sealant to the mating surface of the right crankcase cover.

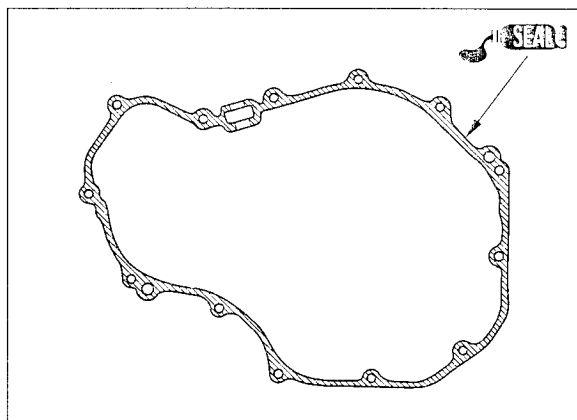


Install the two dowel pins.

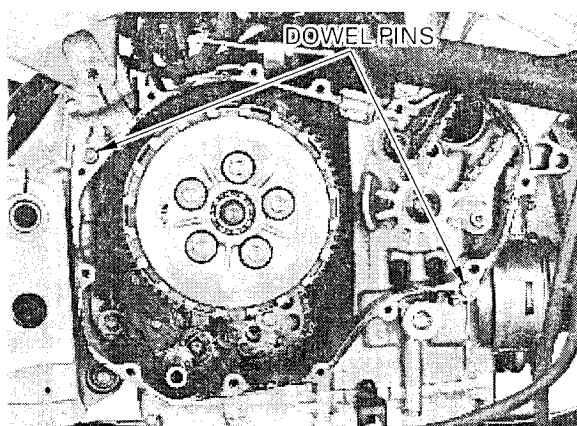

Install the right crankcase cover while turning the lifter arm clockwise to engage the lifter arm groove with the lifter piece flange.

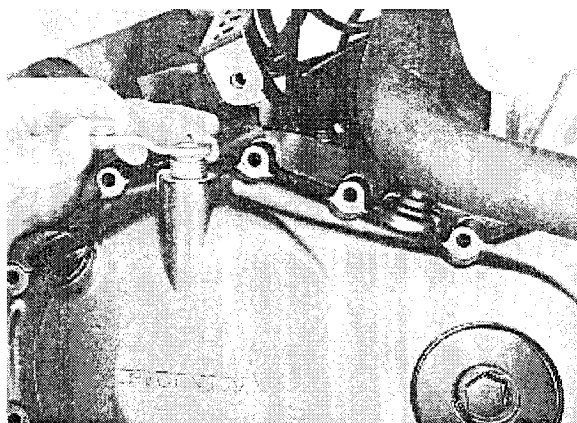


Install and temporarily tighten the right crankcase cover SH bolts.

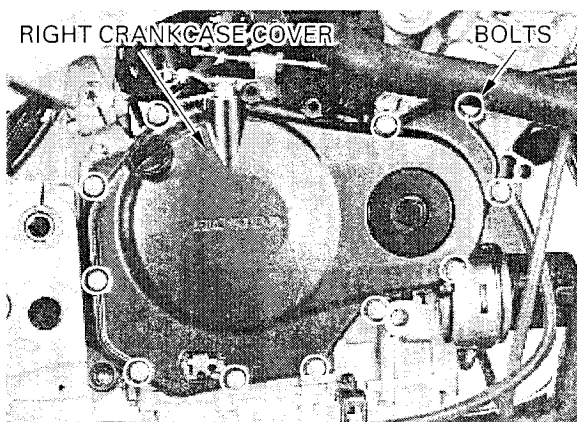


## CLUTCH/GEARSHIFT LINKAGE

Connect the clutch cable end to the clutch lifter lever, then install the clutch cable bracket with the two bolts.

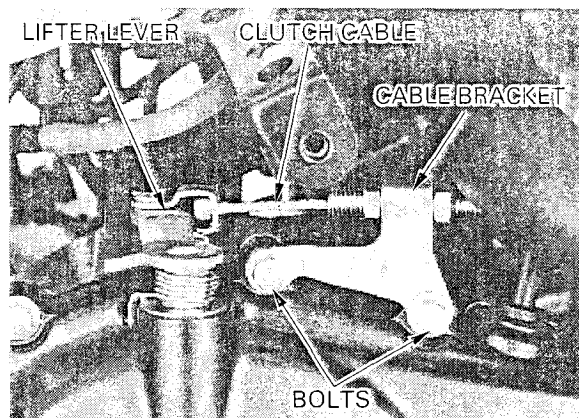


Tighten the right crankcase cover crisscross pattern in 2 - 3 steps.

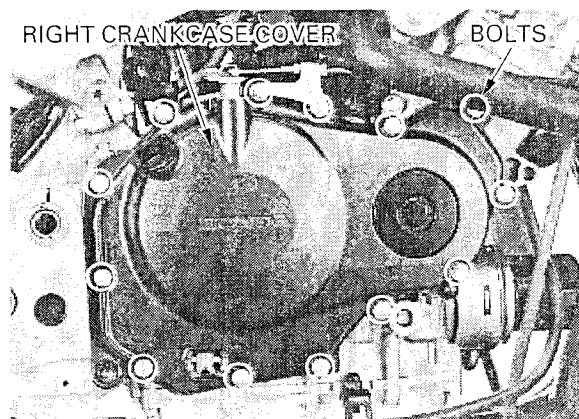

Connect the ignition pulse generator 2P (Red) connector.

Pour the recommended engine oil (page 3-15).

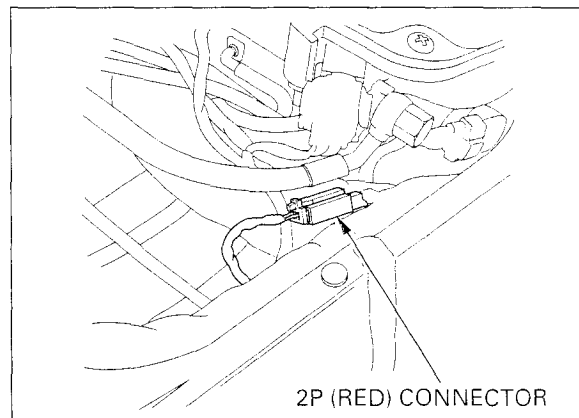



# 10. ALTERNATOR/STARTER CLUTCH

SERVICE INFORMATION	10-1	FLYWHEEL REMOVAL	10-3
TROUBLESHOOTING	10-1	STARTER CLUTCH	10-5
ALTERNATOR COVER REMOVAL	10-2	FLYWHEEL INSTALLATION	10-7
STATOR	10-2	ALTERNATOR COVER INSTALLATION	10-8

## SERVICE INFORMATION

### GENERAL

- This section covers service of the alternator, flywheel and starter clutch. All service can be done with the engine installed in the frame.
- Refer to section 16 for alternator stator inspection.

### SPECIFICATIONS

Unit: mm (in)

ITEM	STANDARD	SERVICE LIMIT
Starter driven gear boss O.D.	51.699 – 51.718 (2.0354 – 2.0361)	51.684 (2.0348)

10

### TORQUE VALUES

Alternator wire clamp bolt	12 N·m (1.2 kgf·m , 9 lbf·ft)	CT bolt
Flywheel flange bolt	103 N·m (10.5 kgf·m , 76 lbf·ft)	Apply oil to the threads
Stator mounting socket bolt	12 N·m (1.2 kgf·m , 9 lbf·ft)	
Starter one-way clutch socket bolt	16 N·m (1.6 kgf·m , 12 lbf·ft)	Apply a locking agent to the threads

### TOOLS

Flywheel holder	07725-0040000	Equivalent commercially available in U.S.A.
Rotor puller	07733-0020001	or 07933-3950000

## TROUBLESHOOTING

### Engine does not turn

- Faulty starter clutch
- Damaged idle gear/shaft


## ALTERNATOR/STARTER CLUTCH

### ALTERNATOR COVER REMOVAL

Remove the fuel tank rear bracket and ECM cover (page 5-89).

Remove the middle/lower cowl (page 2-5).


Disconnect the alternator 3P (White) connector.

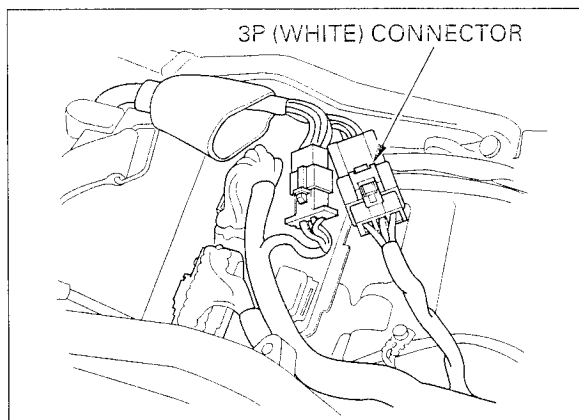


*The alternator cover (stator) is magnetically attached to the flywheel, be careful during removal.*

Remove the alternator cover SH bolts and alternator cover.

The engine oil will run out when the alternator cover is removed. Set a clean oil pan under the engine and add the recommended oil to the specified level after installation.

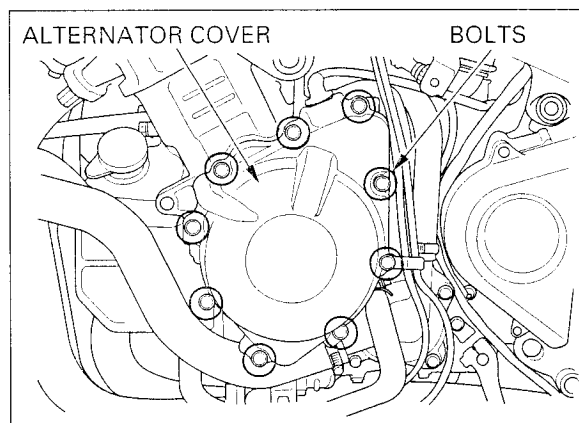

Remove the gasket and dowel pin.

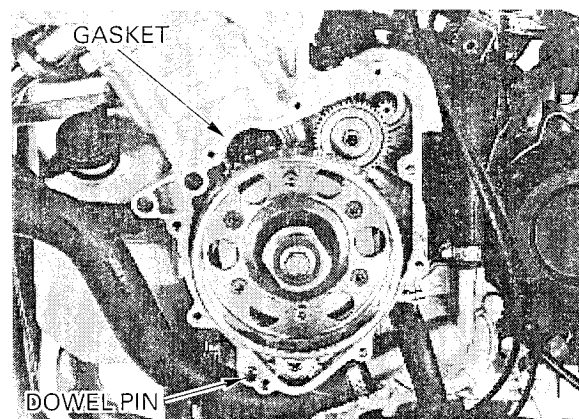


### STATOR

#### REMOVAL

Remove the alternator wire grommet from the alternator cover.


Remove the socket bolt and stator wire clamp.

Remove the socket bolts and stator.

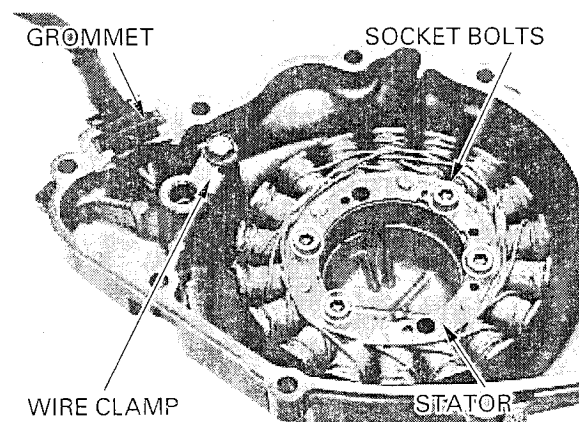



## INSTALLATION

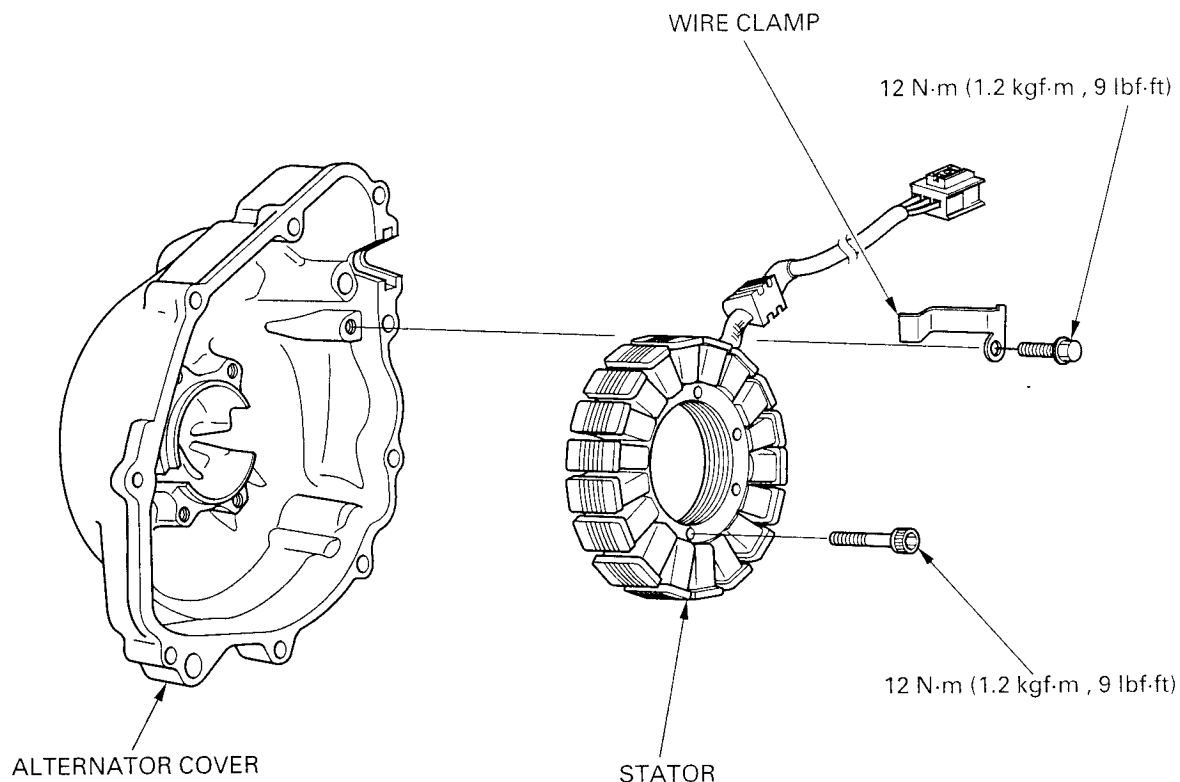


Install the stator into the alternator cover.

Apply sealant to the wire grommet, then install the wire grommet into the alternator groove securely. Install and tighten the stator mounting socket bolts to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m, 9 lbf·ft)

Install the wire clamp and tighten the bolt to the specified torque.


**TORQUE:** 12 N·m (1.2 kgf·m, 9 lbf·ft)

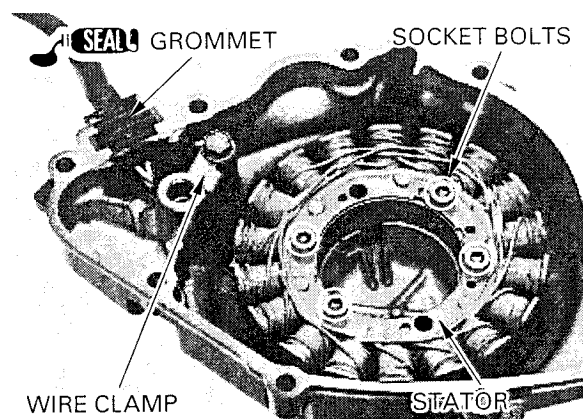

## FLYWHEEL REMOVAL

Remove the alternator cover (page 10-2).

Remove the starter idle gear shaft and idle gear.

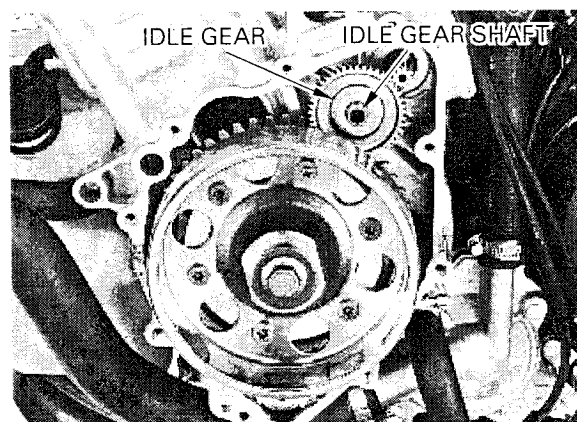

## ALTERNATOR/STARTER CLUTCH


Hold the flywheel using the flywheel holder, then remove the flywheel bolt.

**TOOL:**

**Flywheel holder**

07725-0040000  
(Equivalent commercially available in U.S.A.)

Remove the washer.

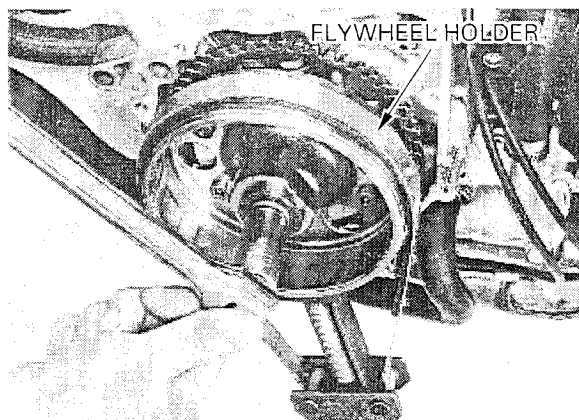


Remove the flywheel using the special tool.


**TOOL:**

**Rotor puller**


07733-0020001 or  
07933-3950000

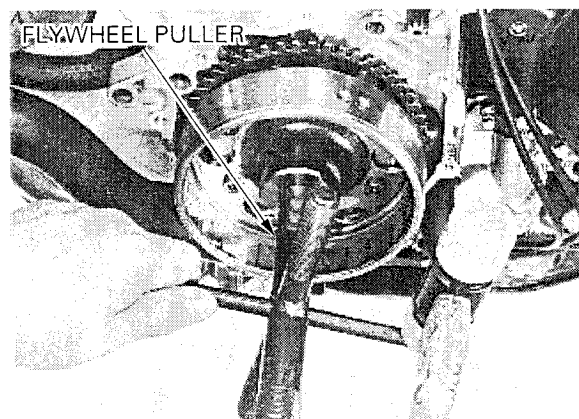

Remove the woodruff key.

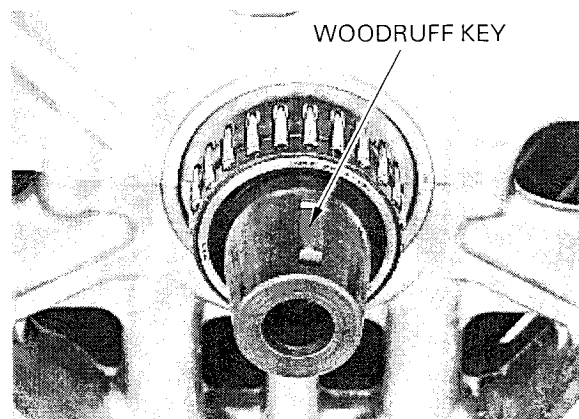

Check the starter idle gear and shaft for wear or damage.

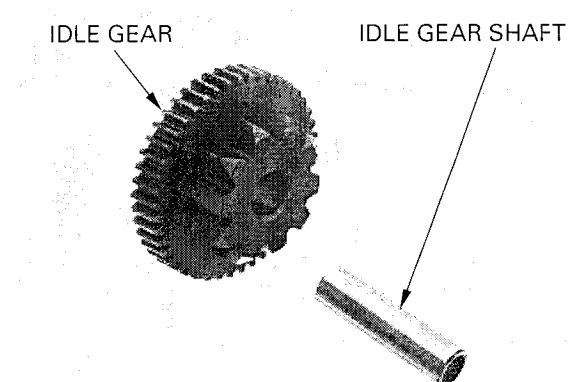

## STARTER CLUTCH

### INSPECTION

Check the operation of the one-way clutch by turning the driven gear.

You should be able to turn the driven gear counter-clockwise smoothly, but the gear should not turn clockwise.

### DISASSEMBLY



Remove the starter driven gear by turning it counter-clockwise.

Hold the flywheel with a flywheel holder, and remove the starter clutch mounting torx bolts.

#### TOOL:

Flywheel holder 07725-0040000


Remove the starter one-way clutch assembly.

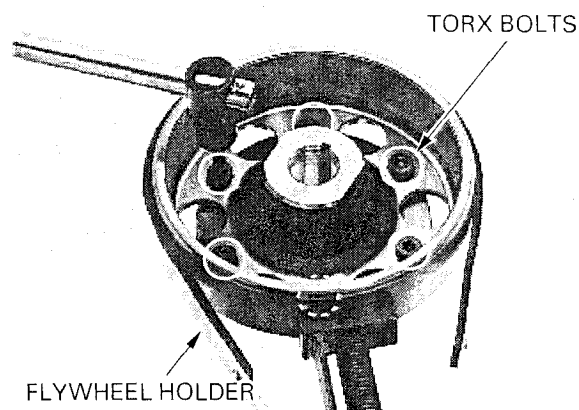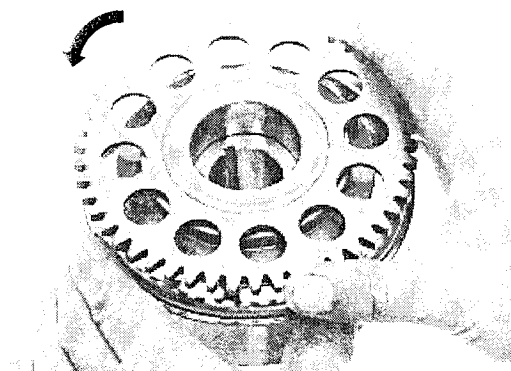


Check the starter driven gear for abnormal wear or damage.

Measure the starter driven gear boss O.D.

**SERVICE LIMIT:** 51.684 mm (2.0348 in)

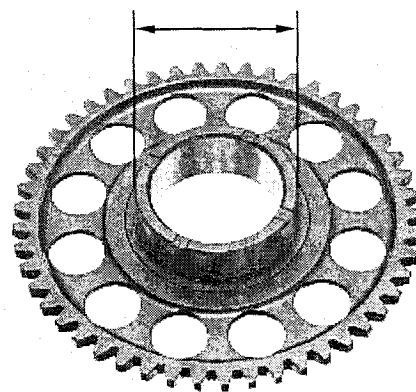


Check the one-way clutch for wear or damage and replace if necessary.

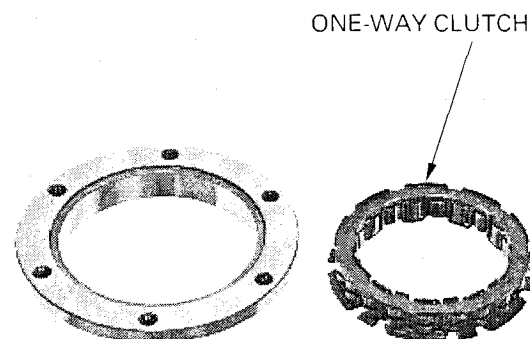


## ALTERNATOR/STARTER CLUTCH


### ASSEMBLY

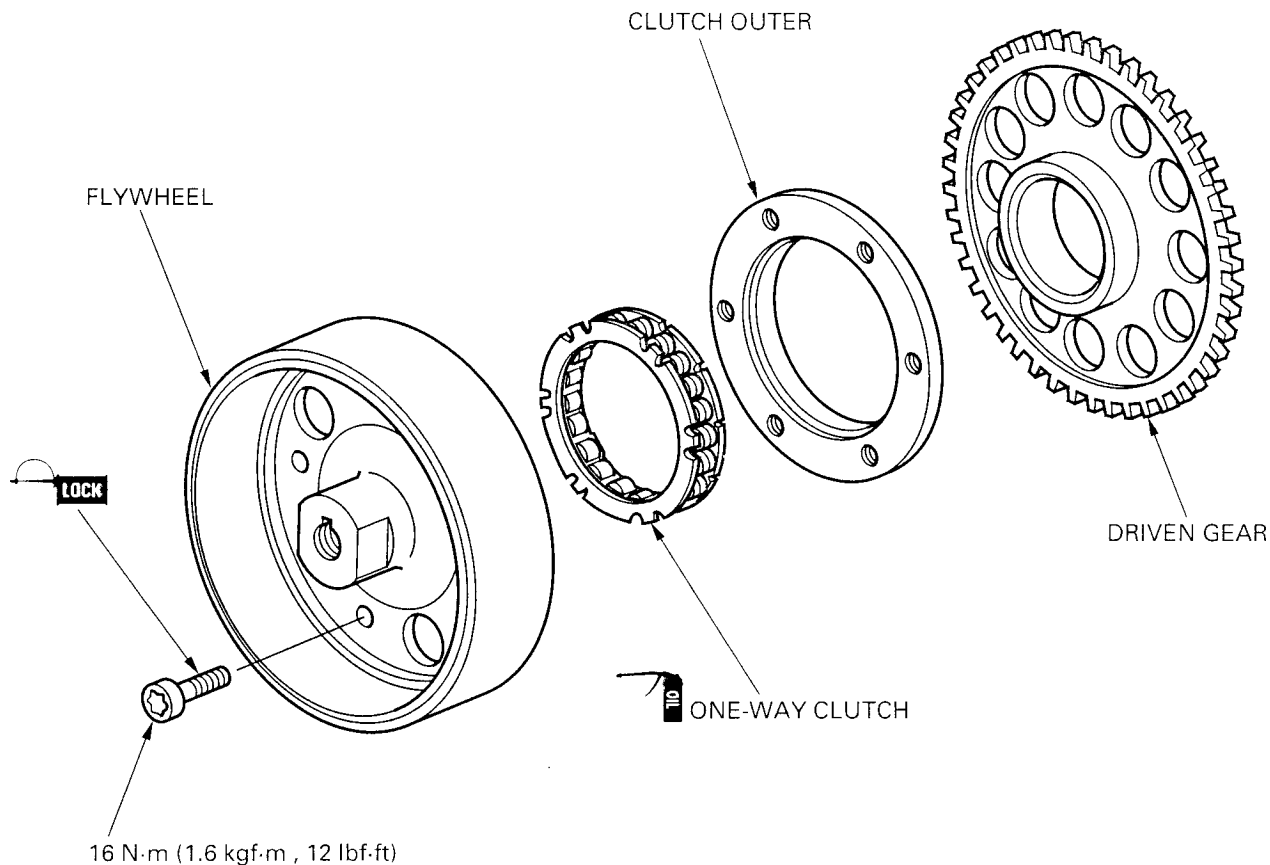

Apply oil to the starter one-way clutch.  
Install the one-way clutch into the clutch outer with the flange side facing out.

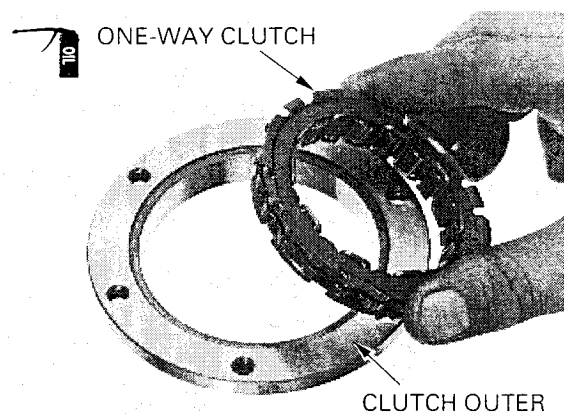

Install the starter one-way clutch assembly onto the flywheel.

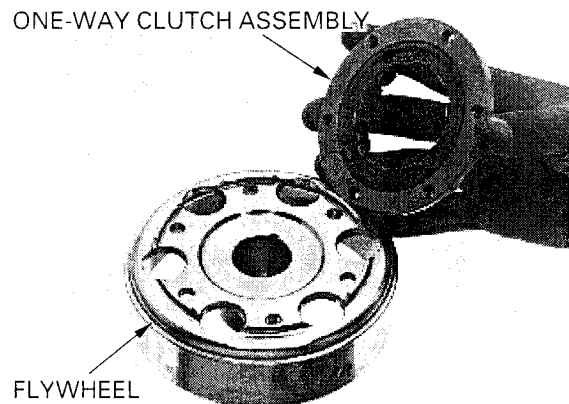




## ALTERNATOR/STARTER CLUTCH

Apply a locking agent to the starter clutch outer mounting bolt threads.  
Hold the flywheel with a flywheel holder, and tighten the starter clutch mounting torx bolts.

### TOOL:


**Flywheel holder** 07725-0040000  
(Equivalent commercially available in U.S.A.)

**TORQUE:** 16 N·m (1.6 kgf·m, 12 lbf·ft)

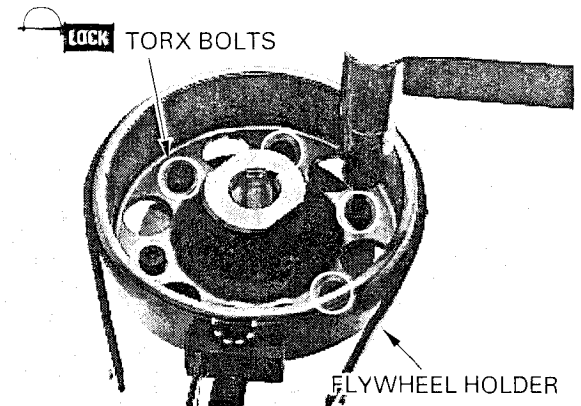


Install the starter driven gear into the one-way clutch.

Recheck the one-way clutch operation.  
You should be able to turn the driven gear counter-clockwise smoothly, but the gear should not turn clockwise.

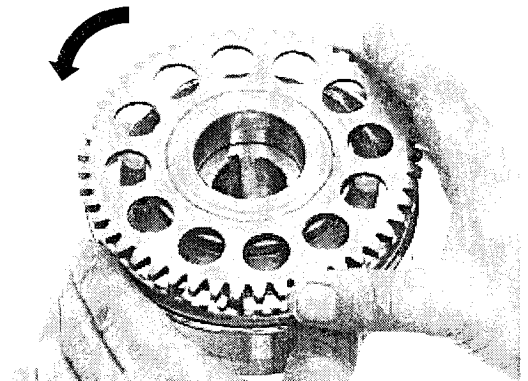


## FLYWHEEL INSTALLATION

Clean any oil from the crankshaft taper.  
Install the woodruff key on the crankshaft.

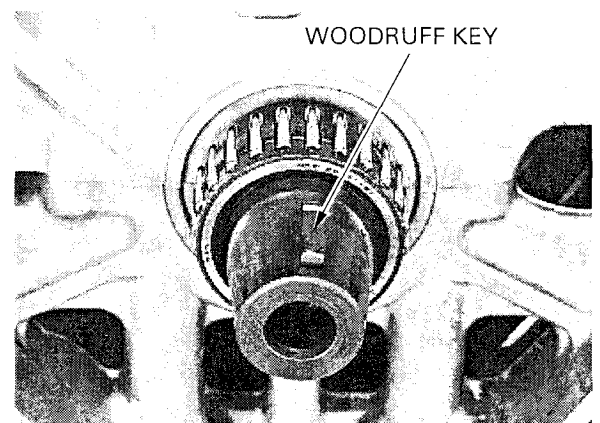

Install the flywheel aligning the key way in the flywheel with the woodruff key on the crankshaft.

Apply oil to the flywheel bolt threads and seating surface.  
Install the washer and flywheel bolt.

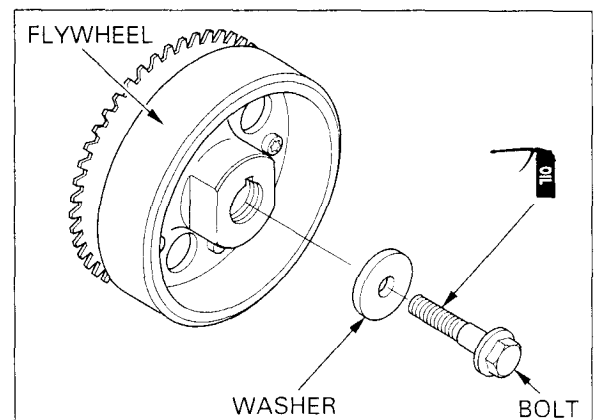




## ALTERNATOR/STARTER CLUTCH

Hold the flywheel using the flywheel holder, then tighten the bolt to the specified torque.


**TOOL:**

**Flywheel holder** 07725-0040000  
(Equivalent commercially available in U.S.A.)

**TORQUE:** 103 N·m (10.5 kgf·m , 76 lbf·ft)

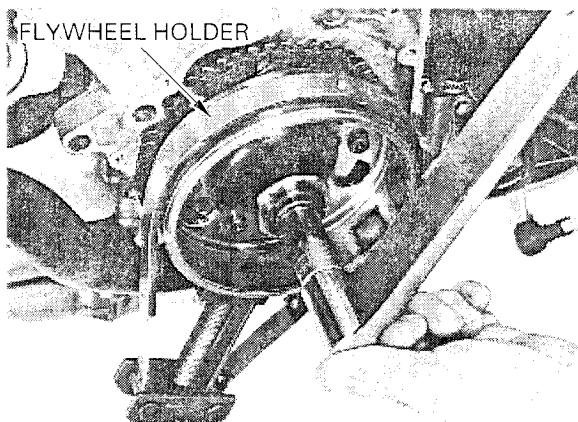


Apply molybdenum disulfide oil to the starter idle gear shaft.  
Apply oil to the starter idle gear.  
Install the starter idle gear and shaft onto the crankcase.

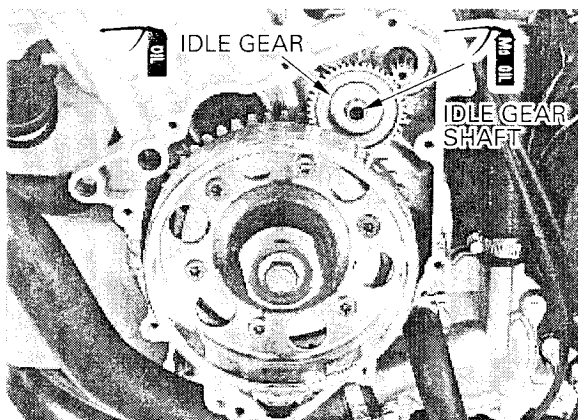


## ALTERNATOR COVER INSTALLATION

Apply sealant to the mating surface of the crankcase as shown.

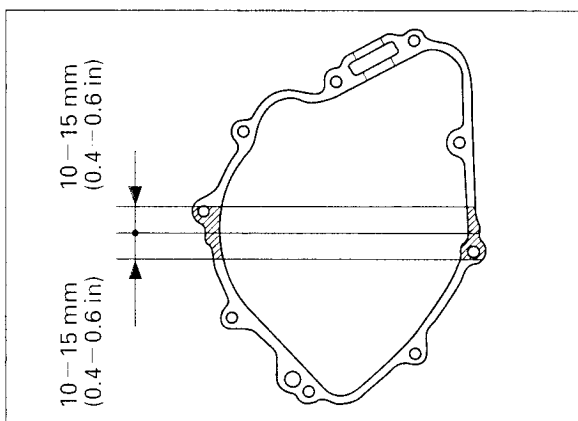

Install the dowel pin and new gasket.

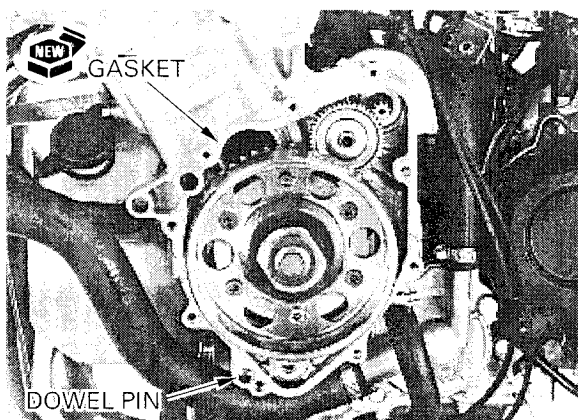


## ALTERNATOR/STARTER CLUTCH

*The alternator cover (stator) is magnetically attached to the flywheel, be careful during installation.*

Install the alternator cover.


Install and tighten the SH bolts to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

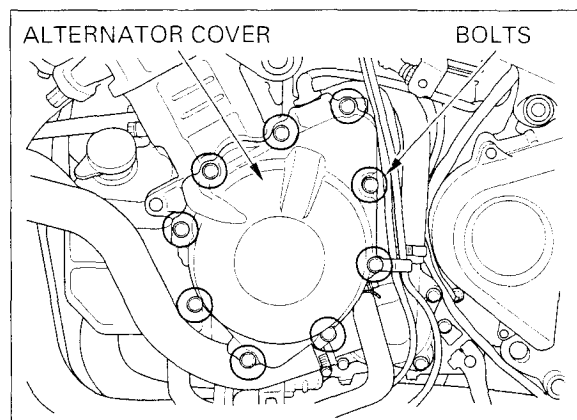

Connect the alternator 3P (White) connector.

Install the middle/lower cowl (page 2-7).  
Install the ECM cover and fuel tank rear bracket (page 5-89).

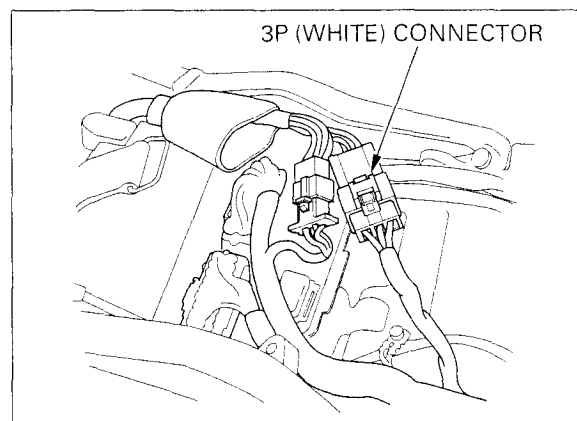

# 11. CRANKCASE/PISTON/CYLINDER

SERVICE INFORMATION	11-1	PISTON/CONNECTING ROD	11-4
TROUBLESHOOTING	11-2	CRANKCASE COMBINATION	11-12
CRANKCASE SEPARATION	11-3		

## SERVICE INFORMATION

### GENERAL

- This section covers crankcase separation for service of the crankshaft and piston.
- The following parts must be removed before separating the crankcase.
  - Alternator/flywheel (Section 10)
  - Clutch/gearshift linkage (Section 9)
  - Cylinder head/cam chain (Section 8)
  - Engine (Section 7)
  - Oil pump (Section 4)
  - Starter motor (Section 18)
  - Water pump (Section 6)
- Mark and store the disassemble parts to ensure that they are installed in their original locations.
- Mark and store the bearing inserts to be sure of their correct locations for reassembly. If the inserts are improperly installed, they will block the oil hole, causing insufficient lubrication and eventual engine seizure.
- The connecting rod bearing inserts are select fit and are identified by color codes. Select replacement bearings from the code tables. After installing new bearings, recheck them with plastigauge to verify clearance. Apply molybdenum disulfide oil to the crank pin during assembly.

11

### SPECIFICATIONS

Unit: mm (in)

ITEM			STANDARD	SERVICE LIMIT
Cylinder	I.D.		74.005 – 74.020 (2.9136 – 2.9142)	74.15 (2.919)
	Out of round		_____	0.10 (0.004)
	Taper		_____	0.10 (0.004)
	Warpage		_____	0.05 (0.002)
Piston, piston rings	Piston mark direction		“IN” mark facing toward the intake side	_____
	Piston O.D.		73.965 – 73.985 (2.9120 – 2.9128)	73.90 (2.909)
	Piston O.D. measurement point		13 mm (0.5 in) from bottom of skirt	_____
	Piston pin bore I.D.		17.002 – 17.008 (0.6694 – 0.6696)	17.03 (0.670)
	Piston pin O.D.		16.994 – 17.000 (0.6691 – 0.6693)	16.98 (0.669)
	Piston-to-piston pin clearance		0.002 – 0.014 (0.0001 – 0.0006)	_____
	Piston ring-to-ring groove clearance	Top	0.030 – 0.065 (0.0012 – 0.0026)	0.08 (0.003)
		Second	0.015 – 0.045 (0.0006 – 0.0018)	0.06 (0.002)
	Piston ring end gap	Top	0.28 – 0.38 (0.011 – 0.015)	0.5 (0.02)
		Second	0.40 – 0.55 (0.016 – 0.022)	0.7 (0.03)
Oil (side rail)		0.2 – 0.7 (0.01 – 0.03)	0.9 (0.04)	
Cylinder-to-piston clearance			0.020 – 0.055 (0.0008 – 0.0022)	_____
Connecting rod small end I.D.			17.016 – 17.034 (0.6699 – 0.6706)	17.04 (0.671)
Connecting rod-to-piston pin clearance			0.016 – 0.040 (0.0006 – 0.0016)	_____
Crankpin oil clearance			0.030 – 0.052 (0.0012 – 0.0020)	0.062 (0.0024)

## CRANKCASE/PISTON/CYLINDER

---

### TORQUE VALUES

Mainshaft bearing set plate bolt	12 N·m (1.2 kgf·m , 9 lbf·ft)	Apply a locking agent to the threads
Crankcase bolt, 10 mm	39 N·m (4.0 kgf·m , 29 lbf·ft)	
9 mm (main journal bolt)	35 N·m (3.6 kgf·m , 26 lbf·ft)	Apply oil to the threads
8 mm	24 N·m (2.4 kgf·m , 17 lbf·ft)	
Connecting rod nut	35 N·m (3.6 kgf·m , 26 lbf·ft)	Apply oil to the threads
Upper crankcase sealing bolt	22 N·m (2.2 kgf·m , 16 lbf·ft)	Apply a locking agent to the threads
Lower crankcase sealing bolt, 20 mm	30 N·m (3.1 kgf·m , 22 lbf·ft)	Apply a locking agent to the threads
10 mm	12 N·m (1.2 kgf·m , 9 lbf·ft)	Apply a locking agent to the threads

### TROUBLESHOOTING

#### Cylinder compression is too low, or engine is hard to start

- Blown cylinder head gasket
- Worn, stuck or broken piston ring
- Worn or damaged cylinder or piston
- Bent valve, or bent and deteriorated valve seat

#### Cylinder compression is too high, or engine overheats or knocks

- Carbon deposits on the cylinder head and/or piston crown

#### Piston sounds

- Worn cylinder, piston and/or piston ring
- Worn piston pin hole and piston pin
- Worn connecting rod small end

#### Excessive smoke

- Worn, stuck or broken piston ring
- Worn valve stem seal

#### Excessive noise

- Worn connecting rod big end bearing
- Bent connecting rod
- Worn crankshaft main journal bearing
- Worn transmission bearing


#### Engine vibration

- Excessive crankshaft runout


## CRANKCASE SEPARATION

Refer to Service Information (page 11-1) for removal of necessary parts before separating the crankcase.

Remove the mainshaft bearing set plate bolts and plate.

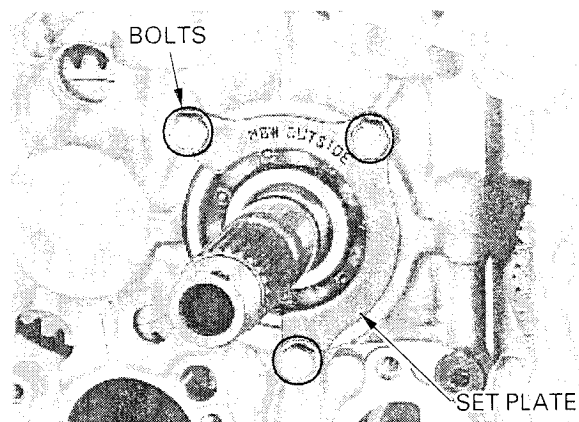


Remove the upper crankcase 6 mm bolts, 8 mm bolts and sealing washers.

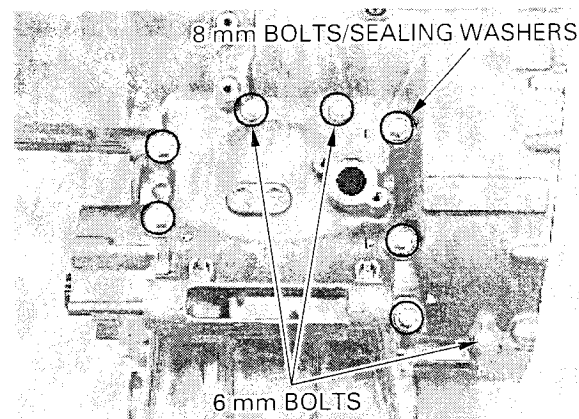


Remove the lower crankcase 6 mm bolts (ten), 8 mm bolts (seven) and 10 mm bolt. Loosen the ten lower crankcase 9 mm bolts in a crisscross pattern in 2-3 steps, then remove the bolts and sealing washers.

Separate the lower crankcase from the upper crankcase.

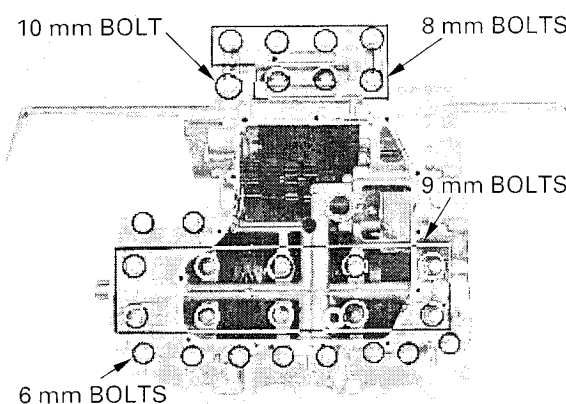

Remove the swingarm pivot collars, dowel pins and oil orifices.

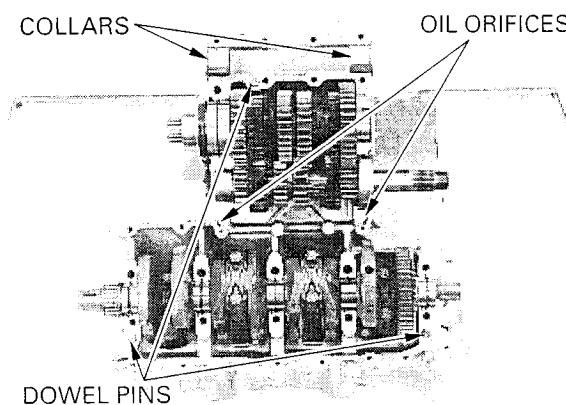



## CRANKCASE/PISTON/CYLINDER


### PISTON/CONNECTING ROD

Mark all parts during removal so they can be replaced in their original locations.

#### PISTON/CONNECTING ROD REMOVAL


##### NOTICE

*Do not interchange the bearing inserts. They must be installed in their original locations or the correct bearing oil clearance may not be obtained, resulting in engine damage.*

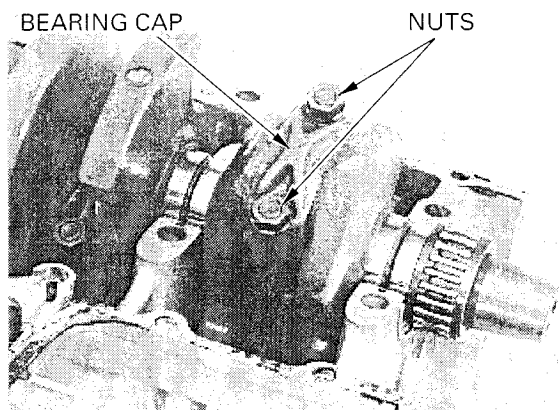


Remove the nuts and connecting rod bearing cap.

Remove the piston/connecting rod assembly from the top of the cylinder.

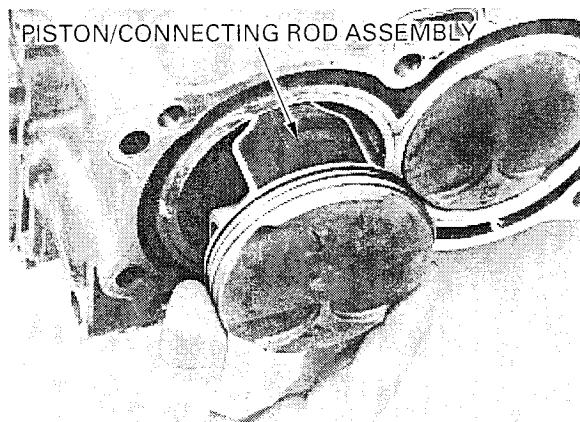

#### PISTON REMOVAL


Remove the piston pin clip with pliers. Press the piston pin out of the piston and remove the piston from the connecting rod.

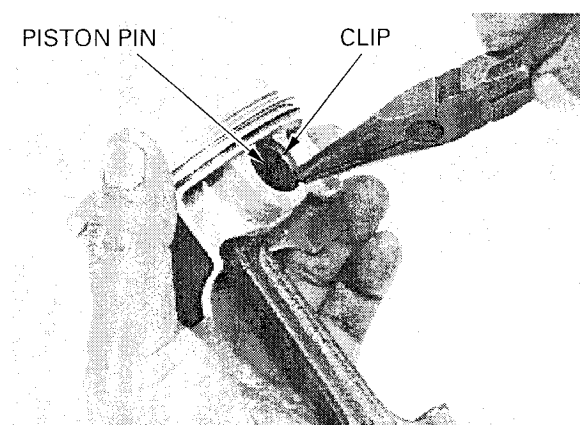


#### PISTON DISASSEMBLY

*Do not damage the piston rings during removal.*

Remove the piston rings.

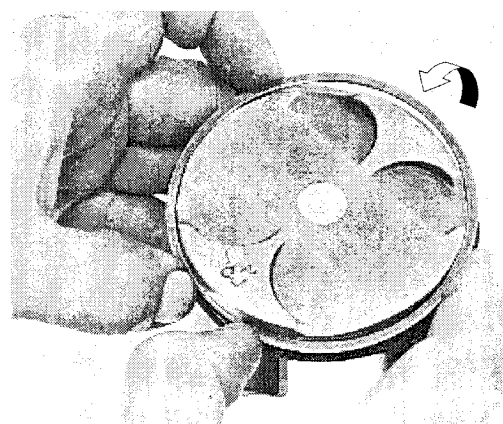

Remove any carbon deposits from the piston ring grooves, using an old piston ring as shown.

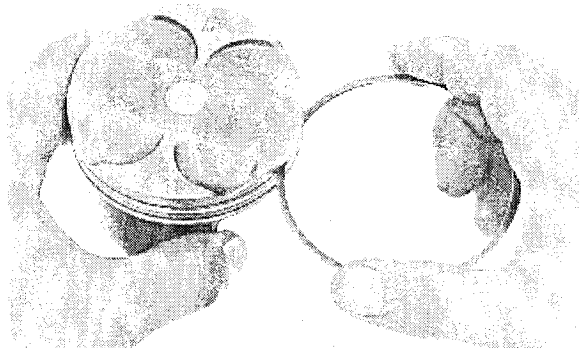

## PISTON INSPECTION

Temporarily install the piston rings to their proper position with the mark facing up.


Measure the piston ring-to-ring groove clearance with the rings pushed into the grooves.

### SERVICE LIMITS:

**Top:** 0.08 mm (0.003 in)

**Second:** 0.06 mm (0.002 in)

Inspect the piston for wear or damage.

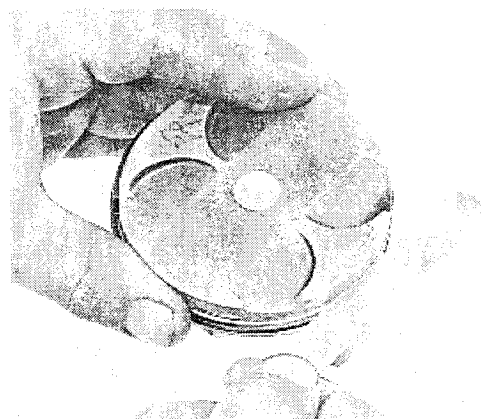

*Push the rings into the cylinder with the top of the piston to be sure they are squarely in the cylinder.*


Insert the piston ring squarely into the bottom of the cylinder and measure the ring end gap.

### SERVICE LIMITS:

**Top:** 0.5 mm (0.02 in)


**Second:** 0.7 mm (0.03 in)

**Oil (side rail):** 0.9 mm (0.04 in)

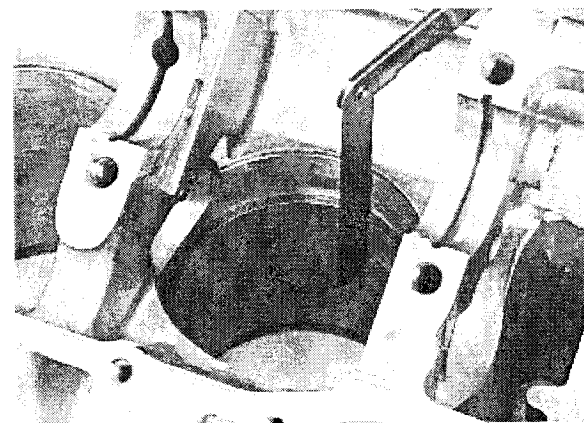

Measure the diameter of the piston at 13 mm (0.5 in) from the bottom and 90 degrees to the piston pin hole.


**SERVICE LIMIT:** 73.90 mm (2.909 in)

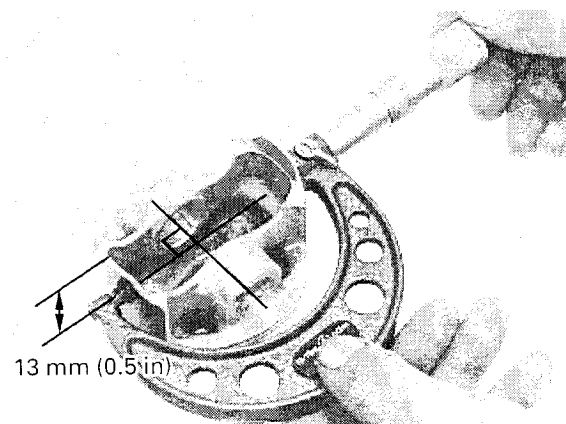

## CRANKCASE/PISTON/CYLINDER

Measure the piston pin bore.

**SERVICE LIMIT:** 17.03 mm (0.670 in)

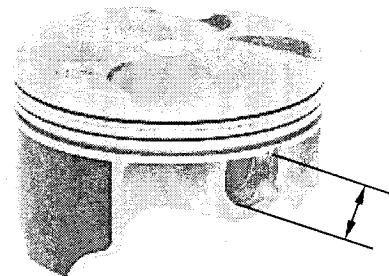


Measure the O.D. of the piston pin.

**SERVICE LIMIT:** 16.98 mm (0.669 in)

Calculate the piston-to-piston pin clearance.


**STANDARD:** 0.002 – 0.014 mm (0.0001 – 0.0006 in)

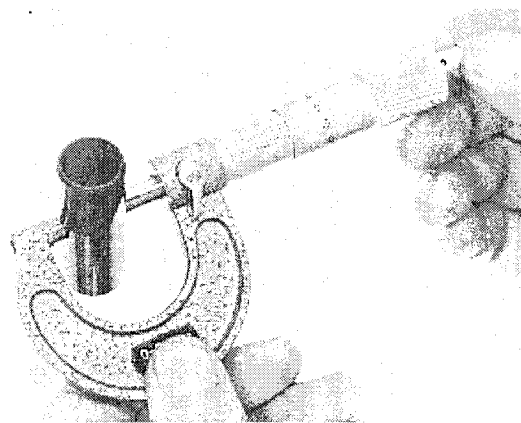

### CYLINDER INSPECTION

Inspect the top of the cylinder for warpage.

**SERVICE LIMIT:** 0.05 mm (0.002 in)

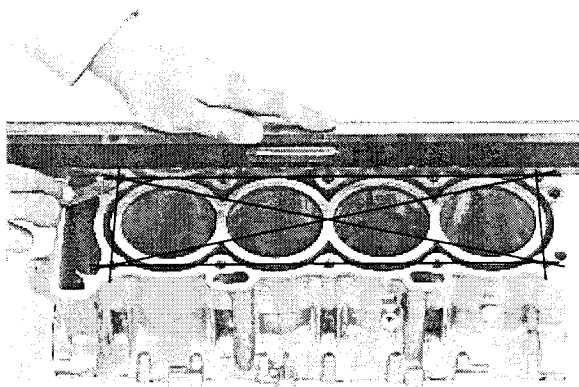


Inspect the cylinder bore for wear or damage.  
Measure the cylinder I.D. in X and Y axis at three levels.  
Take the maximum reading to determine the cylinder wear.

**SERVICE LIMIT:** 74.15 mm (2.919 in)

Calculate the piston-to-cylinder clearance.  
Take a maximum reading to determine the clearance.  
Refer to page 11-5 for measurement of the piston O.D.

**STANDARD:**

0.020 – 0.055 mm (0.0008 – 0.0022 in)

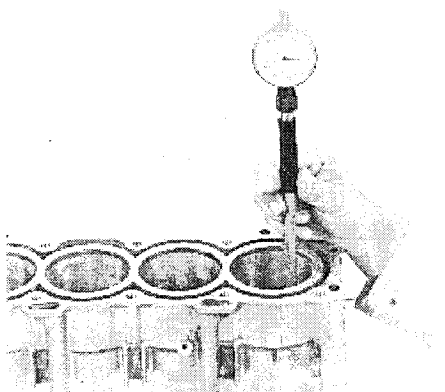



Calculate the taper and out of round at three levels in X and Y axis, Take the maximum reading to determine them.

**SERVICE LIMITS:**

**Taper:** 0.10 mm (0.004 in)


**Out of round:** 0.10 mm (0.004 in)

The cylinder must be rebored and an oversize piston fitted if the service limits are exceeded.

The following oversize pistons are available:

0.25 mm (0.010 in)


The piston to cylinder clearance for the oversize piston must be: 0.015 – 0.050 mm (0.0006 – 0.0020 in).

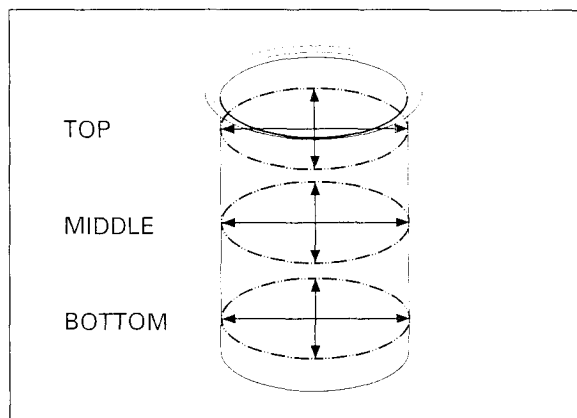

**CONNECTING ROD INSPECTION**

Measure the connecting rod small end I.D.

**SERVICE LIMIT:** 17.04 mm (0.671 in)

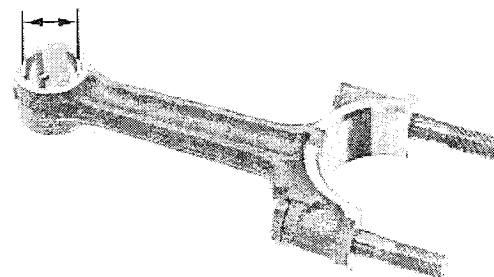


Temporarily install the connecting rod to the crankshaft.

Install the bearing inserts and bearing cap, and tighten the bolts.

Measure the connecting rod side clearance.


**SERVICE LIMIT:** 0.30 mm (0.012 in)

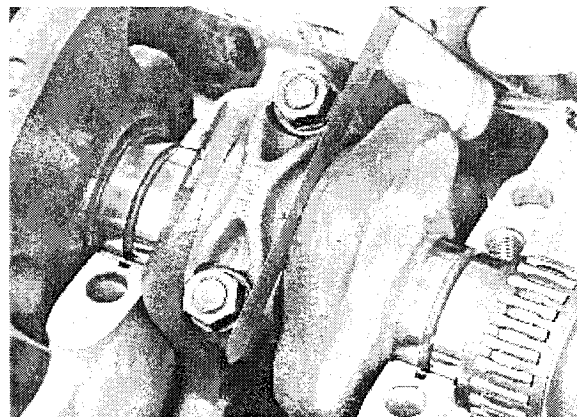

**CRANKPIN BEARING INSPECTION**

Wipe all oil from the bearing inserts and crankpins. Put a piece of plastigauge on each crankpin.


- Do not put the plastigauge over the oil hole in the crankpin.
- Do not rotate the crankshaft during inspection.

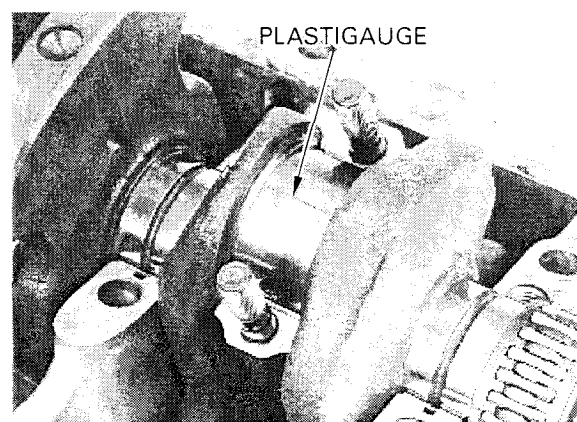

## CRANKCASE/PISTON/CYLINDER

Install the bearing caps and connecting rods on a correct crankpins, and tighten the cap nuts to the specified torque.


**TORQUE:** 35 N·m (3.6 kgf·m , 26 lbf·ft)

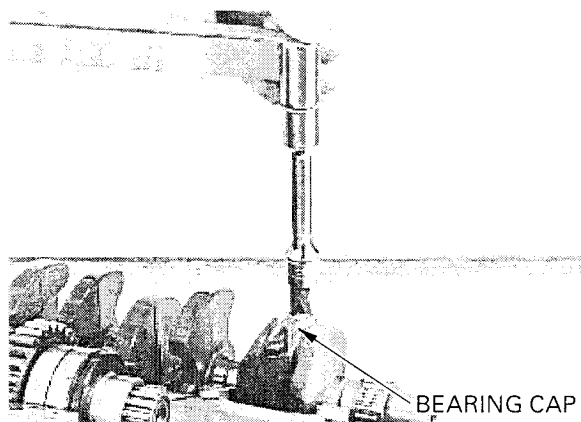

Remove the connecting rod caps and measure the compressed plastigauge on each crankpin.


**SERVICE LIMIT:** 0.062 mm (0.0024 in)

If the connecting rod bearing clearance is beyond tolerance, select replacement bearing.

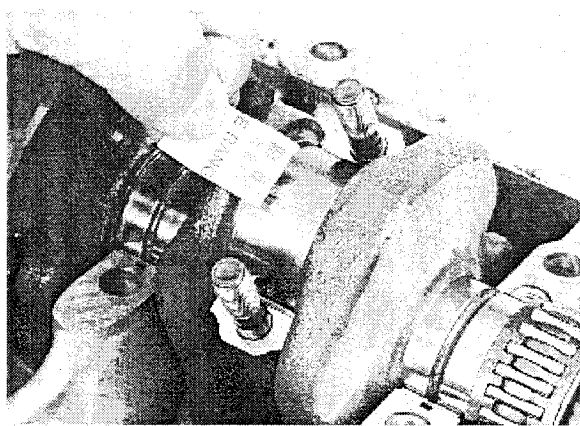

## CRANKPIN BEARING SELECTION

Record the connecting rod I.D. code number (1 or 2) or measure the I.D. with the bearing cap installed without bearing inserts.

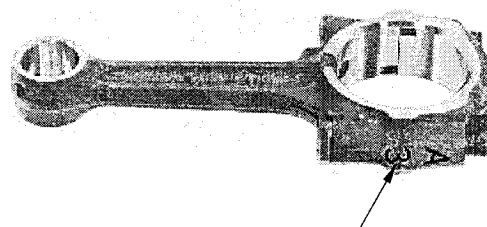


CONNECTING ROD I.D. CODE

Numbers (A or B) on the crank weight are the codes for the crankpin O.D.s starting from the left.

If you are replacing the crankshaft, record the corresponding crankpin O.D. code number (A or B).

If you are reusing the crankshaft, measure the crankpin O.D. with the micrometer.

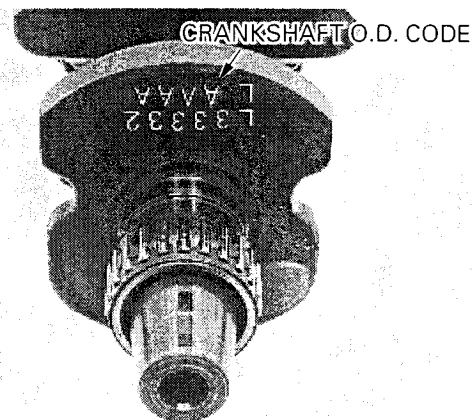




**CRANKCASE/PISTON/CYLINDER**

Cross-reference the crankpin and rod codes to determine the replacement bearing color.

**BEARING THICKNESS:**

A (Blue): Thick  
 B (Black):  
 C (Brown):  
 D (Green):  
 E (Yellow): Thin

IDENTIFICATION COLLAR

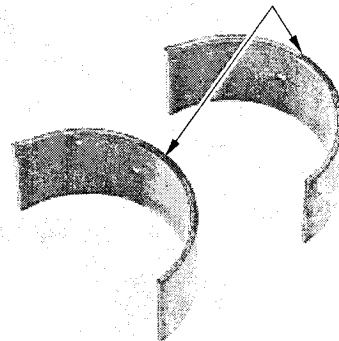
**CRANKPIN BEARING SELECTION TABLE**

Unit: mm (in)

			CONNECTING ROD I.D. CODE		
			1	2	3
			39.000 – 39.006 (1.5354 – 1.5357)	39.006 – 39.012 (1.5357 – 1.5359)	39.012 – 39.018 (1.5359 – 1.5361)
CRANK PIN O.D. CODE	A	35.997 – 36.003 (1.4172 – 1.4174)	E (Yellow)	D (Green)	C (Brown)
	B	35.991 – 35.997 (1.4170 – 1.4172)	D (Green)	C (Brown)	B (Black)
	C	35.985 – 35.991 (1.4167 – 1.4170)	C (Brown)	B (Black)	A (Blue)

Align the oil hole between the connecting rod and bearing, and also align the bearing tabs with the groove in the connecting rod and bearing cap.

Install the bearing inserts into the connecting rod and bearing cap.

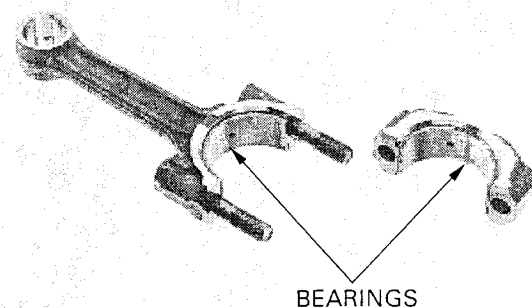

## CRANKCASE/PISTON/CYLINDER


### PISTON ASSEMBLY

Clean the piston ring grooves thoroughly and install the piston rings.

- Apply oil to the piston rings.
- Avoid piston and piston ring damage during installation.
- Install the piston rings with the marking (R) facing up.
- Do not mix the top and second rings; the top ring is narrower than the second ring in width.

Space the piston ring end gaps 120 degrees apart. Do not align the gaps in the oil rings (side rails).


After installation, the rings should rotate freely in the ring grooves.

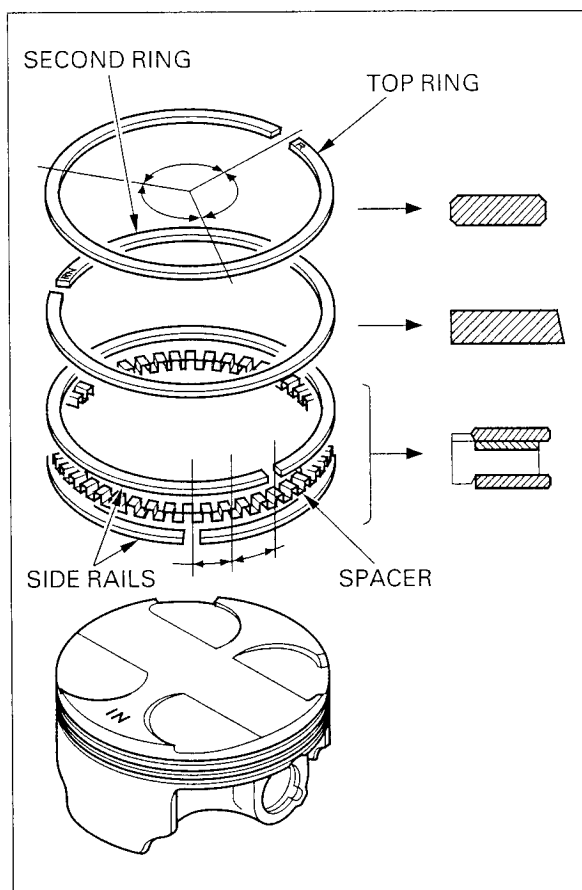

### PISTON INSTALLATION


*Install the connecting rod with its oil hole side facing the "IN" mark on the piston crown.*

Assemble the piston and connecting rod.

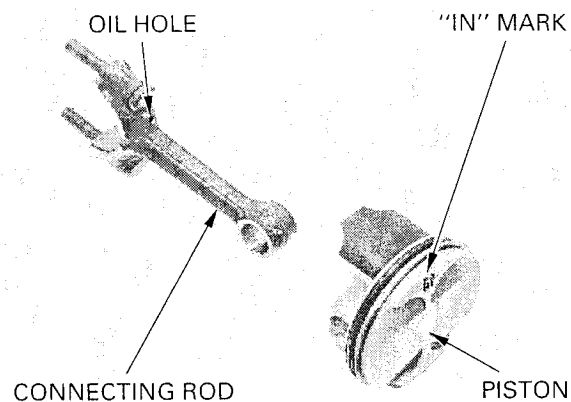

*Do not align the piston pin clips end gap with the piston cut-out.*

Apply molybdenum disulfide oil to the piston pin outer surface. Install the piston pin, and secure it using a new piston pin clips.

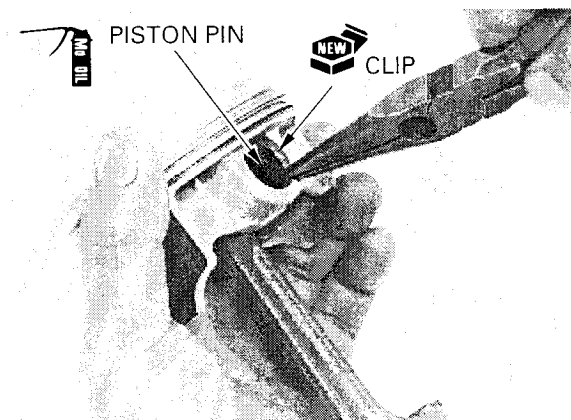

## CRANKCASE/PISTON/CYLINDER


Apply oil to the cylinder sleeves and piston rings.

*Install the piston/  
connecting rod  
assembly with the  
piston "IN" mark  
facing to the  
intake side.*

Install the piston/connecting rod assembly into the cylinder using a commercially available piston ring compressor tool.

### NOTICE

- While installing the piston, be careful not to damage the top surface of the cylinder, especially around the cylinder bore.
- Be careful not to damage the cylinder sleeve and crankpin with the connecting rod bolt threads.

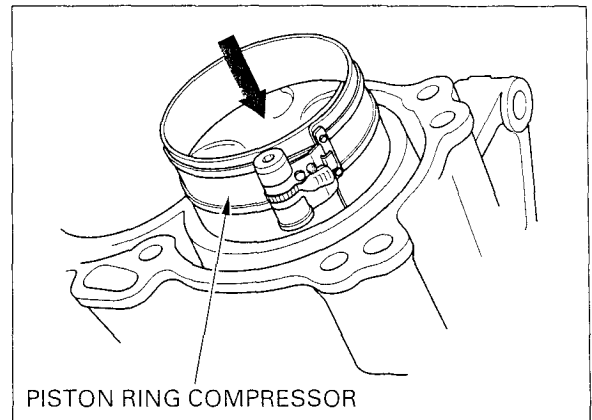


*Make sure ring  
compressor tool  
sits flush with top  
surface of the  
cylinder.*

Use the handle of a plastic hammer to tap the piston into the cylinder.


Apply molybdenum disulfide oil to the crankpin bearing surfaces.  
Install the bearing cap.  
Insure that the marks on the caps are aligned with the marks on the connecting rods.

Apply oil to the connecting rod nut threads and seating surfaces.

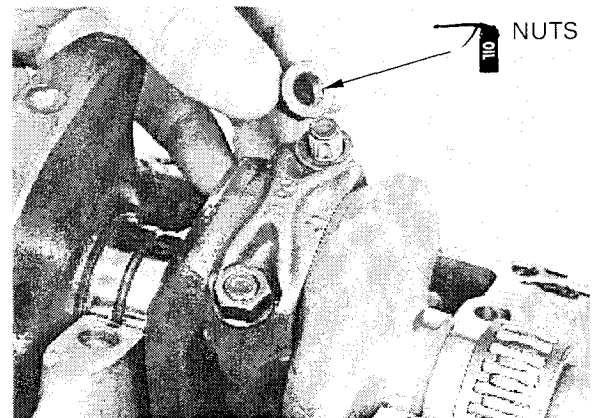

Install the connecting rod nuts and tighten the nuts gradually and alternately, then tighten them to the specified torque.


**TORQUE:** 35 N·m (3.6 kgf·m , 26 lbf·ft)

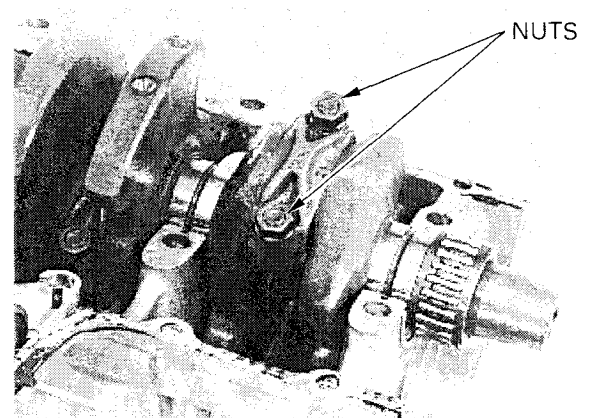

## CRANKCASE/PISTON/CYLINDER


### CRANKCASE COMBINATION

Apply a light, but thorough, coating of liquid sealant to the crankcase mating surface except to the main bearing journal bolt (lower crankcase bolt, 9 mm ) area and the oil passage area as shown.

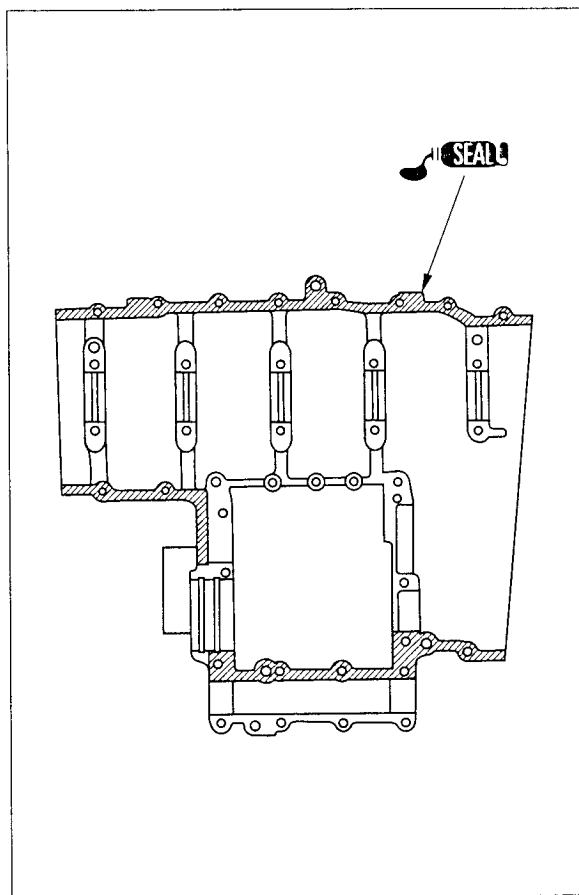


Install the three dowel pins.  
Install oil orifices by aligning their cut-out with the groove in the upper crankcase.

Install the swingarm pivot collars.

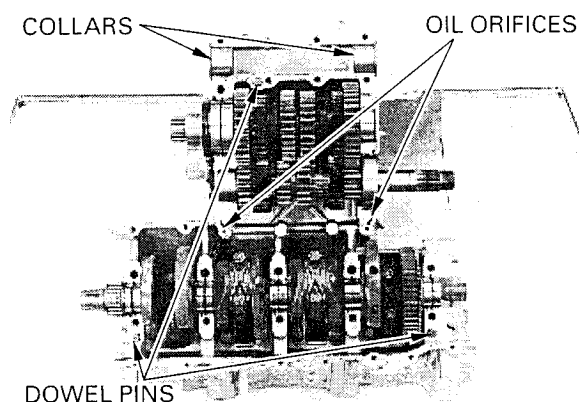

Install the lower crankcase onto the upper crankcase.  
Clean the new crankcase 9 mm bolts thoroughly with solvent and blow them dry.  
Apply clean engine oil to the 9 mm bolt threads and seating surface and install them.

Loosely install all the lower crankcase bolts.  
Make sure the upper and lower crankcase are seated securely.  
Make sure the swingarm pivot collar flanges are seated the crankcase securely.

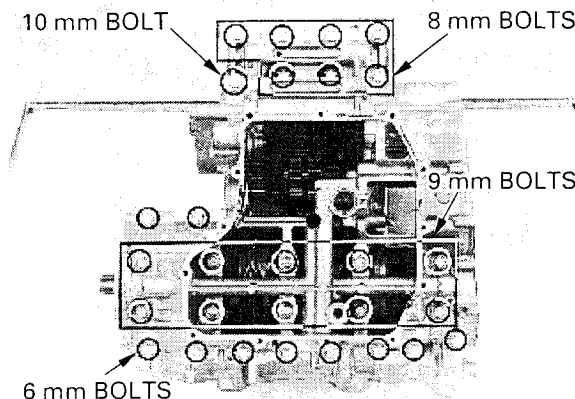

## CRANKCASE/PISTON/CYLINDER

*Tighten the 9 mm bolts in numerical order as shown in the illustration.*


From the inside to outside, tighten the lower crankcase 9 mm bolts in a crisscross pattern in 2-3 steps.

**TORQUE:** 35 N·m (3.6 kgf·m , 26 lbf·ft)

Tighten the 10 mm bolt, and then 8 mm bolts and 6 mm bolts.

**TORQUE:** 10 mm bolt: 39 N·m (4.0 kgf·m , 29 lbf·ft)

8 mm bolt: 24 N·m (2.4 kgf·m , 17 lbf·ft)

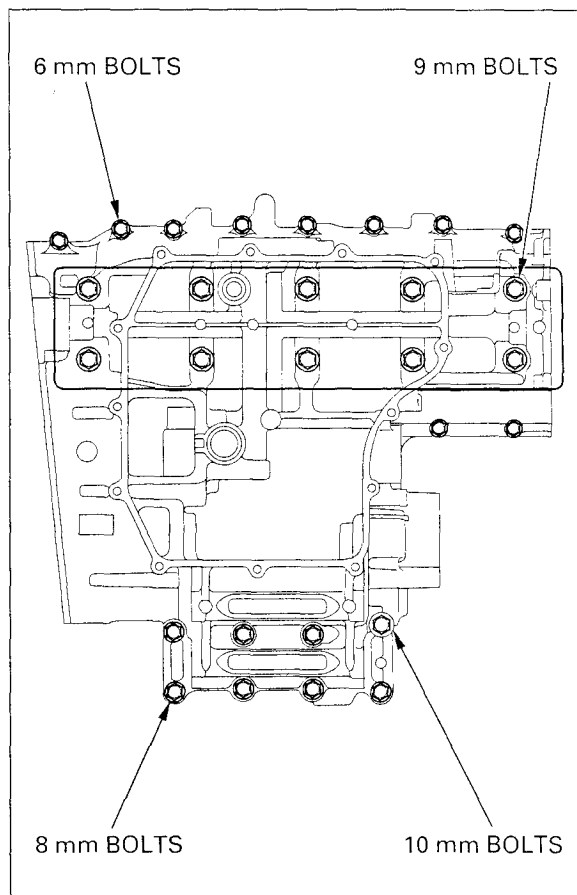


*The sealing washer locations are indicated on the upper crankcase using the "△" mark.*

Install the upper crankcase 8 mm bolts, sealing washers and 6 mm bolt.

Tighten the 8 mm bolts to the specified torque.

**TORQUE:** 24 N·m (2.4 kgf·m , 17 lbf·ft)

Tighten the 6 mm bolt.

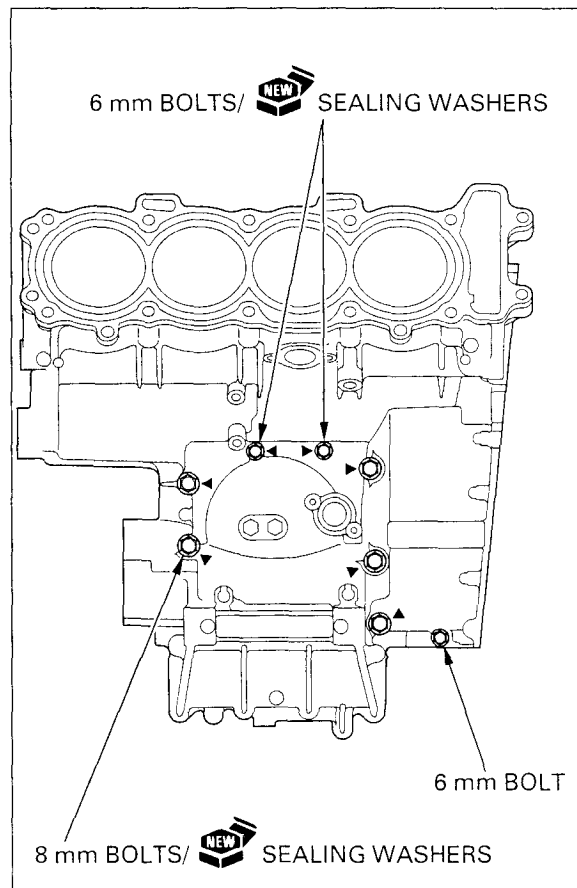




## CRANKCASE/PISTON/CYLINDER

---

Apply a locking agent to the mainshaft bearing set plate bolt threads.  
Install the mainshaft bearing set plate with its "OUTSIDE" mark facing out.  
Tighten the mounting bolts to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

Install the removed parts in the reverse order of removal.

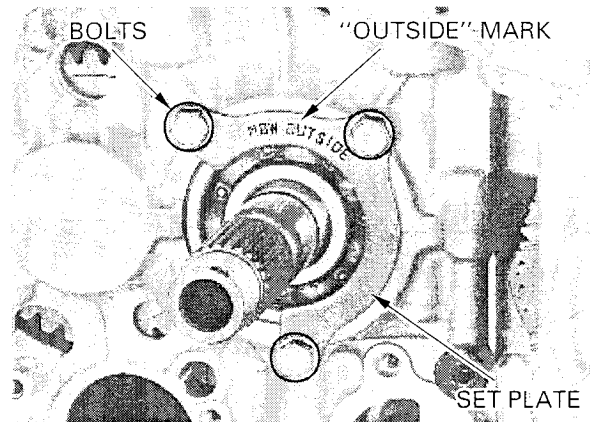

# 12. CRANKSHAFT/TRANSMISSION

SERVICE INFORMATION	12-1	CRANKSHAFT	12-3
TROUBLESHOOTING	12-2	TRANSMISSION	12-9

## SERVICE INFORMATION

### GENERAL

- The crankcase must be separated to service the crankshaft and transmission. Refer to section 11 for crankcase separation/assembly.
- Be careful not to damage the crankshaft main journal and journal bearing while removing or installing the crankshaft.
- Mark and store the disassembled parts to ensure that they are installed in their original locations.
- Mark and store the bearing inserts to ensure that the parts are in their correct locations during reassembly. If the inserts are improperly installed, they will block the oil hole, causing insufficient lubrication and eventual engine seizure.
- The main journal bearing inserts are a select fit and are identified by color codes. Select replacement bearings from the code tables. After installing new bearings, recheck them with a plastigauge to verify clearance. Apply molybdenum disulfide oil to the main journal during assembly.

### SPECIFICATIONS

Unit: mm (in)

ITEM			STANDARD	SERVICE LIMIT
Crankshaft	Side clearance		0.05 – 0.20 (0.002 – 0.008)	0.30 (0.012)
	Runout		—	0.30 (0.012)
	Main journal oil clearance	No. 1 and No. 5	0.017 – 0.035 (0.0007 – 0.0014)	0.045 (0.0018)
		No. 2 to No. 4	0.027 – 0.045 (0.0011 – 0.0018)	0.055 (0.0022)
Transmission	Gear I.D.	M5, M6	31.000 – 31.025 (1.2205 – 1.2215)	31.04 (1.222)
		C1	26.000 – 26.021 (1.0236 – 1.0244)	26.04 (1.025)
		C2, 3, 4	33.000 – 33.025 (1.2992 – 1.3002)	33.04 (1.301)
	Bushing O.D.	M5, M6	30.950 – 30.975 (1.2185 – 1.2195)	30.93 (1.218)
		C3	32.950 – 32.975 (1.2972 – 1.2982)	32.93 (1.296)
		C4	32.950 – 32.975 (1.2972 – 1.2982)	32.93 (1.296)
	Bushing I.D.	M5	27.985 – 28.006 (1.1018 – 1.1026)	28.02 (1.103)
		C2	29.985 – 30.006 (1.1805 – 1.1813)	30.02 (1.182)
	Gear-to-bushing clearance	M5, M6	0.025 – 0.075 (0.0010 – 0.0030)	0.11 (0.004)
		C3	0.025 – 0.075 (0.0010 – 0.0030)	0.11 (0.004)
	Mainshaft O.D.	M5	27.967 – 27.980 (1.1011 – 1.1016)	27.957 (1.1007)
		Clutch outer guide	24.980 – 24.993 (0.9835 – 0.9840)	24.96 (0.983)
	Countershaft O.D.	C2	29.967 – 29.980 (1.1798 – 1.1803)	29.96 (1.180)
	Bushing-to-shaft clearance	M5	0.005 – 0.039 (0.0002 – 0.0015)	0.08 (0.003)
		C2	0.005 – 0.039 (0.0002 – 0.0015)	0.08 (0.003)

12

## CRANKSHAFT/TRANSMISSION

---

### TORQUE VALUES

Connecting rod nut	35 N·m (3.6 kgf·m , 26 lbf·ft)	Apply oil to the threads and seating surface
Crankcase 9 mm bolt (main journal bolt)	35 N·m (3.6 kgf·m , 26 lbf·ft)	Apply oil to the threads and seating surface

### TOOLS

Driver, 40 mm I.D.	07746-0030100
Attachment, 30 mm	07746-0030300
Driver shaft	07964-MB00200

## TROUBLESHOOTING

### Excessive noise

- Worn connecting rod big end bearing
- Bent connecting rod
- Worn crankshaft main journal bearing
- Worn transmission bearing

### Hard to shift

- Improper clutch operation
- Incorrect transmission oil weight
- Incorrect clutch adjustment
- Bent shift fork
- Bent fork shaft
- Bent fork claw
- Damaged shift drum cam groove
- Bent shift spindle

### Transmission jumps out of gear

- Worn gear dogs and slots
- Bent fork shaft
- Broken shift drum stopper
- Worn or bent shift forks
- Broken shift linkage return spring

### Engine vibration


- Excessive crankshaft runout

## CRANKSHAFT

### REMOVAL


Separate the crankcase halves (page 11-3).

Remove the connecting rod bearing cap nuts and bearing caps.

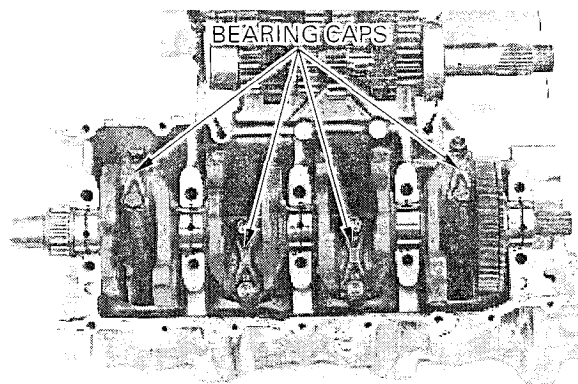


*Before removal, position all the pistons at TDC (Top Dead Center) to prevent damaging the crankpin with the connecting rod bolt threads.*

Remove the crankshaft.

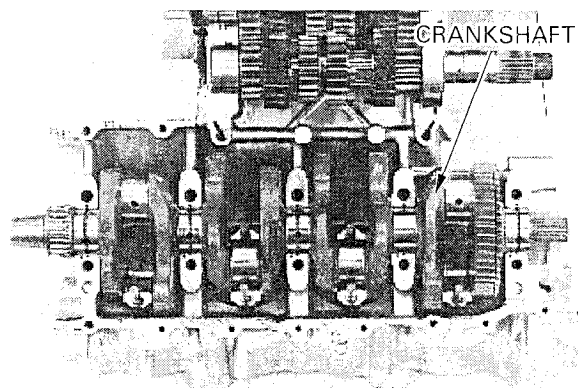


Remove the main journal bearings from both the crankcases.

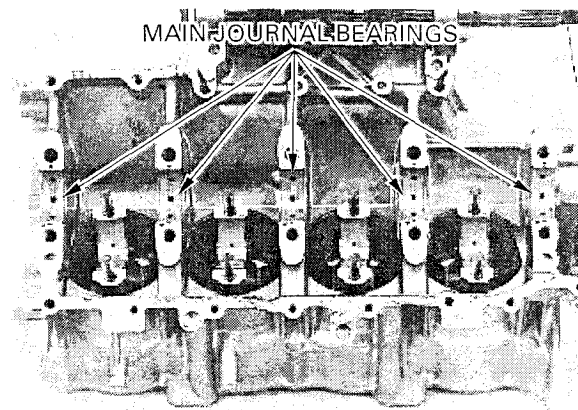


### PRIMARY DRIVE SUB-GEAR REMOVAL

Remove the special snap ring and friction spring.

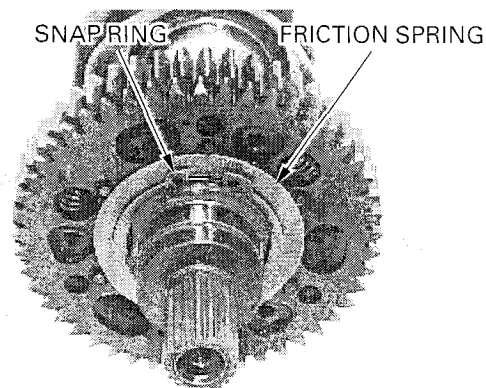

## CRANKSHAFT/TRANSMISSION


Remove the primary drive sub-gear and springs.

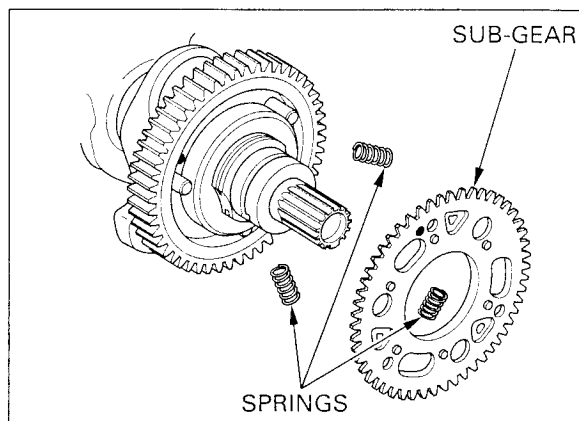


### PRIMARY DRIVE SUB-GEAR INSTALLATION

Install the springs into the primary drive gear as shown.

Install the primary drive sub-gear onto the primary drive gear, aligning the holes between the gear.

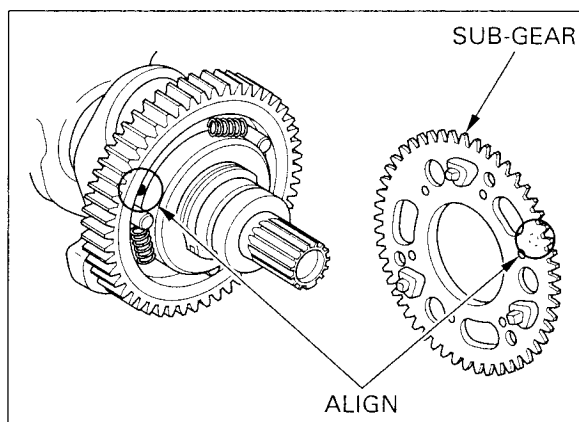


Apply molybdenum disulfide oil to the area shown in the illustration.

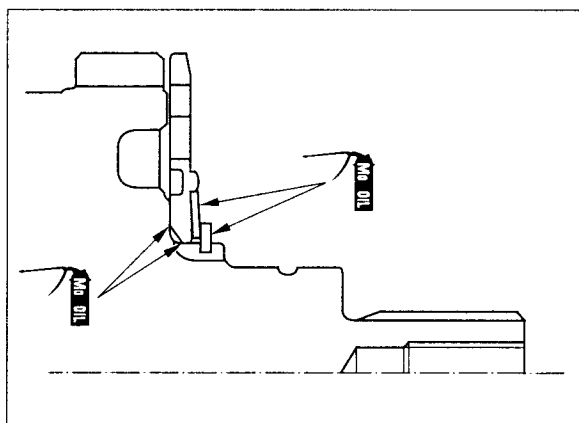

Install the friction spring and new special snap ring.


#### NOTICE

*You must use the new special snap ring. Using a snap ring other than specified or reusing the snap ring can cause severe engine damage.*

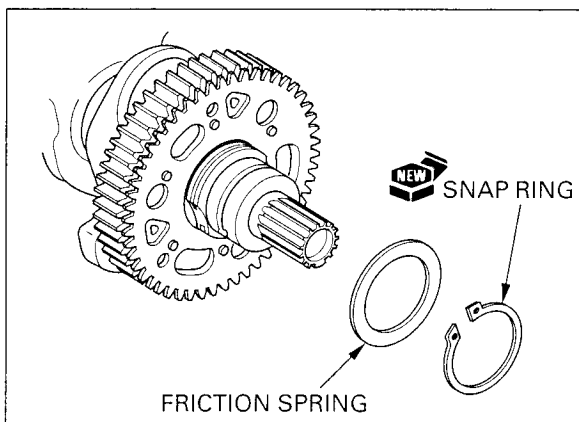




- Install the new special snap ring with its large tab facing to the right and the chamfered side facing in.
- Make sure the new special snap ring end gap is aligned with the right angle of the crankshaft cutouts as shown.

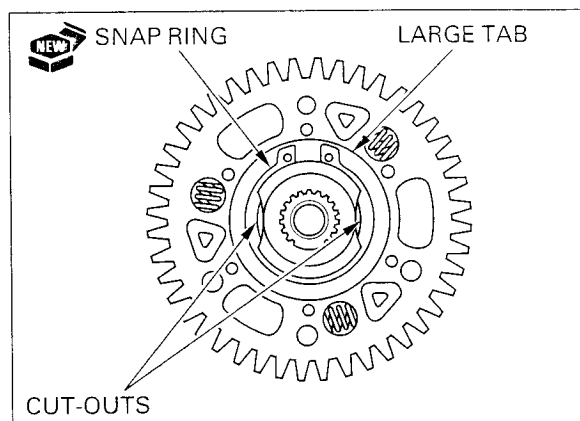

## STARTER CLUTCH NEEDLE BEARING REPLACEMENT

*To protect the crankshaft main journal from the bearing puller claws, cover the main journal properly; worn main journal bearings are usable as protectors.*

Remove the needle bearing with a commercially available universal bearing puller.

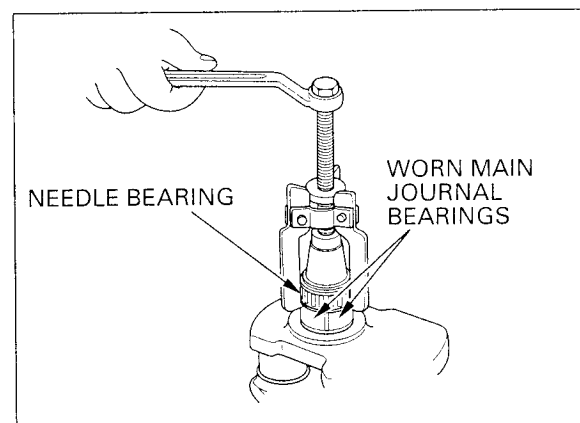


Press a new needle bearing onto the crankshaft using a hydraulic press and special tool.


### TOOL:

Driver shaft

07964-MB00200

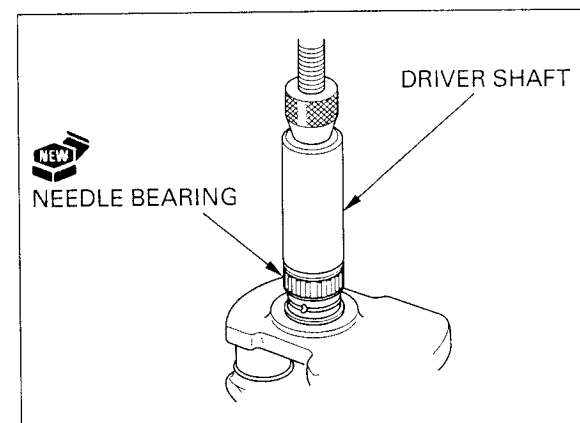

If the special tool is not available, prepare a suitable collar, washer and 10 mm flange bolt (example; flywheel bolt) for the bearing installation. Assemble the above items, and screw the bolt gradually, then install the new needle bearing.

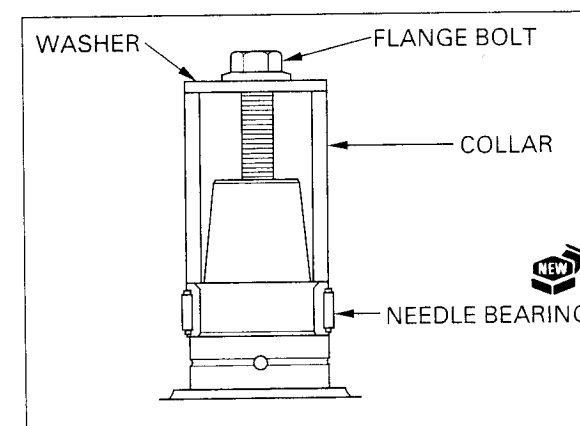

## CRANKSHAFT/TRANSMISSION

### INSPECTION


#### CRANKSHAFT RUNOUT

Hold the crankshaft both end.

Set a dial indicator on the center main journal of the crankshaft.


Rotate the crankshaft two revolutions and read runout at the center journal.

**SERVICE LIMIT:** 0.30 mm (0.012 in)

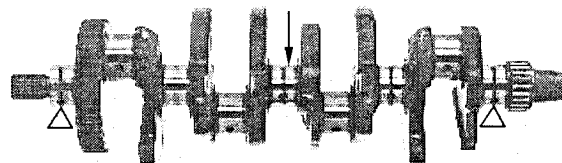

#### MAIN JOURNAL BEARING


Inspect the main journal bearing inserts for damage or separation.

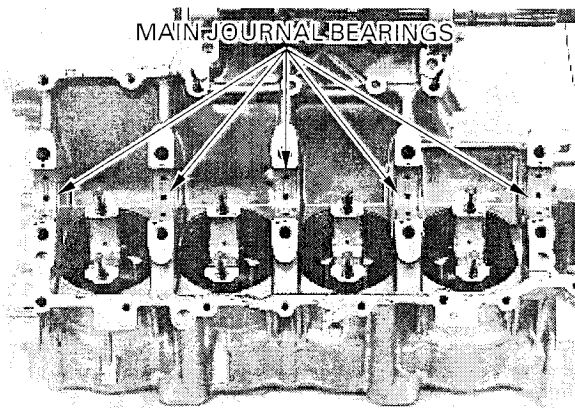

Wipe the oil from the bearing inserts and journals.  
Reinstall the upper crankcase's main journal bearing inserts, then carefully lower the crankshaft in place.

Put a piece of plastigauge on each journals.


- Do not put the plastigauge over the oil hole in the main bearing journal of the crankshaft.
- Do not rotate the crankshaft during inspection.

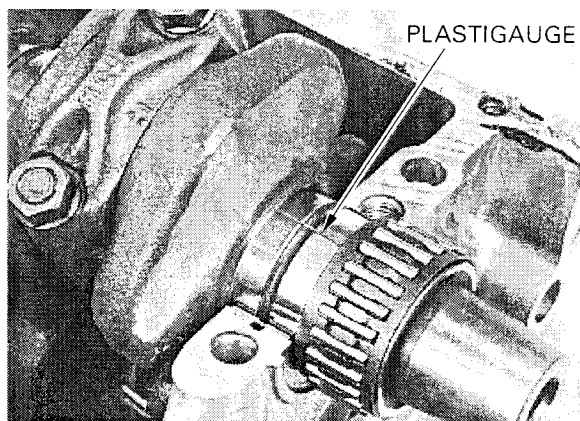

Assemble the crankcase halves.

Tighten the 9 mm bolts to the specified torque.


**TORQUE:** 35 N·m (3.6 kgf·m , 26 lbf·ft)

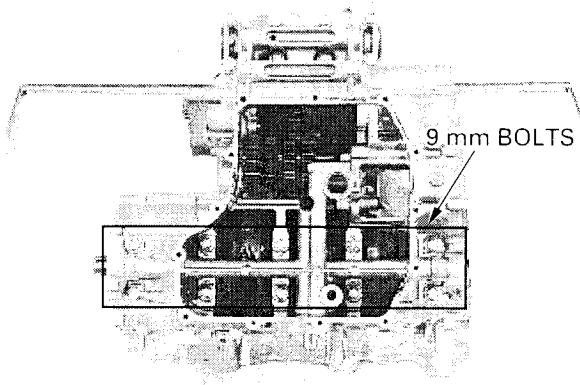

Remove the 9 mm bolts and lower crankcase.  
Measure the compressed plastigauge on each journal.

**SERVICE LIMIT:** 0.045 mm (0.0018 in)


If main bearing clearance is beyond tolerance, select a replacement bearing.

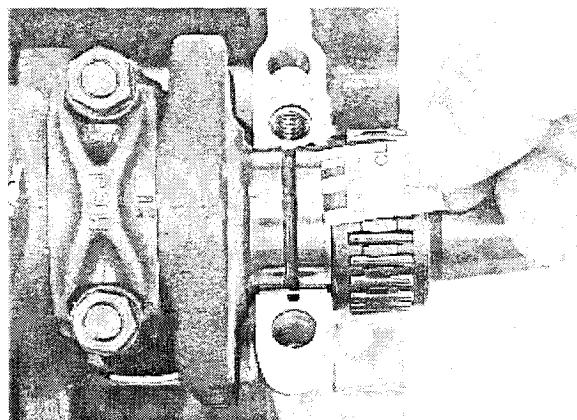

## MAIN JOURNAL BEARING SELECTION

*The letters (A, B or C) on the upper crankcase are the codes for the main journal I.D.s from left to right.*


Record the crankcase I.D. letters from the pad on the left side of the upper crankcase as shown.

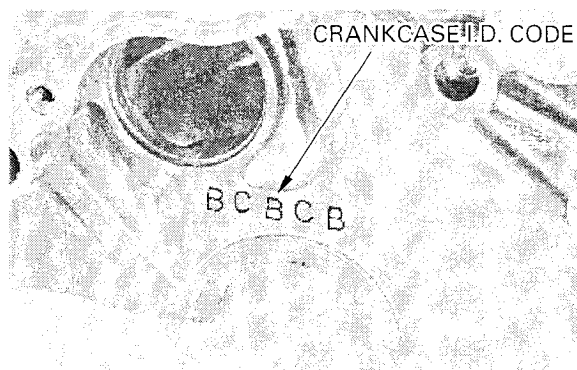

*The numbers (0, 1, 2 or 3) on the crank weight are the codes for the main journal O.D.s from left to right.*

Record the corresponding main journal O.D. code numbers from the crank weight.

Cross reference the case and journal codes to determine the replacement bearing color codes.

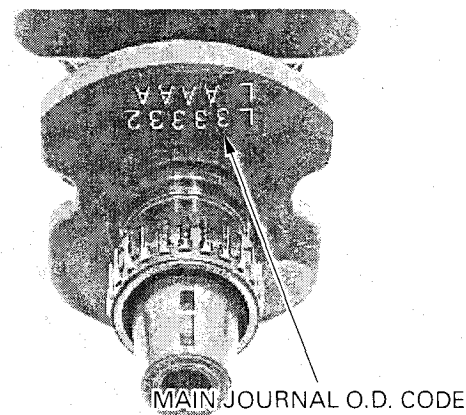


### BEARING THICKNESS:

B (Brown):	Thick
C (Green):	↑
D (Yellow):	
E (Pink):	↓
F (Red):	
G (White):	Thin

### NOTICE

*After selecting new bearings, recheck the clearance with a plastigauge. Incorrect clearance can cause severe engine damage.*

### IDENTIFICATION COLOR

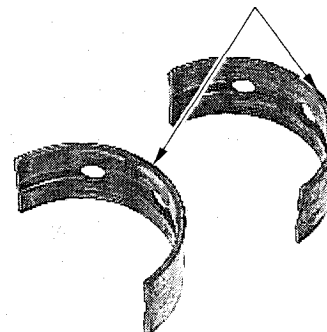

**CRANKSHAFT/TRANSMISSION****MAIN JOURNAL BEARING SELECTION TABLE**

Unit: mm (in)


		CRANKCASE I.D. CODE		
		A	B	C
MAIN JOURNAL O.D. CODE	0	G (White)	F (Red)	E (Pink)
	1	F (Red)	E (Pink)	D (Yellow)
	2	E (Pink)	D (Yellow)	C (Green)
	3	D (Yellow)	C (Green)	B (Brown)

**INSTALLATION**

*The bearing tabs should be aligned with the grooves in the case.*


Install the main journal bearings into the upper and lower crankcase.

Apply molybdenum disulfide oil to the upper and lower main journal bearings.

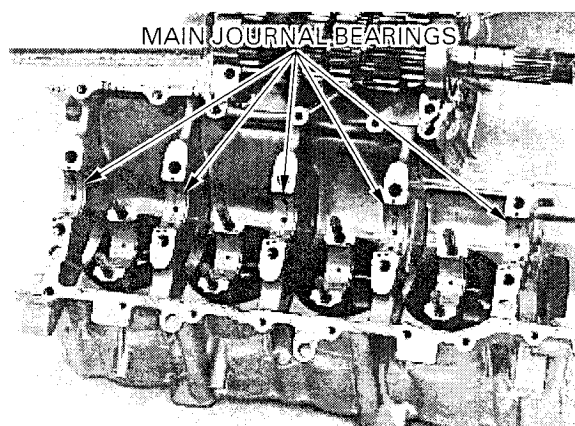

*Before installation, position all the pistons at TDC (Top Dead Center) to prevent damaging the crankpin with the connecting rod threads.*

Install the crankshaft.

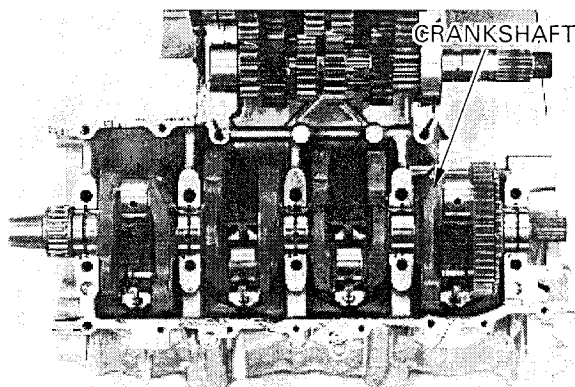


Install the connecting rod bearing caps.

Apply oil to the connecting rod nut threads and seating surfaces.

Install and tighten the nuts gradually and alternately.

**TORQUE:** 35 N·m (3.6 kgf·m , 26 lbf·ft)

Assemble the upper and lower crankcase (page 11-12).

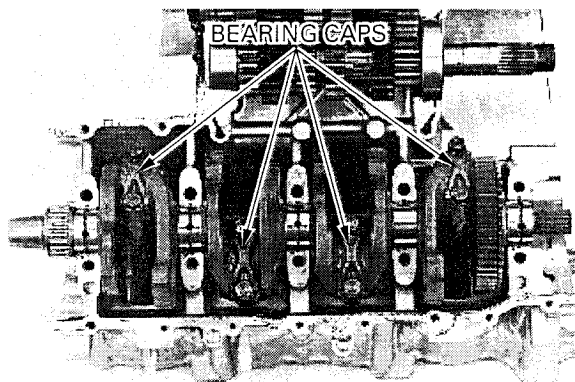




## TRANSMISSION

### REMOVAL/DISASSEMBLY


Separate the crankcase halves (page 11-3).

Remove the mainshaft and countershaft assembly.

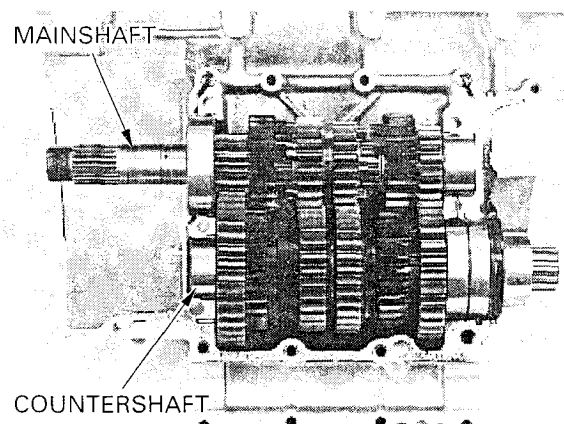

Remove the dowel pins and countershaft bearing set ring.


Disassemble the mainshaft and countershaft.

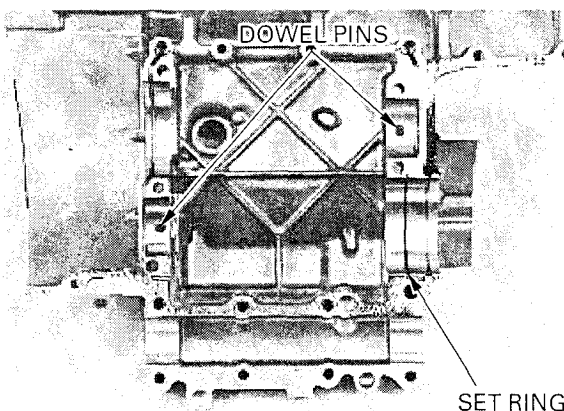

Check the gear dogs, dog holes and teeth for abnormal wear or lack of lubrication.  
Measure the I.D. of each gear.

#### SERVICE LIMITS:


<b>M5,M6:</b>	31.04 mm (1.222 in)
<b>C1:</b>	26.04 mm (1.025 in)
<b>C2,C3,C4:</b>	33.04 mm (1.301 in)

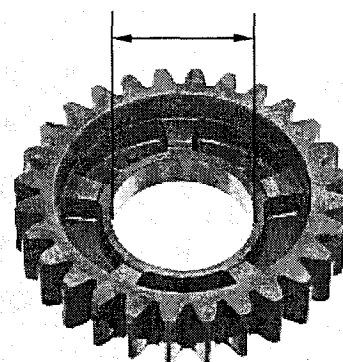

Measure the I.D. and O.D. of each gear bushing.

#### SERVICE LIMITS:


<b>O.D.:M5,M6:</b>	30.93 mm (1.218 in)
<b>C3:</b>	32.93 mm (1.296 in)
<b>C4:</b>	32.93 mm (1.296 in)
<b>I.D.: M5:</b>	28.02 mm (1.103 in)
<b>C2:</b>	30.02 mm (1.182 in)

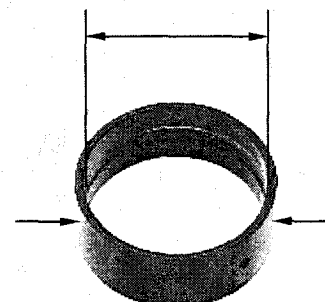



## CRANKSHAFT/TRANSMISSION


Check the shift fork groove of the shifter gear for excessive wear or damage.

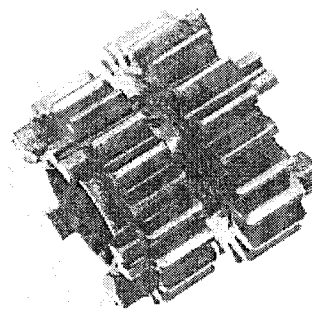

Measure the O.D. of the mainshaft and countershaft.

### SERVICE LIMITS:

<b>M5:</b>	27.957 mm (1.1007 in)
<b>Clutch outer guide:</b>	24.96 mm (0.983 in)
<b>C2:</b>	29.96 mm (1.180 in)

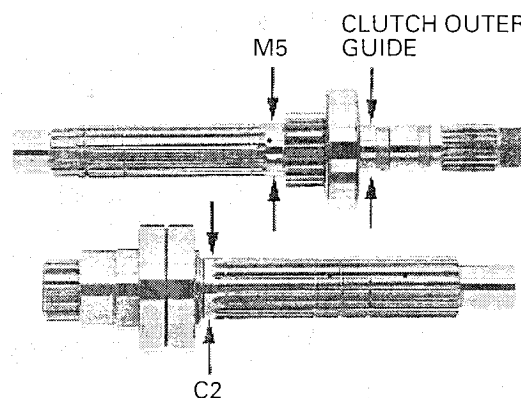


*Do not try to remove the countershaft bearing from the shaft. If the bearing is worn or damaged, replace the countershaft as an assembly.*

### BEARING REPLACEMENT

Turn the outer race of each bearing with your finger. The bearings should turn smoothly and quietly. Also check that the bearing inner race fits tightly on the shaft.


Remove and discard the mainshaft bearing, if the race does not turn smoothly, quietly, or fits loosely on the mainshaft.

Replace the countershaft, collar, and bearing as an assembly, if the race does not turn smoothly, quietly, or fits loosely on the countershaft.

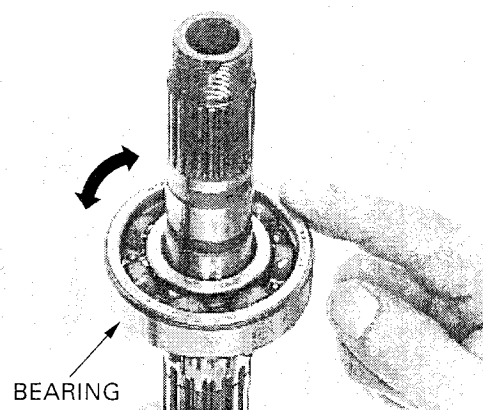

## CRANKSHAFT/TRANSMISSION

Press out the mainshaft from the bearing using a hydraulic press.

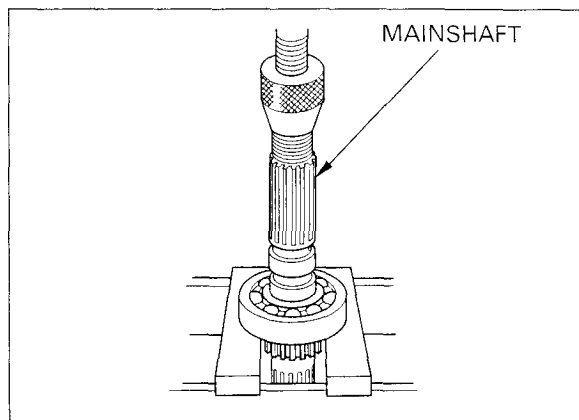

Install a new mainshaft bearing onto the mainshaft by pressing the mainshaft bearing inner race using the special tool.


### TOOLS:

**Driver, 40 mm I.D.**


07746-0030100

**Attachment, 30 mm**



07746-0030300

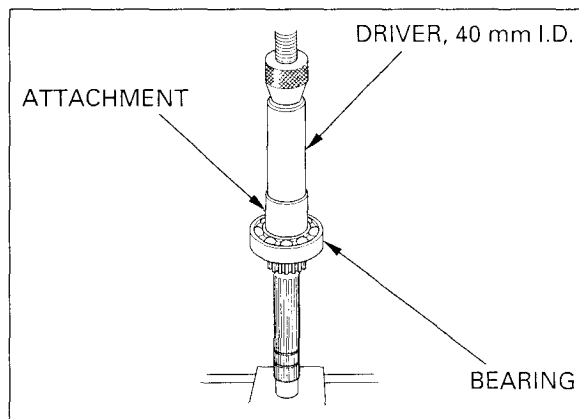

## ASSEMBLY

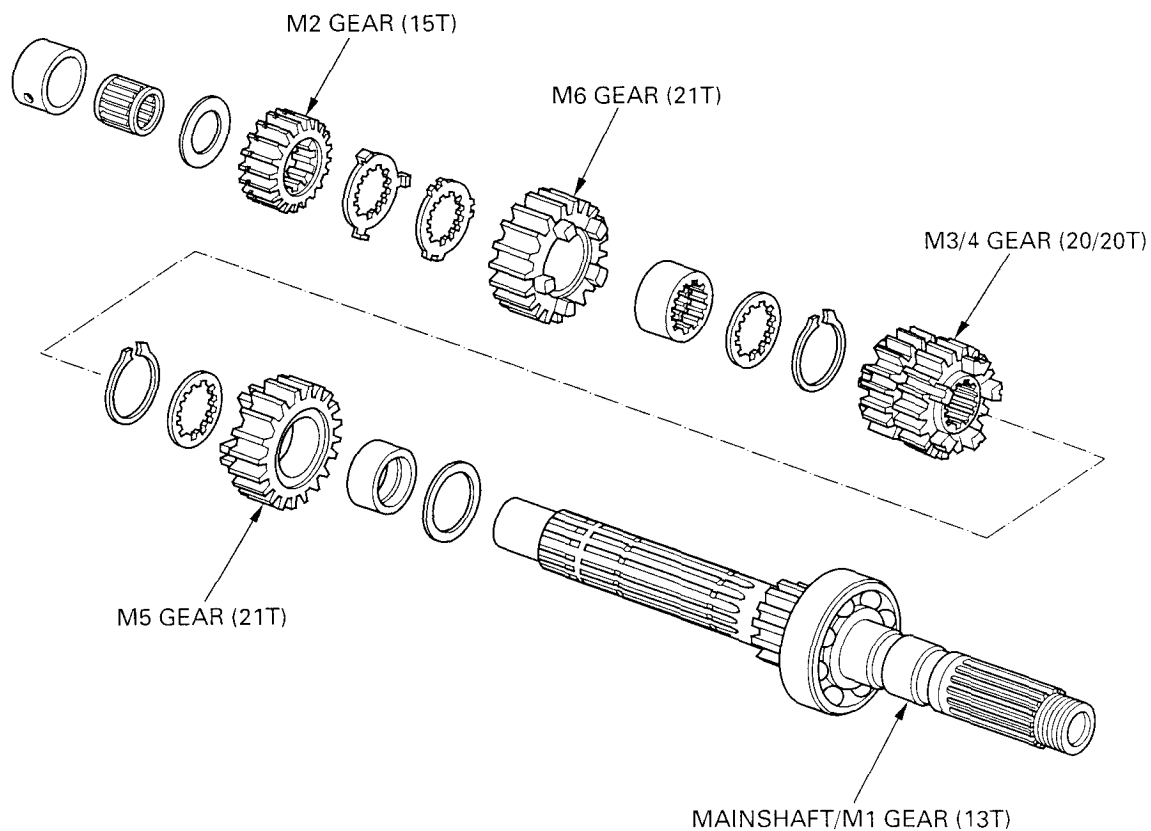


## CRANKSHAFT/TRANSMISSION

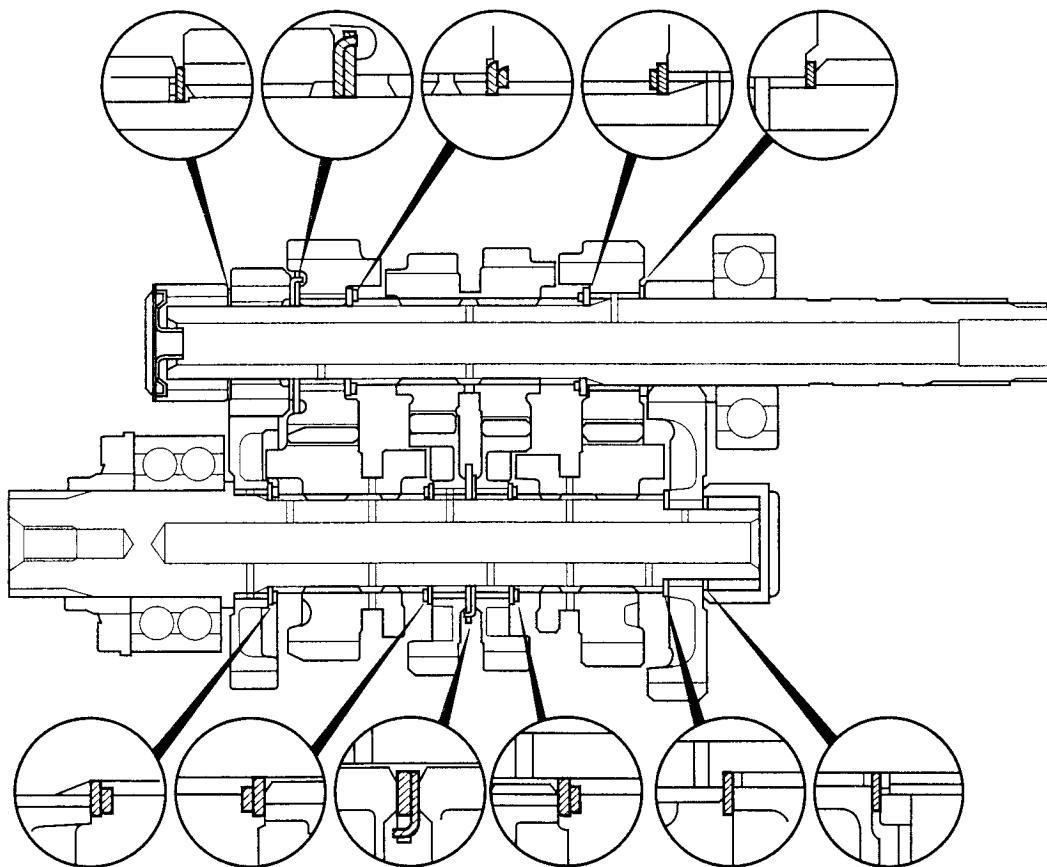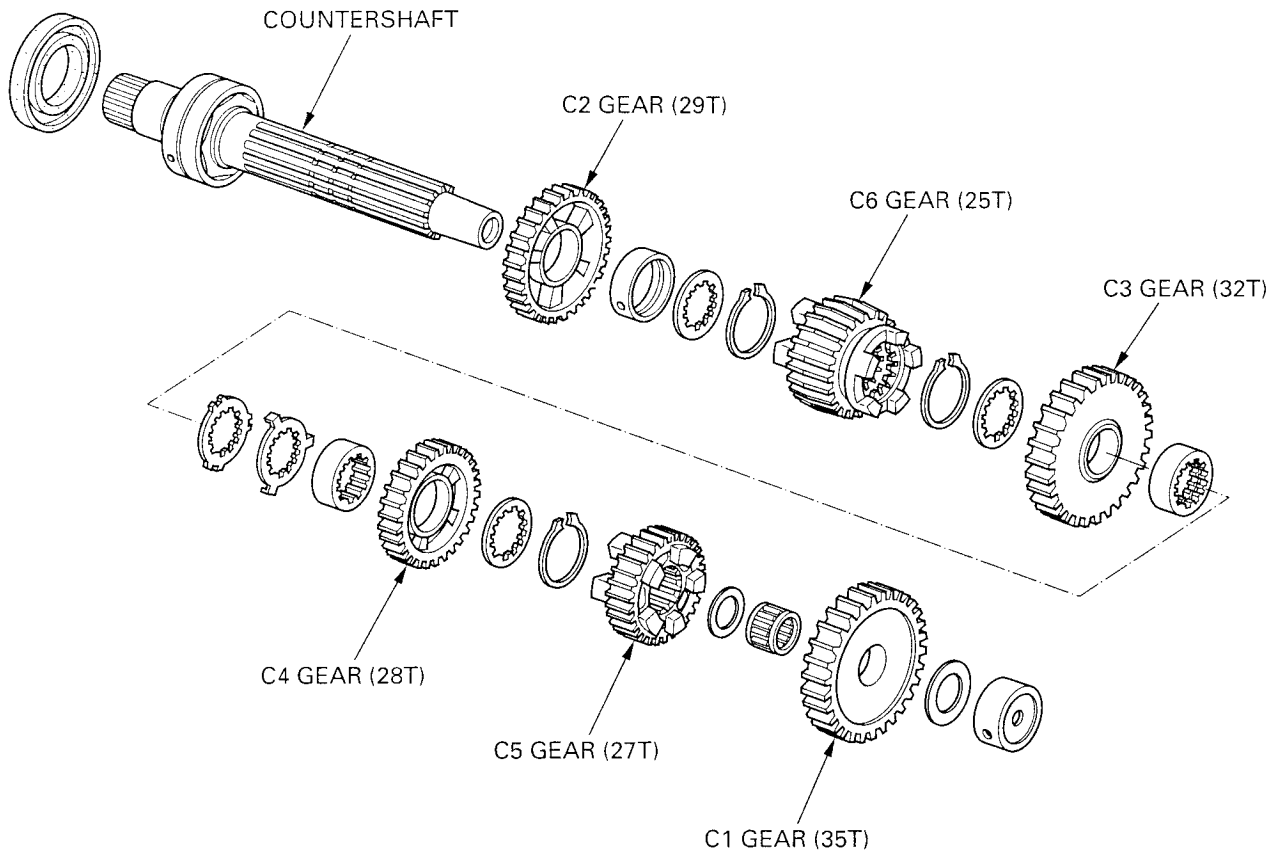

## CRANKSHAFT/TRANSMISSION


Assemble the transmission gear and shafts.  
Coat each gear with clean engine oil and check for smooth movement.

Apply molybdenum disulfide oil to the shift fork grooves in the M3/4, C5 and C6 gear.

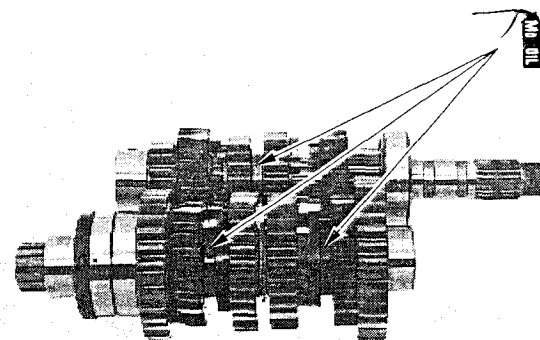


### INSTALLATION

Install the dowel pins in the upper crankcase holes.  
Install the countershaft bearing set ring into the upper crankcase groove.

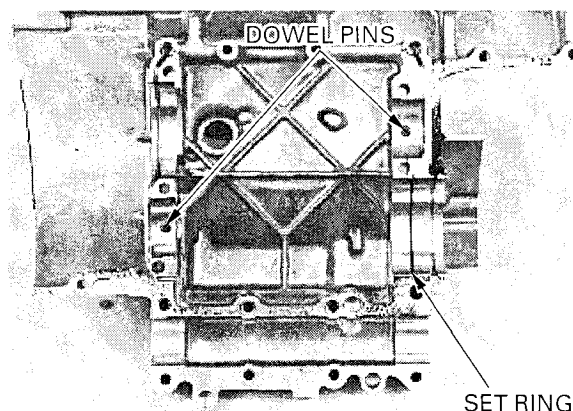


Install the mainshaft and countershaft by aligning the countershaft bearing groove with the set ring on the crankcase, and aligning the bearing cap holes with the dowel pins.

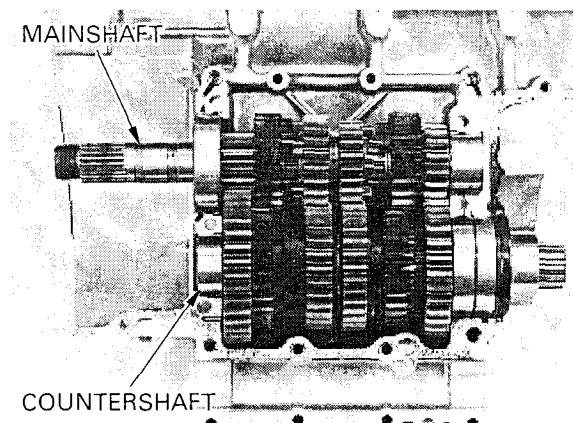

Also align the countershaft bearing stopper pin with the groove in the crankcase.

Assemble the crankcase (page 11-12).

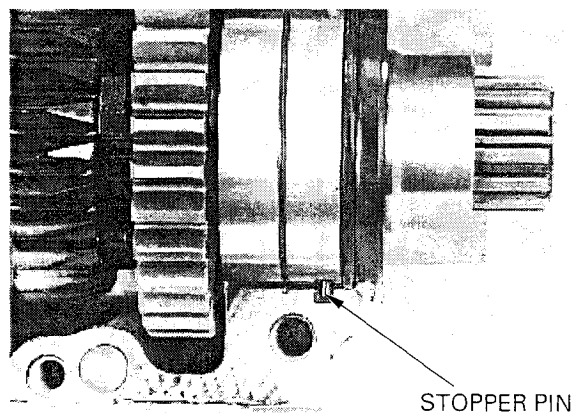

# 13. FRONT WHEEL/SUSPENSION/STEERING

SERVICE INFORMATION	13-1	FRONT WHEEL	13-9
TROUBLESHOOTING	13-2	FORK	13-15
HANDLEBARS	13-3	STEERING STEM	13-25

## SERVICE INFORMATION

### GENERAL

- When servicing the front wheel, fork or steering stem, support the motorcycle using a safety stand or hoist.
- A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.
- After the front wheel installation, check the brake operation by applying the brake lever.
- Refer to section 15 for brake system information.
- Use only tires marked "TUBELESS" and tubeless valves on rim marked "TUBELESS TIRE APPLICABLE".

### SPECIFICATIONS

Unit: mm (in)

ITEM		STANDARD	SERVICE LIMIT
Minimum tire tread depth		_____	1.5 (0.06)
Cold tire pressure	Up to 90 kg (200 lb) load	250 kPa (2.50 kgf/cm <sup>2</sup> , 36 psi)	_____
	Up to maximum weight capacity	250 kPa (2.50 kgf/cm <sup>2</sup> , 36 psi)	_____
Axle runout		_____	0.20 (0.008)
Wheel rim runout	Radial	_____	2.0 (0.08)
	Axial	_____	2.0 (0.08)
Fork	Spring free length	230.5 (9.07)	225.9 (8.89)
	Spring direction	With the tapered end facing up	_____
	Tube runout	_____	0.20 (0.008)
	Recommended fork fluid	Pro Honda Suspension Fluid SS-8	_____
	Fluid level	90 (3.5)	_____
	Fluid capacity	488 ± 2.5 cm <sup>3</sup> (16.5 ± 0.08 US oz, 17.2 ± 0.09 Imp oz)	_____
	Pre-load adjuster initial setting	18 mm (0.7 in) from top of fork bolt	_____
	Tension adjuster initial setting	1 turn from full hard	_____
	Compression adjuster initial setting	1-1/2 turns from full hard	_____
Steering head bearing pre-load		10 – 15 N (1.0 – 1.5 kgf)	_____

13



## FRONT WHEEL/SUSPENSION/STEERING

### TORQUE VALUES

Handlebar pinch bolt	26 N·m (2.7 kgf·m , 20 lbf·ft)	
Handlebar weight mounting screw	10 N·m (1.0 kgf·m , 7 lbf·ft)	ALOC bolt
Steering stem nut	103 N·m (10.5 kgf·m , 76 lbf·ft)	See page 13-29
Top thread A	29 N·m (3.0 kgf·m , 22 lbf·ft)	
Top thread B		
Fork top bridge pinch bolt	22 N·m (2.2 kgf·m , 16 lbf·ft)	
Fork bottom bridge pinch bolt	26 N·m (2.7 kgf·m , 20 lbf·ft)	
Front axle bolt	78 N·m (8.0 kgf·m , 58 lbf·ft)	
Front axle holder pinch bolt	22 N·m (2.2 kgf·m , 16 lbf·ft)	
Front brake disc mounting bolt	20 N·m (2.0 kgf·m , 14 lbf·ft)	ALOC bolt
Fork bolt	22 N·m (2.2 kgf·m , 16 lbf·ft)	
Fork socket bolt	34 N·m (3.5 kgf·m , 25 lbf·ft)	Apply a locking agent to the threads

### TOOLS

Steering stem socket	07916-3710101	or 07916-3710100 (U.S.A. only)
Ball race remover set	07946-KM90001	or 07VMF-MAT0100
– Driver attachment, A	07946-KM90100	07VMF-MAT0200
– Driver attachment, B	07946-KM90200	07VMF-KZ30200
– Driver shaft assembly	07946-KM90300	07VMF-MAT0300
– Bearing remover, A	07946-KM90401	07VMF-MAT0400
– Bearing remover, B	07946-KM90500	07947-KA50100
– Assembly base	07946-KM90600	07965-MA60000
		07946-ME90200
Steering stem driver	07946-MB00000	
Fork damper holder	07YMB-MCF0101	
Oil seal driver	07YMD-MCF0100	or 07KMD-KZ30100 with 07NMD-KZ30101 (except U.S.A.) 07NMD-KZ3010A (U.S.A. only)
Driver	07749-0010000	
Attachment, 42 × 47 mm	07746-0010300	
Pilot, 25 mm	07746-0040600	
Bearing remover shaft	07746-0050100	
Bearing remover head, 25 mm	07746-0050800	

## TROUBLESHOOTING

#### Hard steering

- Faulty or damaged steering head bearings
- Insufficient tire pressure
- Steering head bearing adjustment nut too tight

#### Steers to one side or does not track straight

- Unevenly adjusted right and left fork legs
- Bent fork
- Bent axle
- Wheel installed incorrectly
- Faulty steering head bearings
- Bent frame
- Worn wheel bearing
- Worn swingarm pivot components

#### Front wheel wobbling

- Bent rim
- Worn front wheel bearings
- Faulty tire
- Unbalanced tire and wheel

#### Wheel turns hard

- Faulty wheel bearing
- Bent front axle
- Brake drag

#### Soft suspension

- Insufficient fluid in fork
- Weak fork springs
- Tire pressure too low

#### Hard suspension

- Incorrect fluid weight
- Bent fork tubes
- Clogged fork fluid passage


#### Front suspension noisy

- Insufficient fluid in fork
- Loose fork fasteners

## HANDLEBARS


### REMOVAL

Remove the screw and the handlebar grip end.

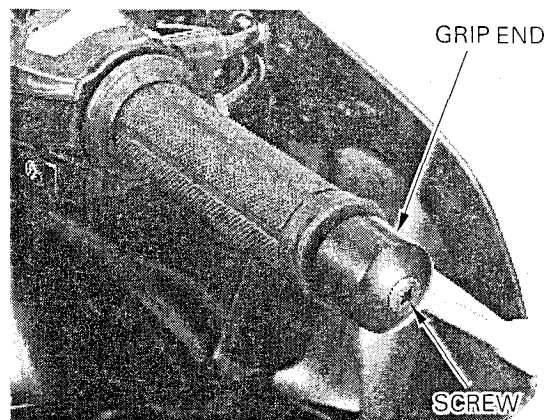


Disconnect the front brake switch wires connectors from the switch.


Remove the master cylinder holder bolts, holder and master cylinder assembly.

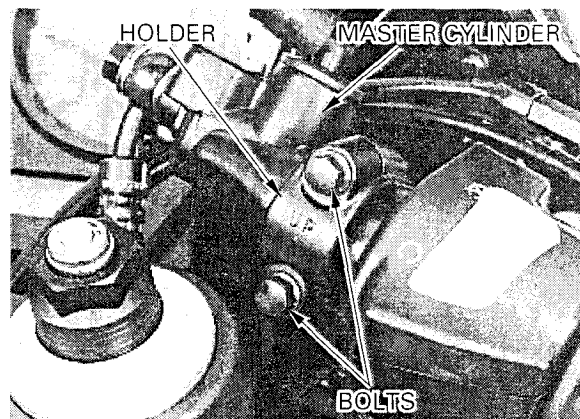

Remove the right handlebar switch/throttle housing screws.

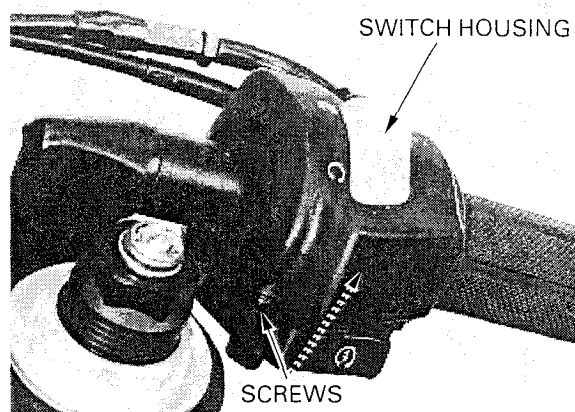


Remove the right handlebar switch housing and throttle pipe from the right handlebar.

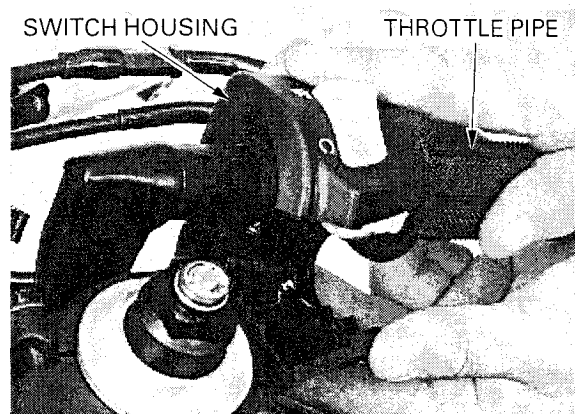


## FRONT WHEEL/SUSPENSION/STEERING


Disconnect the throttle cable ends from the throttle pipe and remove the housing.

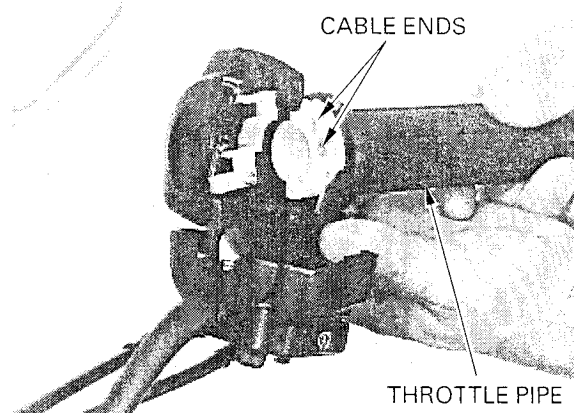


Disconnect the clutch switch wire connectors from the switch.  
Remove the clutch lever bracket holder bolts, holder and clutch lever bracket assembly.

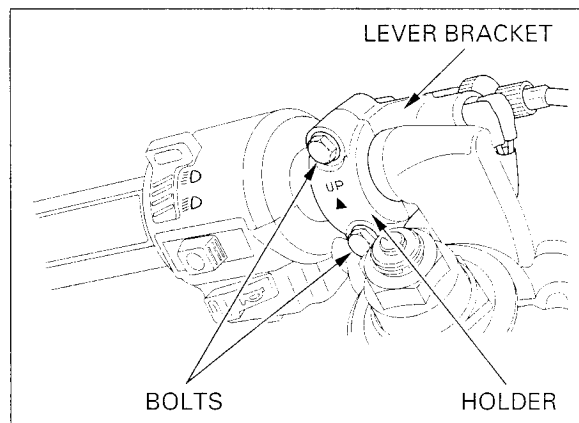

Remove the screws and left handlebar switch housing.

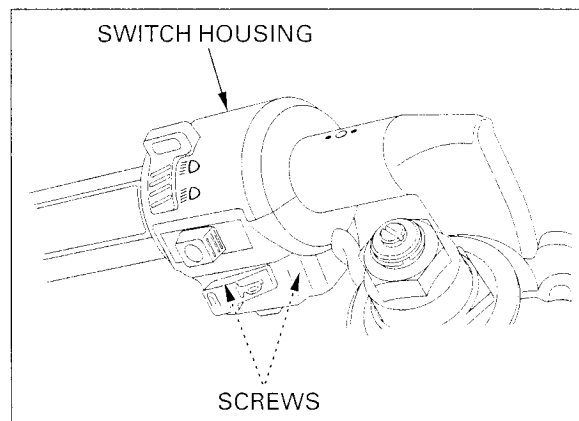


Remove the screw and handlebar grip end.  
Remove the handle grip from the handlebar.

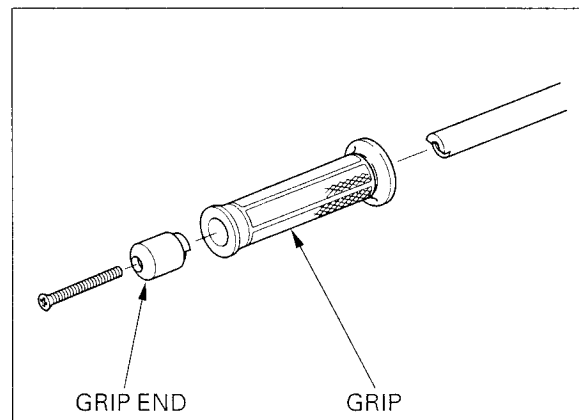


## FRONT WHEEL/SUSPENSION/STEERING

Loosen the top bridge pinch bolts and handlebar pinch bolt.  
Remove the steering stem nut and remove the top bridge.  
Remove the handlebars from the fork tubes.

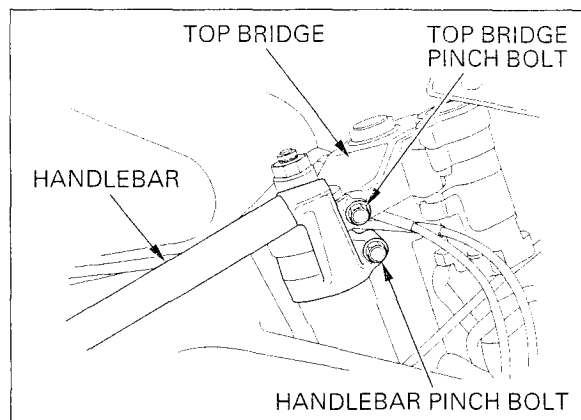


### INSTALLATION

Install the handlebar stopper ring onto the fork tube groove.  
Install the handlebars onto the fork tube.

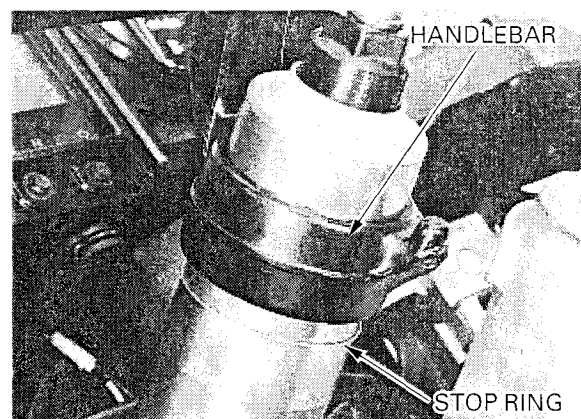

Install the top bridge while aligning its grooves with the handlebar stopper pin.

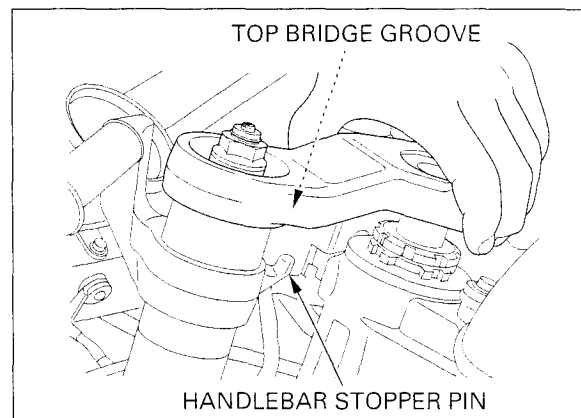

Tighten the steering stem nut.


**TORQUE:** 103 N·m (10.5 kgf·m , 76 lbf·ft)

Tighten the top bridge pinch bolts to the specified torque.

**TORQUE:** 22 N·m (2.2 kgf·m , 16 lbf·ft)

Seat the handlebar pivot upper surface with the top bridge lower surface, then tighten the handlebar pinch bolt to the specified torque.

**TORQUE:** 26 N·m (2.7 kgf·m , 20 lbf·ft)

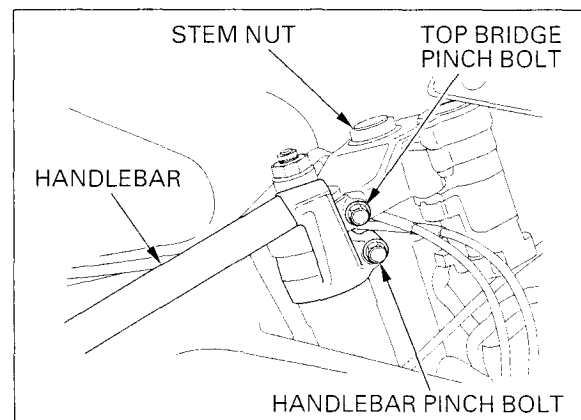




## FRONT WHEEL/SUSPENSION/STEERING

### HANDLEBAR WEIGHT REPLACEMENT

Remove the grip from the handlebar.  
Straighten the weight retainer tab by the screwdriver or punch.

*Apply lubricant spray through the tab locking hole to the rubber for easy removal.*


Temporarily install the grip end and screw, then remove the handlebar weight by turning the grip end.

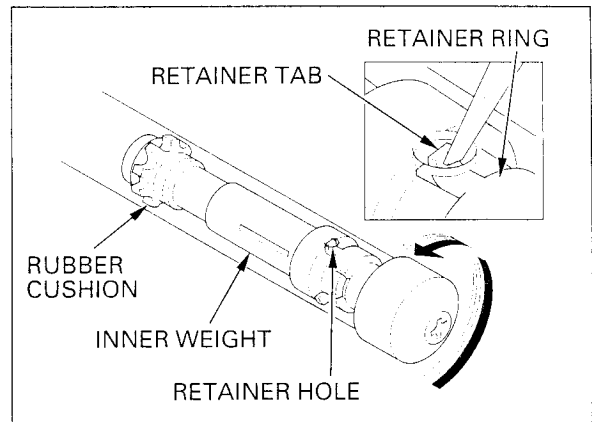

Remove the grip end from the handlebar weight.  
Discard the retainer.


Install the new retainer onto the handlebar weight.  
Install the grip end onto the handlebar weight aligning its boss with the slot in the handlebar weight.

Install a new mounting screw.

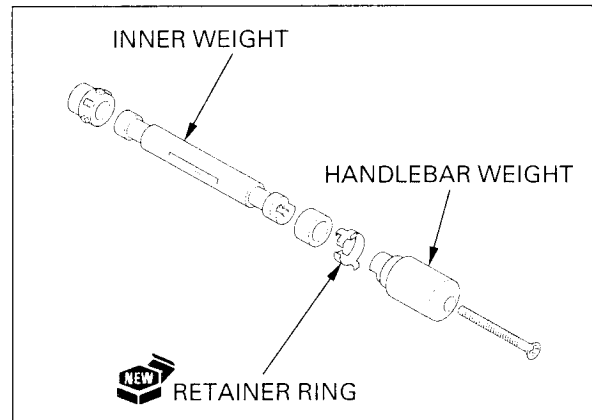

Insert the handlebar weight assembly into the handlebar.


Turn the handlebar weight and hook the retainer tab with the hole in the handlebar.

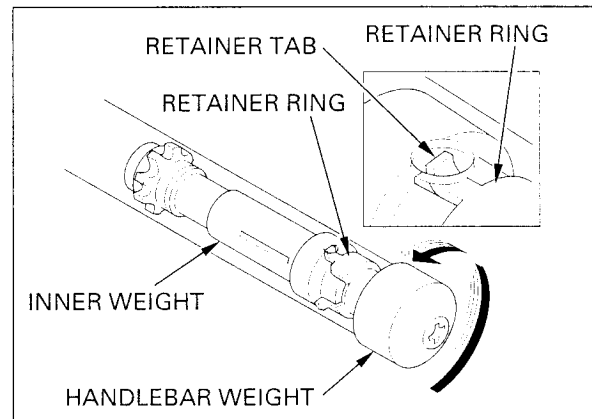

Apply Honda Bond A or Honda Hand Grip Cement (U.S.A. only) to the inside of the grip and to the clean surfaces of the left handlebar and throttle grip.

Wait 3 -- 5 minutes and install the grip.  
Rotate the grip for even application of the adhesive.


*Allow the adhesive to dry for an hour before using.*

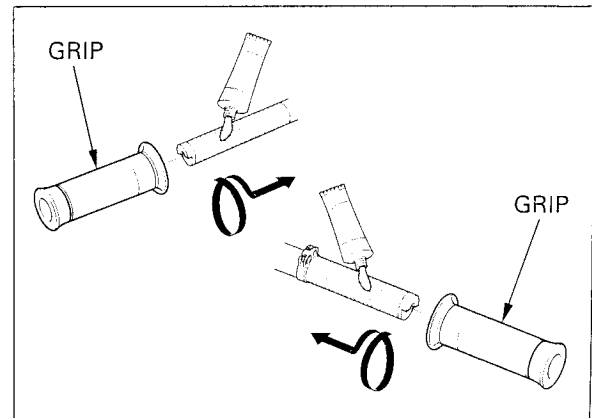




## FRONT WHEEL/SUSPENSION/STEERING

Install the left handlebar switch aligning its locating pin with the hole in the handlebar.

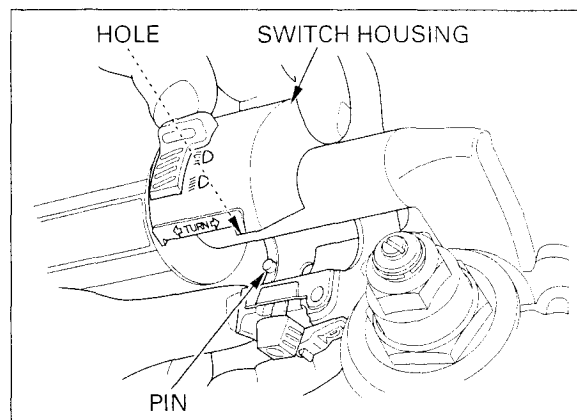

Tighten the forward screw first, then the rear screw.

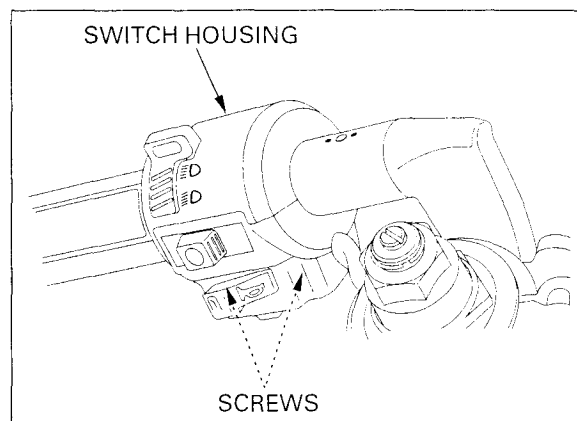


Install the clutch lever bracket assembly by aligning the end of the bracket with the punch mark on the handlebar.

Install the clutch lever bracket holder with the "UP" mark facing up.


Tighten the upper bolt first, then the lower bolt.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

Connect the clutch switch wires.

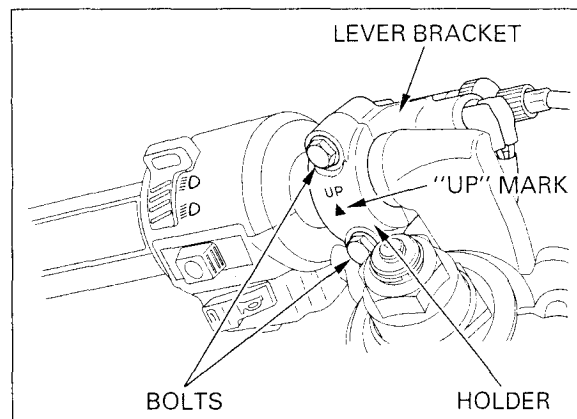


Connect the throttle cable ends to the throttle pipe.

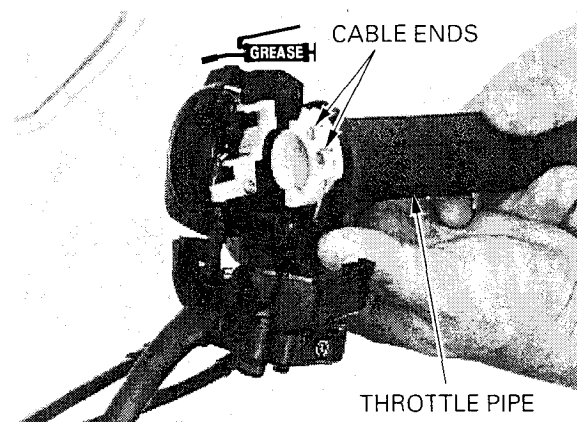


## FRONT WHEEL/SUSPENSION/STEERING


Apply grease to the sliding surface of the throttle pipe.  
Install the throttle pipe into the right handlebar.

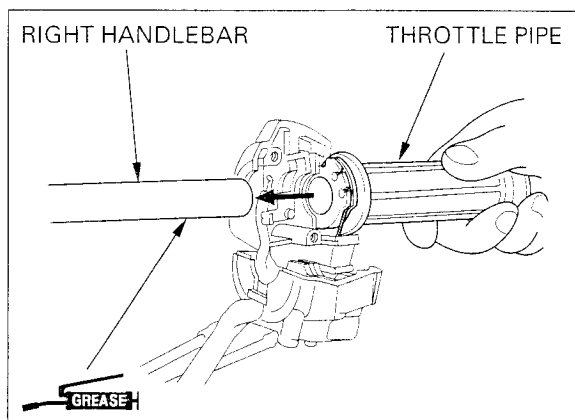

Install the right handlebar switch/throttle housing by aligning its locating pin with the hole in the handlebar.

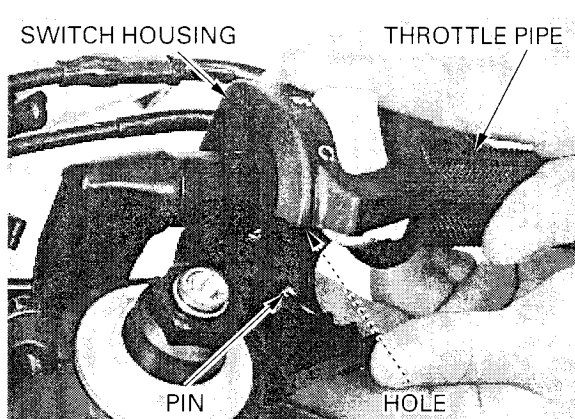

Tighten the forward screw first, then the rear screw.

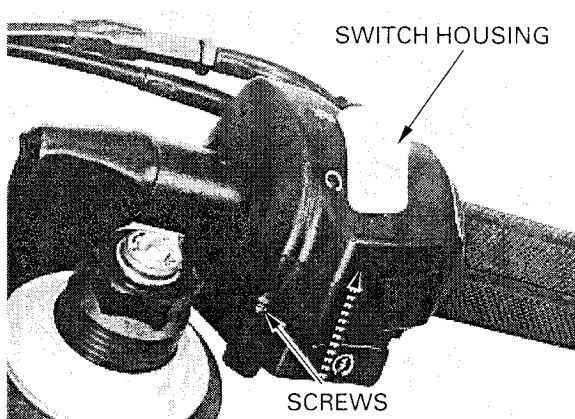


Install the master cylinder by aligning the end of the master cylinder with the punch mark on the handlebar.

Install the master cylinder holder with the "UP" mark facing up.

Tighten the upper bolt first, the lower bolt.


**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

Connect the brake switch wires.

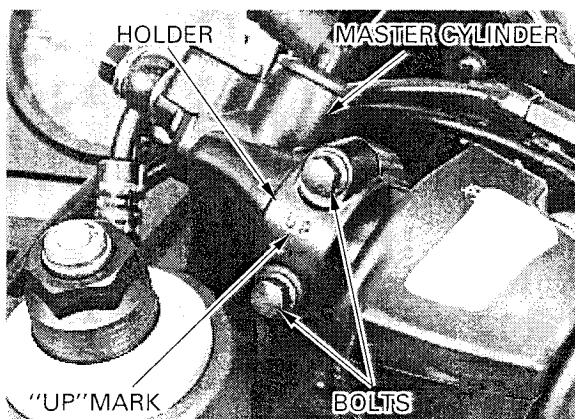

Install the grip end and tighten the new mounting screw to the specified torque.

**TORQUE:** 10 N·m (1.0 kgf·m , 7 lbf·ft)

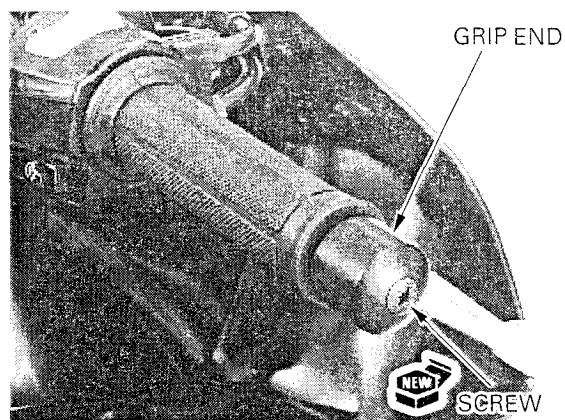


## FRONT WHEEL

### REMOVAL

Support the motorcycle securely using a safety stand or a hoist.

Remove the brake hose clamp nuts, special bolts, reflector and front fender.

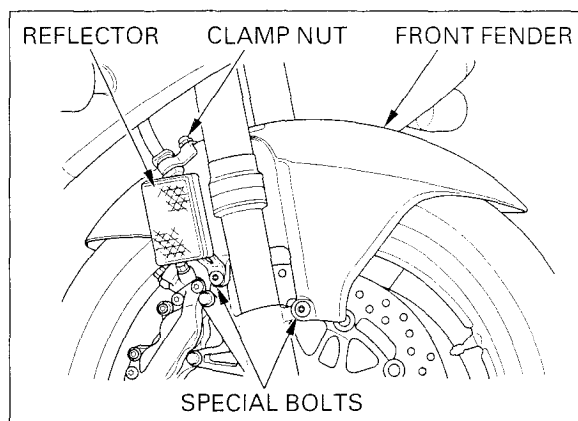


*Do not operate the brake lever after the brake caliper is removed.*

Remove the mounting bolts and both brake calipers.

Support the brake caliper with a piece of wire so that it does not hang from the brake hose. Do not twist the brake hose.




Loosen the right axle pinch bolts.  
Remove the axle bolt.

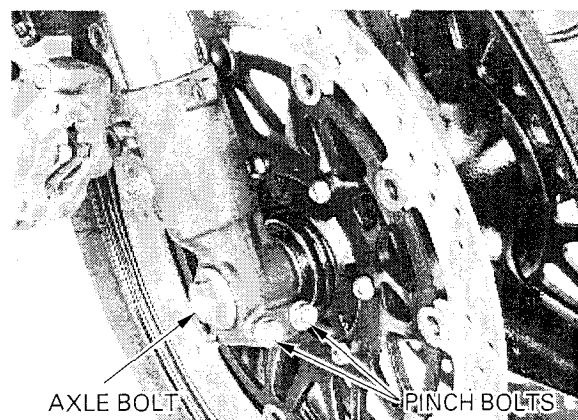




## FRONT WHEEL/SUSPENSION/STEERING

Loosen the left axle pinch bolts.  
Remove the axle and the front wheel.

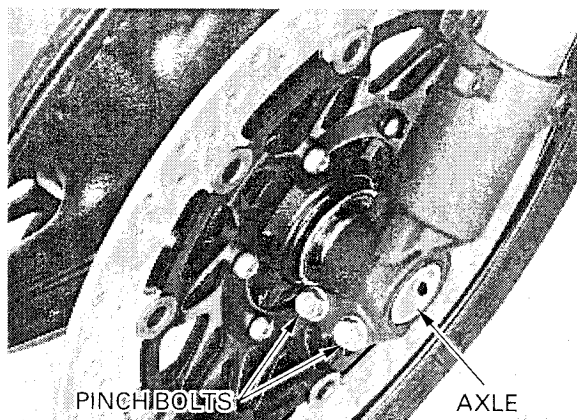

Remove the side collars.

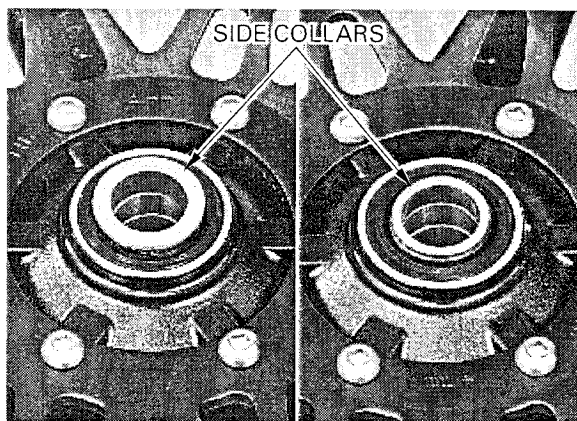


### INSPECTION

#### Axle

Set the axle in V-block and measure the runout.  
Actual runout is 1/2 the total indicator reading.

**SERVICE LIMIT:** 0.20 mm (0.008 in)

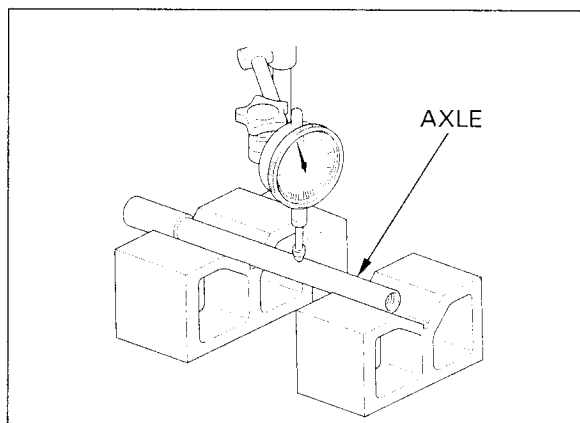


#### Wheel bearing

Turn the inner race of each bearing with your finger.  
The bearings should turn smoothly and quietly.  
Also check that the bearing outer race fits tightly in the hub.

*Replace the bearings in pairs.*

Remove and discard the bearings if they do not turn smoothly, quietly, or if they fit loosely in the hub.

Install the new bearings into the hub using the special tools (page 13-12).

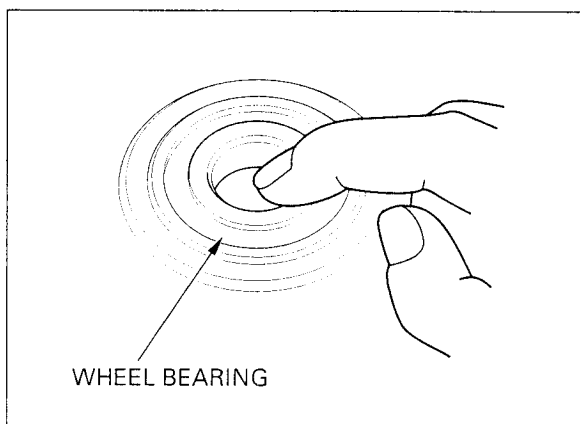

## FRONT WHEEL/SUSPENSION/STEERING

### Wheel rim runout

Check the rim runout by placing the wheel in a turning stand.


Spin the wheel by hand, and read the runout using a dial indicator.

Actual runout is 1/2 the total indicator reading.

### SERVICE LIMITS:

**Radial:** 2.0 mm (0.08 in)


**Axial:** 2.0 mm (0.08 in)

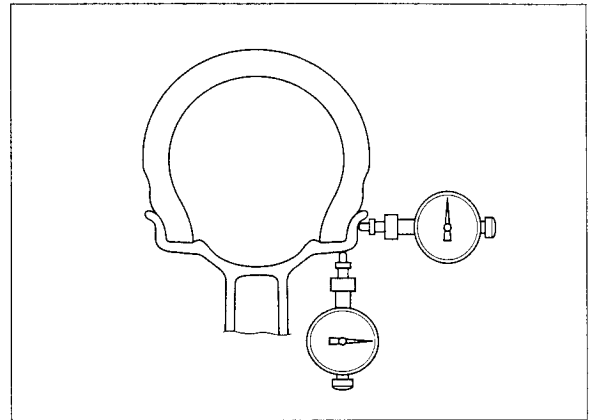


*For optimum balance, the tire balance mark (a paint dot on the side wall) must be located next to the valve stem. Remount the tire if necessary.*

### Wheel balance

Wheel balance directly affects the stability, handling and over all safety of the motorcycle. Always check the balance when the tire has been removed from the rim.

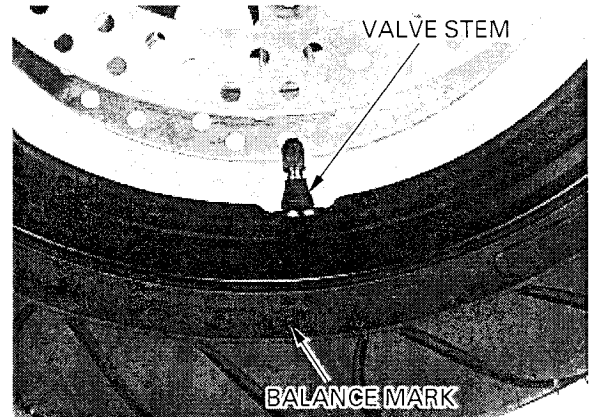

Note the rotating direction marks on the wheel and tire.

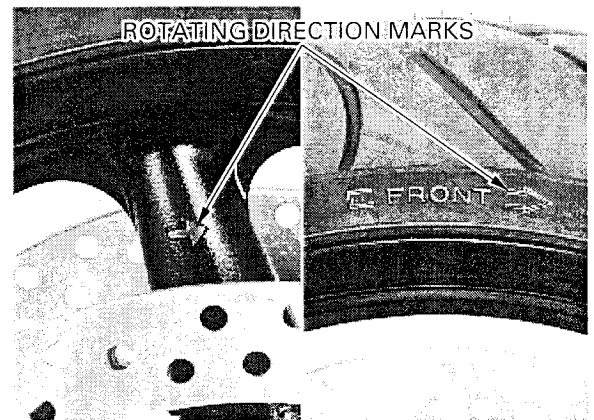


Remove the dust seals from the wheel.

Mount the wheel, tire and brake discs assembly in an inspection stand.

Spin the wheel, allow it to stop, and mark the lowest (heaviest) point of the wheel with a chalk.

Do this two or three times to verify the heaviest area.

To balance the wheel, install wheel weights on the highest side of the rim, the side opposite the chalk marks. Add just enough weight so the wheel will no longer stop in the same position when it is spun. Do not add more than 60 grams to the wheel.

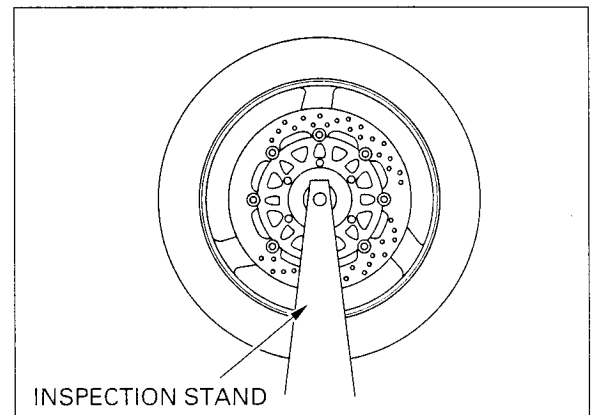




## FRONT WHEEL/SUSPENSION/STEERING

### DISASSEMBLY


Remove the bolts and brake discs.  
Remove the dust seals.

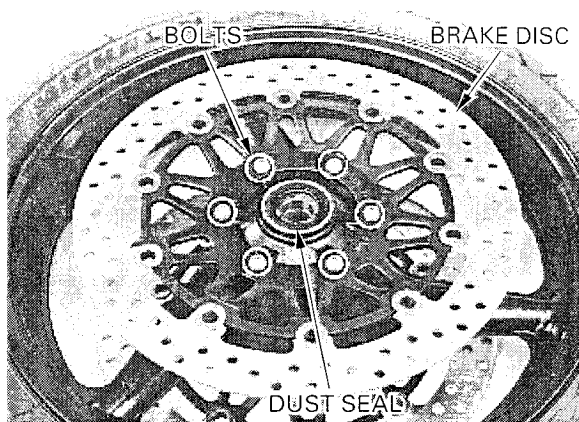


Install the bearing remover head into the bearing.  
From the opposite side, install the bearing remover shaft and drive the bearing out of the wheel hub.  
Remove the distance collar and drive out the other bearing.

#### TOOLS:

Bearing remover head, 25 mm 07746-0050800  
Bearing remover shaft 07746-0050100

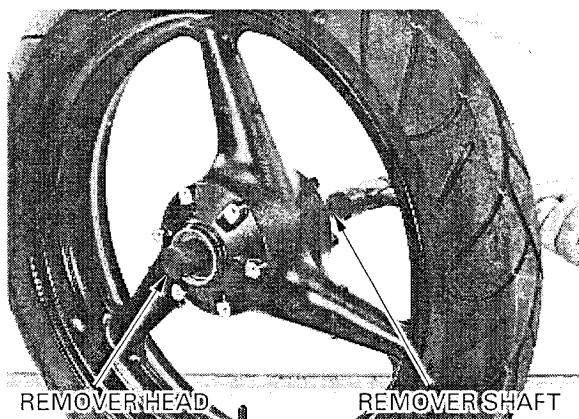

### ASSEMBLY

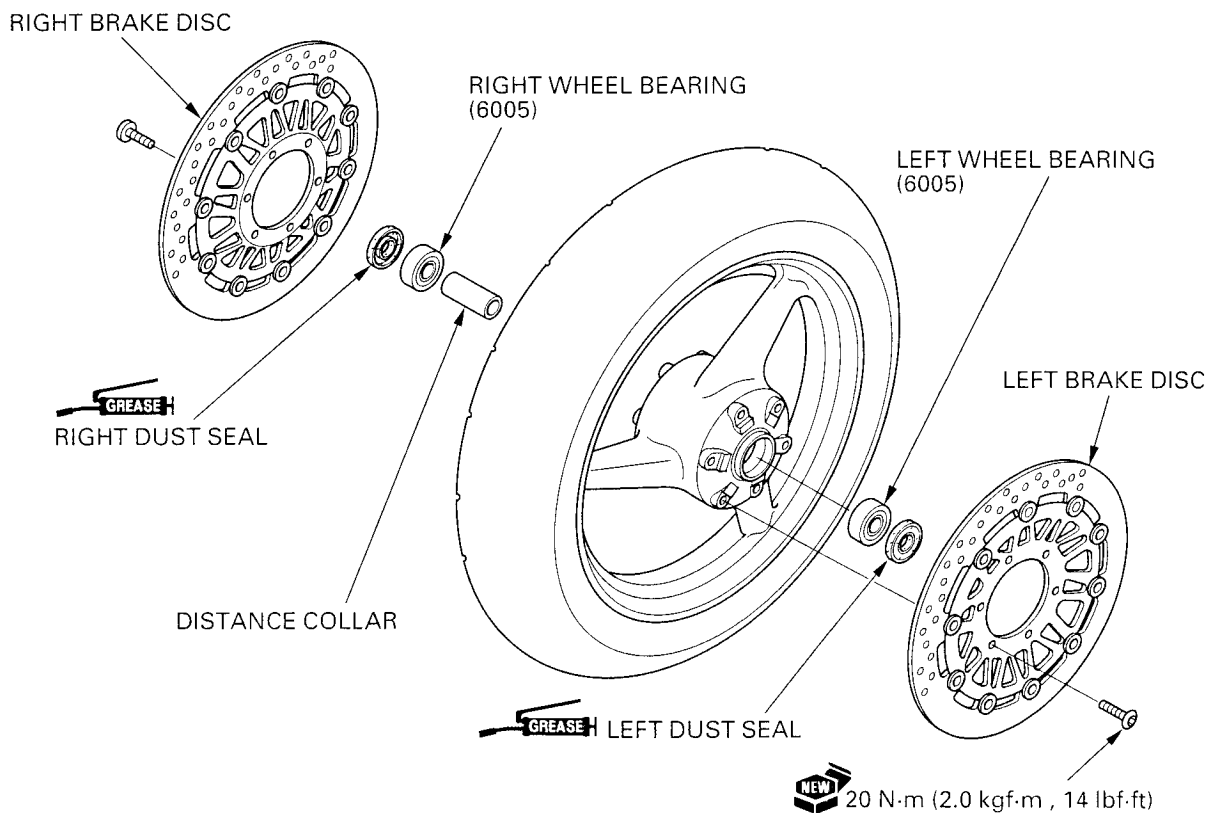


## FRONT WHEEL/SUSPENSION/STEERING

*Never install the old bearings. Once the bearings has been removed, the bearing must be replaced with new ones.*

Drive in a new right bearing squarely.  
Install the distance collar, then drive in the left bearing using the special tool.

### TOOLS:

<b>Driver</b>	07749-0010000
<b>Attachment, 42 × 47 mm</b>	07746-0010300
<b>Pilot, 25 mm</b>	07746-0040600

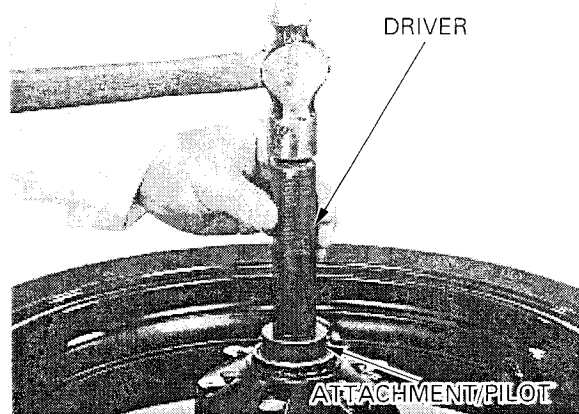


*Do not get grease on the brake discs or stopping power will be reduced.*

Install the brake discs on the wheel hub.  
Install and tighten the new mounting bolts to the specified torque.


**TORQUE:** 20 N·m (2.0 kgf·m , 14 lbf·ft)

Apply grease to the dust seal lips, then install them into the wheel hub.

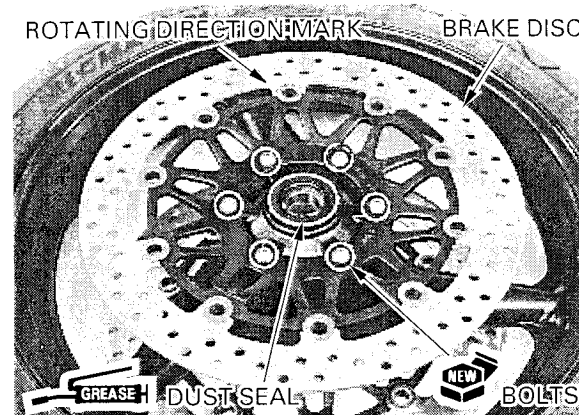


## INSTALLATION

Install the side collars.

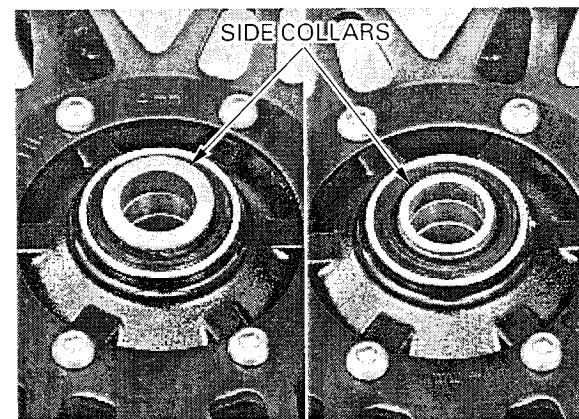

Install the front wheel between the fork legs.

Apply thin layer of grease to the front axle surface.  
Install the front axle from the left side.

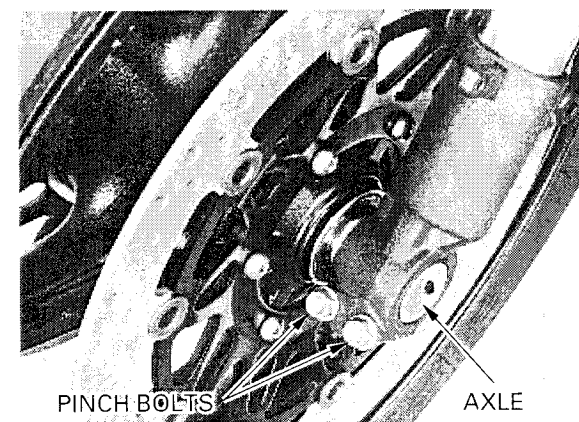




## FRONT WHEEL/SUSPENSION/STEERING

Hold the axle and tighten the axle bolt to the specified torque.

**TORQUE:** 78 N·m (8.0 kgf·m , 58 lbf·ft)

Tighten the right axle pinch bolts to the specified torque.


**TORQUE:** 22 N·m (2.2 kgf·m , 16 lbf·ft)

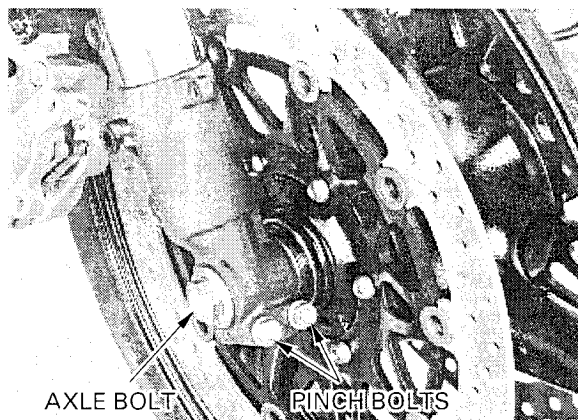

Install the both brake caliper and tighten the new mounting bolts to the specified torque.


**TORQUE:** 30 N·m (3.1 kgf·m , 22 lbf·ft)

Install the front fender (page 2-15).

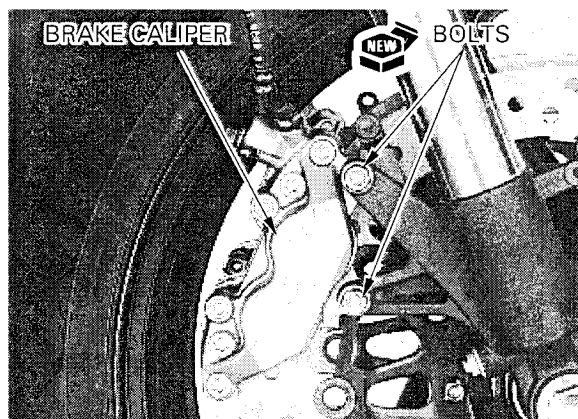


With the front brake applied, pump the fork up and down several times to seat the axle and check brake operation.

Check the brake operation by applying the brake lever.

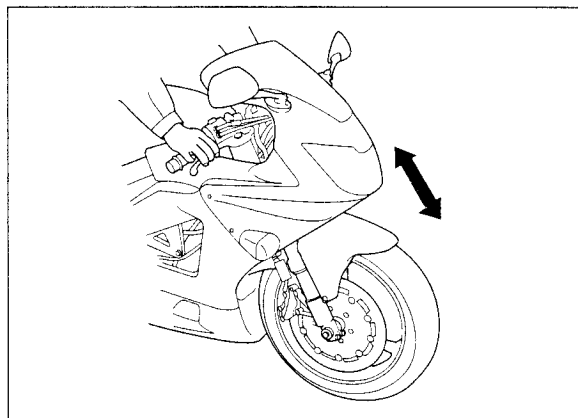


Tighten the left axle pinch bolts to the specified torque.

**TORQUE:** 22 N·m (2.2 kgf·m , 16 lbf·ft)

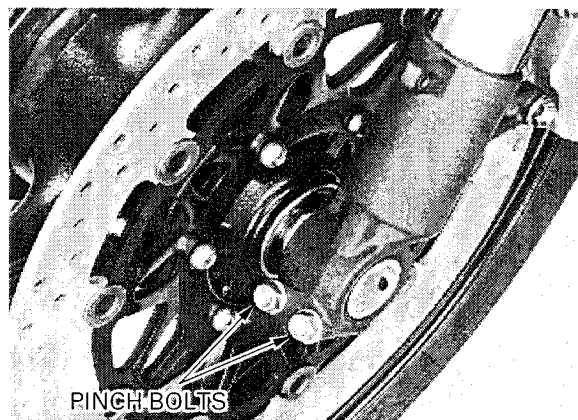

## FRONT WHEEL/SUSPENSION/STEERING

Check the clearance between the brake disc and caliper bracket on each side after installation.  
The clearance should be at least 0.7 mm (0.03 in).

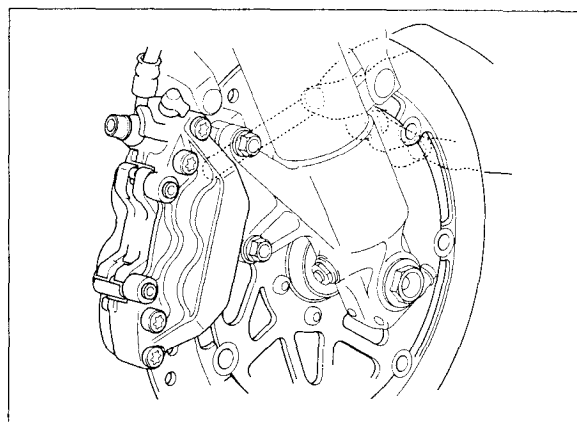

## FORK


*Keep the brake master cylinders upright.*

### REMOVAL


Remove the front wheel (page 13-9).

Loosen the handlebar pinch bolt and top bridge pinch bolt.

When the fork leg will be disassembled, loosen the fork cap, but do not remove it yet.

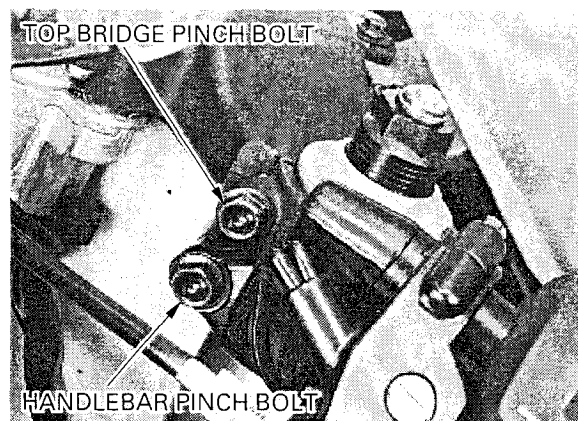

Loosen the fork bottom pinch bolts and remove the fork tube from the fork top bridge and steering stem.

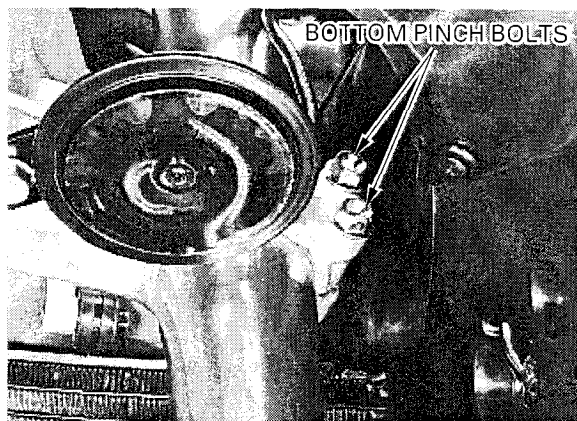


*Be careful not to scratch the fork tube or damage the dust seal.*

### DISASSEMBLY


Remove the handlebar stop ring.

Remove the stop ring.

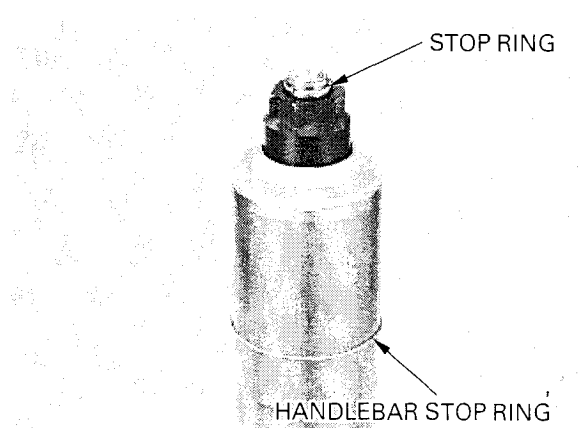


## FRONT WHEEL/SUSPENSION/STEERING

Turn the pre-load adjuster counterclockwise, then remove the pre-load adjuster and adjusting plate.

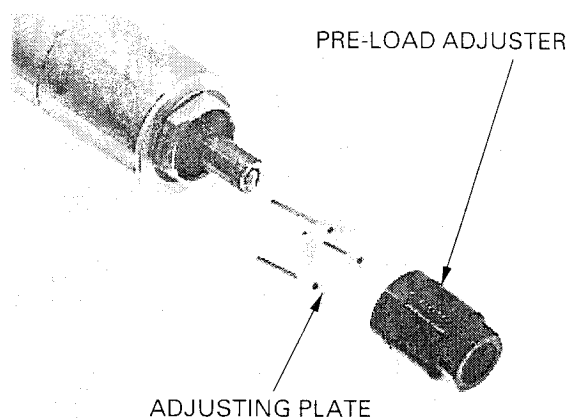


Remove the fork bolt from the fork tube. Push the fork slider slowly down the fork slider, and gently seat the dust seal onto the axle holder.

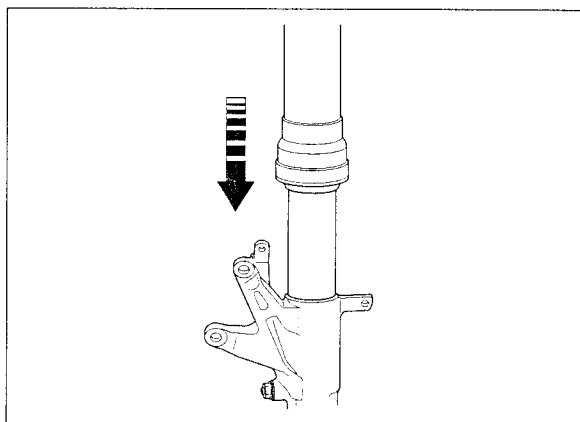


Push down the spring seat and install the 17 mm spanner into the groove of the rebound adjuster.

Hold the rebound adjuster, then loosen and remove the fork bolt from the rebound adjuster.

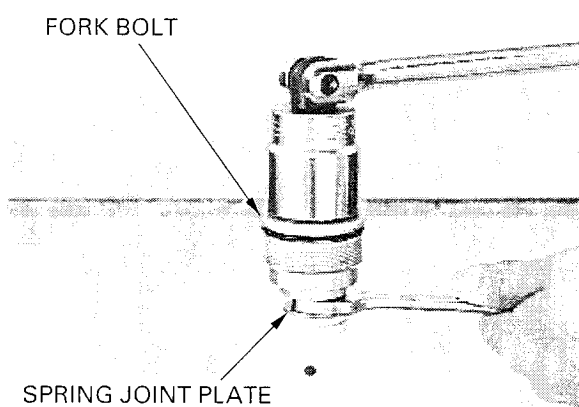

Remove the following:

- Spring joint plate
- Spring seat stopper
- Spring collar
- Fork spring

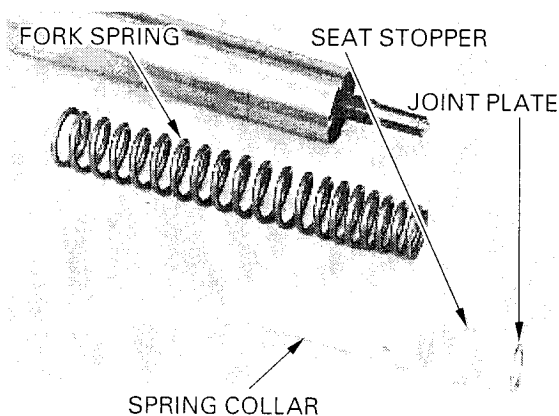




## FRONT WHEEL/SUSPENSION/STEERING

Pour out the fork fluid by pumping the fork tube several times.

Pour out the fork fluid from the fork damper by pumping the damper rod several times.

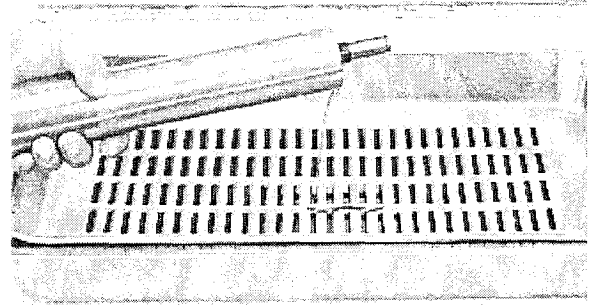


Hold the axle holder in a vice with soft jaws or a shop towel.


Hold the fork damper with the fork damper holder, then remove the fork socket bolt.

**TOOL:**


**Fork damper holder**                      07YMB-MCF0101

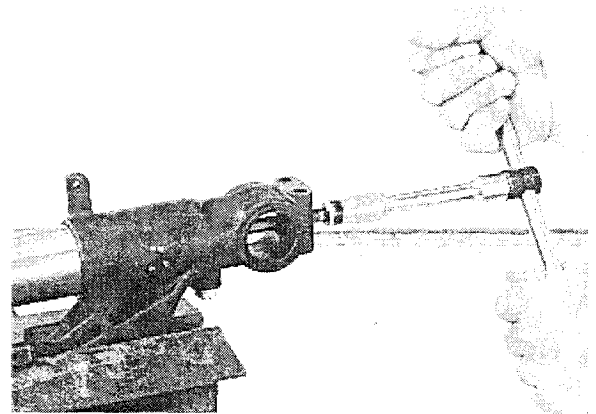

Remove the fork damper assembly and centering plate from the fork tube.

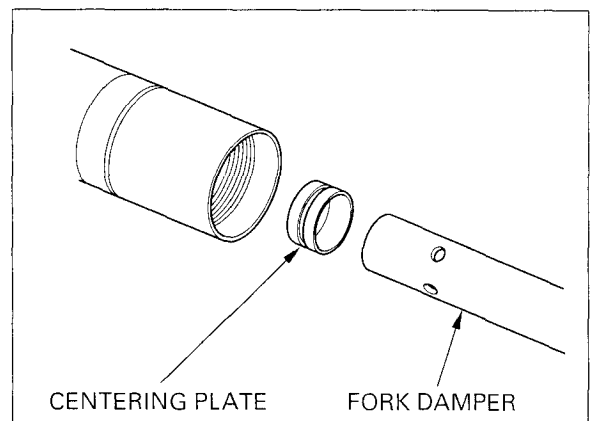

Remove the dust seal.

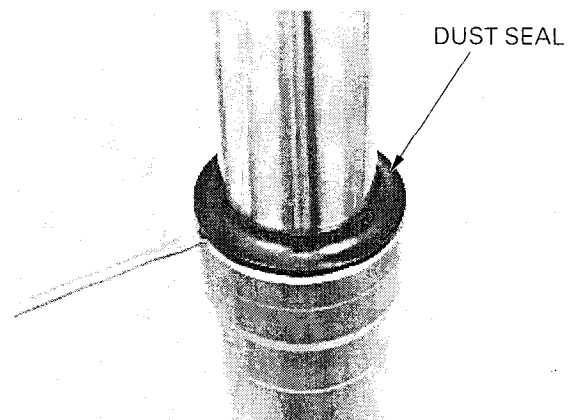


## FRONT WHEEL/SUSPENSION/STEERING

### Fork tube/slider/damper


Check the fork tube and fork slider for score marks, scratches, or excessive or abnormal wear. Replace any components which are worn or damaged.

Check the fork damper for damage.

FORK SLIDER

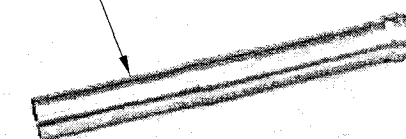


FORK DAMPER

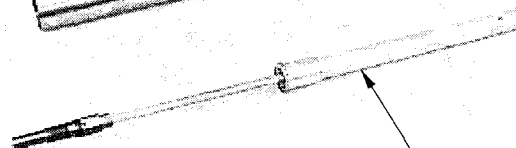

Check the oil lock valve for wear or damage.

Replace the fork damper assembly, if any component are damaged.

OIL LOCK VALVE

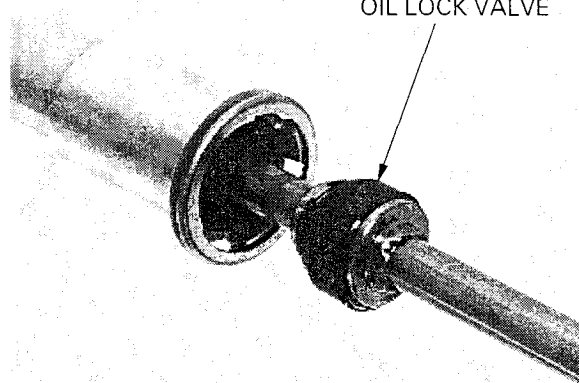


Place the fork tube in V-block and measure the runout.

Actual runout is 1/2 the total indicator reading.

**SERVICE LIMIT:** 0.20 mm (0.008 in)

DIAL GAUGE

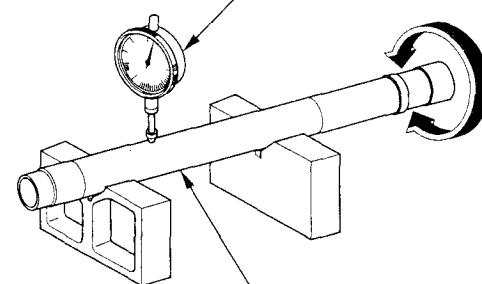


FORK TUBE

### Fork tube bushing

Visually inspect the slider and fork tube bushings. Replace the bushings if there is excessive scoring or scratching, or if the teflon is worn so that the copper surface appears on more than 3/4 of the entire surface.


Check the back-up ring; replace it if there is any distortion at the points shown.

BUSHING

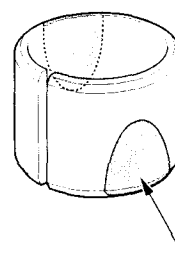


COPPER SURFACES

BACK-UP RING

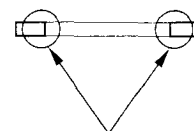

CHECK POINTS

## FRONT WHEEL/SUSPENSION/STEERING

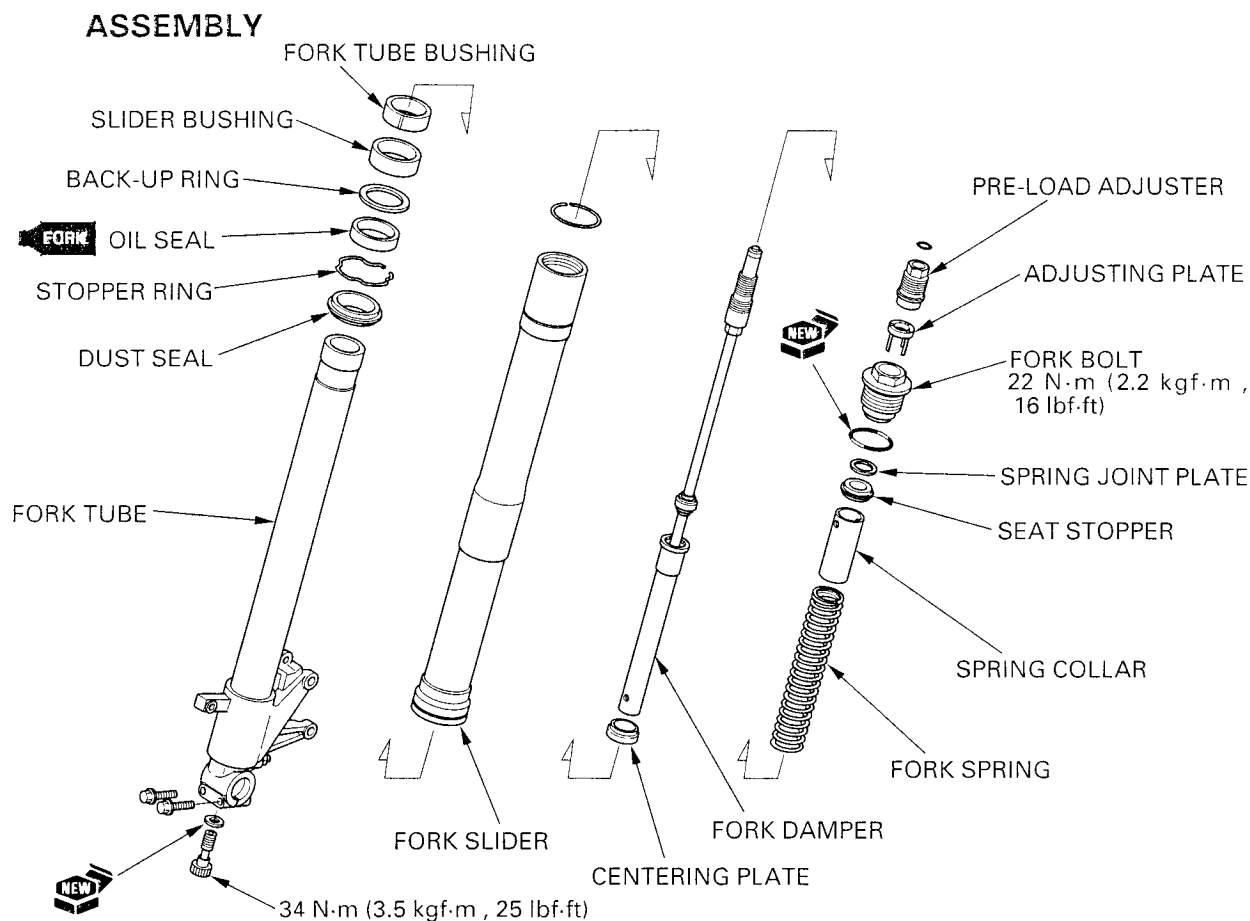


Before assembly, wash all parts with a high flash or non-flammable solvent and wipe them dry.

Install the oil seal with its marked side facing up.

Install the dust seal, stopper ring, new oil seal, back-up ring, and slider bushing. Install a new fork tube bushing.


Apply fork fluid to the oil seal lips. Install the fork tube into the fork slider.

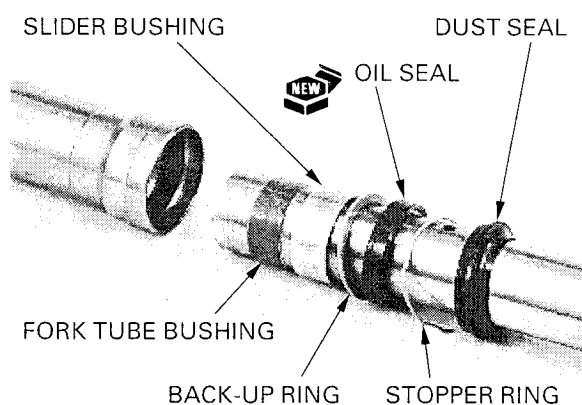

Drive the oil seal in using the special tools.


**TOOL:**  
**Oil seal driver**

07YMD-MCF0100 or  
07KMD-KZ30100 with  
07NMD-KZ30101  
(except U.S.A.)  
07NMD-KZ3010A  
(U.S.A. only)

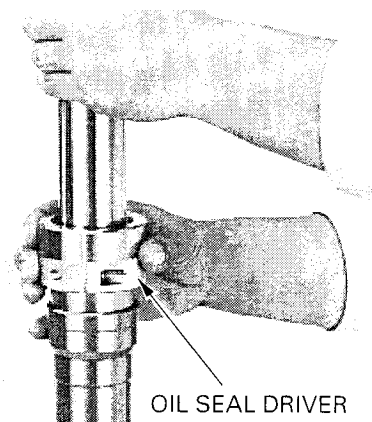


## FRONT WHEEL/SUSPENSION/STEERING


Install the stopper ring into the fork slider groove securely.

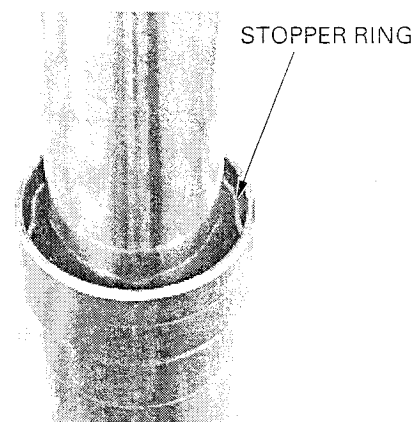


Install the dust seal.

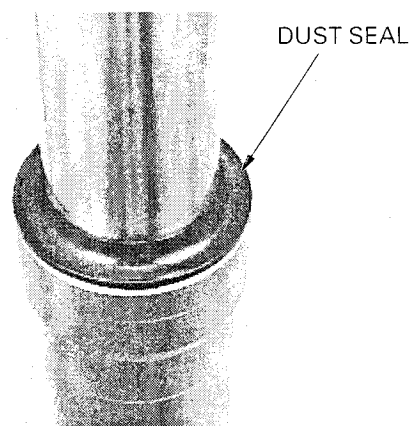

Install the centering plate onto the end of the fork damper.  
Install the fork damper assembly into the fork tube.

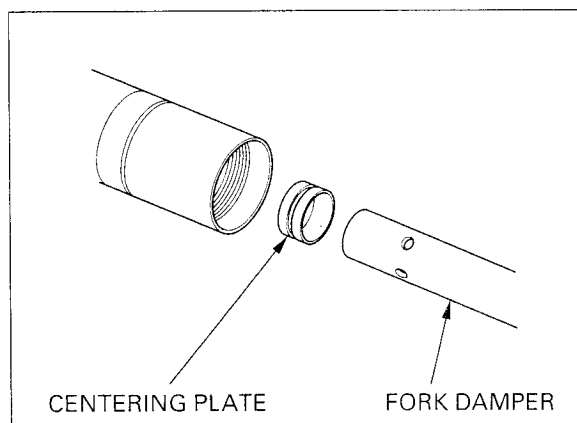

Apply a locking agent to the fork socket bolt threads.  
Install the socket bolt with a new sealing washer.

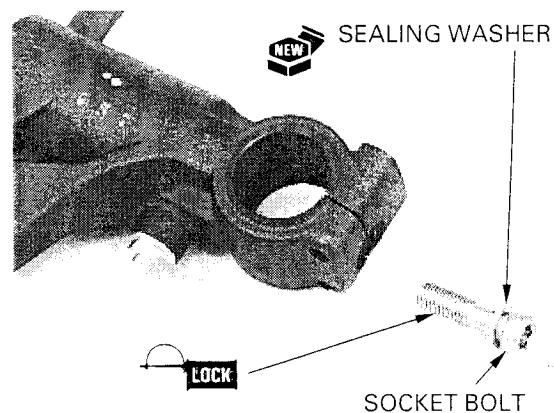

## FRONT WHEEL/SUSPENSION/STEERING


Hold the axle holder in a vise with soft jaws or a shop towel.

Hold the fork damper with the fork damper holder, then tighten the fork socket bolt to the specified torque.

### TOOL:

**Fork damper holder** 07YMB-MCF0101

**TORQUE:** 34 N·m (3.5 kgf·m, 25 lbf·ft)

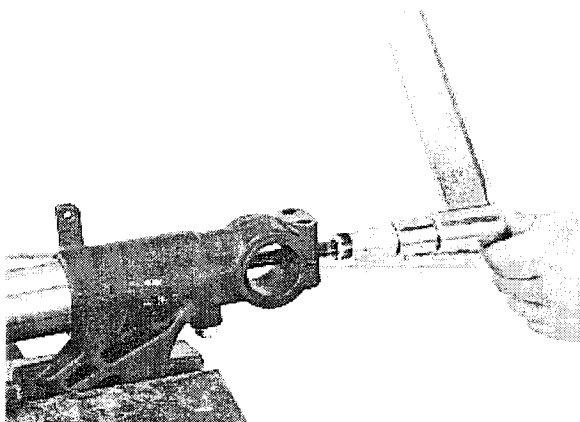


Pour the specified amount of recommended fork fluid into the fork tube.

### RECOMMENDED FORK FLUID:

Pro Honda Suspension Fluid SS-8


### FORK FLUID CAPACITY:

$488 \pm 2.5 \text{ cm}^3$  (16.5  $\pm$  0.08 US oz, 17.2  $\pm$  0.09 Imp oz)

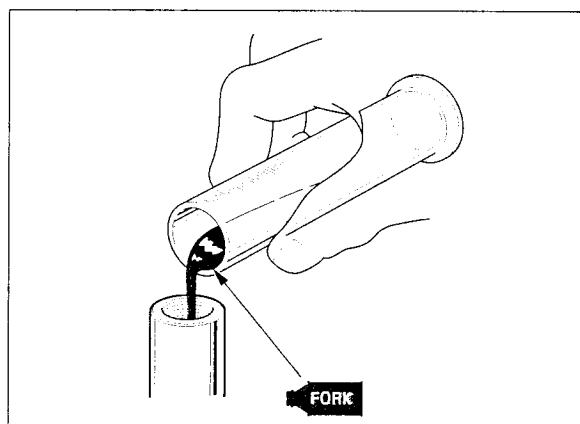

Bleed the air as follows:

1. Pump the damper rod slowly 8–10 times.
2. Extend the fork, cover the top of the fork slider with your hand and compress the fork slowly.
3. Pump the fork slider slowly 8–10 times.

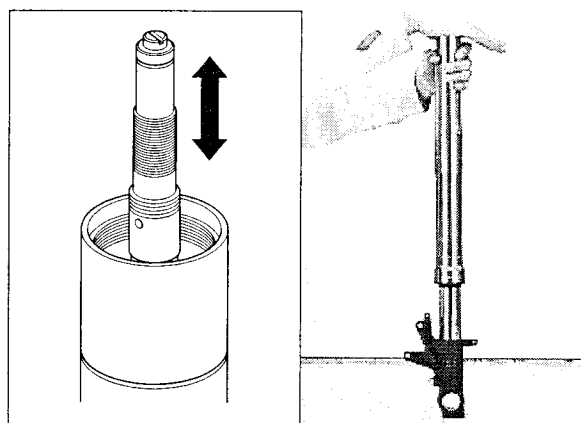


Slowly push down the fork slider, and gently set the dust seal onto the axle holder and leave it for 5 minutes.

*Be sure the oil level is the same in the both forks.*

After the oil level stabilizes, measure the oil level from top of fork slider.

**FORK OIL LEVEL:** 90 mm (3.5 in)

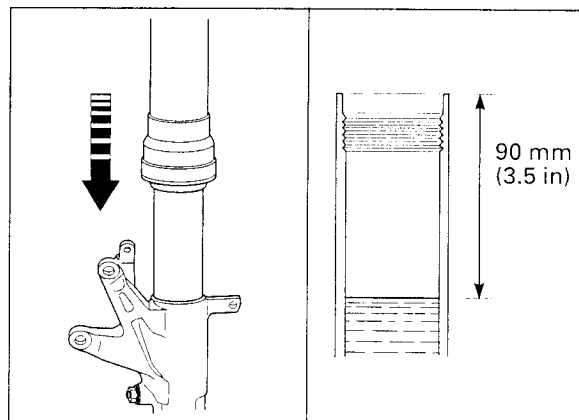




## FRONT WHEEL/SUSPENSION/STEERING

Pull the damper rod up and install the fork spring with the tapered end facing up.

Remove the following:

- Spring collar
- Spring seat stopper
- Spring joint plate

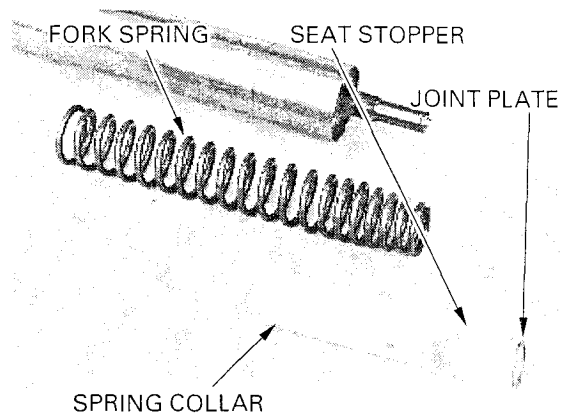


Install new O-ring onto the fork bolt.  
Apply fork fluid to the new O-ring.

Screw the fork bolt to the rebound adjuster until it seats.


Hold the rebound adjuster with a 17 mm spanner and tighten the fork bolt to the specified torque.

**TORQUE:** 34 N·m (3.5 kgf·m , 25 lbf·ft)

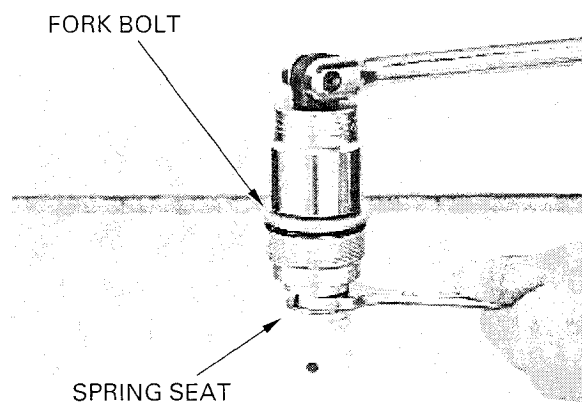


Screw the fork bolt into the fork tube.

Install the adjusting plate into the fork bolt aligning its pins with the holes in the fork bolt.

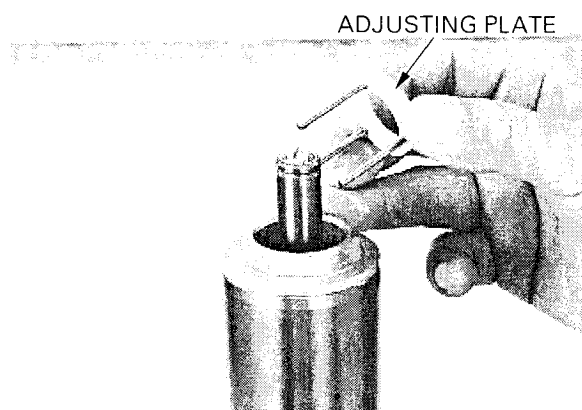


Apply fork fluid to the pre-load adjuster O-ring.  
Screw the pre-load adjuster onto the rebound adjuster.

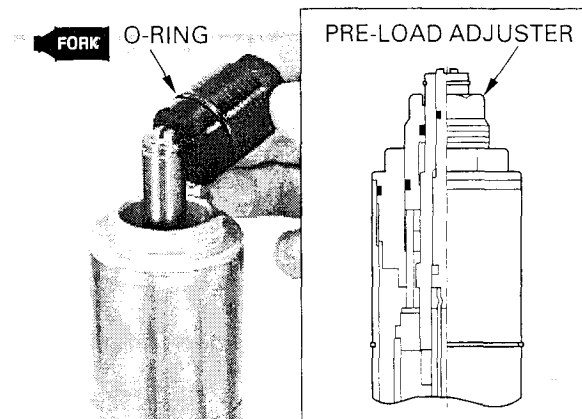


## FRONT WHEEL/SUSPENSION/STEERING

Install the stop ring into the groove of the rebound adjuster.  
Install the handlebar stop ring.

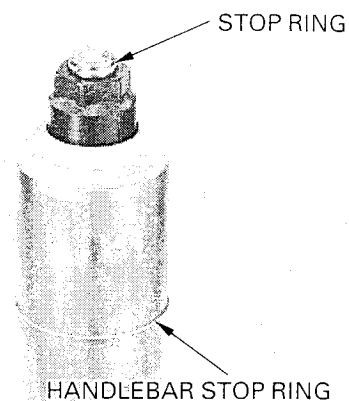


### INSTALLATION

Install the fork leg through the bottom bridge, handlebar and top bridge.  
Position the top end of the fork tube flush with the upper surface of the top bridge as shown.

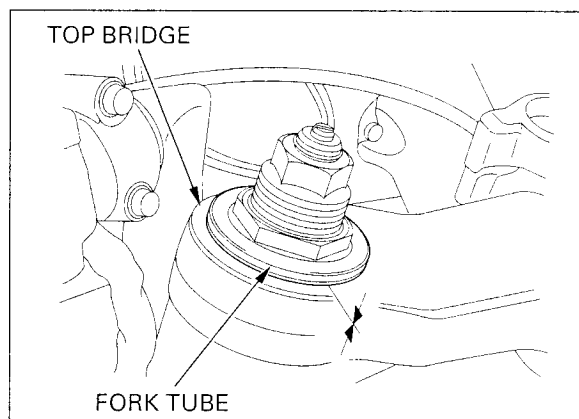

Tighten the bottom bridge pinch bolts to the specified torque.

**TORQUE:** 26 N·m (2.7 kgf·m , 20 lbf·ft)

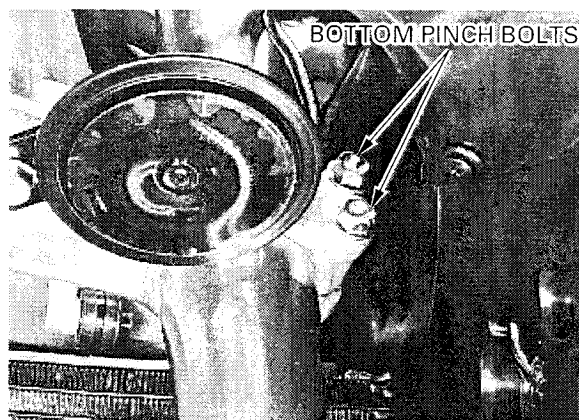

If the fork bolt was loosened, tighten it to the specified torque.

**TORQUE:** 22 N·m (2.2 kgf·m , 16 lbf·ft)


Tighten the top bridge pinch bolt to the specified torque.

**TORQUE:** 22 N·m (2.2 kgf·m , 16 lbf·ft)

Tighten the handlebar pinch bolt to the specified torque.

**TORQUE:** 26 N·m (2.7 kgf·m , 20 lbf·ft)

Install the front wheel (page 13-13).

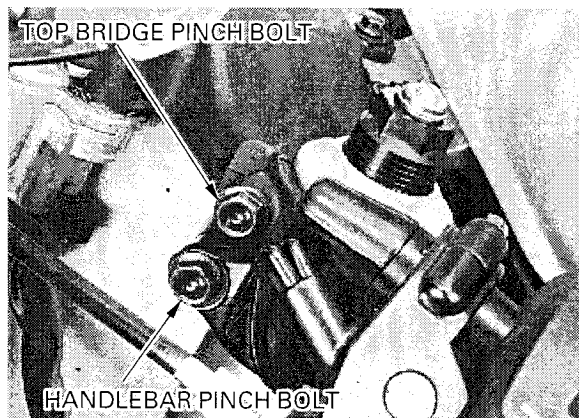


## STEERING STEM

### REMOVAL

Remove the following:

- Front wheel (page 13-9)
- Upper cowl (page 2-11)


Remove the bolt and horn unit.

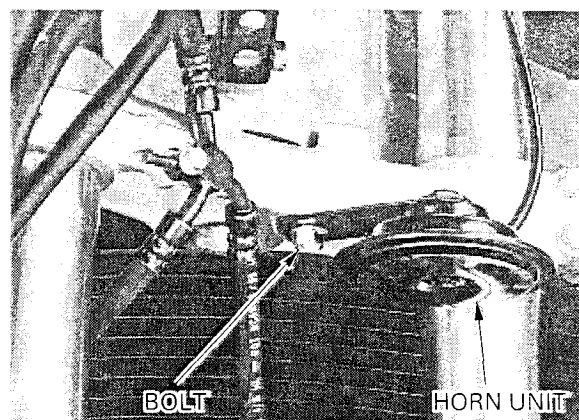

Remove the following:


- Handlebar (page 13-3)
- Fork legs (page 13-15)

Remove the stem nut and the top bridge.

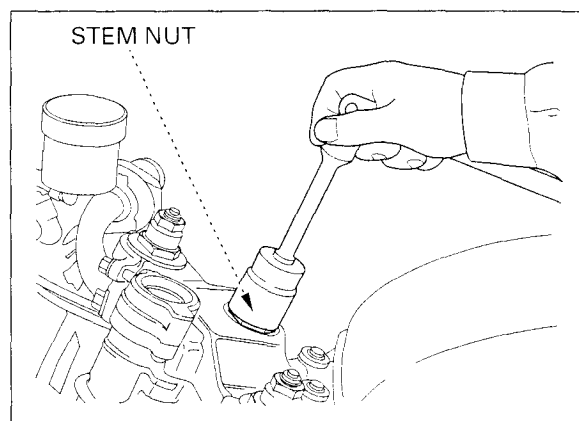

Straighten the tabs of the lock washer.

Remove the lock nut and lock washer.

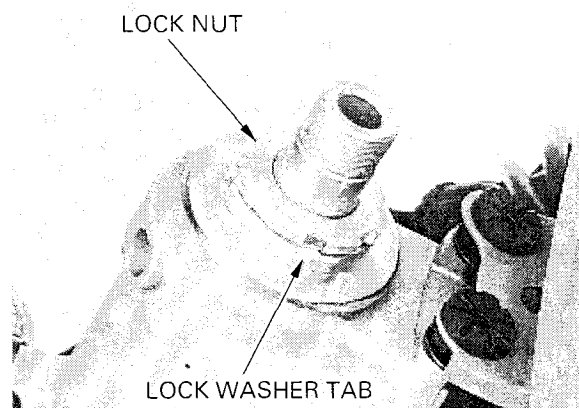


Remove the steering stem bearing adjusting nut using the special tool.

#### TOOL:

**Steering stem socket**


07916-3710101 or  
07916-3710100  
(U.S.A. only)

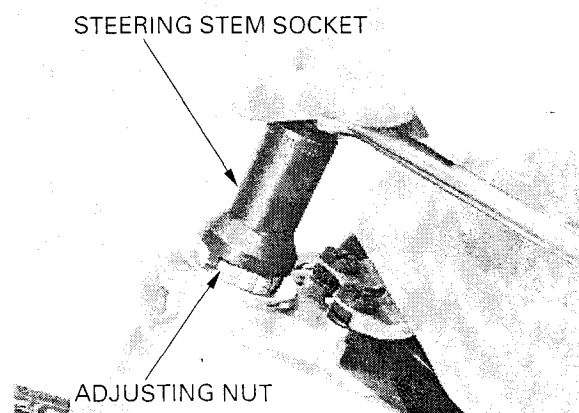

## FRONT WHEEL/SUSPENSION/STEERING

Remove the following:

- Dust seal
- Upper bearing inner race
- Upper bearing
- Steering stem
- Lower bearing

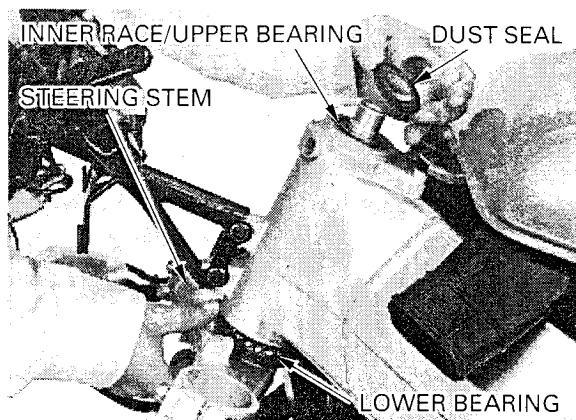


### BEARING REPLACEMENT

**Except U.S.A.:**

*Always replace the bearings and races as a set.* Replace the races using the Ball Race Remover Set as described in the following procedure.

#### TOOLS:

<b>Ball race remover set</b>	07946-KM90001
— Driver attachment, A (1)	07946-KM90100
— Driver attachment, B (2)	07946-KM90200
— Driver shaft assembly (3)	07946-KM90300
— Bearing remover, A (4)	07946-KM90401
— Bearing remover, B (5)	07946-KM90500
— Assembly base (6)	07946-KM90600

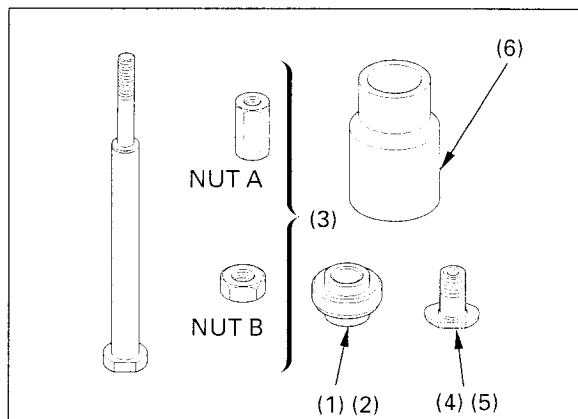


Install the ball race remover into the head pipe as shown.

Align bearing remover A with the groove in the steering head.

Lightly tighten nut B with a wrench.

Holding the driver shaft with a wrench, turn nut A gradually to remove the upper outer race.


*Note the installation direction of the assembly base.*

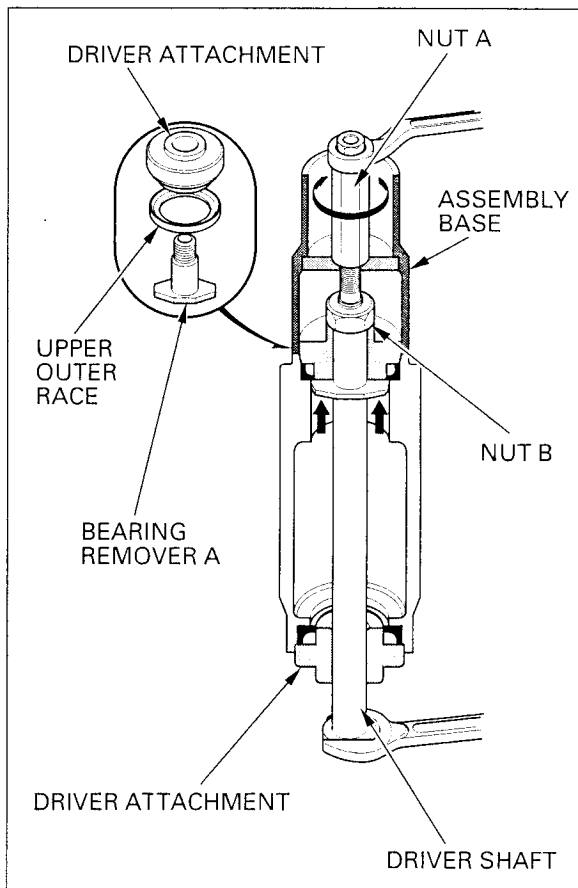

**FRONT WHEEL/SUSPENSION/STEERING**


Install ball race remover B as shown and remove the lower outer race using the same procedure as for the upper outer race.

Align the bearing remover with the groove in the steering head.

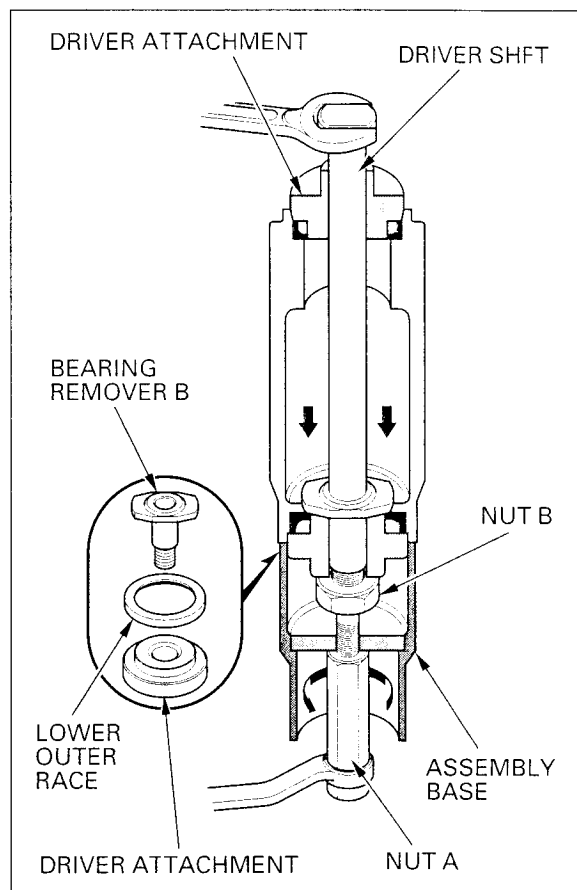

Install a new upper outer race and the ball race remover as shown.

Hold the driver shaft with a wrench and turn nut A gradually until the groove in driver attachment A aligns with the upper end of the steering head. This will allow you to install the upper outer race.

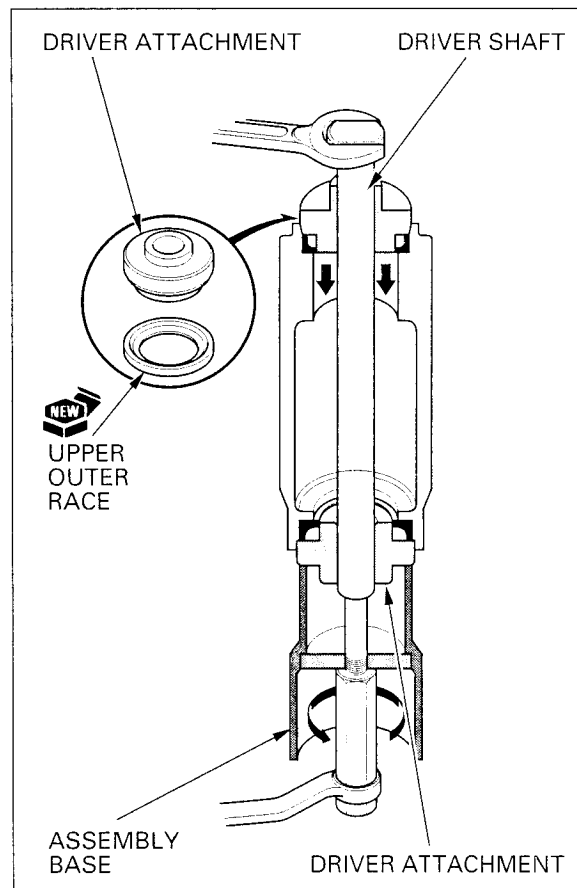




**FRONT WHEEL/SUSPENSION/STEERING**

Install a new lower outer race and ball race remover as shown.

Holding the driver shaft with a wrench, turn nut A gradually until the groove in driver attachment B aligns with the upper end of the steering head. This will allow you to install the lower outer race.

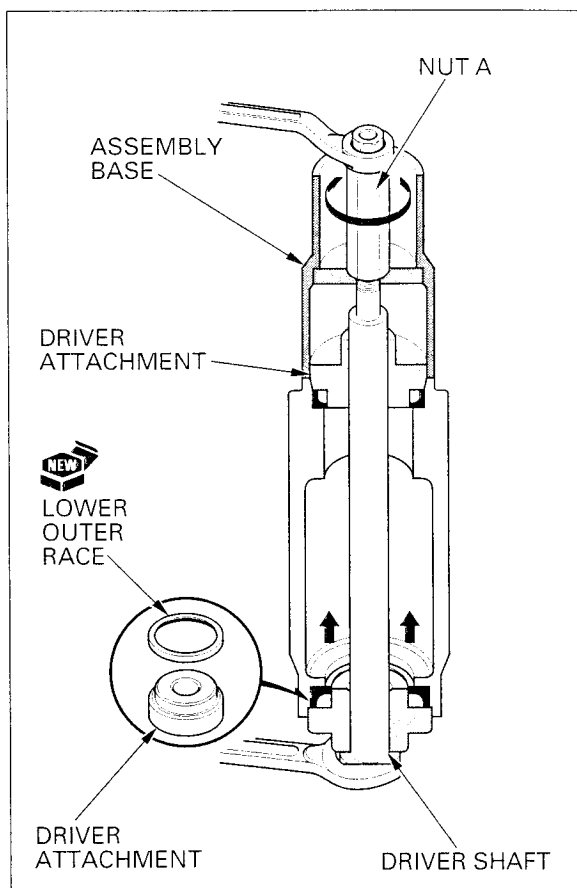**U.S.A. only:**

Replace the steering head bearing outer races using the special tools listed below.


**TOOLS:**

<b>Main bearing driver attachment</b>	07946-ME90200
<b>Fork seal driver weight</b>	07947-KA50100
<b>Oil seal driver</b>	07965-MA60000
<b>Installer shaft</b>	07VMF-KZ30200
<b>Installer attachment A</b>	07VMF-MAT0100
<b>Installer attachment B</b>	07VMF-MAT0200
<b>Remover attachment A</b>	07VMF-MAT0300
<b>Remover attachment B</b>	07VMF-MAT0400

Install the special tools into the steering head pipe as shown.

Align remover attachment A with the groove in the steering head.

While holding the installer shaft with the wrench, turn the upper nut gradually to remove the upper bearing outer race.

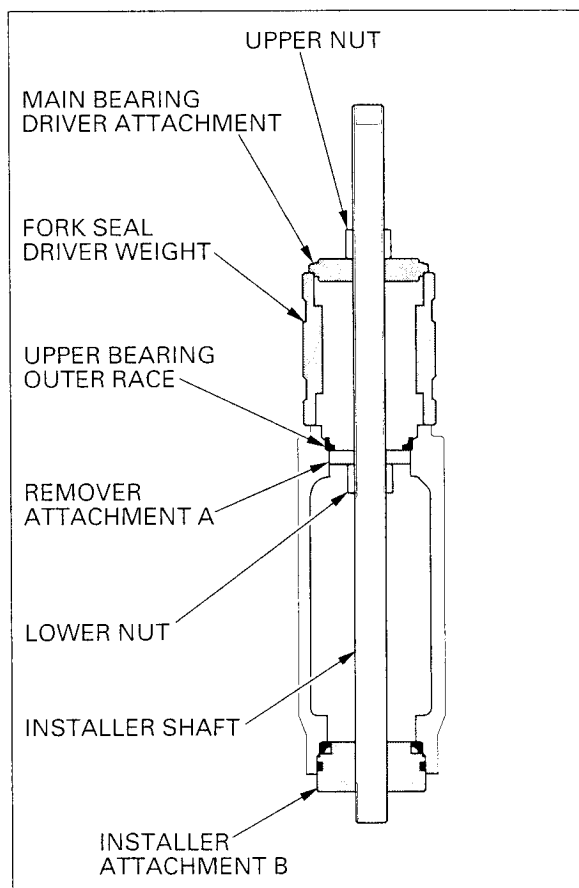


## FRONT WHEEL/SUSPENSION/STEERING

*Be careful not to drop the attachments into the frame.*

Install the special tools into the steering head pipe as shown.


Align remover attachment B with the groove in the steering head.

While holding the installer shaft with the wrench, turn the lower nut gradually to remove the lower bearing outer race.

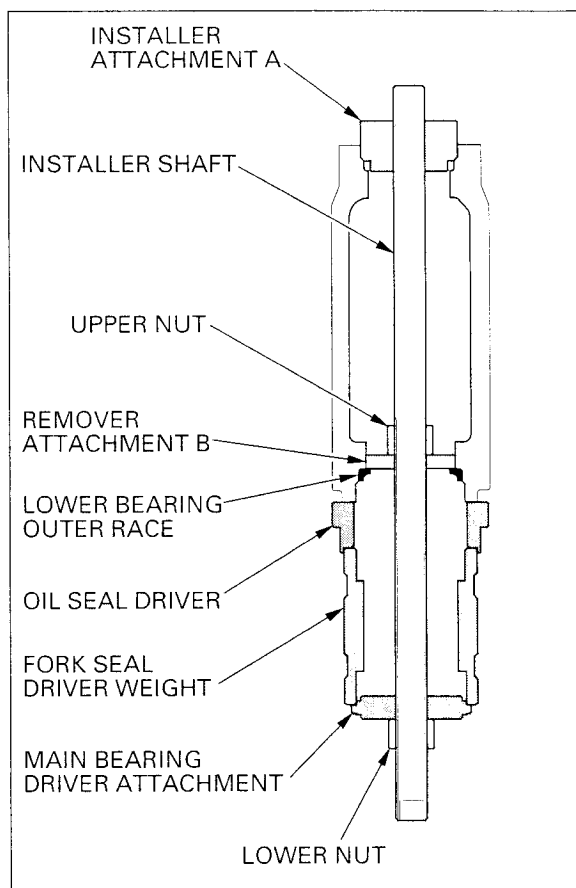

Install a new upper bearing outer race and the special tools as shown.


While holding the installer shaft with the wrench, turn the lower nut gradually until the groove in installer attachment A aligns with the upper end of the steering head. This will allow you to install the upper bearing outer race.

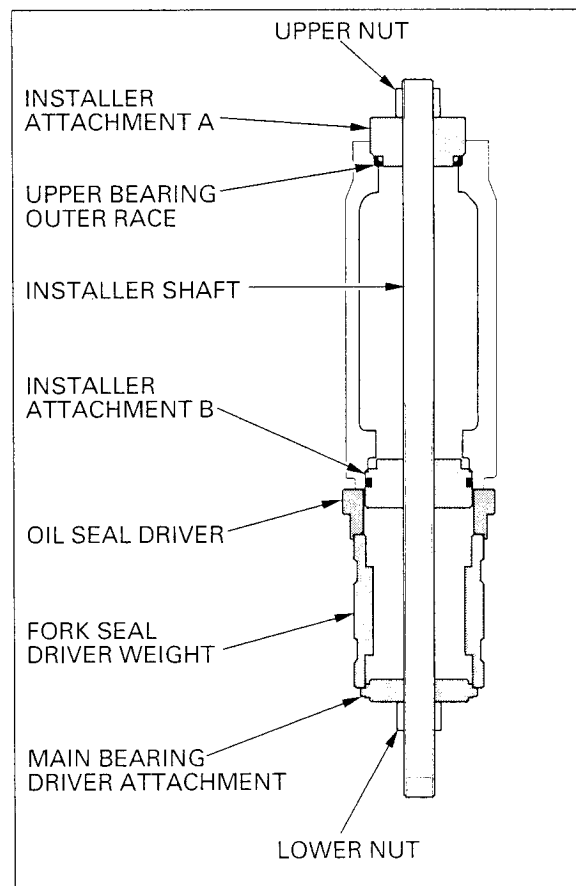

## FRONT WHEEL/SUSPENSION/STEERING

Install a new lower bearing outer race and the special tools as shown.


While holding the installer shaft with the wrench, turn the upper nut gradually until the groove in installer attachment B aligns with the lower end of the steering head. This will allow you to install the lower bearing outer race.

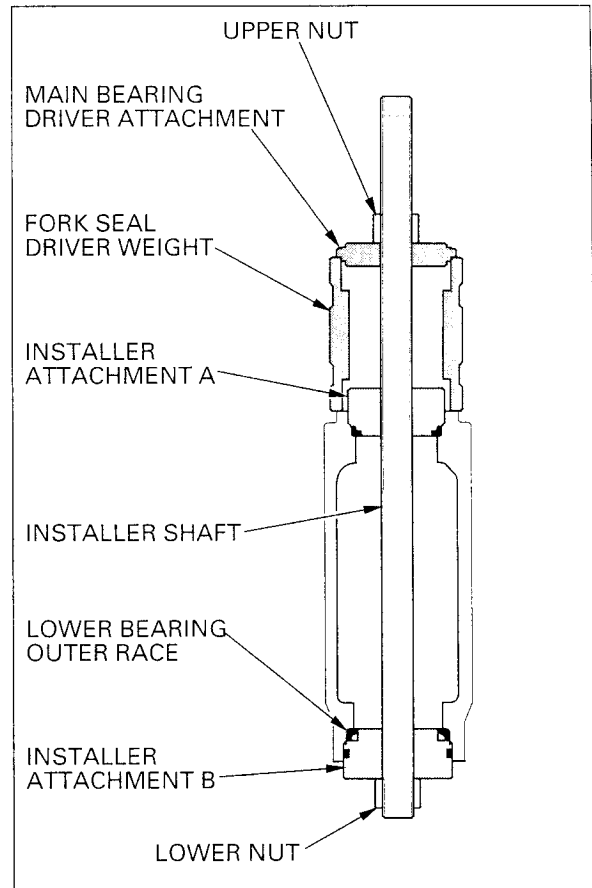

Temporarily install the steering stem nut onto the stem to prevent the threads from being damaged when removing the lower bearing inner race from the stem.

Remove the lower bearing inner race with a chisel or equivalent tool, being careful not to damage the stem.

Remove the dust seal.

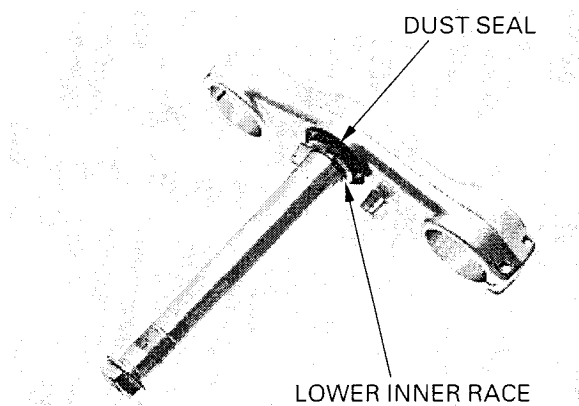


Apply grease to new dust seal lips and install it over the steering stem.




Install a new lower bearing inner race using a special tool and a hydraulic press.

### TOOL:

**Steering stem driver** 07946-MB00000

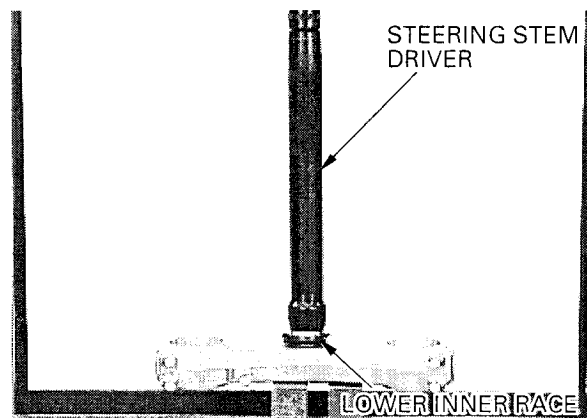


## INSTALLATION

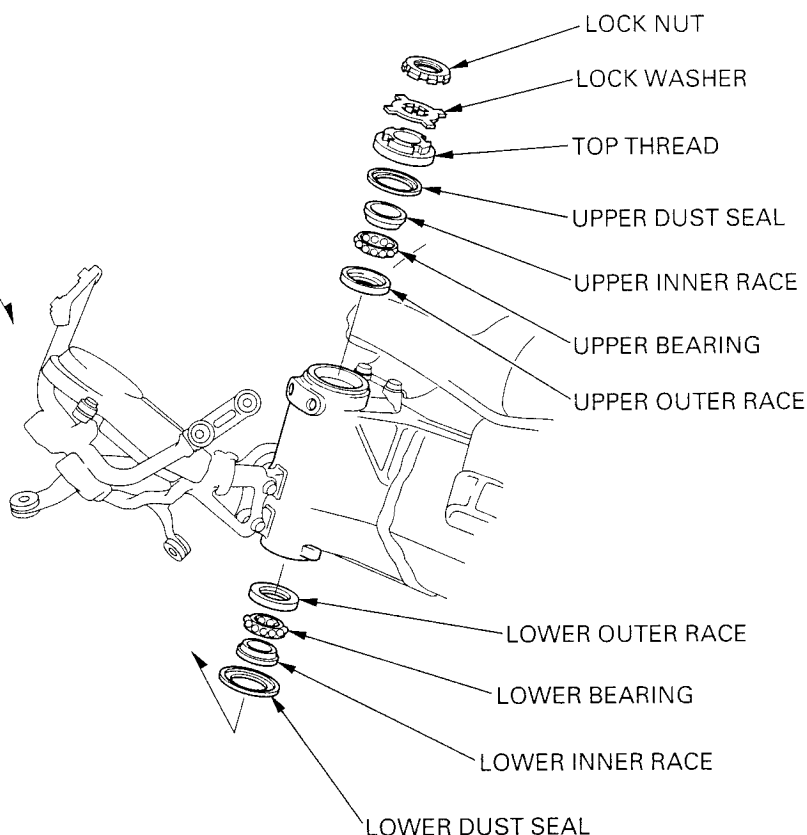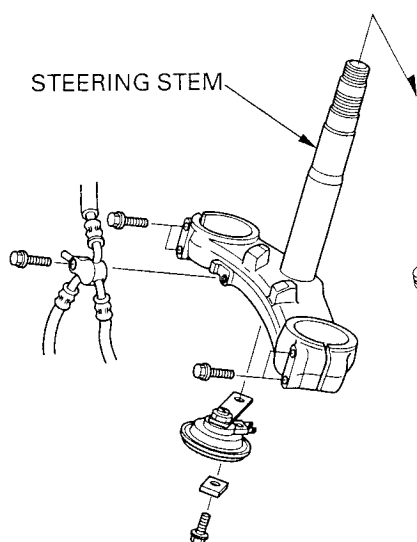

Apply grease to upper and lower bearings and bearing races.

Install the lower bearing onto the steering stem.  
Insert the steering stem into the steering head pipe.

Install upper bearing, inner race and dust seal.

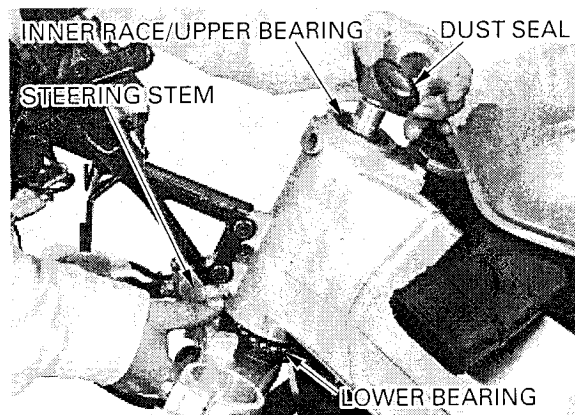


Apply oil to the bearing adjustment nut threads.  
Install and tighten the stem bearing adjusting nut to the initial torque.

### TOOL:

**Steering stem socket** 07916-3710101 or  
07916-3710100  
(U.S.A. only)

**TORQUE:** 29 N·m (3.0 kgf·m , 22 lbf·ft)

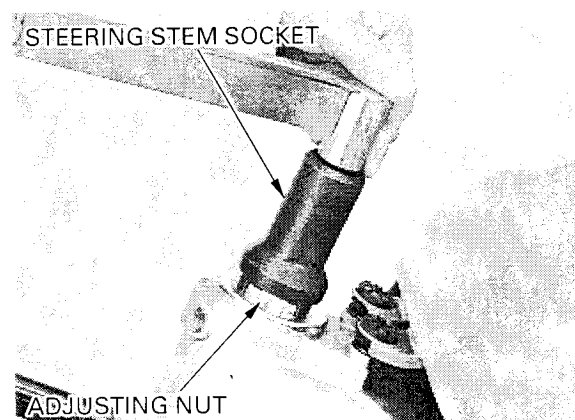

## FRONT WHEEL/SUSPENSION/STEERING

Move the steering stem right and left, lock-to-lock, five times to seat the bearings.


Make sure that the steering stem moves smoothly, without play or binding; then loosen the bearing adjusting nut.



Retighten the bearing adjusting nut to the specified torque.


**TORQUE:** 29 N·m (3.0 kgf·m , 22 lbf·ft)

Recheck that the steering stem moves smoothly without play or binding.

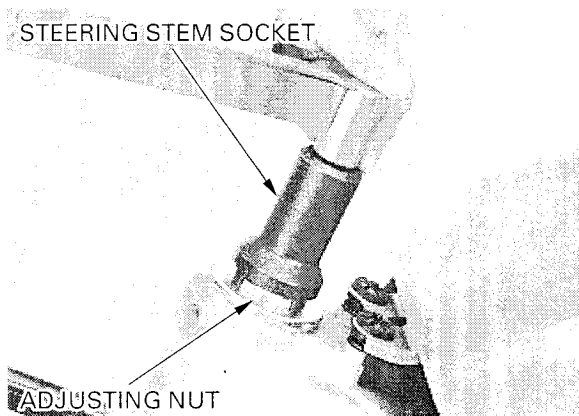

Install the new lock washer onto the steering stem.


Align the tabs of the lock washer with the grooves in the adjustment nut and bend two opposite tabs (shorter) down into the adjustment nut groove.

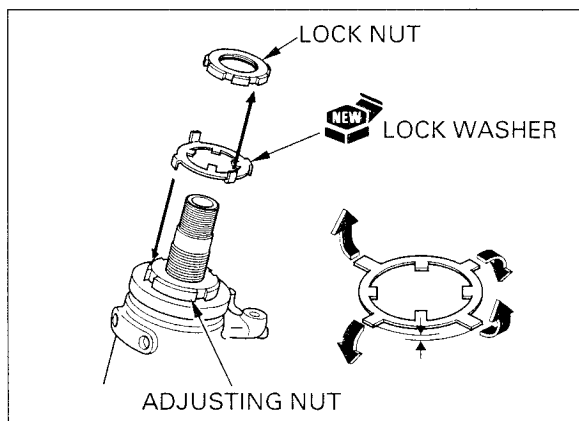

Install and finger tighten the lock nut.

Hold the lock nut and further tighten the lock nut within 1/4 turn (90°) enough to align its grooves with the lock washer tabs.

Bend the lock washer tabs up into the lock nut groove.

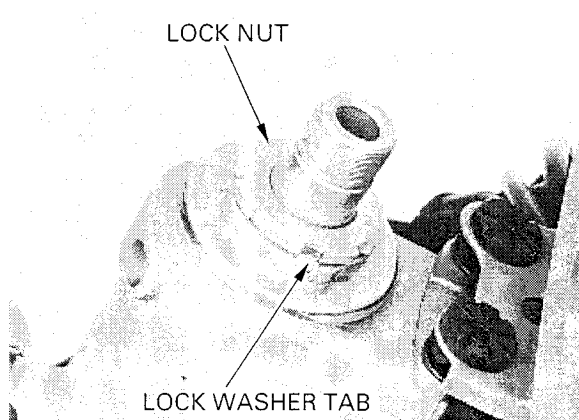




## FRONT WHEEL/SUSPENSION/STEERING

Install the following:

- Handlebar (page 13-5)
- Fork legs (page 13-24)

Install the top bridge and steering stem nut.  
Tighten the steering stem nut to the specified torque.


**TORQUE:** 103 N·m (10.5 kgf·m , 76 lbf·ft)

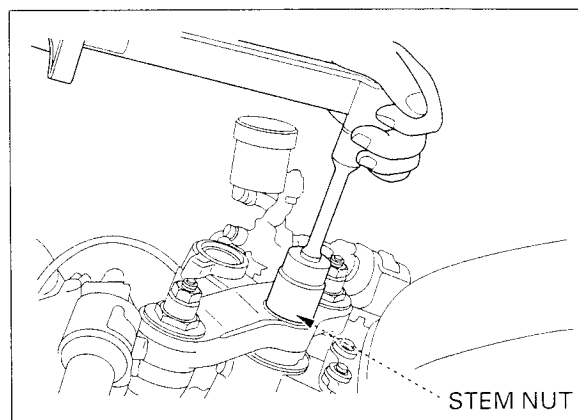

Install the horn unit assembly and tighten the mounting bolt.

Install the following:

- Front wheel (page 13-13)
- Upper cowl (page 2-11)

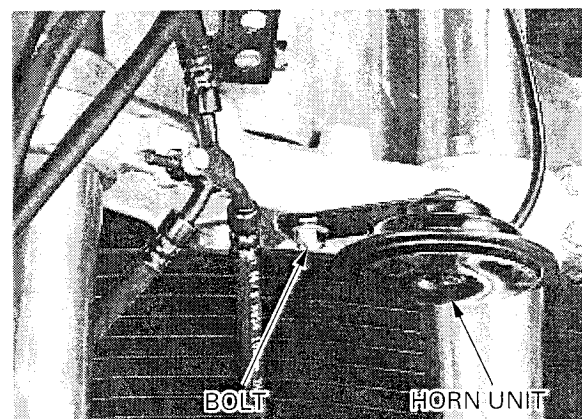

### STEERING HEAD BEARING PRE-LOAD


Jack-up the motorcycle to raise the front wheel off the ground.

Position the steering stem to the straight ahead position.

*Make sure that there is no cable or wire harness interference.*

Hook a spring scale to the fork tube and measure the steering head bearing pre-load.

The pre-load should be within 10–15 N (1.0–1.5 kgf). If the readings do not fall within the limits, lower the front wheel to the ground and adjust the steering bearing adjusting nut.

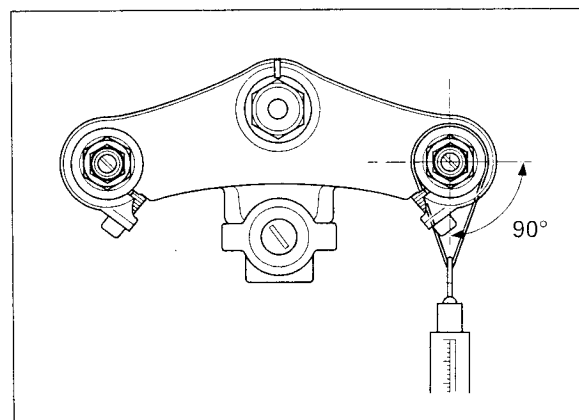

# 14. REAR WHEEL/SUSPENSION

SERVICE INFORMATION	14-1	SUSPENSION LINKAGE	14-9
TROUBLESHOOTING	14-2	SHOCK ABSORBER	14-11
REAR WHEEL	14-3	SWINGARM	14-14

## SERVICE INFORMATION

### GENERAL

- When servicing the rear wheel, support the motorcycle using a safety stand or hoist.
- A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.
- After rear wheel installation, check the brake operation by applying the brake pedal.
- The shock absorber contains nitrogen under high pressure. Do not allow fire or heat near the shock absorber.
- Before disposal of the shock absorber, release the nitrogen (page 14-13).
- Refer to section 15 for brake system information.
- Use only tires marked "TUBELESS" and tubeless valves on rim marked "TUBELESS TIRE APPLICABLE".
- Use genuine Honda replacement bolts and nuts for all suspension pivot and mounting point.

### SPECIFICATIONS

Unit: mm (in)

ITEM			STANDARD	SERVICE LIMIT
Minimum tire tread depth				2.0 (0.08)
Cold tire pressure	Up to 90 kg (200 lb) load		290 kPa (2.90 kgf/cm <sup>2</sup> , 42 psi)	
	Up to maximum weight capacity		290 kPa (2.90 kgf/cm <sup>2</sup> , 42 psi)	
Axle runout				0.20 (0.008)
Wheel rim runout	Radial			2.0 (0.08)
	Axial			2.0 (0.08)
Drive chain	Size/link	DID	D.I.D. 50VA8 C1	
		RK	RK GB50HFOZ5	
	Slack		40—50 (1.6—2.0)	50 (2.0)
Shock absorber	Spring adjuster standard position		4th groove	
	Tension adjuster initial setting		2 turns from full hard	
	Compression adjuster initial setting		1 turn from full hard	

## REAR WHEEL/SUSPENSION

### TORQUE VALUES

Rear axle nut	113 N·m (11.5 kgf·m , 83 lbf·ft)	U-nut
Rear brake disc mounting bolt	42 N·m (4.3 kgf·m , 31 lbf·ft)	ALOC bolt
Driven sprocket nut	64 N·m (6.5 kgf·m , 47 lbf·ft)	U-nut
Shock absorber upper mounting nut	44 N·m (4.5 kgf·m , 33 lbf·ft)	U-nut
Shock arm plate nut	44 N·m (4.5 kgf·m , 33 lbf·ft)	U-nut
Shock link nut (frame side)	44 N·m (4.5 kgf·m , 33 lbf·ft)	U-nut
Swingarm pivot nut	118 N·m (12.0 kgf·m , 87 lbf·ft)	U-nut
Swingarm pivot pinch bolt	26 N·m (2.7 kgf·m , 20 lbf·ft)	
Drive chain slider bolt	9 N·m (0.9 kgf·m , 6.5 lbf·ft)	
Main footpeg bracket socket bolt	39 N·m (4.0 kgf·m , 29 lbf·ft)	
Drive sprocket special bolt	54 N·m (5.5 kgf·m , 40 lbf·ft)	

### TOOLS

Driver	07749-0010000
Attachment, 42 × 47 mm	07746-0010300
Attachment, 52 × 55 mm	07746-0010400
Attachment, 24 × 26 mm	07746-0010700
Attachment, 22 × 24 mm	07746-0010800
Attachment, 40 × 42 mm	07946-0010900
Pilot, 17 mm	07746-0040400
Pilot, 25 mm	07746-0040600
Bearing remover shaft	07746-0050100
Bearing remover head, 25 mm	07746-0050800
Driver shaft	07946-MJ00100
Driver attachment handle	07949-3710001
Needle bearing remover	07LMC-KV30100
Driver pilot, 32 × 50 mm	07MAD-PR90200
Driver attachment, 25 × 38.5 mm	07YMD-MCJ0100

## TROUBLESHOOTING

### Soft suspension

- Weak shock absorber spring
- Incorrect suspension adjustment
- Oil leakage from damper unit
- Tire pressure too low

### Hard suspension

- Damaged shock absorber mounting bearing
- Bent damper rod
- Damaged suspension linkage bearings
- Damaged swingarm pivot bearings
- Bent swingarm pivot
- Incorrect suspension adjustment
- Tire pressure too high

### Steers to one side or does not track straight

- Bent rear axle
- Axle alignment/chain adjustment not equal on both sides

### Rear wheel wobbling


- Bent rim
- Worn rear wheel bearings
- Faulty tire
- Unbalanced tire and wheel
- Tire pressure too low
- Faulty swingarm pivot bearings

## REAR WHEEL

### REMOVAL


Support the motorcycle using a safety stand or hoist, raise the rear wheel off the ground.

Remove the axle nut and drive chain adjusting plate.

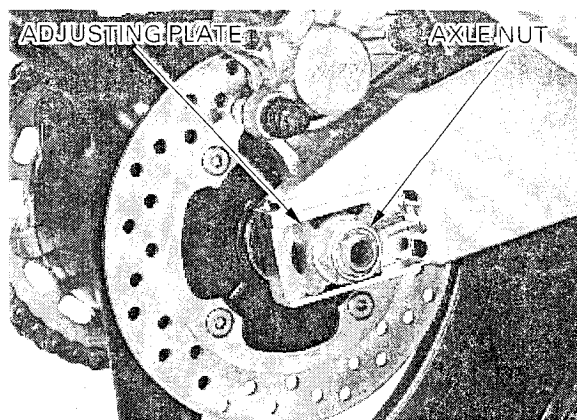


Push the rear wheel forward.  
Derail the drive chain from the driven sprocket.

Remove the axle and drive chain adjusting plate from the left side and remove the rear wheel.

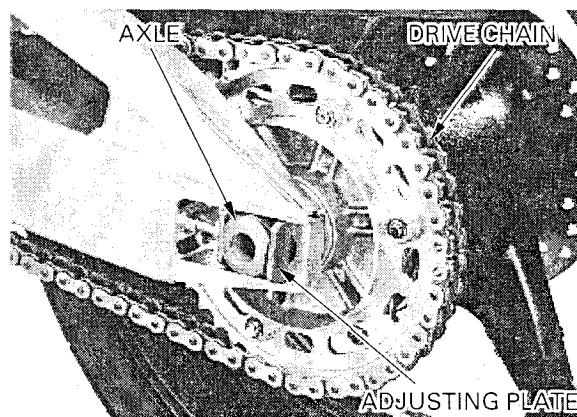

Remove the side collars.

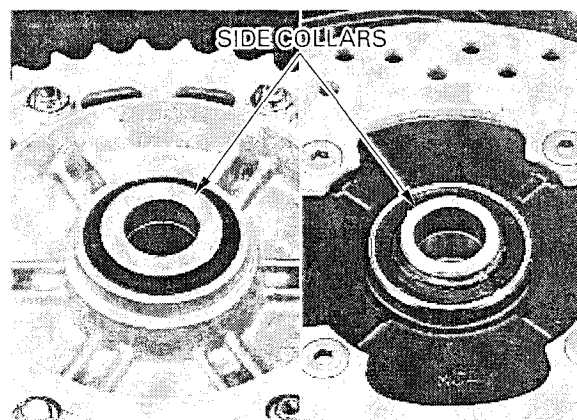


### INSPECTION

#### Axle

Place the axle in V-blocks and measure the runout. Actual runout is 1/2 the total indicator reading.

**SERVICE LIMIT:** 0.20 mm (0.008 in)

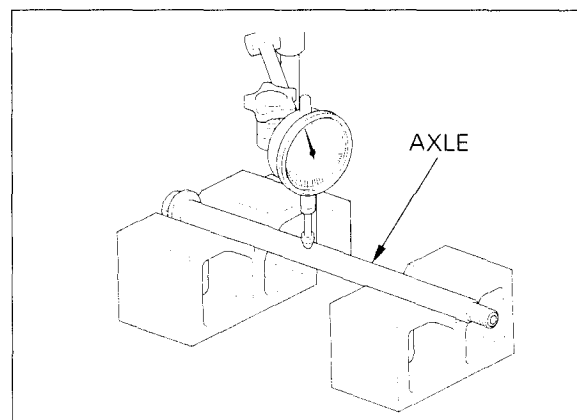


## REAR WHEEL/SUSPENSION

### Wheel bearing

Turn the inner race of each bearing with your finger. Bearings should turn smoothly and quietly. Also check that the bearing outer race fits tightly in the hub.

*Replace the wheel bearings in pairs.*

Remove and discard the bearings if the races do not turn smoothly and quietly, or if they fit loosely in the hub.

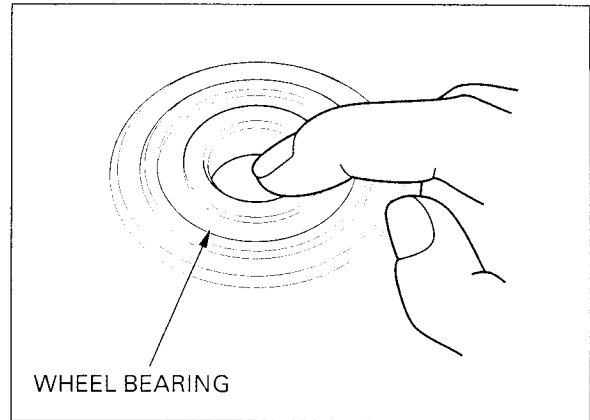

### Wheel rim runout


Check the rim runout by placing the wheel in a turning stand.

Spin the wheel slowly and read the runout using a dial indicator.

Actual runout is 1/2 the total indicator reading.

**SERVICE LIMITS: Radial:** 2.0 mm (0.08 in)

**Axial:** 2.0 mm (0.08 in)

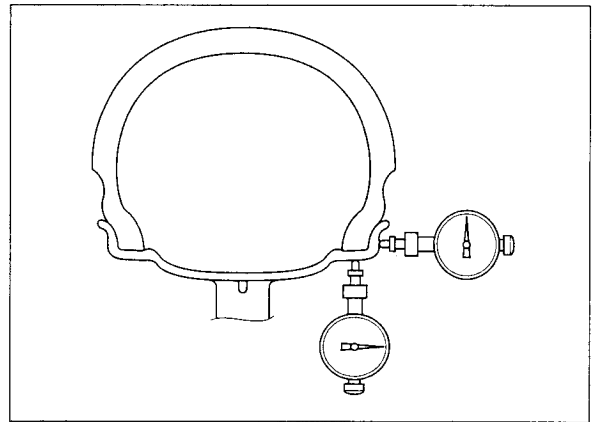


### Driven sprocket

Check the condition of the final driven sprocket teeth.

Replace the sprocket if worn or damaged.

- If the final driven sprocket requires replacement, inspect the drive chain and drive sprocket.
- Never install a new drive chain on a worn sprocket or a worn chain on new sprockets. Both chain and sprocket must be in good condition or the replacement chain or sprocket will wear rapidly.

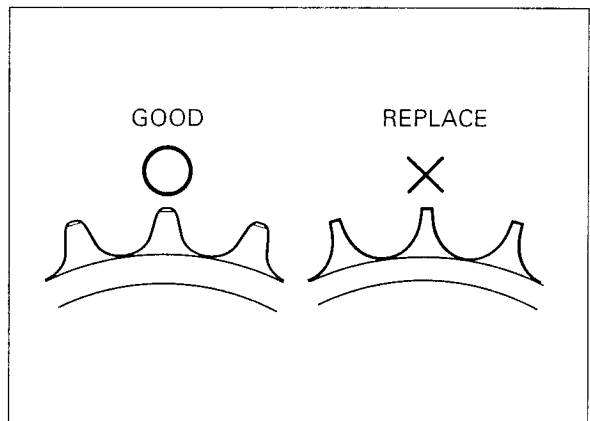


### Wheel balance

See page 13-11 for wheel balance.

### DISASSEMBLY

Remove the bolts and brake disc.


Remove the right dust seal.

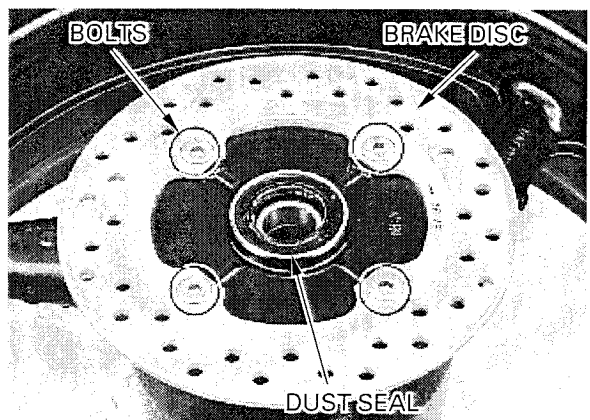




*If you will be disassemble the driven flange, loosen the driven sprocket nuts before removing the driven flange from the wheel hub.*

Remove the driven flange assembly from the left wheel hub.

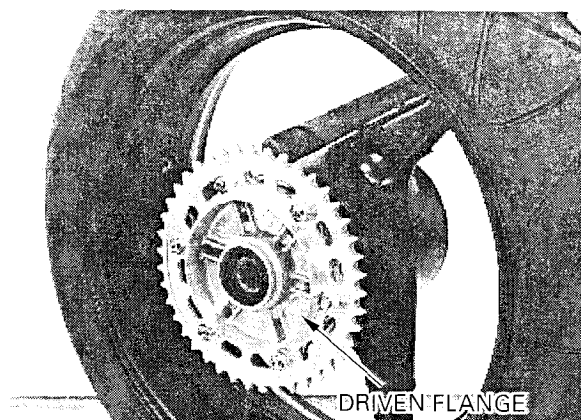


Remove the wheel damper rubbers.  
Remove the O-ring.

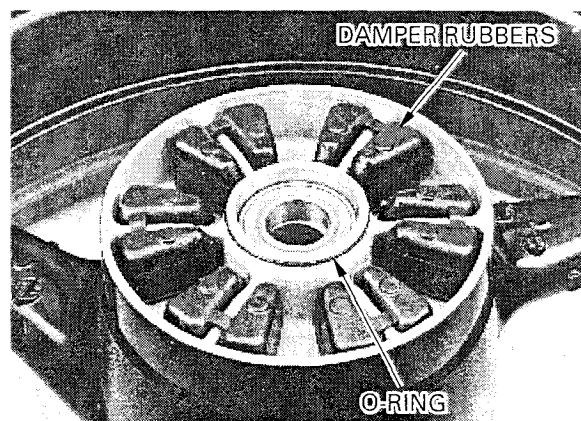

**Driven flange bearing removal**  
Loosen the driven sprocket nuts.


Remove the driven flange from the wheel hub, then remove the driven sprocket nuts and sprocket.

Remove the dust seal.

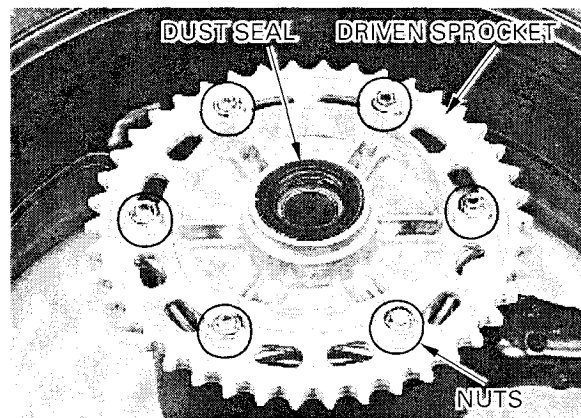

Remove the driven flange collar.

Drive out the driven flange bearing.

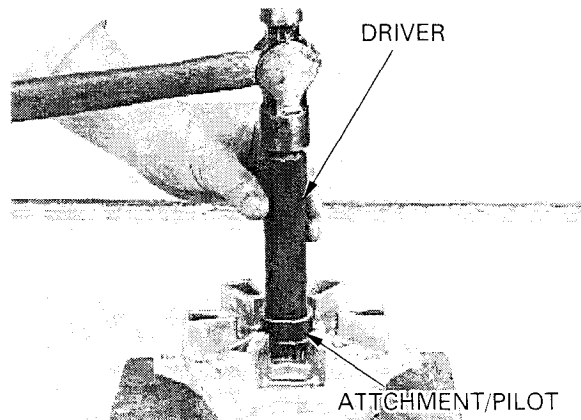


## REAR WHEEL/SUSPENSION

### Wheel bearing removal


Install the bearing remover head into the bearing. From the opposite side install the bearing remover shaft and drive the bearing out of the wheel hub. Remove the distance collar and drive out the other bearing.

### TOOLS:

Bearing remover head, 25 mm 07746-0050800  
Bearing remover shaft 07746-0050100

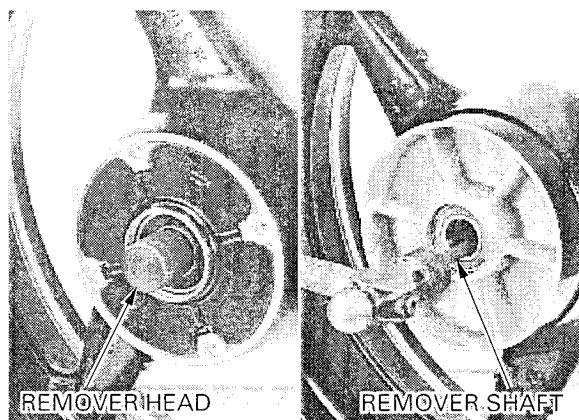

### ASSEMBLY

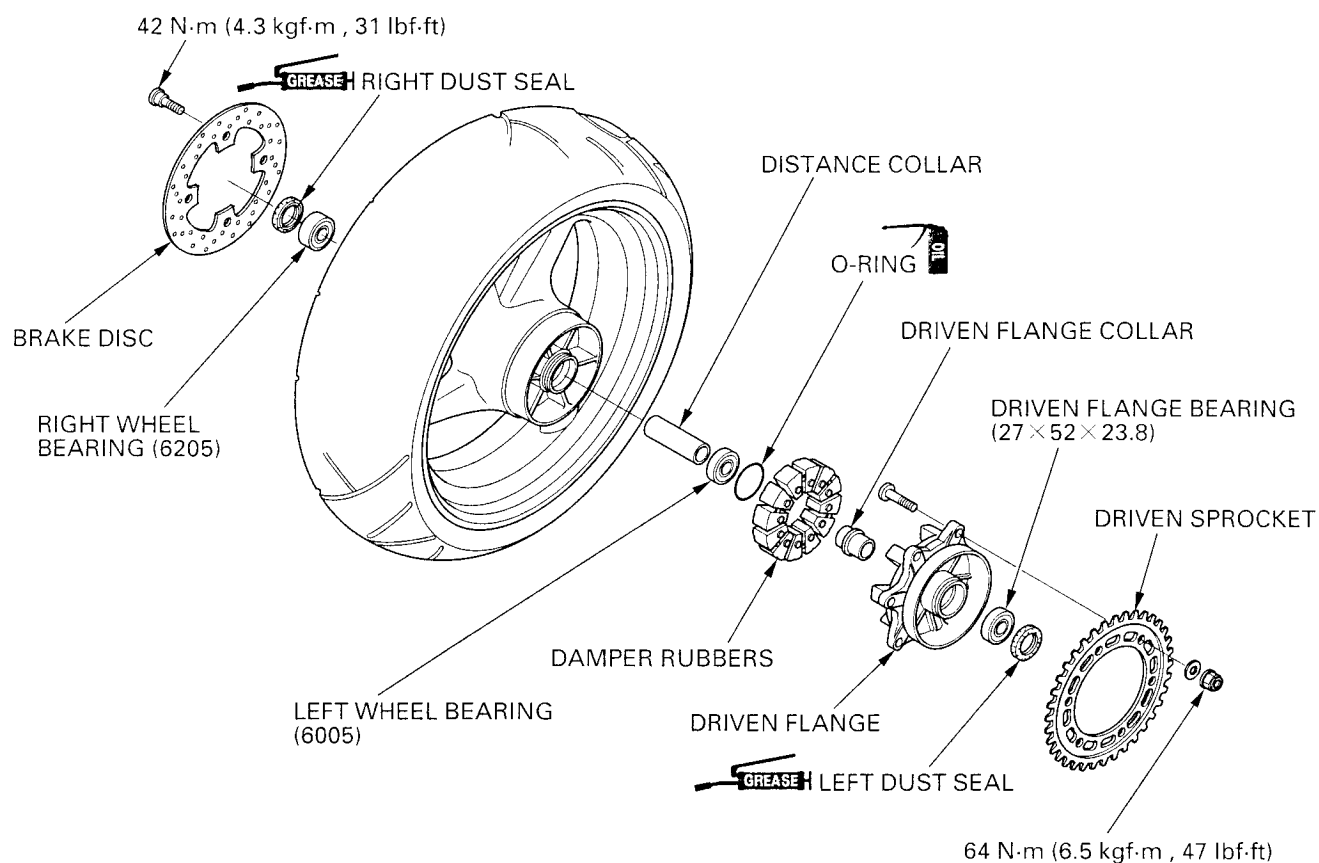


*Never install the old bearings, once the bearings have been removed, the bearing must be replaced with new ones.*

### Wheel bearing installation


Drive in a new right bearing squarely.

### TOOLS:

Driver 07749-0010000  
Attachment, 52 x 55 mm 07746-0010400  
Pilot, 25 mm 07746-0040600

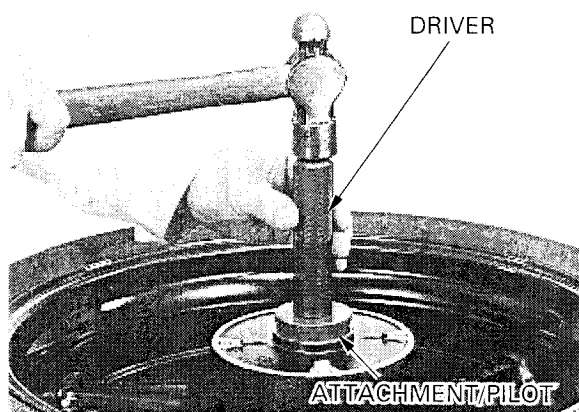


Install the distance collar.

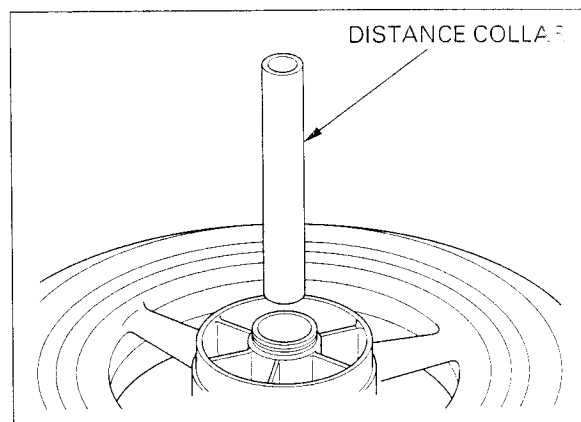


Drive in the left side bearing.

**TOOLS:**

<b>Driver</b>	07749-0010000
<b>Attachment, 42 × 47 mm</b>	07746-0010300
<b>Pilot, 25 mm</b>	07746-0040600

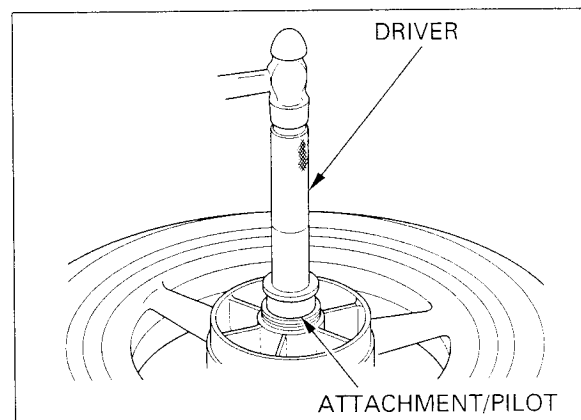

Install the driven flange collar into the new driven flange bearing.

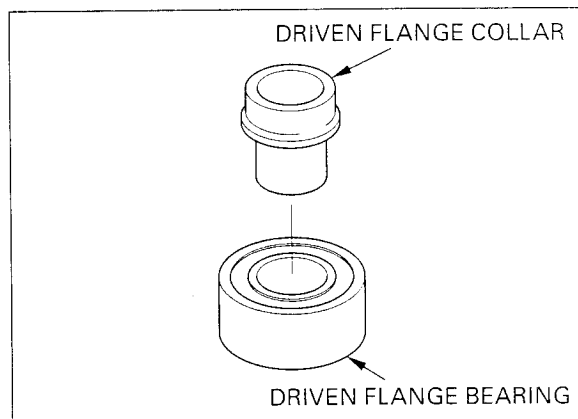


**Driven flange bearing installation**

Drive the new driven flange bearing into the driven flange using the special tools.

**TOOLS:**

<b>Driver</b>	07949-0010000
<b>Attachment, 52 × 55 mm</b>	07746-0010400
<b>Pilot, 25 mm</b>	07746-0040600

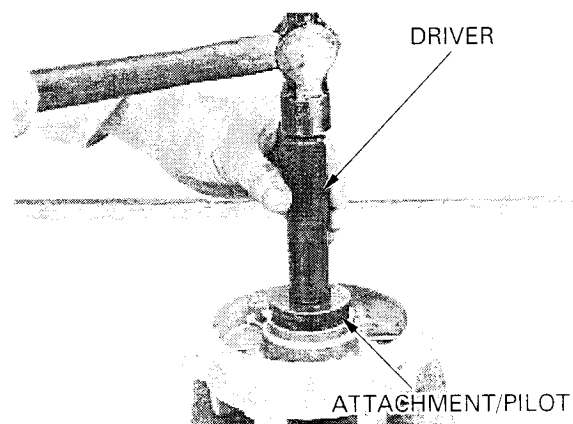




## REAR WHEEL/SUSPENSION

Install the wheel damper rubbers into the wheel hub.

Apply oil to the new O-ring and install it into the groove of the wheel hub.

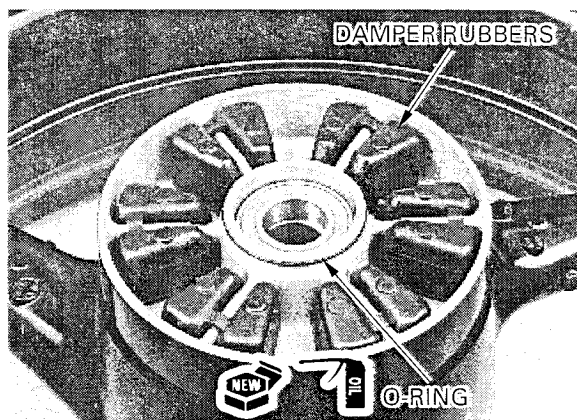


Install the driven flange assembly into the left wheel hub.

If the driven sprocket was removed, install the driven sprocket and tighten the nuts.

**TORQUE:** 64 N·m (6.5 kgf·m , 47 lbf·ft)


Apply grease to the dust seal lips, then install it into the driven flange.

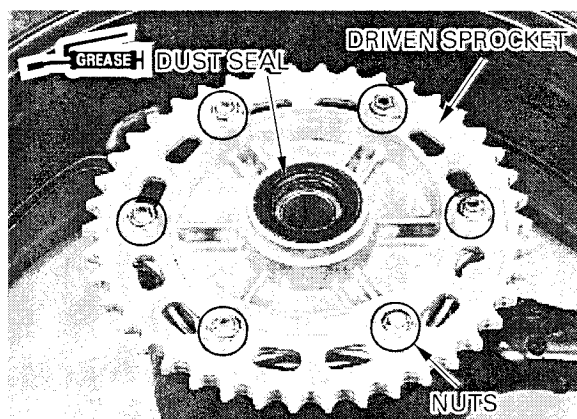

Install the brake disc with its rotating direction mark facing out.

Install and tighten the new bolts to the specified torque.


**TORQUE:** 42 N·m (4.3 kgf·m , 31 lbf·ft)

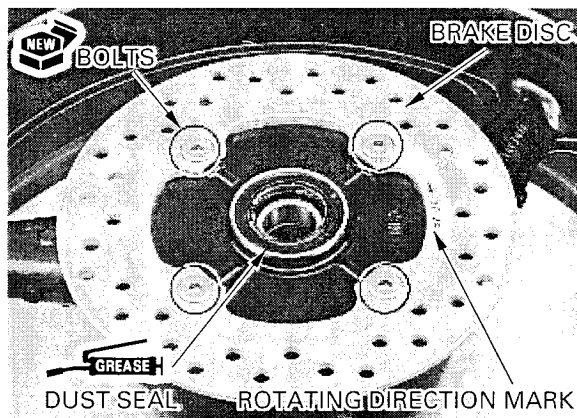

## INSTALLATION


Apply grease to the side collar inside and grooves.

Install the side collars.

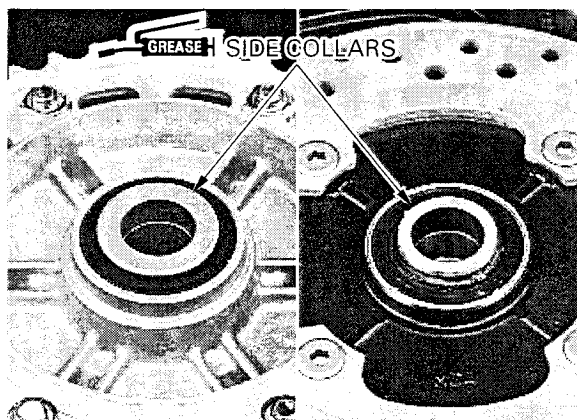


## REAR WHEEL/SUSPENSION

Install the rear brake caliper bracket onto the guide of the swingarm.

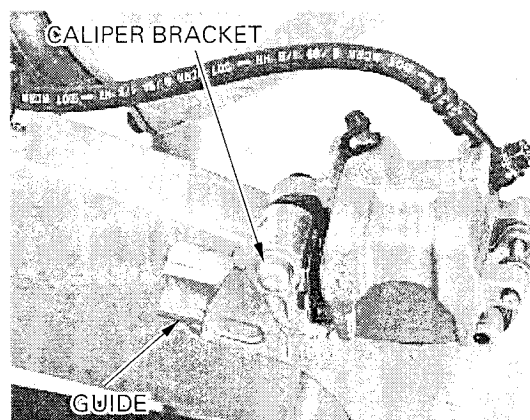

Place the rear wheel into the swingarm.  
Install the drive chain over the driven sprocket.  
Install the drive chain adjusting plate and axle from the left side.

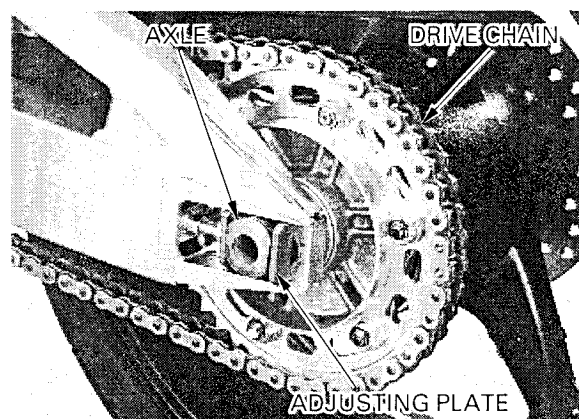


Install the drive chain adjusting plate and axle nut.

Adjust the drive chain slack (page 3-20).

Tighten the axle nut to the specified torque.

**TORQUE:** 113 N·m (11.5 kgf·m , 83 lbf·ft)

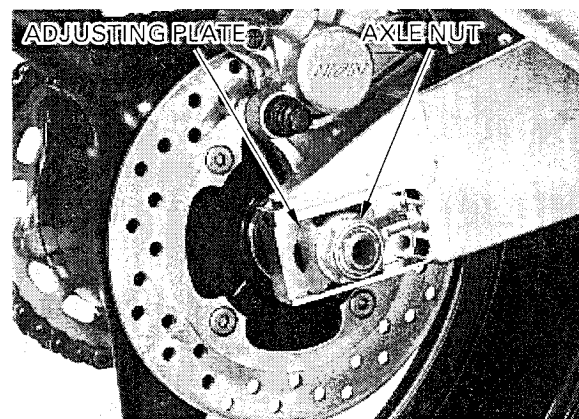


## SUSPENSION LINKAGE

### REMOVAL

Support the motorcycle using a hoist or equivalent.  
Remove the muffler and exhaust pipe (page 2-18).

Remove the exhaust pipe mounting collar and mounting rubber.

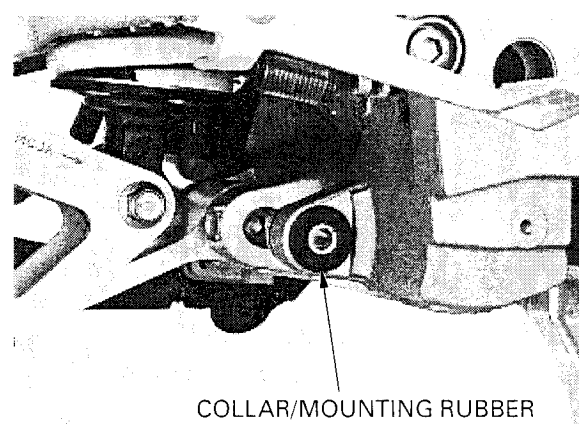




## REAR WHEEL/SUSPENSION

Remove the following:

- Link plate bolts/nuts
- Link plates
- Shock arm bolt/nut
- Shock arm


### INSPECTION

Check that the suspension linkage components for damage, replace any damaged components.

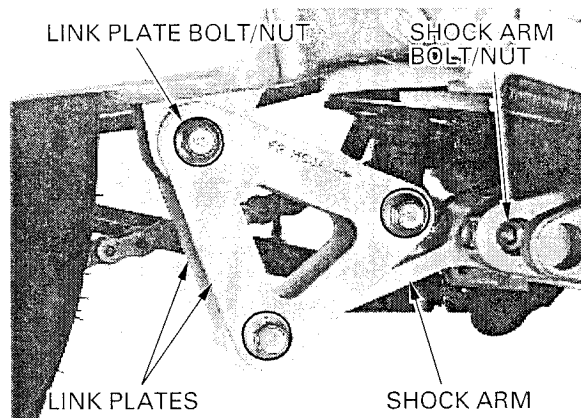

### SHOCK ARM BEARING REPLACEMENT


Remove the pivot collar and dust seals.

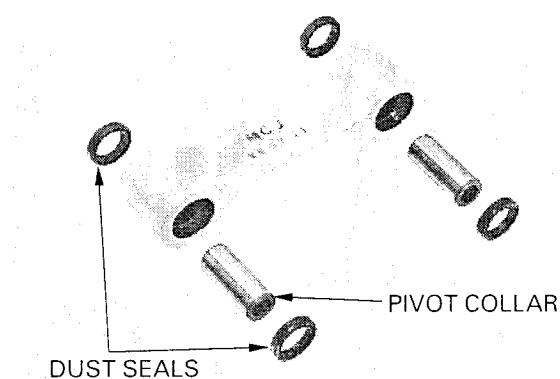

Press out the needle bearing out of the shock arm using the special tools.


#### TOOLS:

<b>Driver attachment handle</b>	04949-3710001
<b>Attachment, 22 × 24 mm</b>	07746-0010800
<b>Pilot, 17 mm</b>	07746-0040400

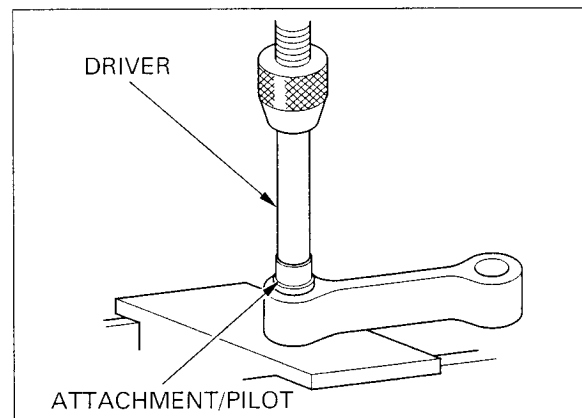


*Press the needle bearing into the shock arm with the marked side facing out.*

Press a new needle bearing into the shock arm so that the needle bearing surface is lower 5.2–5.7 mm (0.20–0.22 in) from the end of the shock arm using the same tools.

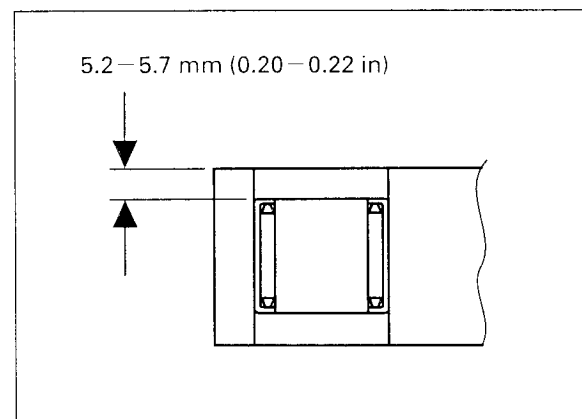

Apply grease to the new dust seal lips, install them into the shock arm.  
Install the pivot collar.

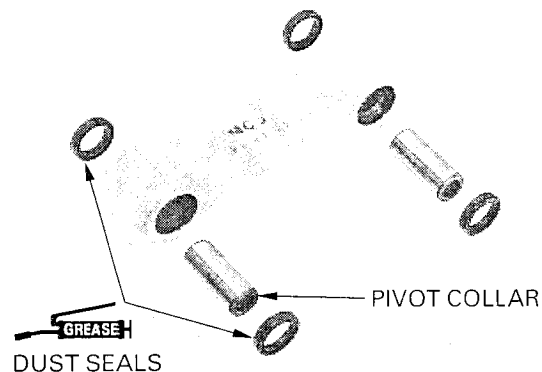

## INSTALLATION

Install the shock arm into the lower bracket, install the mounting bolt/nut.  
Hold the socket bolt and tighten the nut to the specified torque.



**TORQUE:** 44 N·m (4.5 kgf·m , 33 lbf·ft)

Install the link plates with its "FR→" mark facing forward.  
Install the link plate bolts/nuts, then tighten the nuts to the specified torque.

**TORQUE:** 44 N·m (4.5 kgf·m , 33 lbf·ft)

Install the exhaust pipe mounting rubber and collar.

Install the exhaust pipe and muffler (page 2-20).

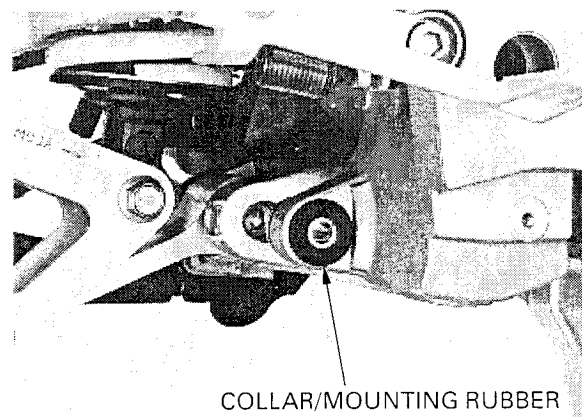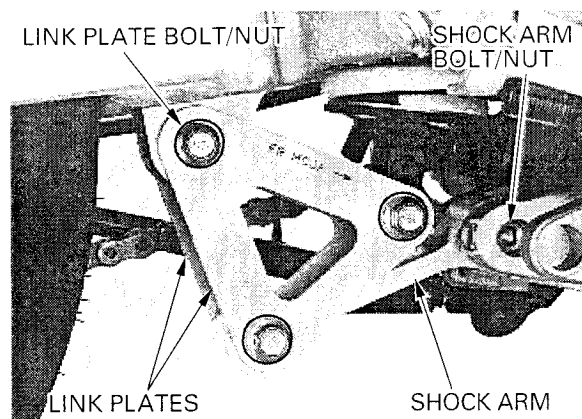


## SHOCK ABSORBER

### REMOVAL


Place the motorcycle using a hoist or equivalent.  
Remove the rear brake light switch and switch stay (page 15-27).

Remove the shock absorber lower mounting bolt/nut.  
Remove the link plate bolts/nuts and link plates.

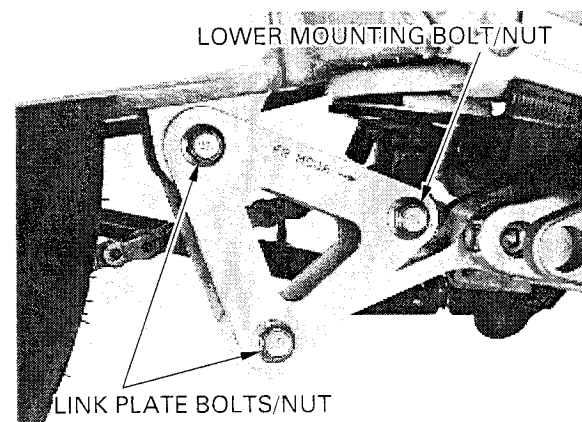

## REAR WHEEL/SUSPENSION

Loosen and remove the shock absorber upper mounting nut.  
Lower the shock absorber, then remove.

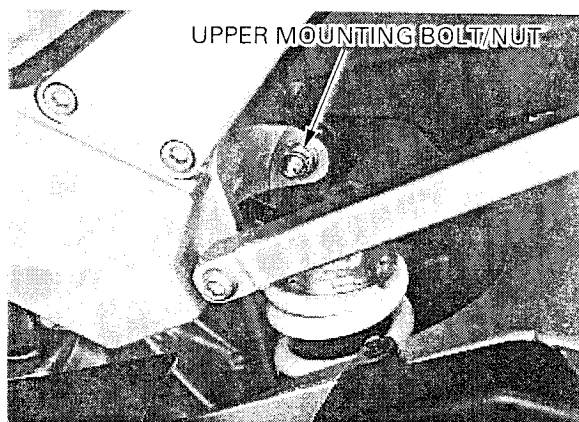


### INSPECTION

Visually inspect the shock absorber for damage.

Check for the:

- Damper rod for bend or damage
- Damper unit for deformation or oil leaks
- Bump rubber for wear or damage

Inspect all the other parts for wear or damage.  
If necessary, replace the shock absorber as an assembly.

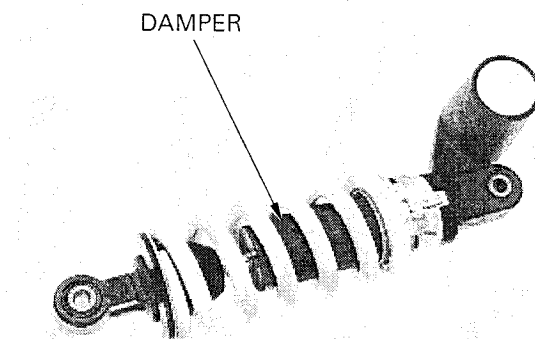


### NEEDLE BEARING REPLACEMENT

Remove the pivot collar and dust seals.

Press out the needle bearing out of the shock absorber lower mount using the special tools.


#### TOOLS:

<b>Driver attachment handle</b>	04949-3710001
<b>Attachment, 22 × 24 mm</b>	07746-0010800
<b>Pilot, 17 mm</b>	07746-0040400

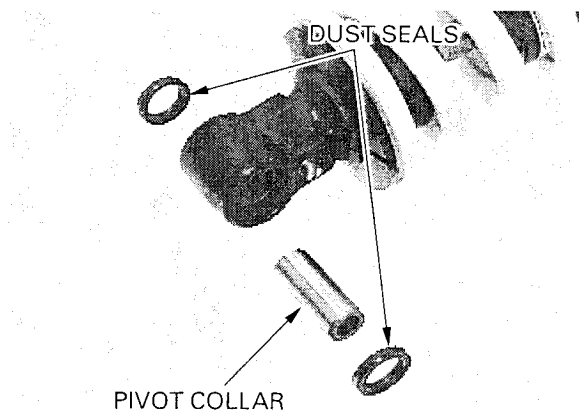


*Press the needle bearing into the lower mount with the marked side facing out.*

Press a new needle bearing into the lower mount so that the needle bearing surface is lower 8.0 mm (0.31 in) from the end of the lower mount using the same tools.

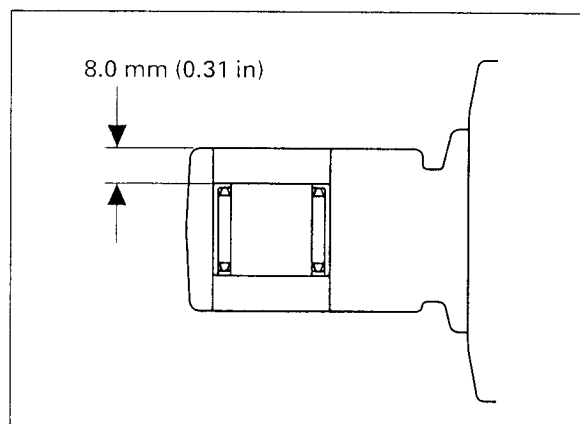


## REAR WHEEL/SUSPENSION

Apply grease to the new dust seal lips, install them into the lower mount.  
Install the pivot collar.

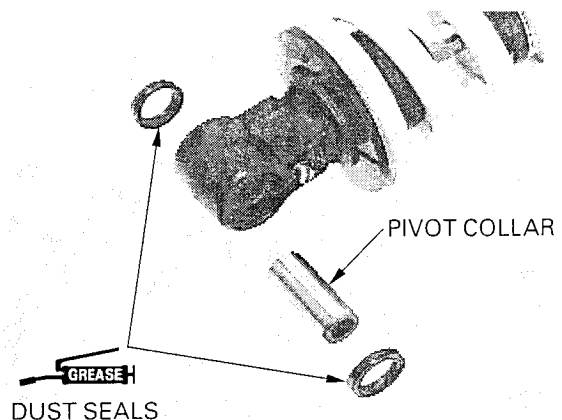

### SHOCK ABSORBER DISPOSAL PROCEDURE

Remove the damper reservoir cap.

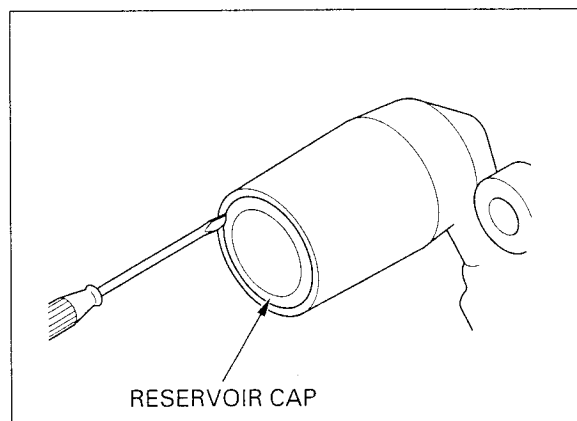


*Do not remove the valve core until pressure is released.*

Release the nitrogen from the reservoir by depressing the valve core.

#### NOTICE


- Point the valve away from you to prevent debris getting in your eyes.
- Before disposal of the shock absorber, release the nitrogen by pressing the valve core. Then remove the valve from the shock absorber reservoir.

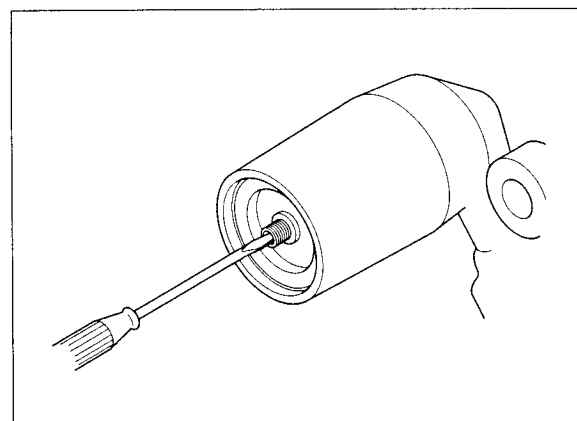

### INSTALLATION

Install the shock absorber into the frame from the bottom, and install the upper mounting bolt/nut. Tighten the nut to the specified torque.

**TORQUE:** 44 N·m (4.5 kgf·m , 33 lbf·ft)

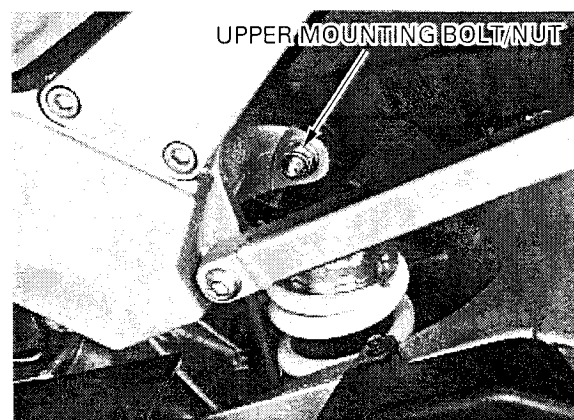




## REAR WHEEL/SUSPENSION

Install the link plates, link plate bolts/nuts and shock absorber lower mounting bolt/nut. Tighten the nuts to the specified torque.

**TORQUE:** 44 N·m (4.5 kgf·m , 33 lbf·ft)

Install the removed parts in the reverse order of removal.

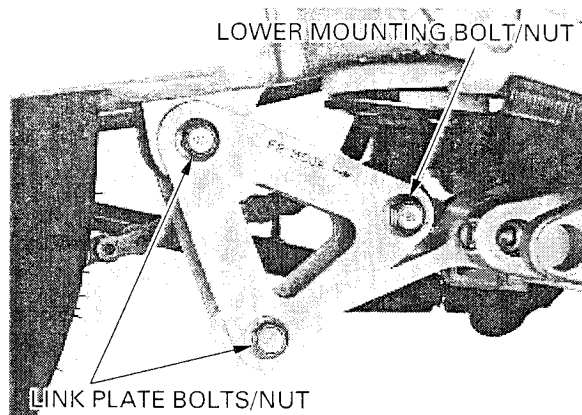


## SWINGARM


### REMOVAL

Remove the rear wheel (page 14-3).


Remove the two SH bolts and drive sprocket cover and spacer.

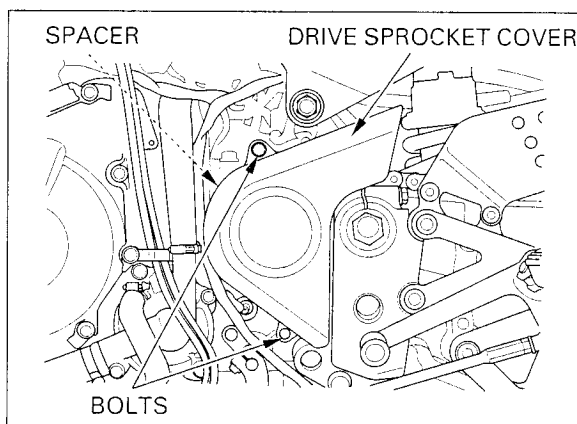

Remove the drive sprocket bolt, washer and drive sprocket.

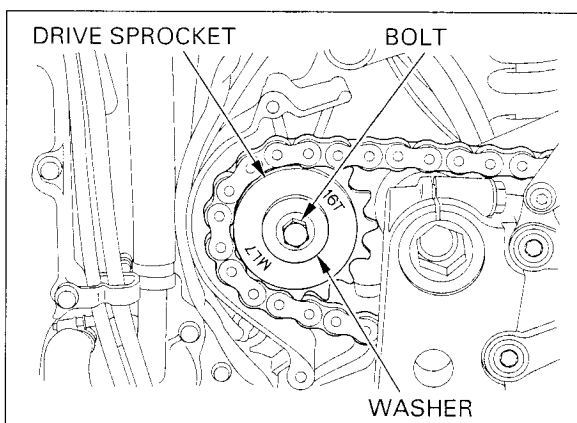

Remove the screws and brake hose guides.

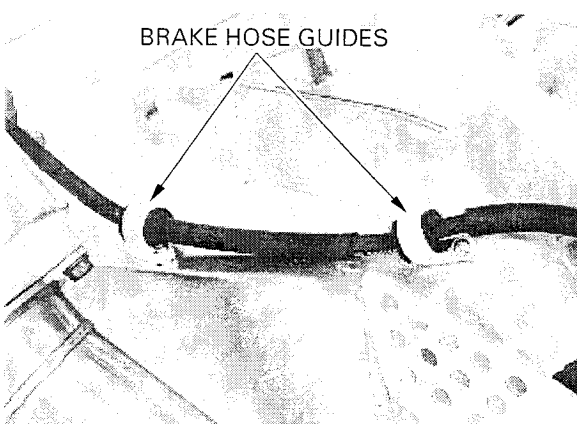




## REAR WHEEL/SUSPENSION


Remove the shock absorber lower mounting bolt/nut.

Remove the link plate-to-swingarm bolt/nut.

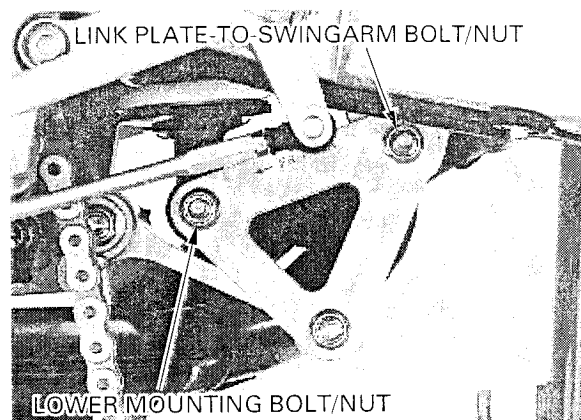


Remove the right main footpeg bracket socket bolts and main footpeg bracket.

*California type only:* Release the O<sub>2</sub> sensor wire from the wire guide behind the right step guard.

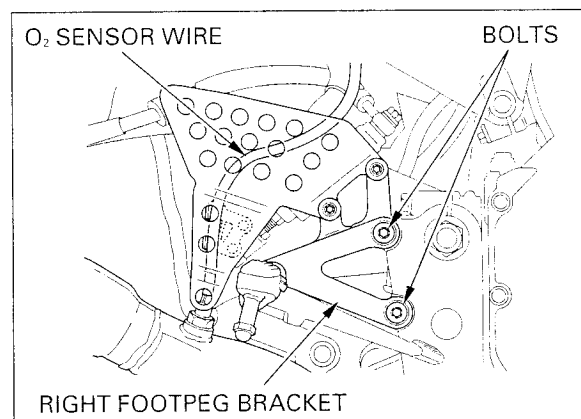


Remove the bolt and gearshift link arm from the gearshift spindle.

Remove the left main footpeg bracket socket bolts and main footpeg bracket.

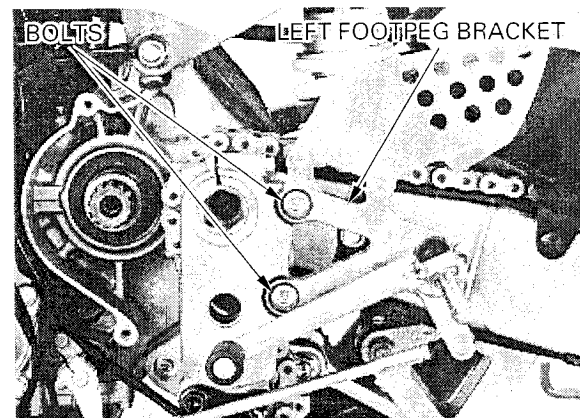


Loosen the swingarm pivot pinch bolts.

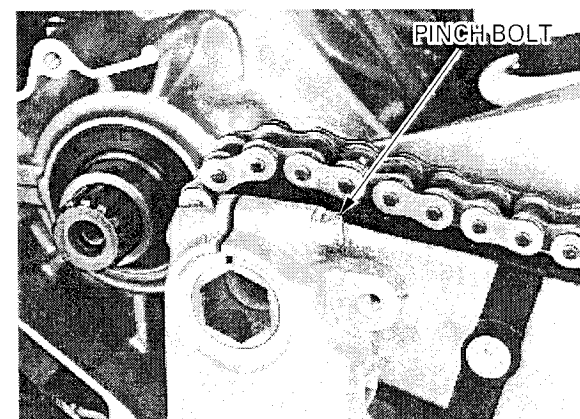


## REAR WHEEL/SUSPENSION

Hold the pivot bolt using a 24 mm socket wrench, then loosen and remove the swingarm pivot nut using the same tool.

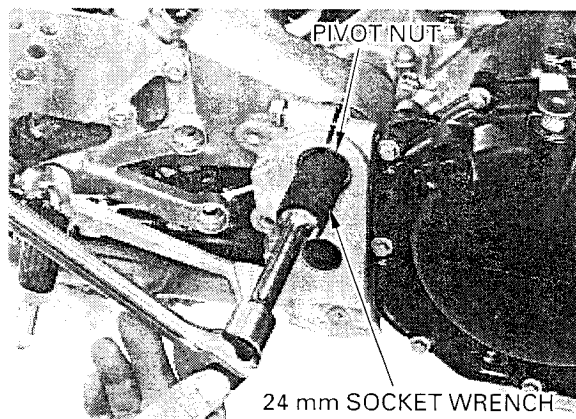


Remove the pivot bolt and then remove the swingarm from the lower bracket and engine.

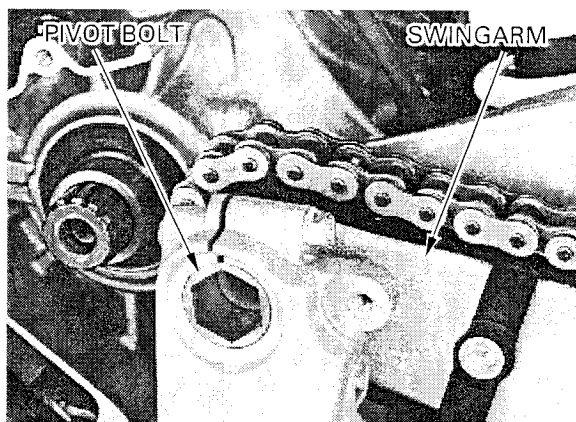


## DISASSEMBLY/INSPECTION

Remove the SH bolt, trim clip and drive chain case A.

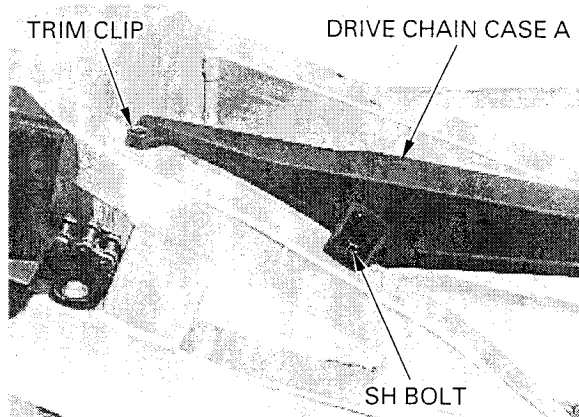


Remove the SH bolts and drive chain case B.

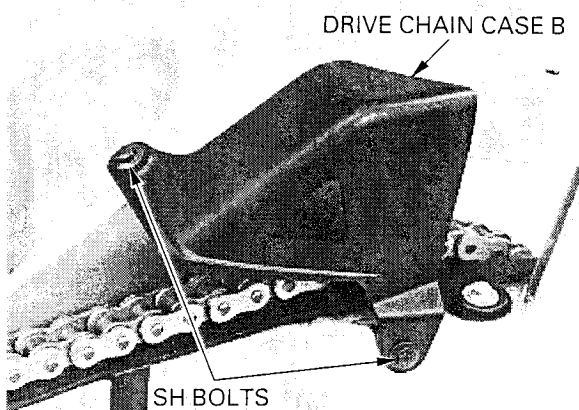

## REAR WHEEL/SUSPENSION


Remove the three SH bolts and drive chain slider.

Check the drive chain slider for wear or damage.

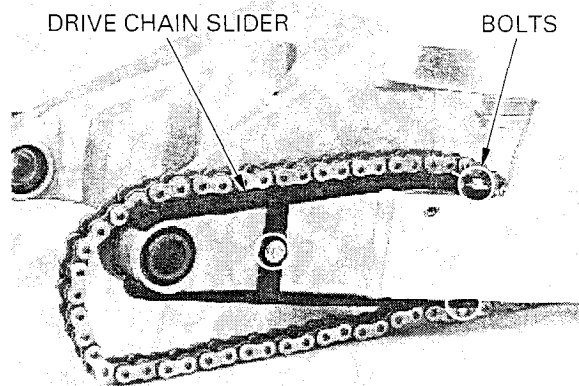


Remove the pivot collar and dust seals from the swingarm left pivot.

Check the dust seals and collar for damage or fatigue.

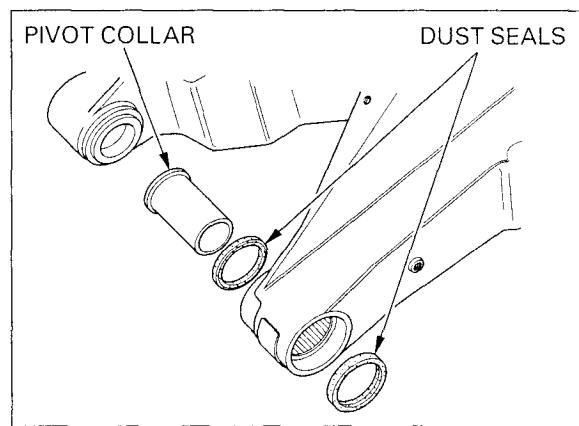

Remove the side collar and dust seals from the swingarm right pivot.


Check the dust seals and side collar for damage or fatigue.

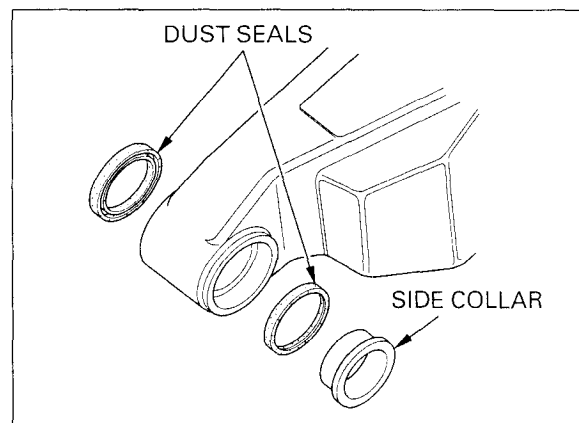

Turn the inner race of right pivot bearings with your finger.

The bearings should turn smoothly and quietly. Also check that the bearing outer race fits tightly in the hub.


Remove and discard the bearings if the races do not turn smoothly and quietly, or if they fit loosely in the pivot.

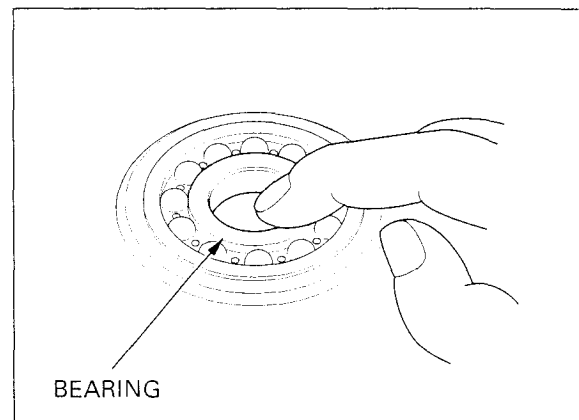

## REAR WHEEL/SUSPENSION


Remove the three SH bolts and drive chain slider.

Check the drive chain slider for wear or damage.

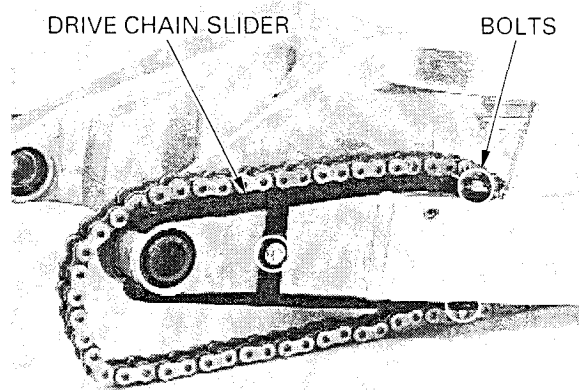


Remove the pivot collar and dust seals from the swingarm left pivot.

Check the dust seals and collar for damage or fatigue.

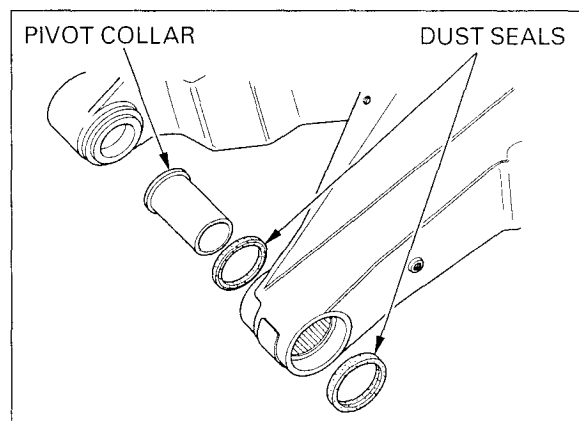

Remove the side collar and dust seals from the swingarm right pivot.


Check the dust seals and side collar for damage or fatigue.

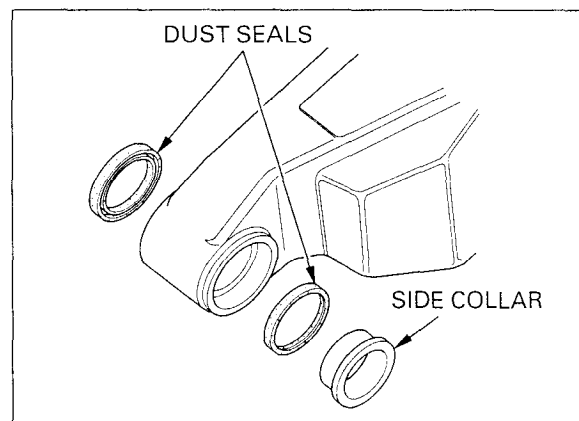

Turn the inner race of right pivot bearings with your finger.

The bearings should turn smoothly and quietly. Also check that the bearing outer race fits tightly in the hub.

Remove and discard the bearings if the races do not turn smoothly and quietly, or if they fit loosely in the pivot.

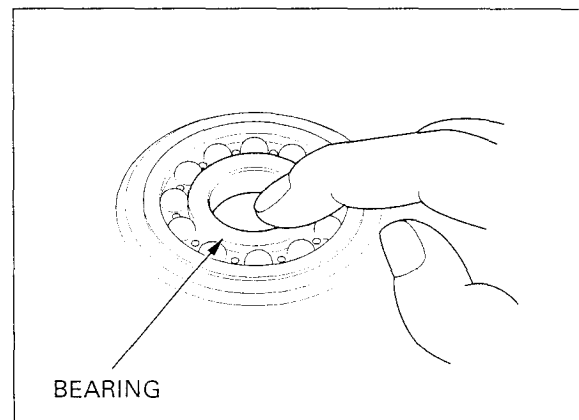




## REAR WHEEL/SUSPENSION

### PIVOT BEARING REPLACEMENT


Remove the snap ring.

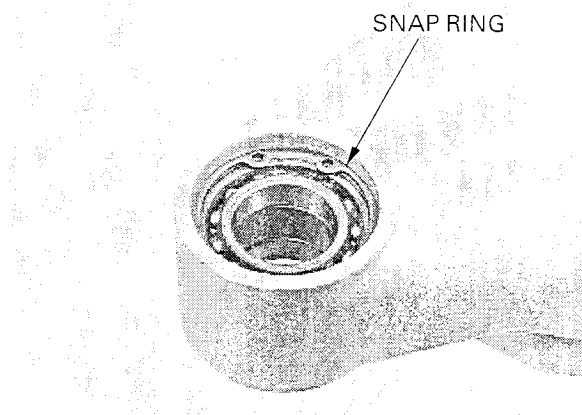

Remove the right pivot bearings (radial ball bearings) and distance collar from the swingarm pivot using the special tools and hydraulic press.

#### TOOLS:


Driver shaft 07946-MJ00100  
Driver attachment, 25 × 38.5 mm 07YMD-MCJ0100

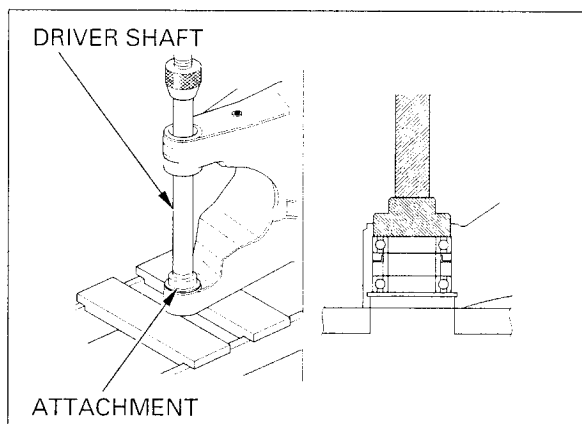


Press the inner bearing into the swingarm right pivot until it seats using the special tools and hydraulic press.

#### TOOLS:

Driver 07749-0010000  
Attachment, 40 × 42 mm 07746-0010900  
Pilot, 25 mm 07746-0040600

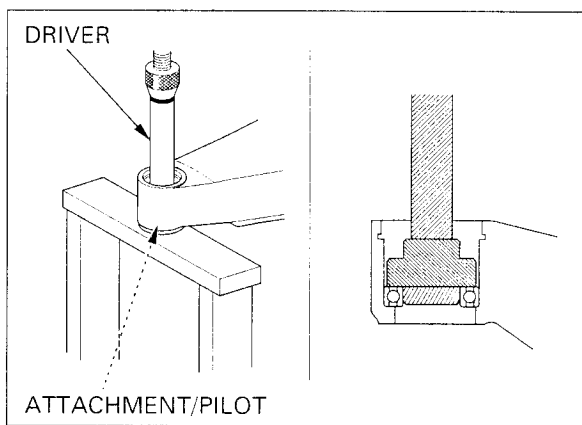

Install the distance collar.

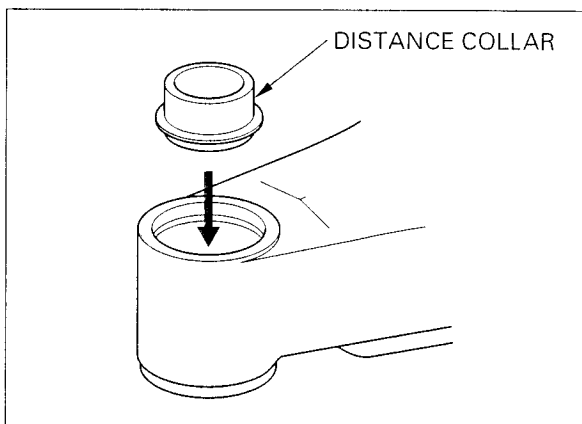




## REAR WHEEL/SUSPENSION


Install the outer bearing using the special tools.

### TOOLS:

<b>Driver</b>	07749-0010000
<b>Attachment, 40 × 42 mm</b>	07746-0010900
<b>Pilot, 25 mm</b>	07746-0040600

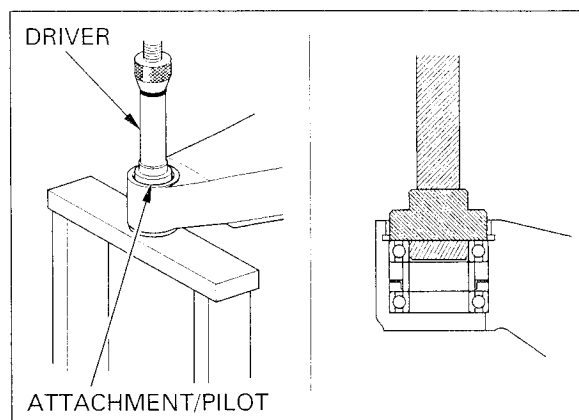


Install the snap ring into the groove securely.

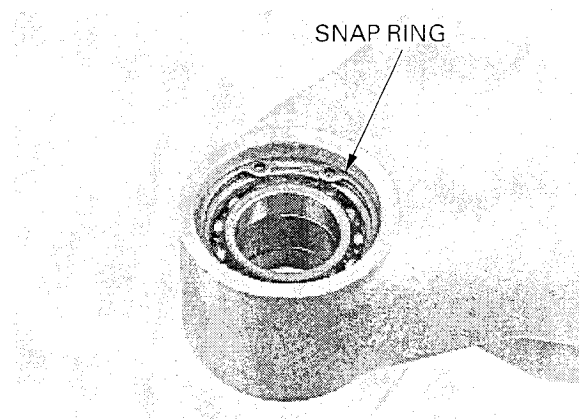

Remove the left pivot needle bearing from the swingarm pivot using the special tools.

### TOOLS:

<b>Driver</b>	07749-0010000
<b>Attachment, 40 × 42 mm</b>	07746-0010900
<b>Driver Pilot, 32 × 50 mm</b>	07MAD-PR90200

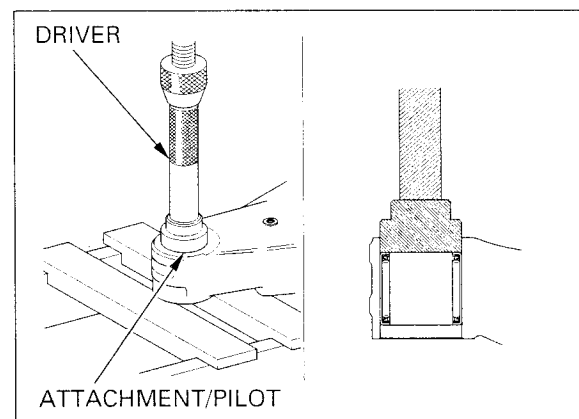


*Press the needle bearing into the swingarm with the marked side facing out.*

Press a new left pivot needle bearing into the swingarm pivot so that the needle bearing surface is lower 8–9 mm (0.3–0.4 in) from the end of the swingarm pivot surface using the special tools.


### TOOLS:

<b>Driver</b>	07749-0010000
<b>Attachment, 40 × 42 mm</b>	07746-0010900
<b>Driver Pilot, 32 × 50 mm</b>	07MAD-PR90200

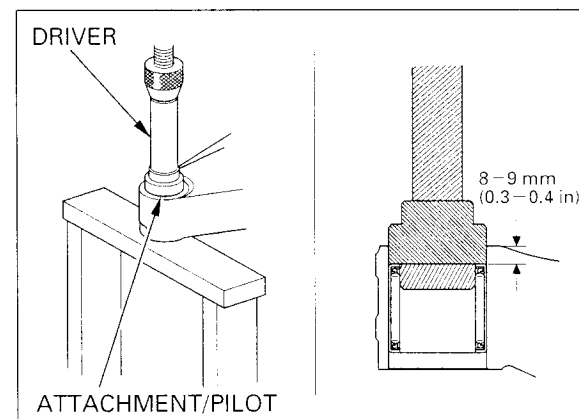

## REAR WHEEL/SUSPENSION


Remove the pivot collar and dust seals from the link plate pivot.

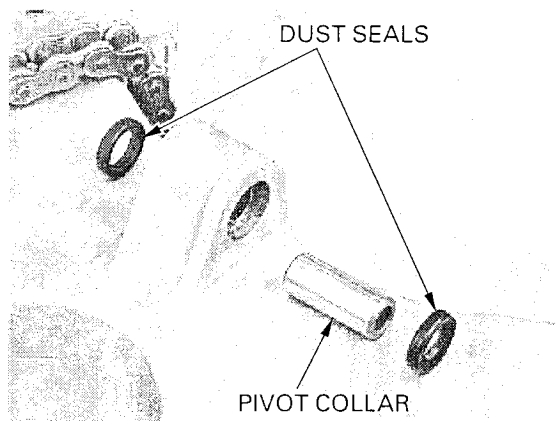

Remove the shock link pivot needle bearing using the special tool.

**TOOL:**


**Needle bearing remover** 07LMC-KV30100

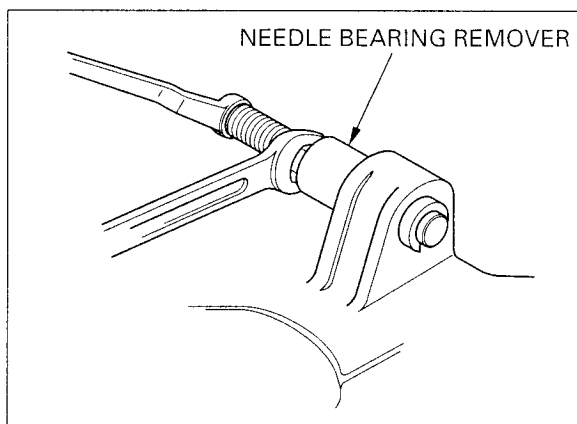


Install the shock link pivot needle bearing into the swingarm so that the needle bearing surface is lower 5.5–6.0 mm (0.22–0.24 in) from the end of the swingarm pivot surface using the same tool.

**TOOL:**


**Needle bearing remover** 07LMC-KV30100

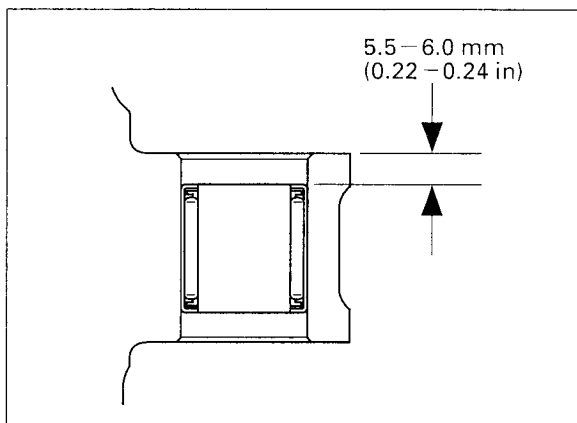


Apply grease to the dust seal lips, then install the dust seals and pivot collar into the swingarm.

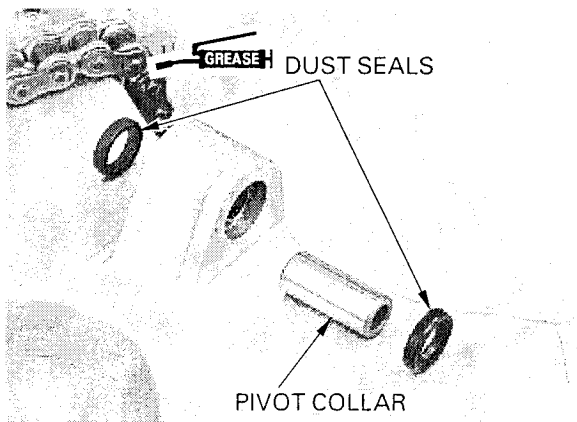


## ASSEMBLY

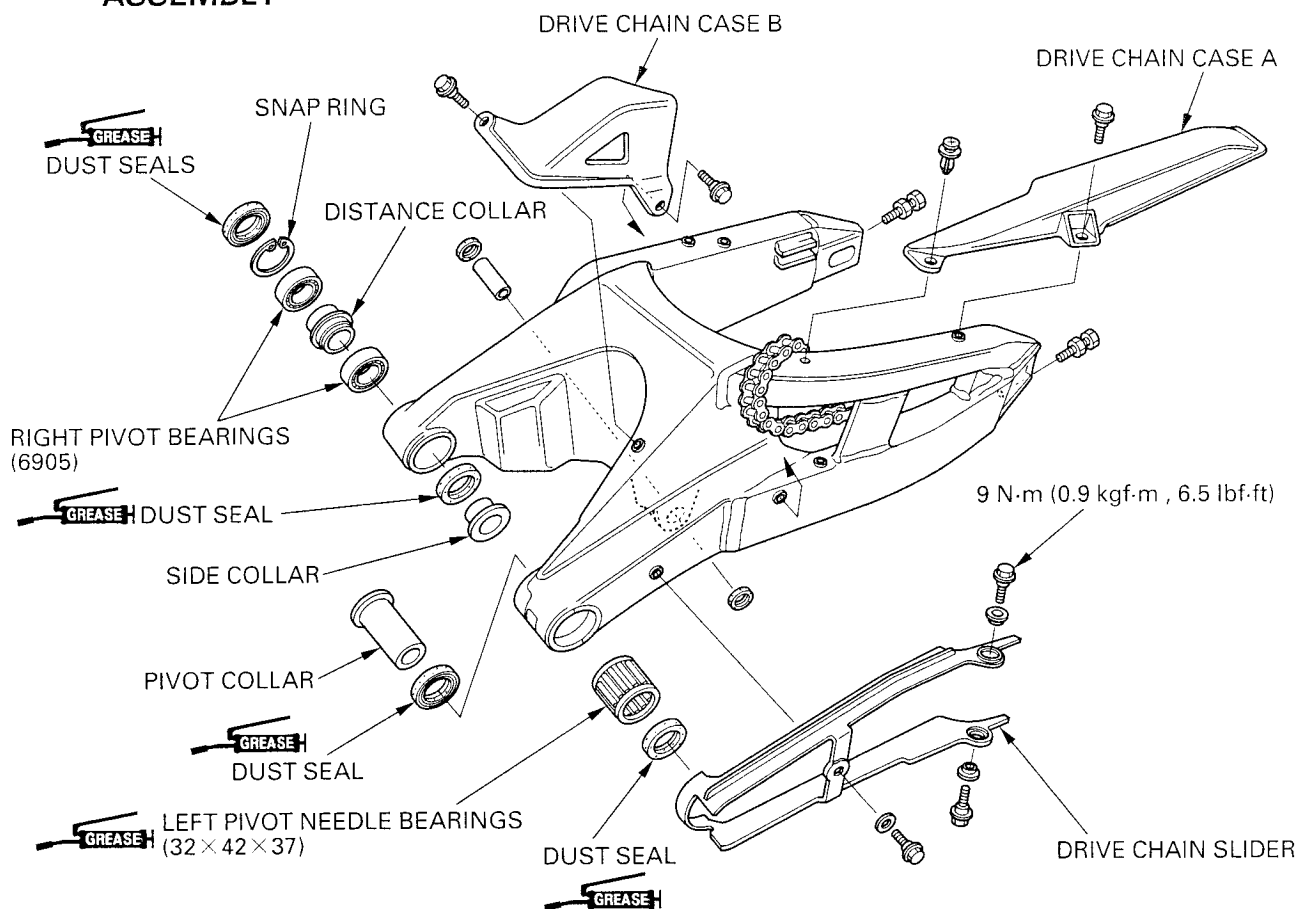

Apply grease to the dust seal lips, then install the dust seals and side collar into the right swingarm pivot.

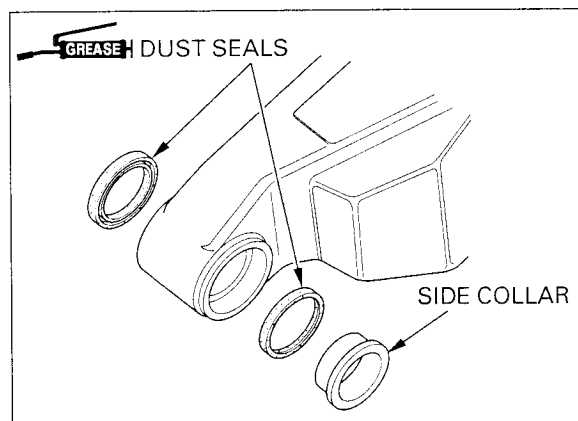


Apply grease to the dust seal lips, then install the dust seals and pivot collar into the left swingarm pivot.

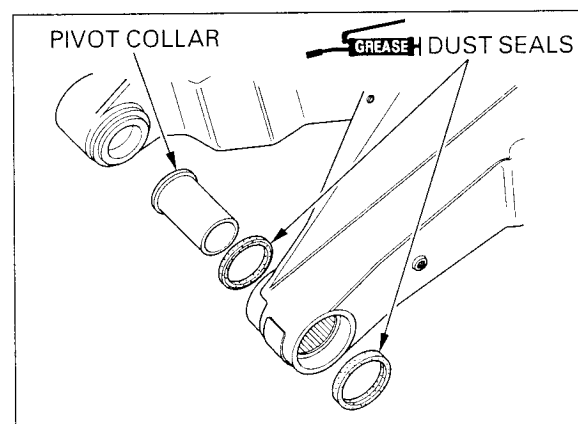


## REAR WHEEL/SUSPENSION

Install the drive chain slider aligning its tabs with the boss on the swingarm as shown.

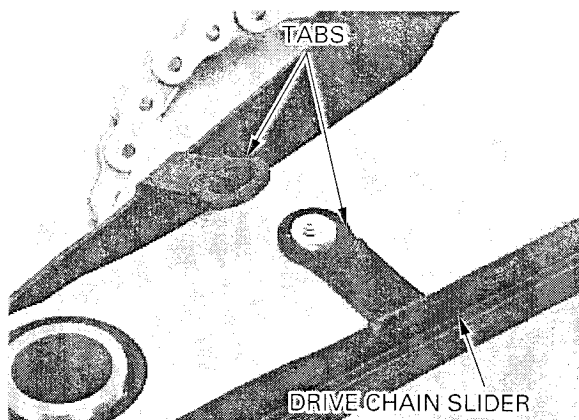


Apply a locking agent to the drive chain slider bolt threads.  
Install the collars and bolts, then tighten the bolts to the specified torque.


**TORQUE:** 9 N·m (0.9 kgf·m , 6.5 lbf·ft)

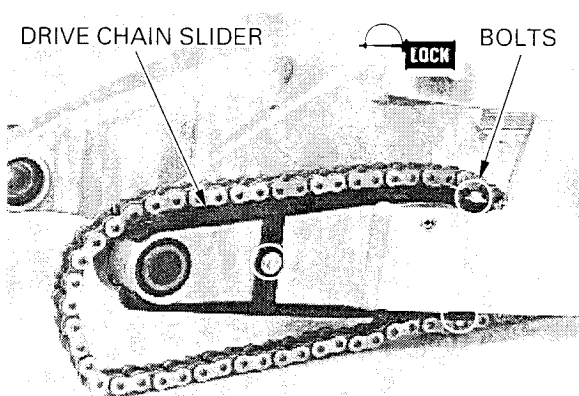

Install the drive chain case B and tighten the SH bolt securely.

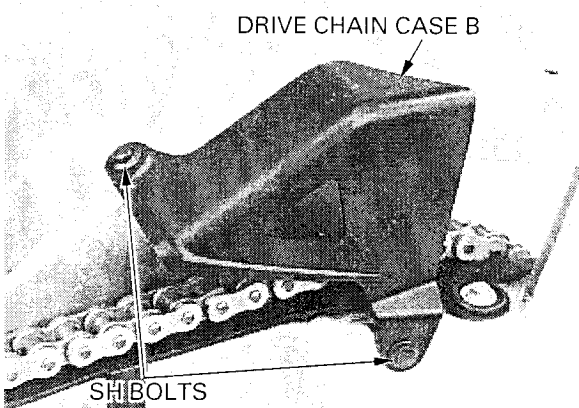

Install the drive chain case A and secure it with a SH bolt and trim clip.

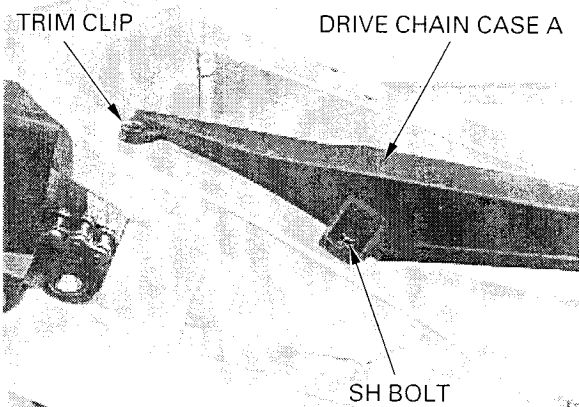




## INSTALLATION

Apply thin coat of grease to the swingarm pivot bolt surface.


Install the swingarm between the lower bracket and engine, then install the pivot bolt from the left side.

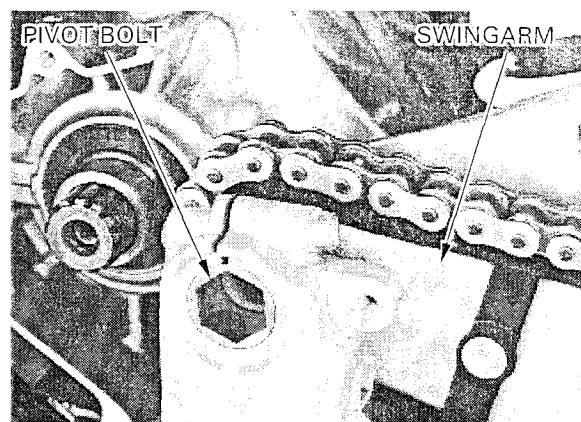

Install the swingarm pivot nut.


Hold the pivot bolt using a 24 mm hex wrench, tighten the swingarm pivot nut to the specified torque using the same tool.

**TORQUE:** 118 N·m (12.0 kgf·m , 87 lbf·ft)

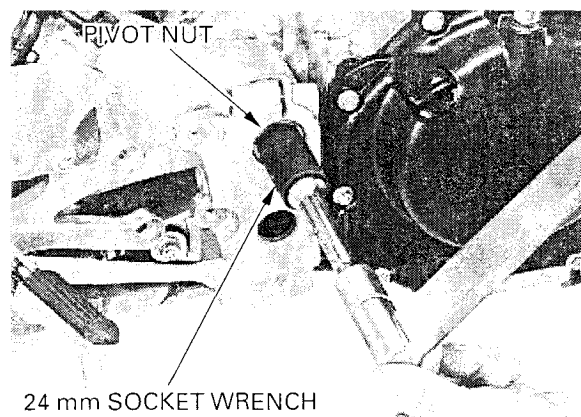

Tighten the swingarm pivot pinch bolts to the specified torque.

**TORQUE:** 26 N·m (2.7 kgf·m , 20 lbf·ft)

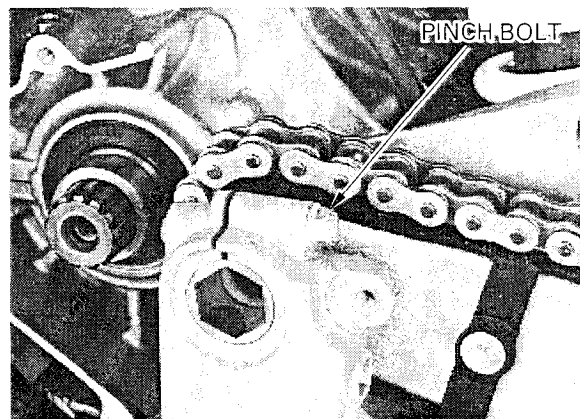


Install the left main footpeg bracket onto the lower bracket and tighten the socket bolts to the specified torque.

**TORQUE:** 39 N·m (4.0 kgf·m , 29 lbf·ft)

Install the gearshift pedal link to the gearshift spindle while aligning its slit with the punch mark on the spindle.

Tighten the gearshift pedal link pinch bolt to the specified torque.

**TORQUE:** 10 N·m (1.0 kgf·m , 7 lbf·ft)

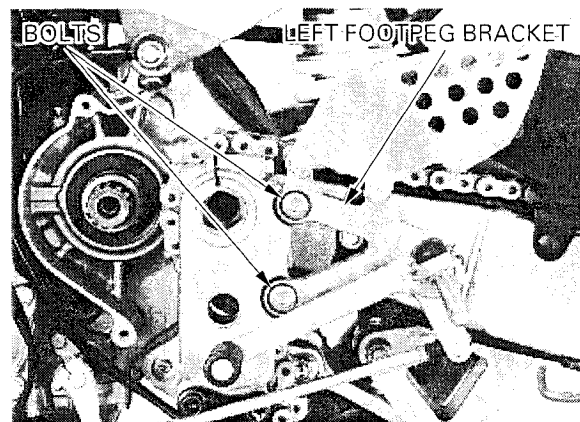




## REAR WHEEL/SUSPENSION

*California type only:* Clamp the O<sub>2</sub> sensor wire to the wire guide behind the right step guard.


Install the right main footpeg bracket onto the lower bracket and tighten the socket bolts to the specified torque.

**TORQUE:** 39 N·m (4.0 kgf·m , 29 lbf·ft)

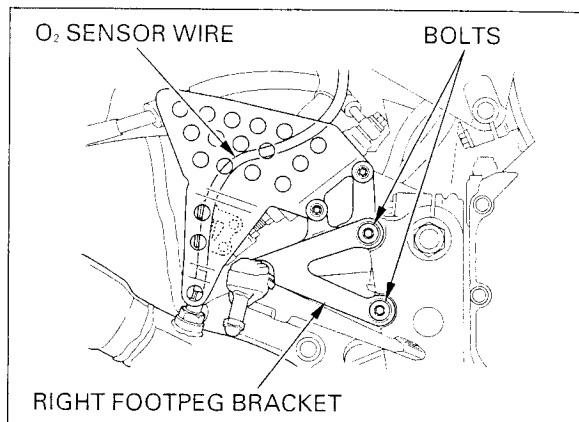


Install the link plate-to-swingarm bolt/nut, then tighten the nut to the specified torque.

**TORQUE:** 44 N·m (4.5 kgf·m , 33 lbf·ft)

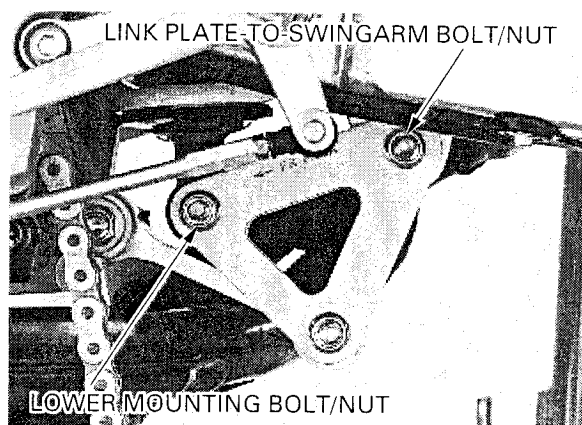


Install the brake hose guides and tighten the screws to the specified torque.

**TORQUE:** 4 N·m (0.4 kgf·m , 2.9 lbf·ft)

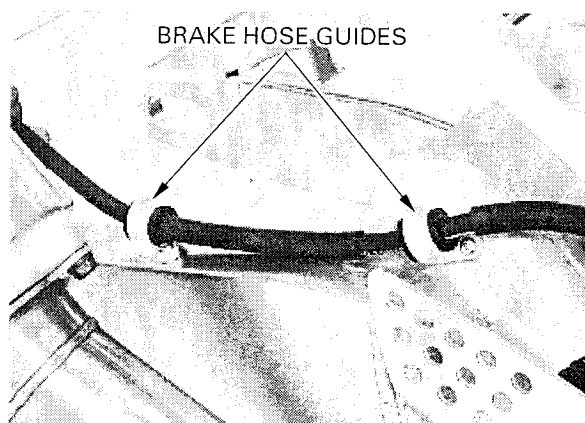

Install the drive sprocket with its "ML7" mark facing out.  
Install the washer and special bolt, then tighten the bolt to the specified torque.

**TORQUE:** 54 N·m (5.5 kgf·m , 40 lbf·ft)

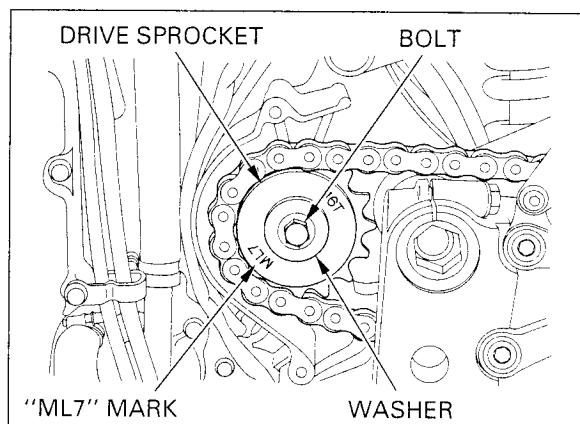


## REAR WHEEL/SUSPENSION

Install the spacer and drive sprocket cover, tighten the SH bolts.

Install the rear wheel (page 14-8).

Install the removed parts in the reverse order of removal.

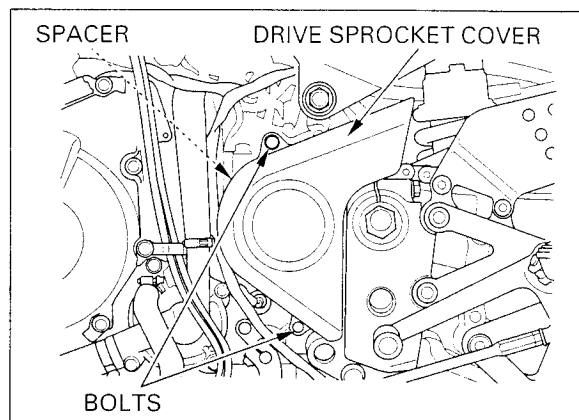


# 15. HYDRAULIC BRAKE

SERVICE INFORMATION	15-2	FRONT MASTER CYLINDER	15-10
TROUBLESHOOTING	15-3	REAR MASTER CYLINDER	15-16
BRAKE FLUID REPLACEMENT/ AIR BLEEDING	15-4	FRONT BRAKE CALIPER	15-20
BRAKE PAD/DISC	15-7	REAR BRAKE CALIPER	15-24
		BRAKE PEDAL	15-27

## REAR:

California type shown:

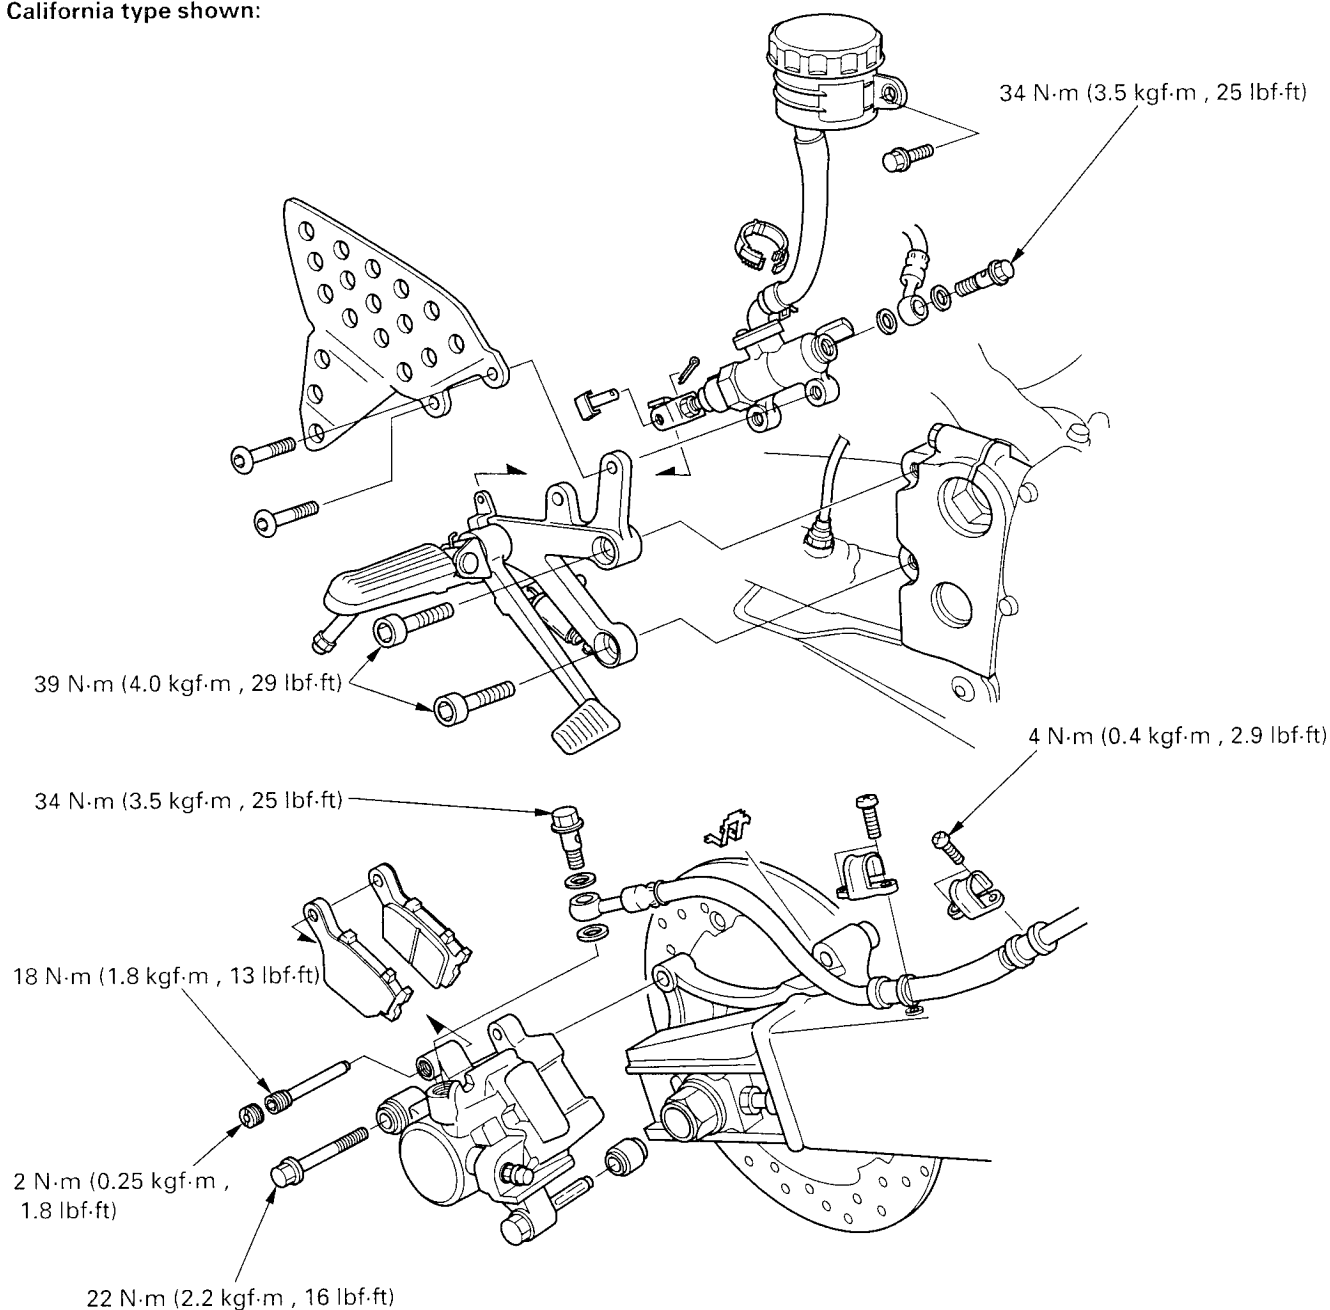

**HYDRAULIC BRAKE****SERVICE INFORMATION****GENERAL****CAUTION**

Frequent inhalation of brake pad dust, regardless of material composition could be hazardous to your health.

- Avoid breathing dust particles.
- Never use an air hose or brush to clean brake assemblies. Use an OSHA-approved vacuum cleaner.

- A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.
- Check the brake system by applying the brake lever or pedal after the air bleeding.
- Spilled brake fluid will severely damage instrument lenses and painted surfaces. It is also harmful to some rubber parts. Be careful whenever you remove the reservoir cap; make sure the front reservoir is horizontal first.
- Never allow contaminants (dirt, water, etc.) to get into an open reservoir.
- Once the hydraulic system has been opened, or if the brake feels spongy, the system must be bled.
- Always use fresh DOT 4 brake fluid from a sealed container when servicing the system. Do not mix different types of fluid they may not be compatible.
- Always check brake operation before riding the motorcycle.

**SPECIFICATIONS**

Unit: mm (in)

ITEM		STANDARD	SERVICE LIMIT
Front	Specified brake fluid	Honda DOT 4 Brake Fluid	—
	Brake disc thickness	4.5 (0.18)	3.5 (0.14)
	Brake disc runout	—	0.30 (0.012)
	Master cylinder I.D.	19.050 – 19.093 (0.7500 – 0.7517)	19.105 (0.7522)
	Master piston O.D.	19.018 – 19.034 (0.7487 – 0.7494)	19.006 (0.7483)
	Caliper cylinder I.D.	Upper	33.960 – 34.010 (1.3370 – 1.3390)
		Lower	30.250 – 30.280 (1.1909 – 1.1921)
	Caliper piston O.D.	Upper	33.802 – 33.835 (1.3308 – 1.3321)
		Lower	30.082 – 30.115 (1.1843 – 1.1856)
Rear	Specified brake fluid	DOT 4	—
	Brake pedal height	75 (3.0)	—
	Brake disc thickness	5.0 (0.20)	4.0 (0.16)
	Brake disc runout	—	0.30 (0.012)
	Master cylinder I.D.	15.870 – 15.913 (0.6248 – 0.6265)	15.925 (0.6270)
	Master piston O.D.	15.827 – 15.854 (0.6231 – 0.6242)	15.815 (0.6226)
	Caliper cylinder I.D.	38.180 – 38.230 (1.5031 – 1.5051)	38.24 (1.506)
	Caliper piston O.D.	38.098 – 38.148 (1.4999 – 1.5019)	38.090 (1.4996)

## TORQUE VALUES

Front brake master cylinder cup mounting nut	6 N·m (0.6 kgf·m , 4.3 lbf·ft)	U-nut
Brake lever pivot bolt	10 N·m (1.0 kgf·m , 7 lbf·ft)	
Brake lever pivot nut	6 N·m (0.6 kgf·m , 4.3 lbf·ft)	
Front brake switch screw	1 N·m (0.12 kgf·m , 0.9 lbf·ft)	
Front brake caliper mounting bolt	30 N·m (3.1 kgf·m , 22 lbf·ft)	ALOC bolt
Caliper body assembly torx bolt	23 N·m (2.3 kgf·m , 17 lbf·ft)	ALOC bolt
Pad pin	18 N·m (1.8 kgf·m , 13 lbf·ft)	
Pad pin plug	2 N·m (0.25 kgf·m , 1.8 lbf·ft)	
Brake caliper bleeder	6 N·m (0.6 kgf·m , 4.3 lbf·ft)	
Rear brake hose clamp screw	4 N·m (0.4 kgf·m , 2.9 lbf·ft)	ALOC bolt
Rear master cylinder push rod nut	18 N·m (1.8 kgf·m , 13 lbf·ft)	
Rear master cylinder hose joint screw	1 N·m (0.15 kgf·m , 1.1 lbf·ft)	Apply a locking agent to the threads
Rear brake caliper slide pin (main)	27 N·m (2.8 kgf·m , 20 lbf·ft)	Apply a locking agent to the threads
Rear brake caliper slide pin (sub)	22 N·m (2.2 kgf·m , 16 lbf·ft)	Apply a locking agent to the threads
Brake hose oil bolt	34 N·m (3.5 kgf·m , 25 lbf·ft)	

## TOOL

Snap ring pliers	07914-SA50001 or 07914-3230001
------------------	--------------------------------

## TROUBLESHOOTING

### Brake lever/pedal soft or spongy

- Air in hydraulic system
- Leaking hydraulic system
- Contaminated brake pad/disc
- Worn caliper piston seal
- Worn master cylinder piston cups
- Worn brake pad/disc
- Contaminated caliper
- Caliper not sliding properly (rear)
- Low brake fluid level
- Clogged fluid passage
- Warped/deformed brake disc
- Sticking/worn caliper piston
- Sticking/worn master cylinder piston
- Contaminated master cylinder
- Bent brake lever/pedal

### Brake lever/pedal hard

- Clogged/restricted brake system
- Sticking/worn caliper piston
- Caliper not sliding properly (rear)
- Clogged/restricted fluid passage
- Worn caliper piston seal
- Sticking/worn master cylinder piston
- Bent brake lever/pedal

### Brake drags

- Contaminated brake pad/disc
- Misaligned wheel
- Clogged/restricted brake hose joint
- Warped/deformed brake disc
- Caliper not sliding properly (rear)
- Clogged/restricted brake hydraulic system
- Sticking/worn caliper piston
- Clogged master cylinder port




## HYDRAULIC BRAKE

### BRAKE FLUID REPLACEMENT/ AIR BLEEDING

#### NOTICE

- Do not allow foreign material to enter the system when filling the reservoir.
- Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.

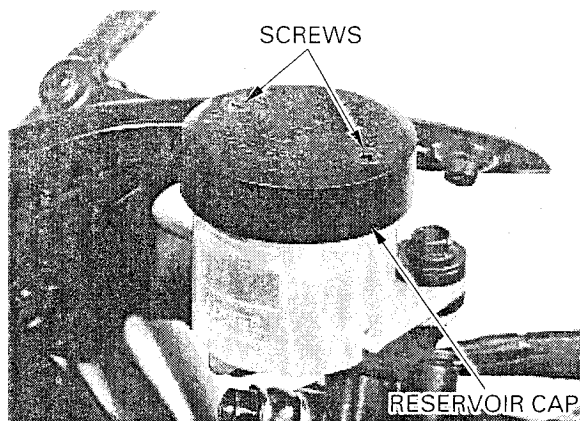


#### BRAKE FLUID DRAINING

For the front brake, turn the handlebar until the reservoir is parallel to the ground, before removing the reservoir cap.


Remove the screws and reservoir cap.

Remove the diaphragm plate and diaphragm.

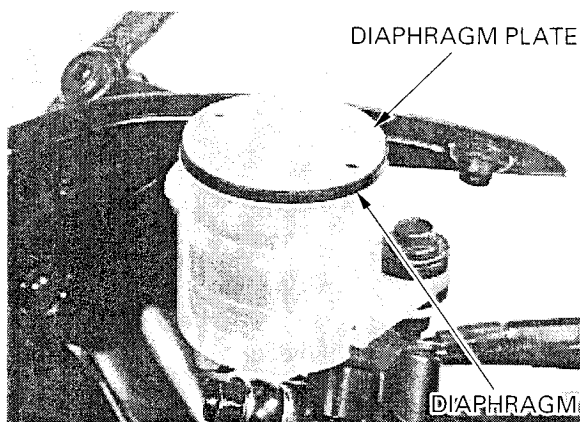


For the rear brake, remove the rear brake reservoir mounting bolt.


Remove the reservoir cap.

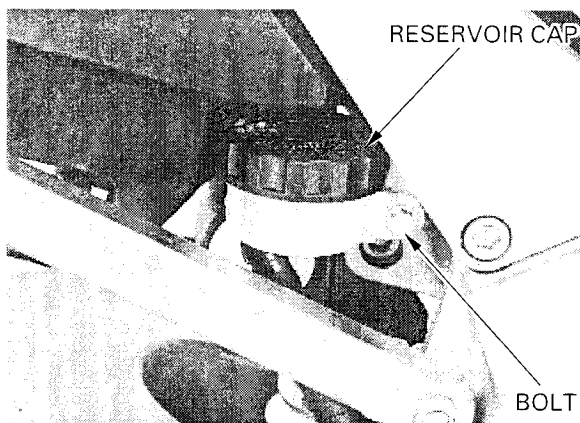

Remove the diaphragm plate and diaphragm.

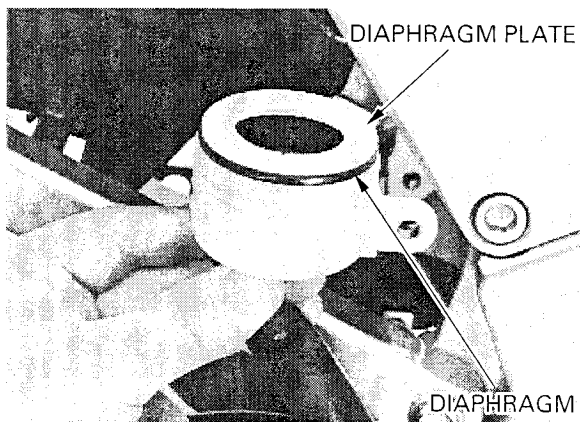

Connect a bleed hose to the caliper bleed valve.

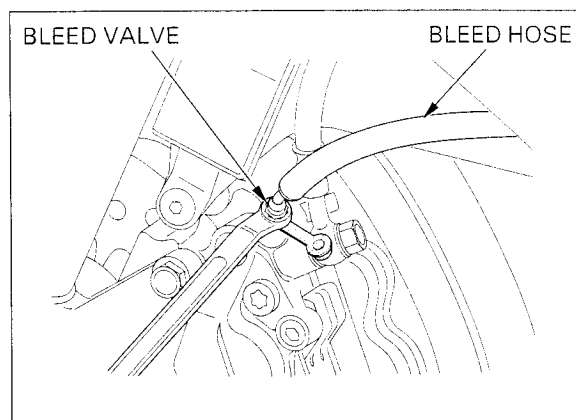

Loosen the bleed valve and pump the brake lever or pedal.

Stop pumping the lever or pedal when no more fluid flows out of the bleed valve.

## BRAKE FLUID FILLING

Fill the reservoir with DOT 4 brake fluid from a sealed container.

### NOTICE


- Use only DOT 4 brake fluid from a sealed container.
- Do not mix different types of fluid. There are not compatible.



Connect a commercially available brake bleeder to the bleed valve.

Pump the brake bleeder and loosen the bleed valve, adding fluid when the fluid level in the master cylinder reservoir is low.

- Check the fluid level often while bleeding the brakes to prevent air from being pumped into the system.
- When using a brake bleeding tool, follow the manufacturer's operating instructions.

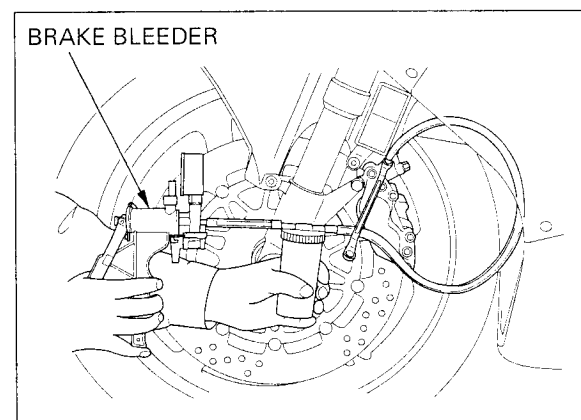


Repeat the previous steps until air bubbles do not appear in the plastic hose.

- If air is entering the bleeder from around the bleed valve threads, seal the threads with teflon tape.
- If a brake bleeder is not available, fill the master cylinder and operate the brake lever or pedal to fill the system.

Close the bleed valve.


Next, perform the BLEEDING procedure.

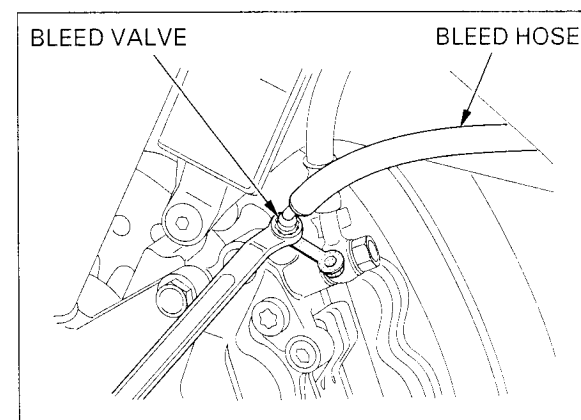

## HYDRAULIC BRAKE

### BRAKE BLEEDING

Connect a clear bleed hose to the bleed valve. Pump up the system pressure with the lever or pedal until there are no air bubbles in the fluid flowing out of the master cylinder and lever or pedal resistance is felt.

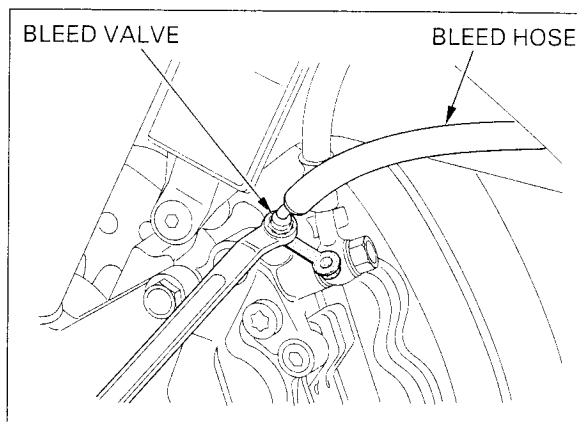

*Do not release the brake lever or pedal until the bleed valve has been closed.*


1. Squeeze the brake lever or push the brake pedal, open the bleed valve 1/2 turn and then close the valve.
2. Release the brake lever or pedal until the bleed valve has been closed.

Repeat steps 1 and 2 until bubbles cease to appear in the fluid coming out of the bleed valve. Tighten the bleed valve.


**TORQUE:** 6 N·m (0.6 kgf·m , 4.3 lbf·ft)

Fill the fluid reservoir to the upper level.


Reinstall the diaphragm and diaphragm plate.

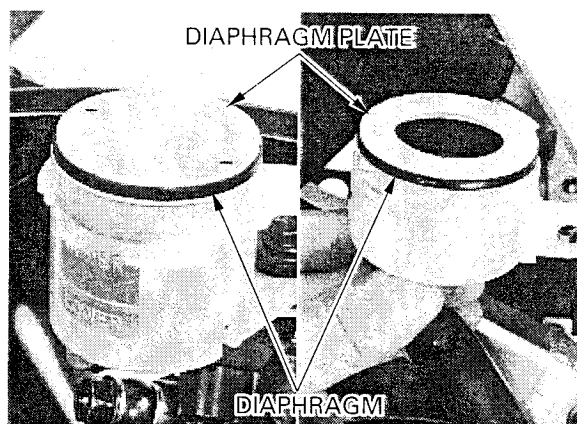

On the front brake, install the reservoir cap, and tighten the screws.

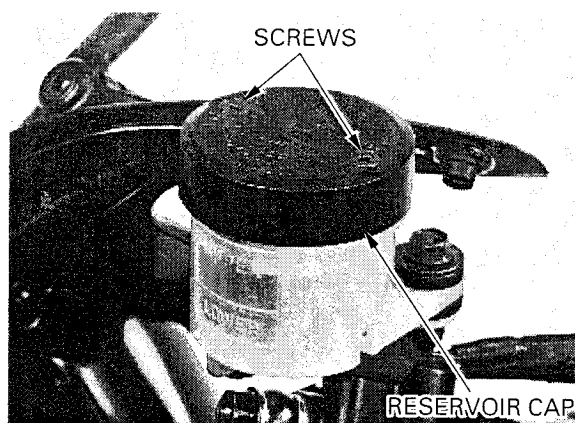

On the rear brake, install the reservoir cap securely, then install the reservoir onto the frame and tighten the mounting bolt.

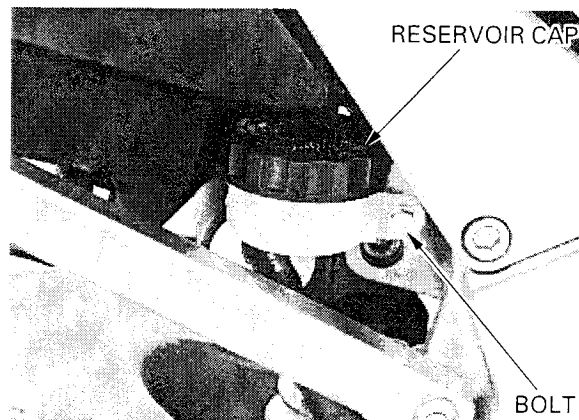



## BRAKE PAD/DISC

### FRONT BRAKE PAD REPLACEMENT

*Always replace the brake pads in pairs to assure even disc pressure.*





Loosen the pad pins.  
Remove the bolts and brake caliper.

*Check the brake fluid level in the brake master cylinder reservoir as this operation causes the level to rise.*

Push the caliper pistons all the way in to allow installation of new brake pads.

Remove the pad pins, pad spring and brake pads.


Clean the inside of the caliper especially around the caliper pistons.

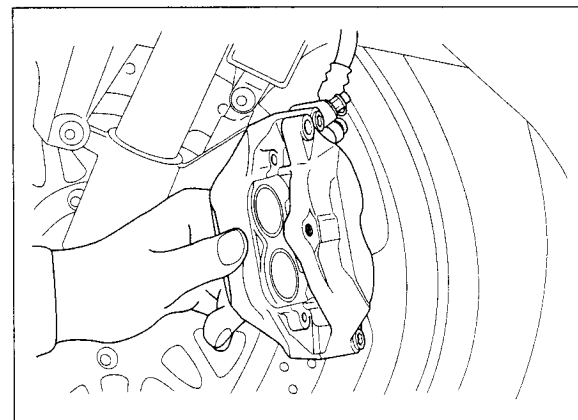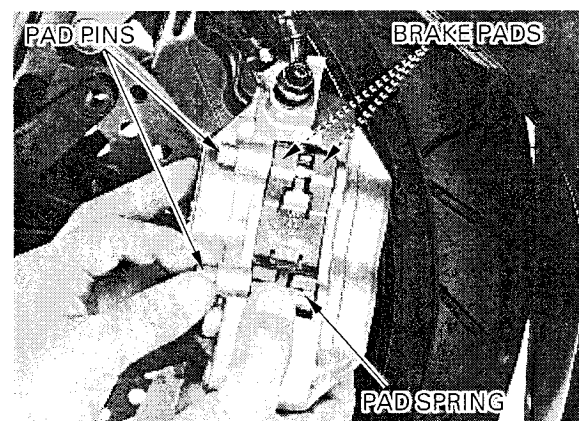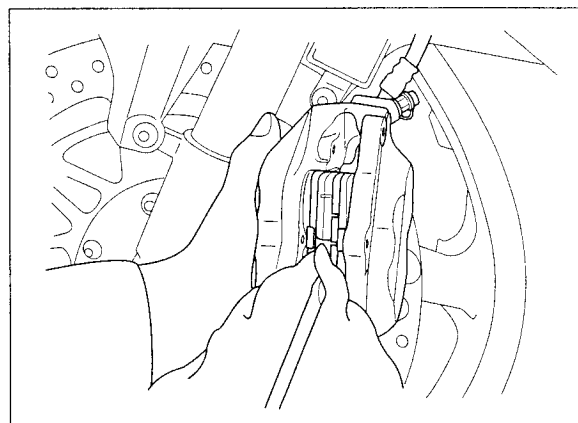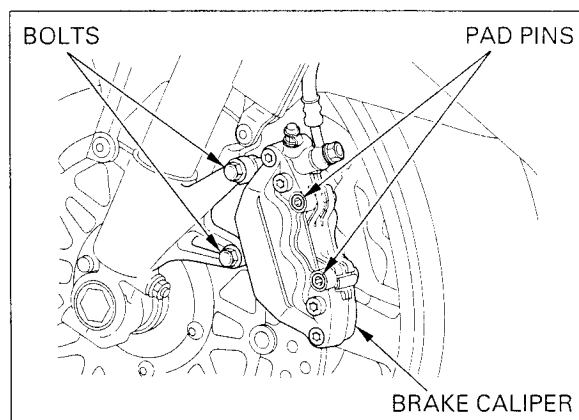

## HYDRAULIC BRAKE

Install the new brake pads.  
Install the pad spring with its arrow mark facing up as shown.

Push the pad spring, then install the pad pin.

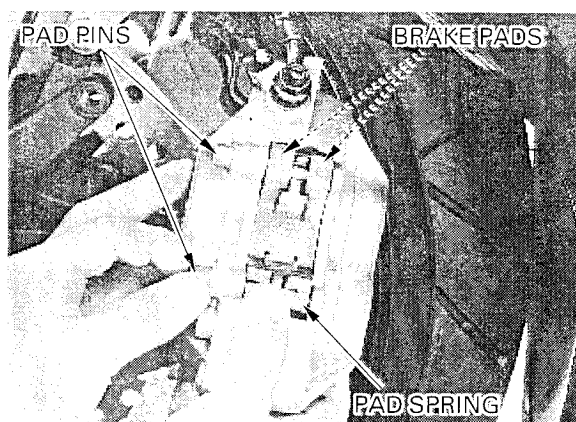

*Be careful not to damage the pads.*


Install the brake caliper to the fork leg so the disc is positioned between the pads.

Install and tighten the new brake caliper mounting bolts.

**TORQUE:** 30 N·m (3.1 kgf·m , 22 lbf·ft)

Tighten the pad pins.

**TORQUE:** 18 N·m (1.8 kgf·m , 13 lbf·ft)

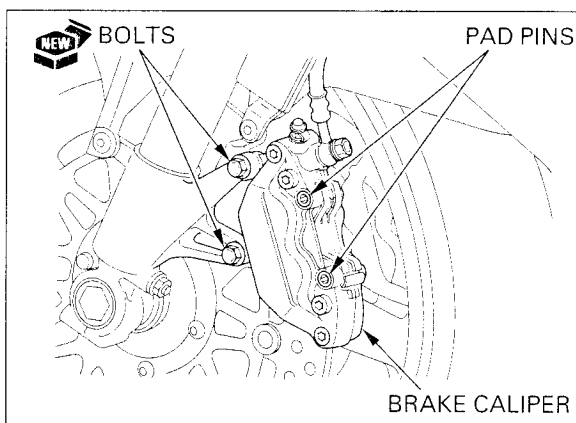


*Always replace the brake pads in pairs to assure even disc pressure.*


### REAR BRAKE PAD REPLACEMENT

Check the brake fluid level in the brake master cylinder reservoir as this operation causes the level to rise.

Push the caliper pistons all the way in by pushing the caliper body inward to allow installation of new brake pads.

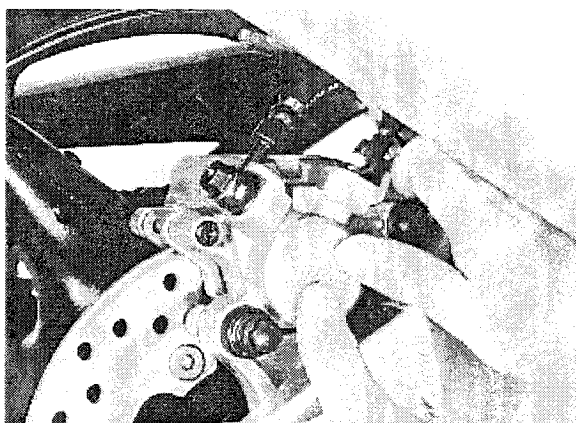


Remove the pad pin plug.

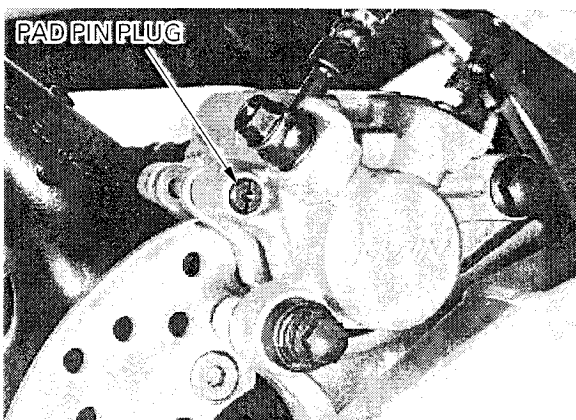




Loosen the pad pin.

Remove the caliper bracket bolt.

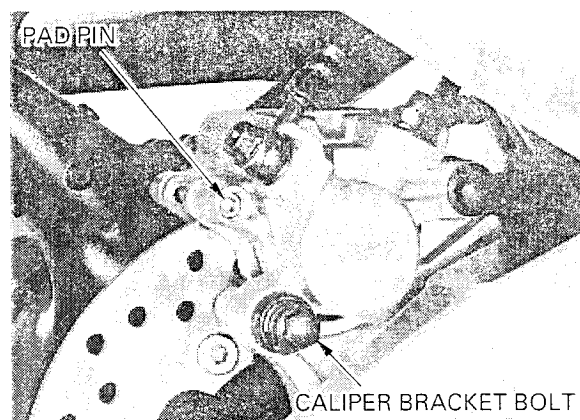

Pivot the caliper up.


Remove the pad pin and brake pads.

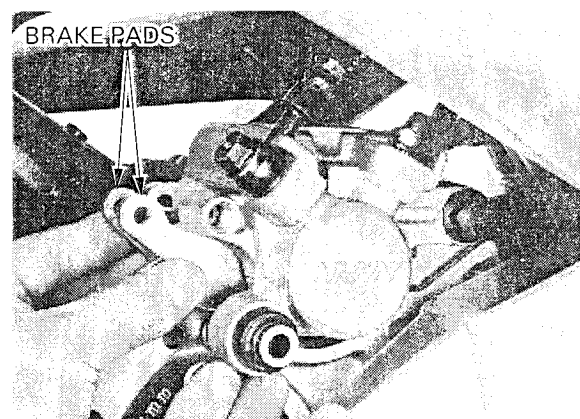

Make sure the brake pad spring is in place.  
Install the new brake pads.

Lower the caliper while pushing the pads against the pad spring so that the pad ends are positioned onto the retainer on the caliper bracket.

Install the pad pin.

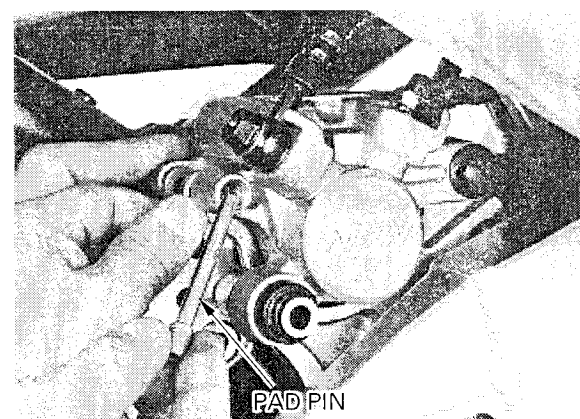


Install and tighten the caliper bracket bolt.

**TORQUE:** 22 N·m (2.2 kgf·m , 16 lbf·ft)

Tighten the pad pin.


**TORQUE:** 18 N·m (1.8 kgf·m , 13 lbf·ft)

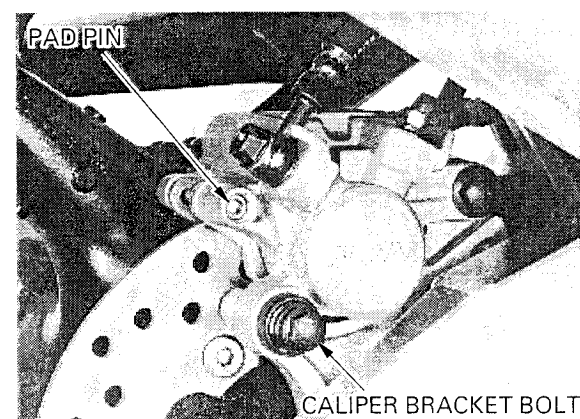

## HYDRAULIC BRAKE

Install and tighten the pad pin plug.

**TORQUE:** 2 N·m (0.25 kgf·m , 1.8 lbf·ft)

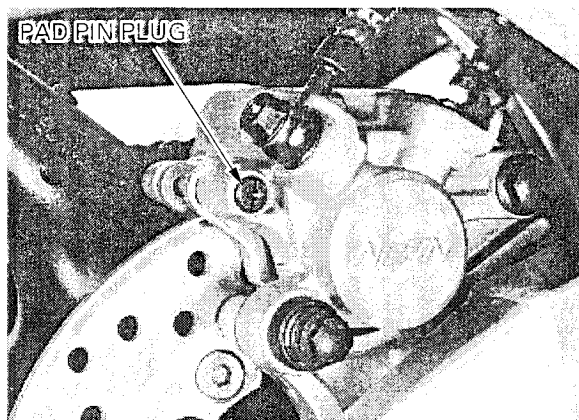

### BRAKE DISC INSPECTION

Visually inspect the brake disc for damage or cracks.


Measure the brake disc thickness with a micrometer.

**SERVICE LIMITS:**

**FRONT:** 3.5 mm (0.14 in)

**REAR:** 4.0 mm (0.16 in)


Replace the brake disc if the smallest measurement is less than the service limit.

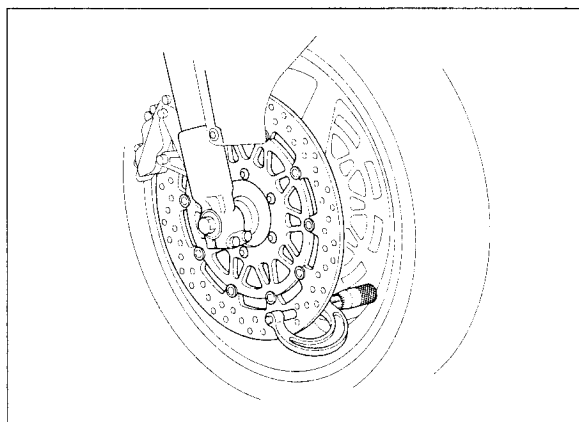

Measure the brake disc warpage with a dial indicator.

**SERVICE LIMIT:** 0.30 mm (0.012 in)

Check the wheel bearings for excessive play, if the warpage exceeds the service limit.  
Replace the brake disc if the wheel bearings are normal.

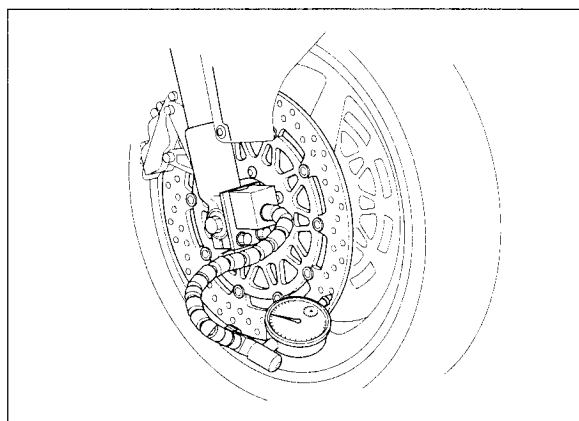


## FRONT MASTER CYLINDER

### REMOVAL


Drain the front hydraulic system (page 15-4).

*Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.*

Disconnect the brake light switch wire connectors. Remove the brake hose oil bolt, sealing washers and brake hose eyelet.

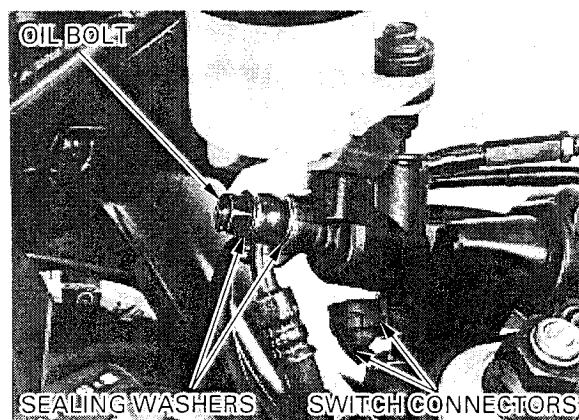


Remove the bolts from the master cylinder holder and remove the master cylinder assembly.

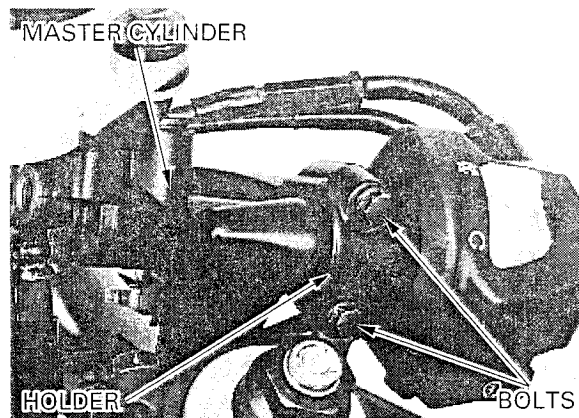


## DISASSEMBLY

Remove the dust cover and snap ring.  
Remove the bolt and brake reservoir from the master cylinder.


Remove the O-ring.

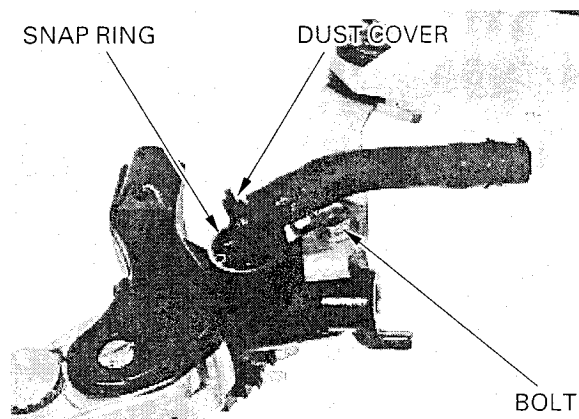

Remove the pivot bolt/nut and brake lever assembly.

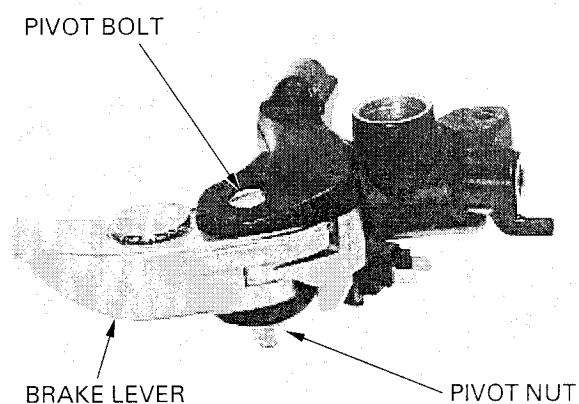


Remove the screw and brake light switch.

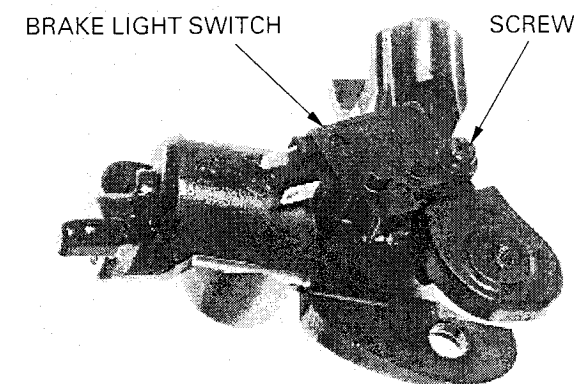



## HYDRAULIC BRAKE

Remove the boot.

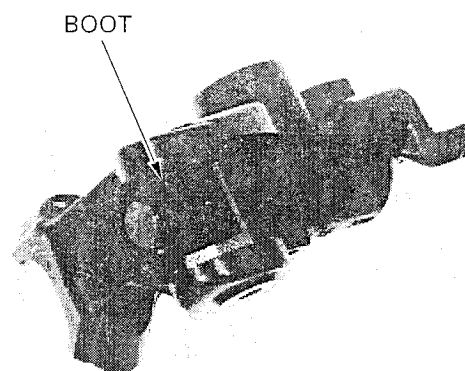

Remove the snap ring from the master cylinder body using the special tool as shown.


**TOOL:**

**Snap ring pliers**

07914-SA50000 or  
07914-3230001

Remove the master piston and spring.

Clean the inside of the cylinder and reservoir with brake fluid.

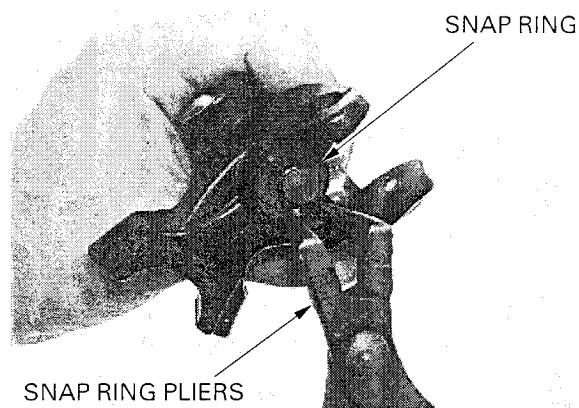


## INSPECTION

Check the piston boot, primary cup and secondary cup for fatigue or damage.

Check the master cylinder and piston for abnormal scratches.


Measure the master cylinder I.D.

**SERVICE LIMIT:** 19.105 mm (0.7522 in)

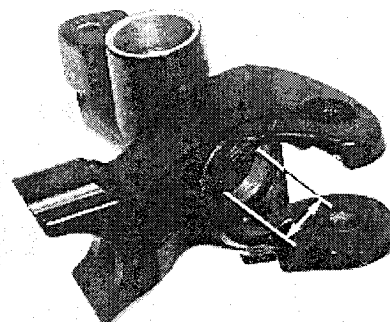


Measure the master cylinder piston O.D.

**SERVICE LIMIT:** 19.006 mm (0.7483 in)

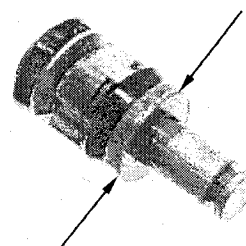

## ASSEMBLY

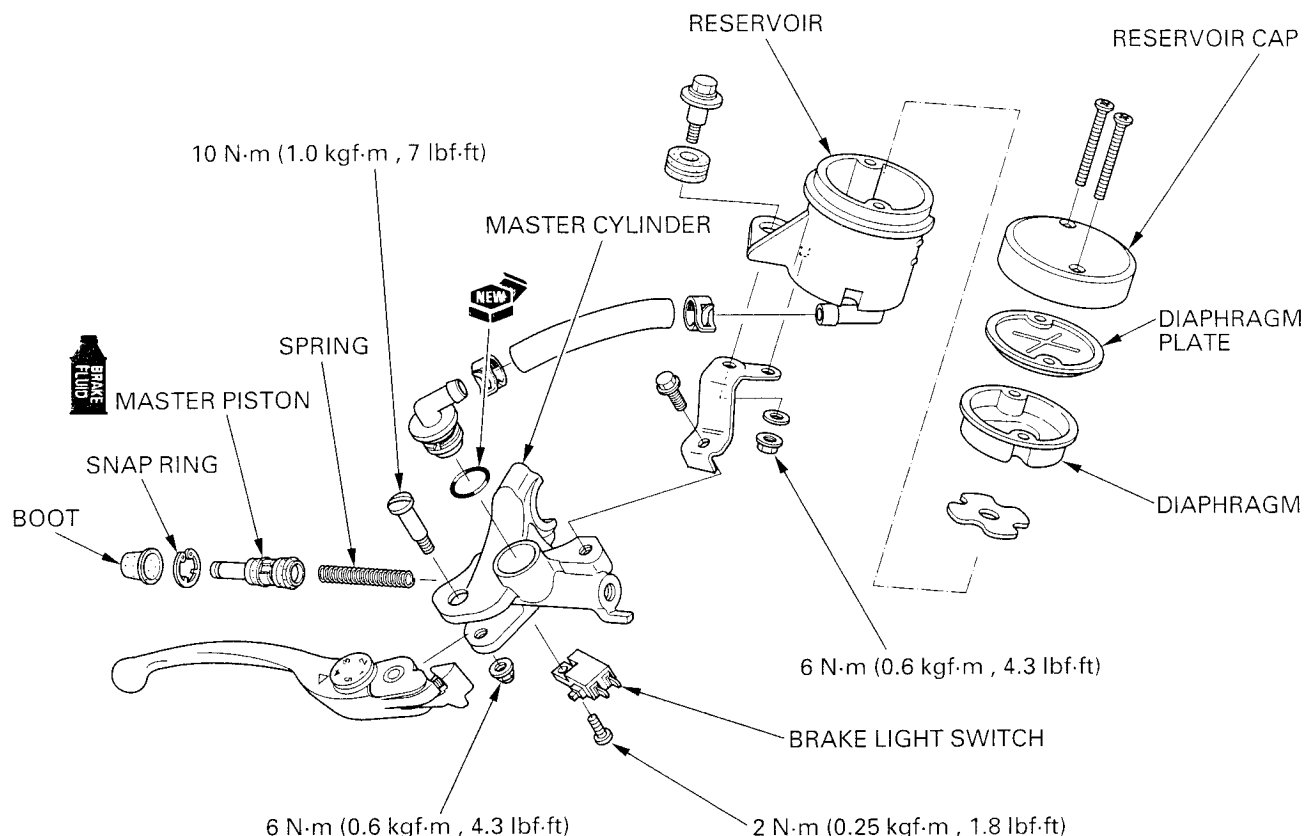

Keep the piston, cups, spring, snap ring and boot as a set; do not substitute individual parts.

Coat all parts with clean brake fluid before assembly.

When installing the cups, do not allow the lips to turn inside out.



Dip the piston in brake fluid.  
Install the spring into the piston.  
Install the piston assembly into the master cylinder.

Be certain the snap ring is firmly seated in the groove.

Install the snap ring.

**TOOL:**  
**Snap ring pliers**


07914-SA50000 or  
07914-3230001

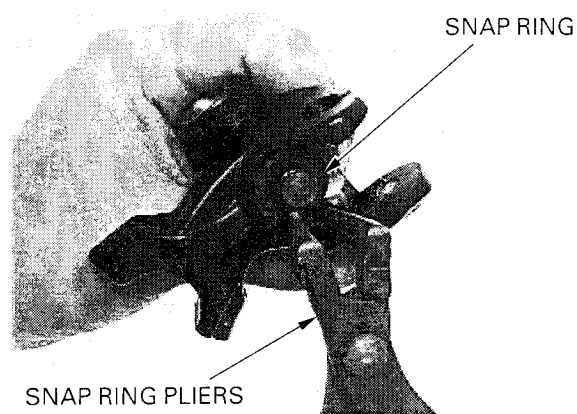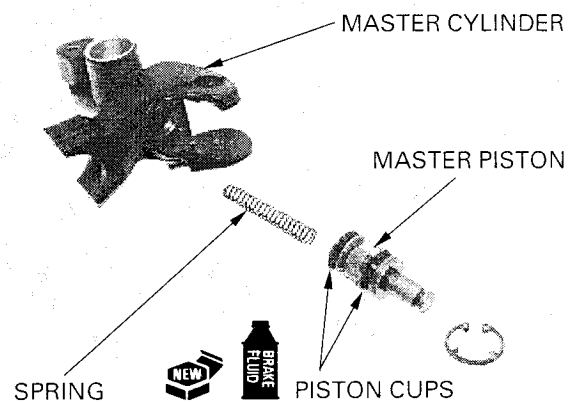




## HYDRAULIC BRAKE

Install the boot.

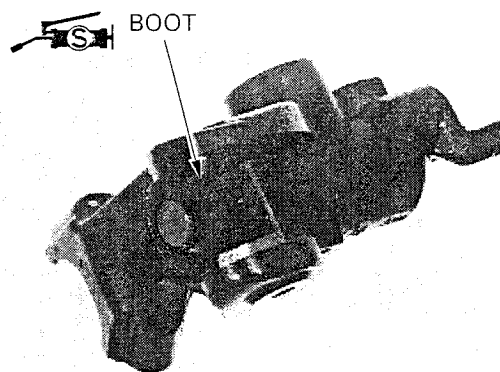


Install the brake light switch and tighten the screw to the specified torque.

**TORQUE:** 1 N·m (0.12 kgf·m , 0.9 lbf·ft)

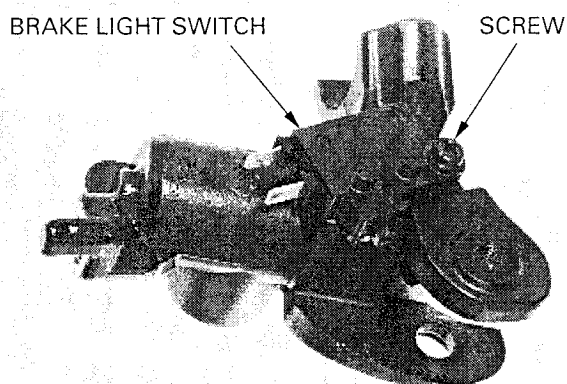

Apply silicone grease to the contact surfaces of the brake lever and piston tip.

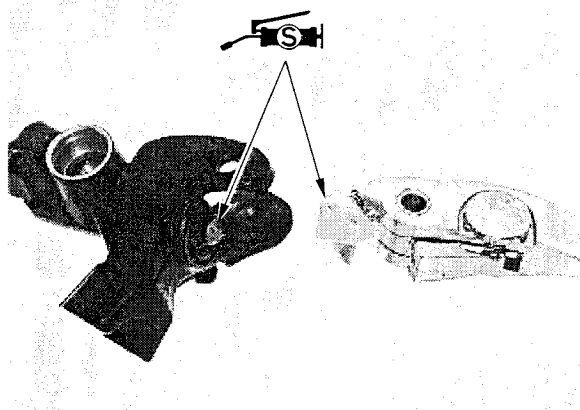


Install the brake lever assembly, tighten the pivot bolt to the specified torque.


**TORQUE:** 10 N·m (1.0 kgf·m , 7 lbf·ft)

Hold the pivot bolt and tighten the pivot nut to the specified torque.

**TORQUE:** 6 N·m (0.6 kgf·m , 4.3 lbf·ft)

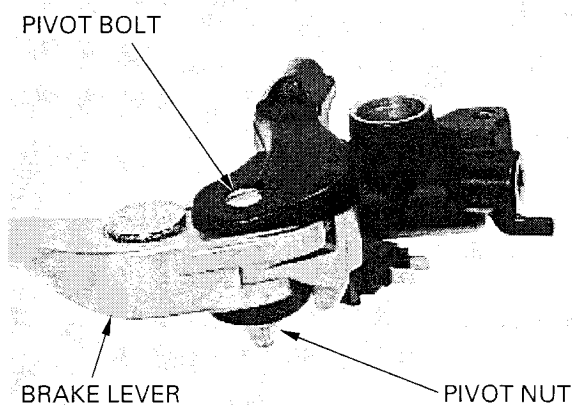


Apply brake fluid to the new reservoir joint O-ring.

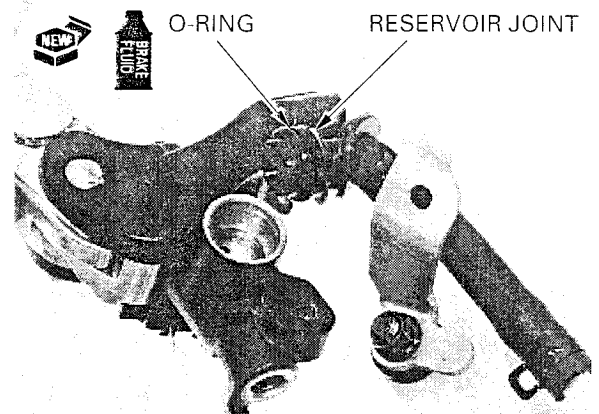


Install the master cylinder reservoir joint into the master cylinder and secure the joint with a snap ring.  
Install the dust cover.

Install and tighten the reservoir mounting bolt.

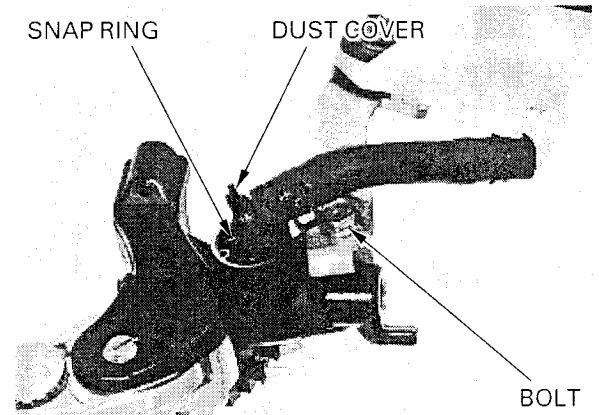

Place the master cylinder assembly on the handlebar.  
Align the end of the master cylinder with the punch mark on the handlebar.

Install the master cylinder holder with the "UP" mark facing up.  
Tighten the upper bolt first, then the lower bolt.

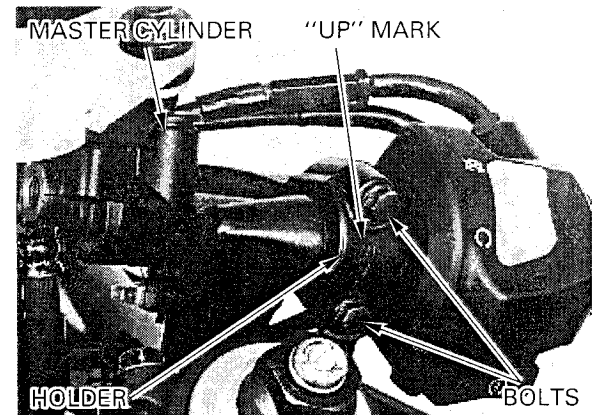


Install the brake hose eyelet with the oil bolt and new sealing washers.  
Push the eyelet joint against the stopper, then tighten the oil bolt to the specified torque.

**TORQUE:** 34 N·m (3.5 kgf·m , 25 lbf·ft)

Connect the brake light switch wire connectors.

Fill the reservoir to the upper level and bleed the brake system (page 15-4).

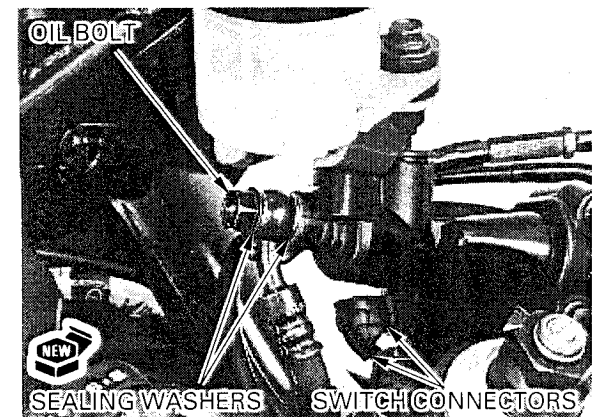


## HYDRAULIC BRAKE

### REAR MASTER CYLINDER

#### REMOVAL

Drain the rear hydraulic system (page 15-4).

Remove the rear master cylinder reservoir mounting bolt.

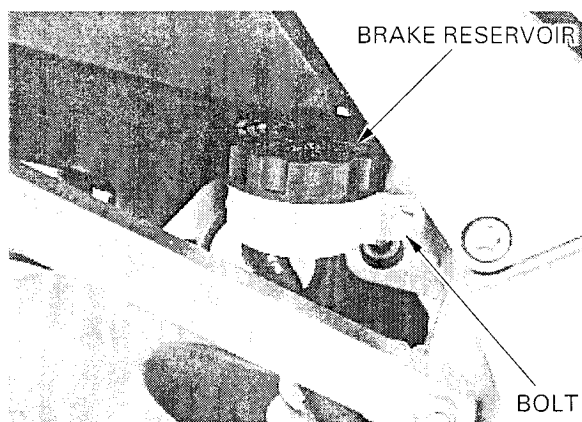


*Avoid spilling fluid on painted, plastic, or rubber parts.*

*Place a rag over these parts whenever the system is serviced.*

Remove the brake hose oil bolt, sealing washers and brake hose.

Loosen the rear master cylinder mounting bolts. Remove the main footpeg bracket socket bolts and main footpeg bracket assembly.

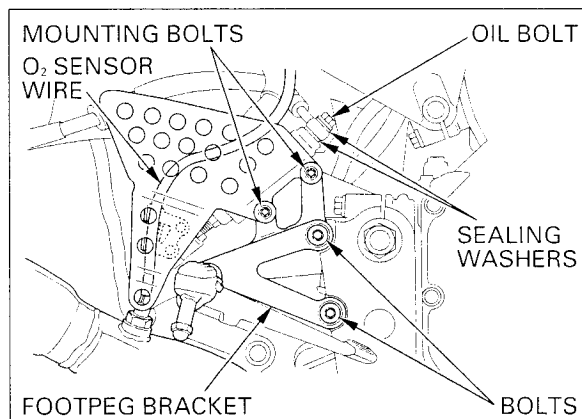


*California type only:*

Release the O<sub>2</sub> sensor wire from the wire guide behind the light step guard.


Remove and discard the brake pedal joint cotter pin. Remove the joint pin.

Remove the master cylinder mounting bolts, step guard and master cylinder.

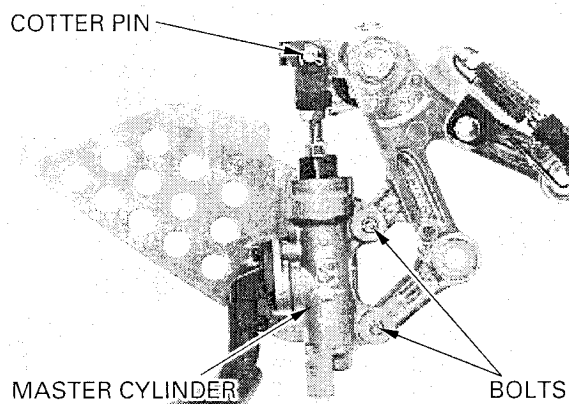

#### DISASSEMBLY

Remove the screw and reservoir hose joint from the master cylinder.

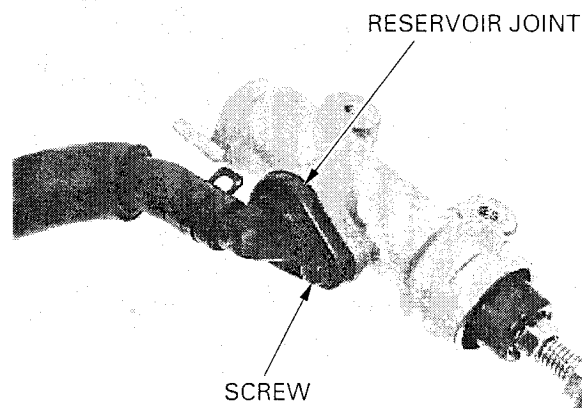


Remove the boot.

Remove the snap ring from the master cylinder body using the special tool as shown.

**TOOL:**


**Snap ring pliers**

07914-SA50000 or  
07914-3230001

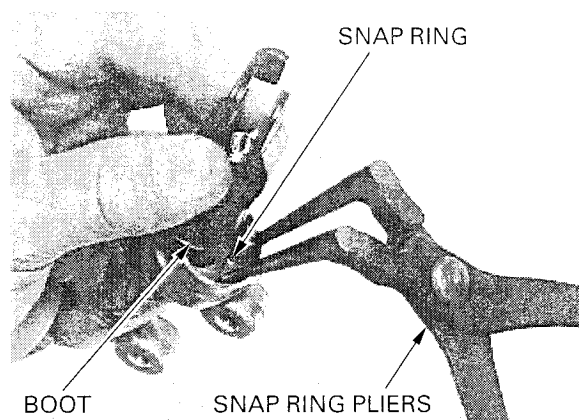

Remove the push rod, master piston and spring.

Clean the inside of the cylinder with brake fluid.

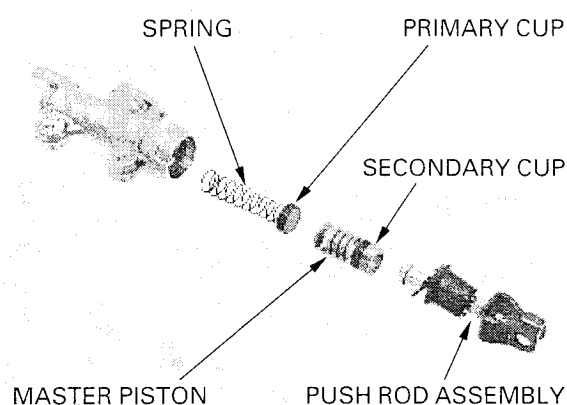


**INSPECTION**

Check the piston boot, primary cup and secondary cup for fatigue or damage.

Check the master cylinder and piston for abnormal scratches.


Measure the master cylinder I.D.

**SERVICE LIMIT:** 15.925 mm (0.6270 in)

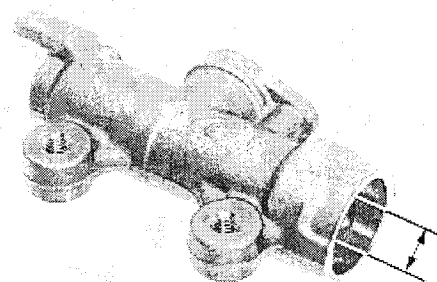

Measure the master cylinder piston O.D.


**SERVICE LIMIT:** 15.815 mm (0.6226 in)

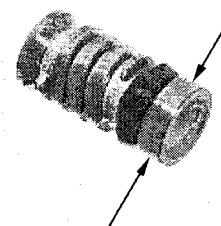



## HYDRAULIC BRAKE

### ASSEMBLY

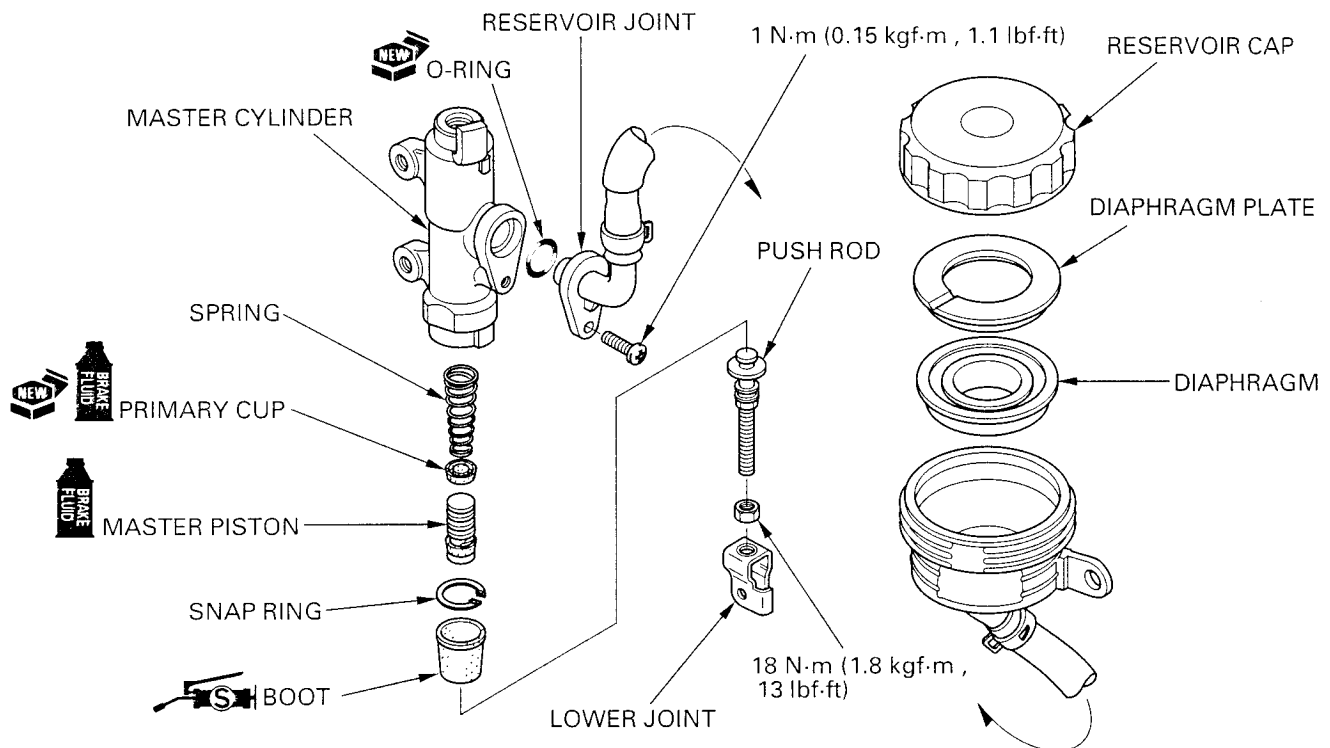


Keep the piston, cups, spring, snap ring and boot as a set; do not substitute individual parts.

Coat all parts with clean brake fluid before assembly.

When installing the cups, do not allow the lips to turn inside out.

Dip the piston in brake fluid.  
Install the spring to the primary cup.  
Install the spring/primary cup and master piston assembly.  
Apply silicone grease to the piston contact area of the push rod.

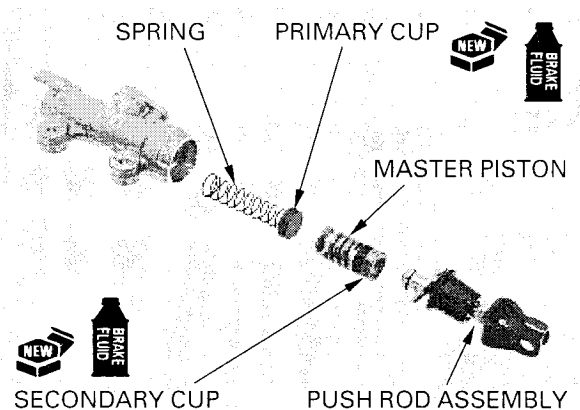


Be certain the snap ring is firmly seated in the groove.

Install the push rod into the master cylinder.  
Install the snap ring.

**TOOL:**  
**Snap ring pliers**


07914-SA50000 or  
07914-3230001

Install the boot.

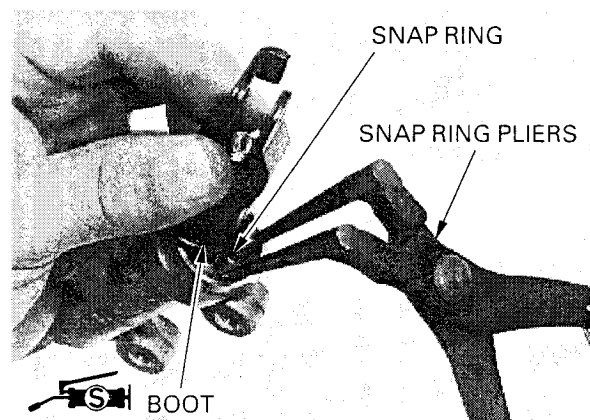




Apply brake fluid to a new-O-ring and install it onto the reservoir joint.  
Install the reservoir joint into the master cylinder.

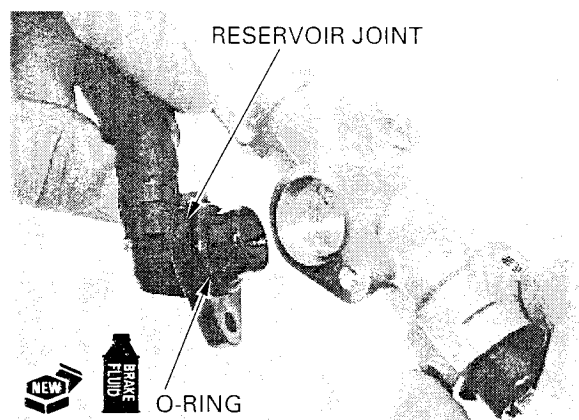


Apply a locking agent to the reservoir joint screw thread.  
Install and tighten the screw to the specified torque.

**TORQUE:** 1 N·m (0.15 kgf·m , 1.1 lbf·ft)

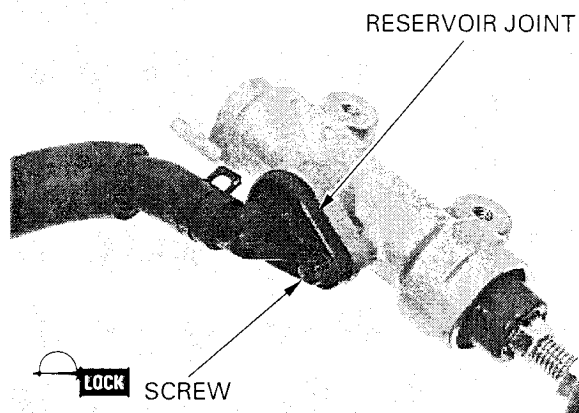

If the push rod is disassembled, adjust the push rod length as shown.  
After adjustment, tighten the lock nut to the specified torque.


**TORQUE:** 18 N·m (1.8 kgf·m , 13 lbf·ft)

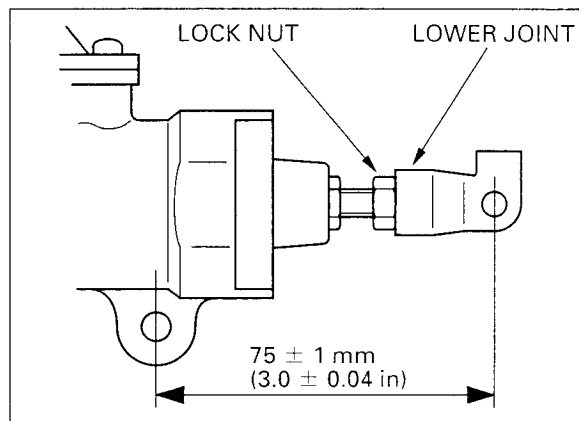

## INSTALLATION

Place the master cylinder onto the main footpeg bracket, install the step guard and master cylinder mounting bolts.

Connect the brake pedal to the push rod lower joint.  
Install the joint pin and secure it with a new cotter pin.

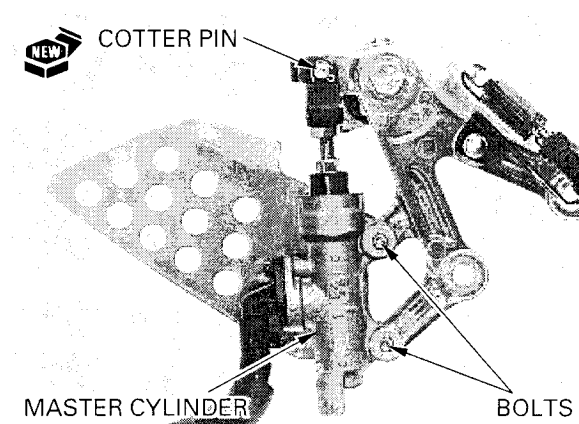

## HYDRAULIC BRAKE

*California type only:* Clamp the O<sub>2</sub> sensor wire to the wire guide behind the right step guard.

Install the main footpeg bracket onto the lower bracket, tighten the socket bolts to the specified torque.

**TORQUE:** 39 N·m (4.0 kgf·m , 29 lbf·ft)

Tighten the master cylinder mounting bolts.



Install the brake hose with the oil bolt and new sealing washers.

Push the eyelet joint against the stopper, then tighten the oil bolt to the specified torque.

**TORQUE:** 34 N·m (3.5 kgf·m , 25 lbf·ft)

Install and tighten the brake reservoir mounting bolt.

Fill the reservoir to the upper level and bleed the brake system (page 15-4).

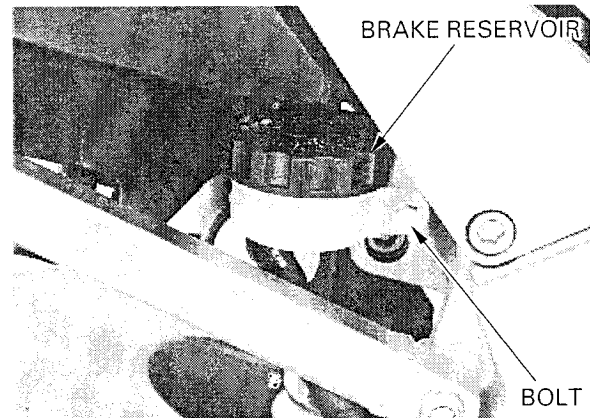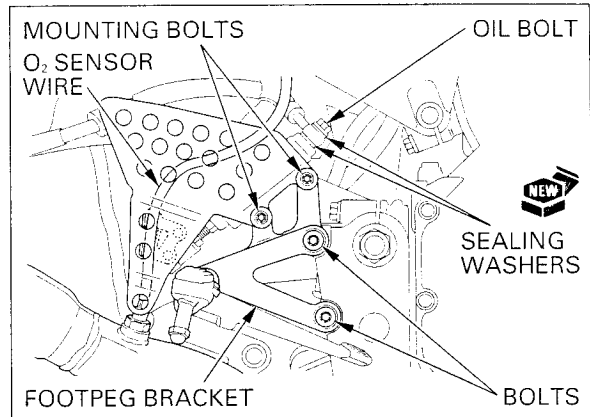


## FRONT BRAKE CALIPER

### REMOVAL

Drain the front brake hydraulic system (page 15-4).

*Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.*

Remove the oil bolt, sealing washers and brake hose eyelet joint.  
Remove the caliper mounting bolts, caliper and the brake pads (page 15-6).

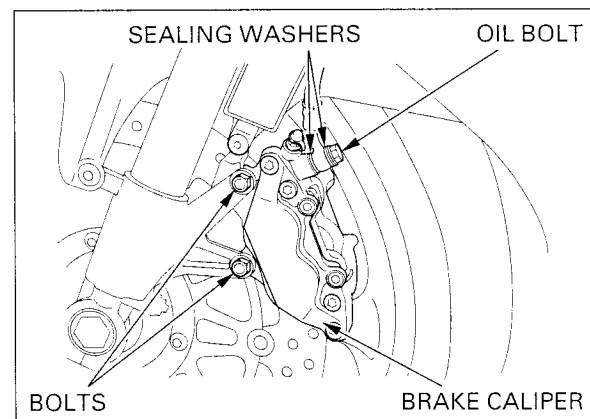


### DISASSEMBLY


Install corrugated cardboard or soft wood sheet between the pistons.

Apply small squirts of air pressure to the fluid inlet to remove the pistons.

*Do not use high pressure air or bring the nozzle too close to the inlet.*

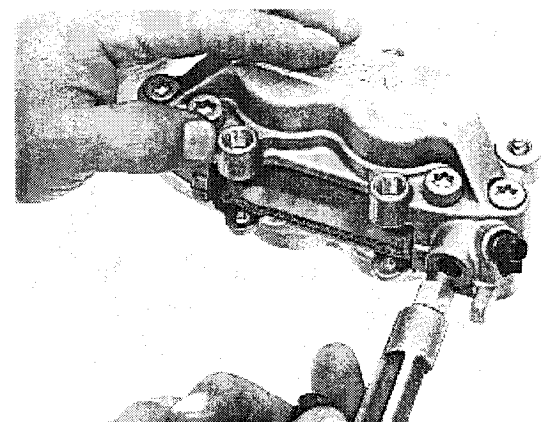


Remove the four caliper assembly bolts and separate the caliper halves.

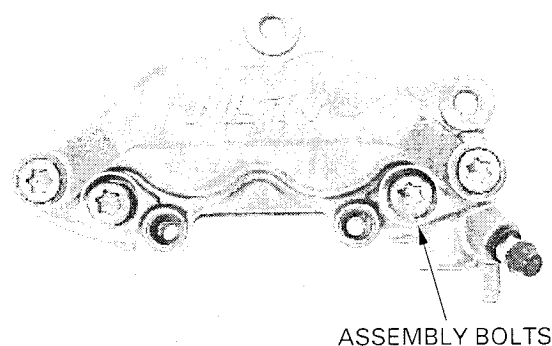

*Mark the pistons to ensure correct reassembly.*

Remove the following:


- Joint seals
- Caliper piston A
- Caliper piston B

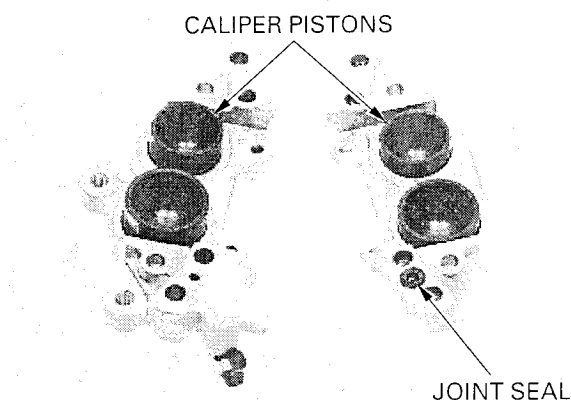

*Be careful not to damage the piston sliding surface.*

Push the dust seals and piston seals in and lift them out.

Clean the seal grooves with clean brake fluid.

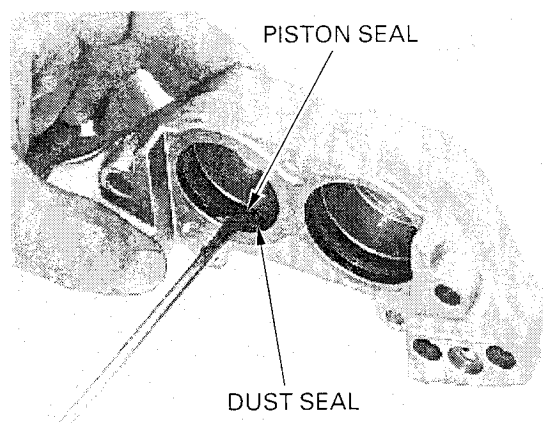


## INSPECTION

Check the caliper cylinder for scoring or other damage.

Measure the caliper cylinder I.D.

### SERVICE LIMITS:

- A : 34.02 mm (1.339 in)
- B : 30.29 mm (1.193 in)

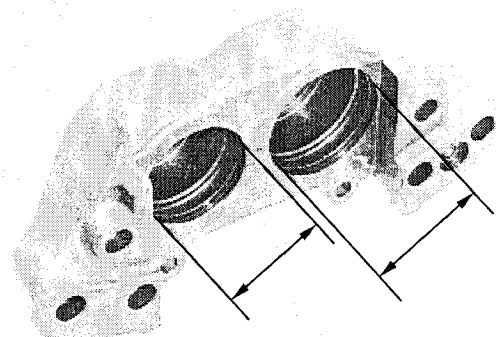

## HYDRAULIC BRAKE


Check the caliper pistons for scratches, scoring or other damage.

Measure the caliper piston O.D.


### SERVICE LIMITS:

A : 33.794 mm (1.3305 in)

B : 30.074 mm (1.1840 in)

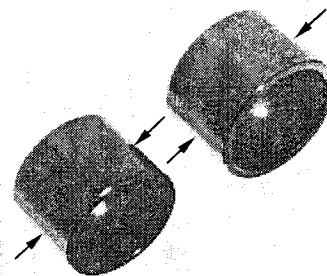


### ASSEMBLY

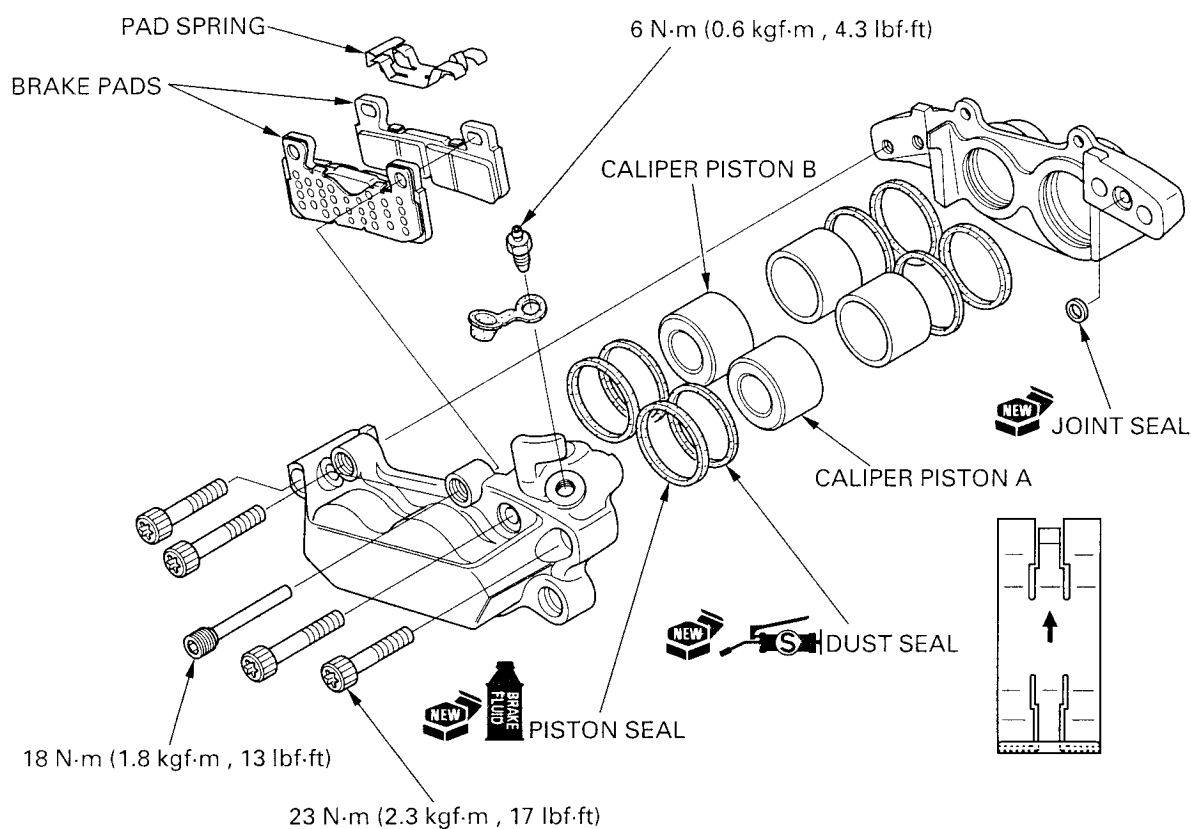


Coat the new piston seals with clean brake fluid.  
Coat the new dust seals with silicone grease.

Install the piston and dust seal into the groove of the caliper body.

Coat the caliper pistons with clean brake fluid and install them into the caliper cylinder with their opening ends toward the pad.

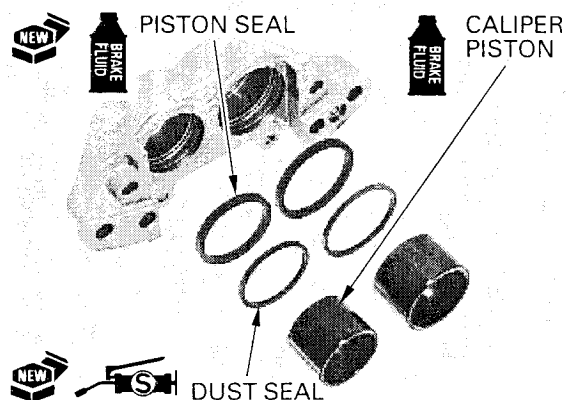


Install the new joint seal into the fluid passage on caliper.

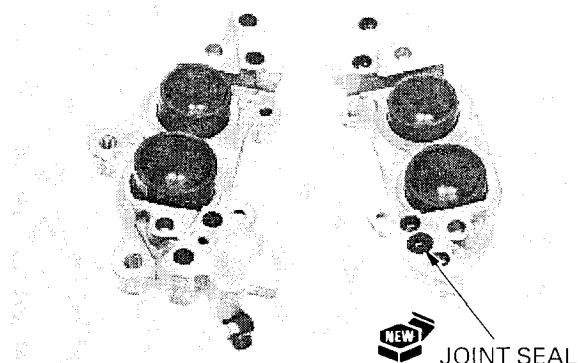

Assemble the caliper halves and install and tighten the new caliper assembly bolts to the specified torque.

**TORQUE:** 23 N·m (2.3 kgf·m , 17 lbf·ft)

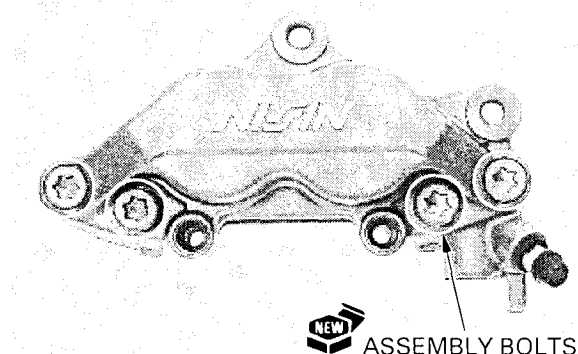


## INSTALLATION

Install the brake pads and caliper onto the fork leg (page 15-6).

Install and tighten the new caliper mounting bolts to the specified torque.

**TORQUE:** 30 N·m (3.1 kgf·m , 22 lbf·ft)


Install the brake hose eyelet to the caliper body with two new sealing washers and oil bolt.

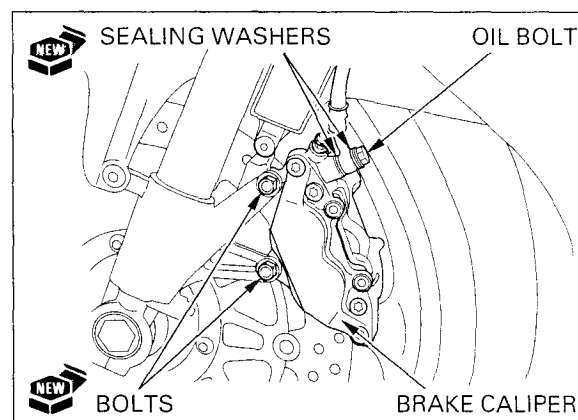

Push the brake hose eyelet to the stopper on the caliper, then tighten the oil bolt to the specified torque.

**TORQUE:** 34 N·m (3.5 kgf·m , 25 lbf·ft)

Fill and bleed the front brake hydraulic system (page 15-4).

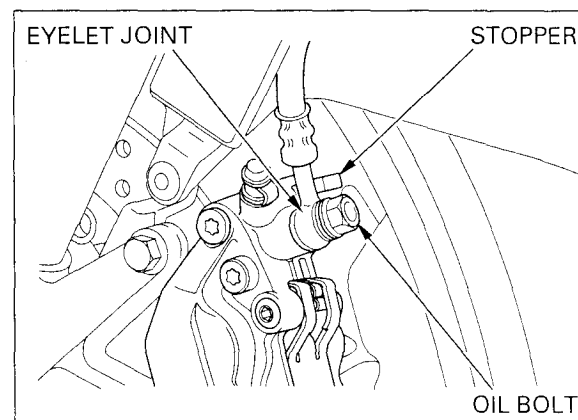



## HYDRAULIC BRAKE


### REAR BRAKE CALIPER

#### REMOVAL

Drain the rear brake hydraulic system (page 15-5).


*Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.*

Remove the oil bolt, sealing washers and brake hose eyelet joint.

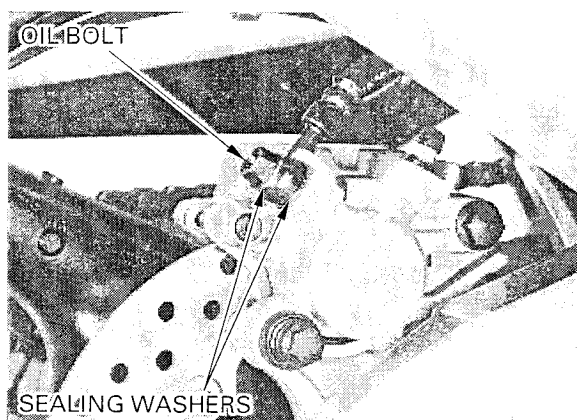


Remove the caliper bracket bolts and the brake pads (page 15-8).

Pivot the caliper up and remove it.

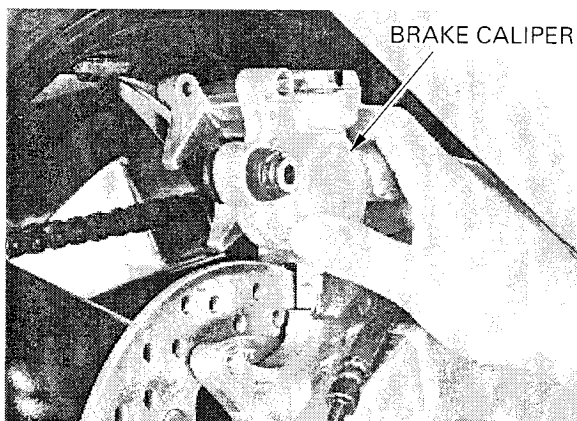

#### DISASSEMBLY


Remove the pad spring, collar and boot from the caliper body.

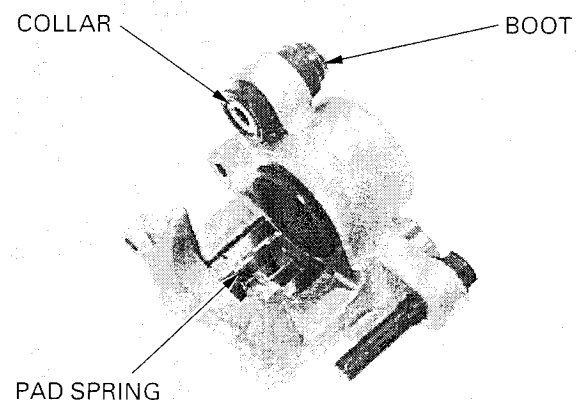

*Do not use high pressure air or bring the nozzle too close to the inlet.*

Place a shop towel over the piston.


Position the caliper body with the piston down and apply small squirts of air pressure to the fluid inlet to remove the piston.

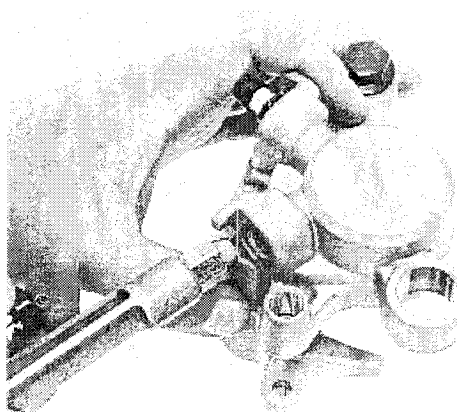

*Be careful not to damage the piston sliding surface.*

Push the dust seal and piston seal in and lift them out.

Clean the seal grooves with clean brake fluid.

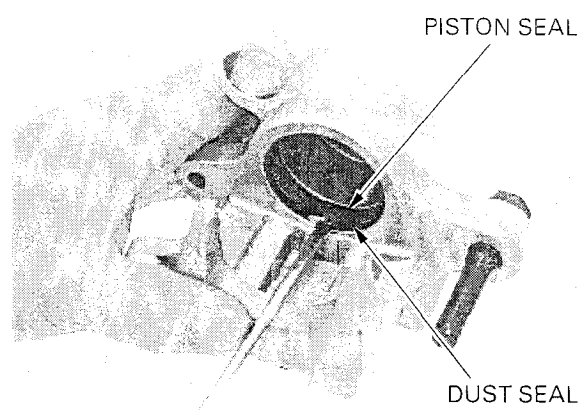

## INSPECTION

Check the caliper cylinder for scoring or other damage.


Measure the caliper cylinder I.D.

**SERVICE LIMIT:** 38.24 mm (1.506 in)


Check the caliper pistons for scratches, scoring or other damage.

Measure the caliper piston O.D.

**SERVICE LIMIT:** 38.090 mm (1.4996 in)

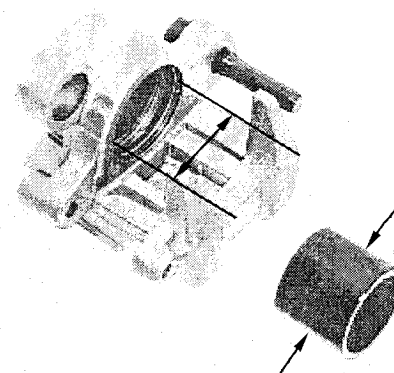

## ASSEMBLY

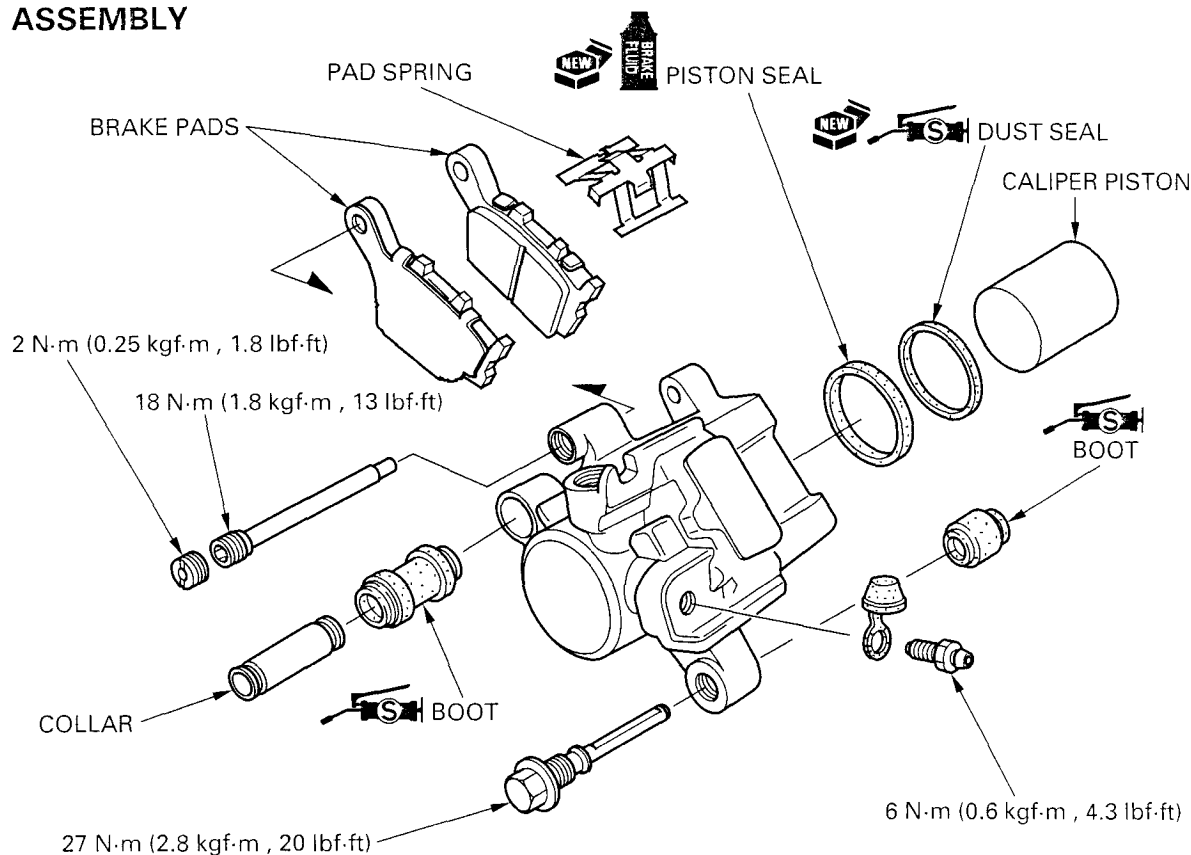


## HYDRAULIC BRAKE

Coat the new piston seal with clean brake fluid.  
Coat the new dust seal with silicone grease.


Install the piston seal and dust seal into the groove of the caliper body.

Coat the caliper piston with clean brake fluid and install it into the caliper cylinder with its opening end toward the pad.

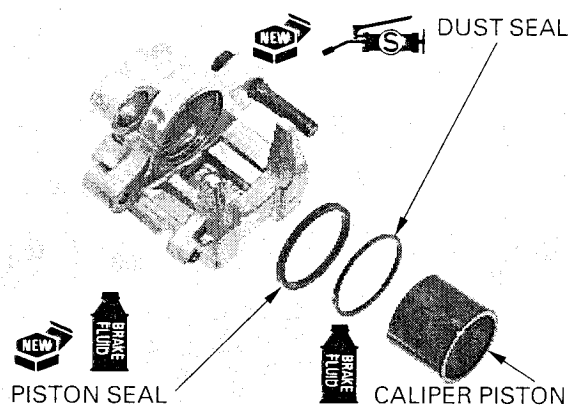

Install the pad spring into the caliper body.  
If the caliper and bracket pin boots are hard or deteriorated, replace them with new ones.

Apply silicone grease to the inside of the bracket pin boot.  
Install the bracket pin boot and collar into the caliper.

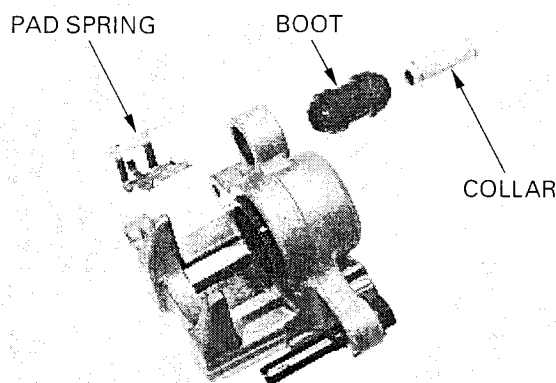

Install the pad retainer into the bracket.


### INSTALLATION

Apply silicone grease to the caliper pin and install the caliper onto the bracket.

Install the brake pads (page 15-8).

Install and tighten the caliper bracket bolt to the specified torque.


**TORQUE:** 22 N·m (2.2 kgf·m , 16 lbf·ft)

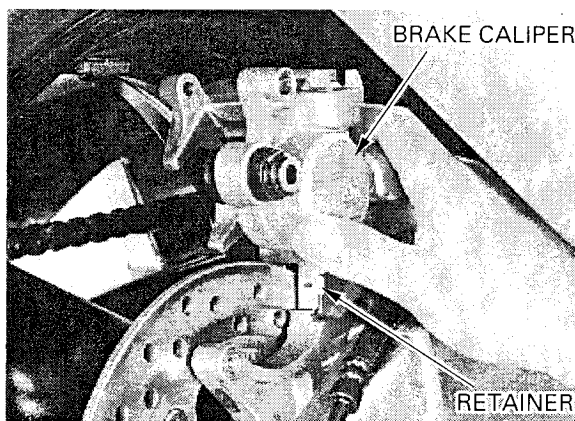

Install the brake hose eyelet to the caliper body with two new sealing washers and oil bolt.  
Push the brake hose eyelet to the stopper on the caliper, then tighten the oil bolt to the specified torque.

**TORQUE:** 34 N·m (3.5 kgf·m , 25 lbf·ft)

Fill and bleed the rear brake hydraulic system (page 15-4).

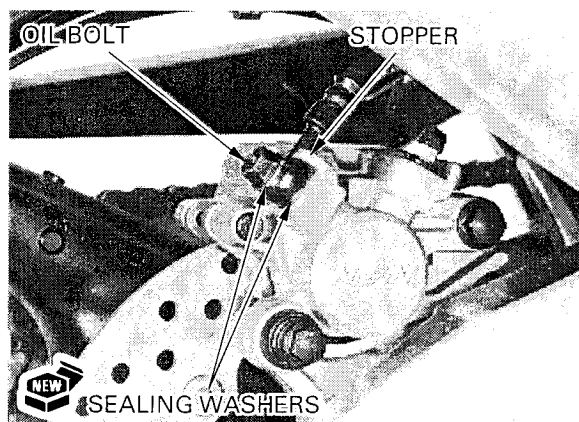

## BRAKE PEDAL

### REMOVAL



*California type only:* Release the O<sub>2</sub> sensor wire from the wire guide behind the right step guard.

Remove the main footpeg bracket mounting bolts and bracket assembly from the lower bracket.

Remove and discard the brake pedal joint cotter pin. Remove the joint pin.


Unhook the return spring and remove the brake light switch from the step holder. Unhook the brake pedal return spring.

Remove the footpeg mounting bolt, footpeg, brake pedal and wave washer.

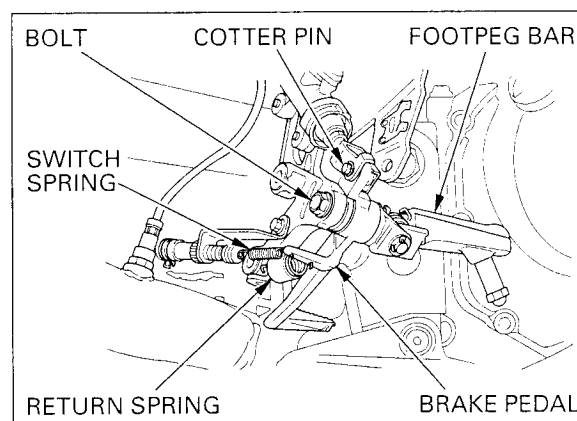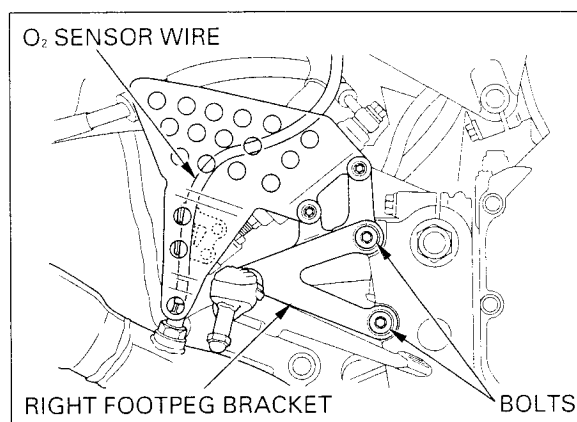

### INSTALLATION


Except california type:

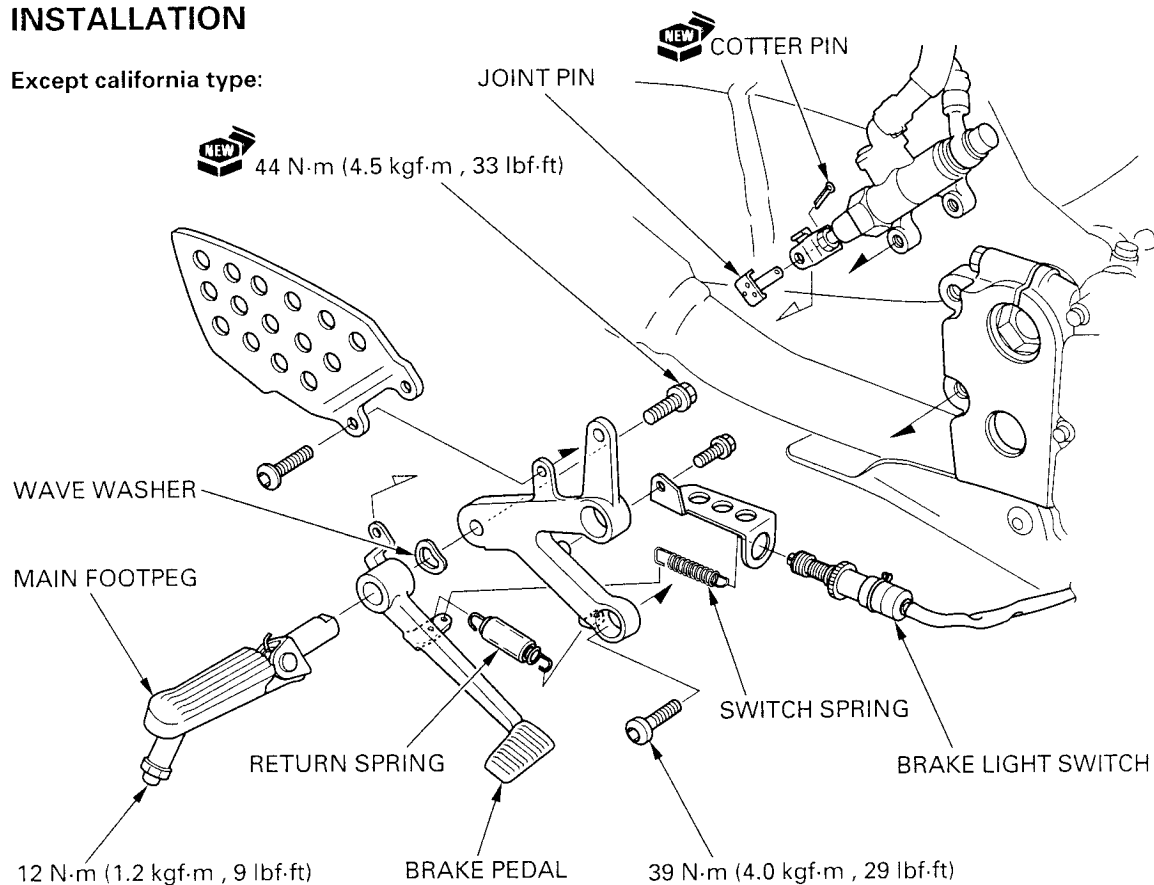




## HYDRAULIC BRAKE

Except California type:

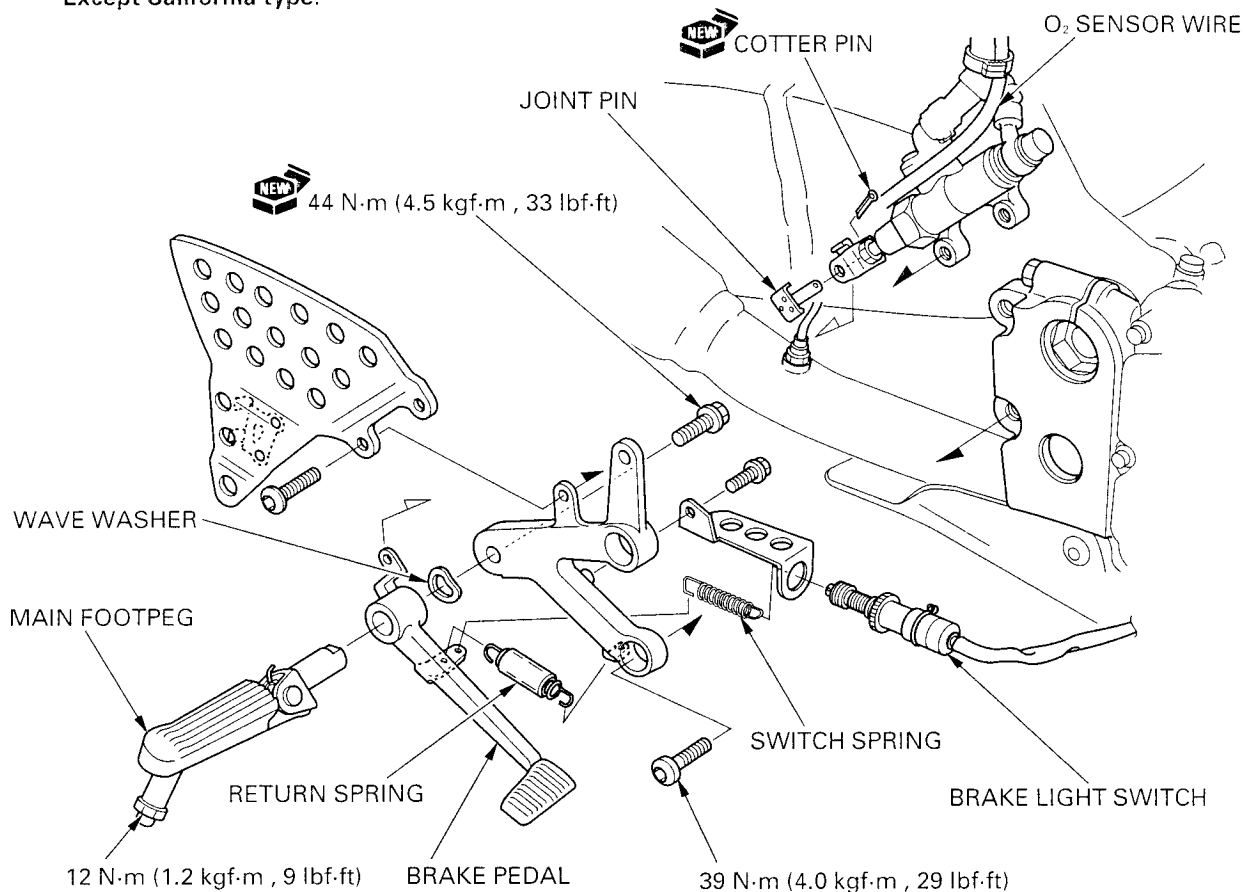


Apply grease to the sliding surface of the brake pedal and footpeg.  
Assemble the brake pedal, footpeg and wave washer.

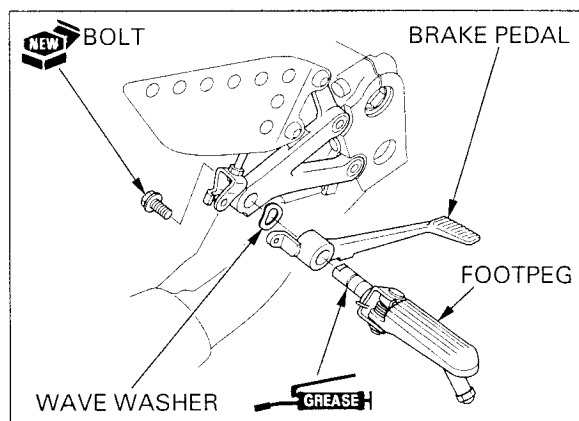

Install a new footpeg mounting bolt and tighten it to the specified torque.

**TORQUE:** 44 N·m (4.5 kgf·m, 33 lbf·ft)

Hook the brake pedal return spring.  
Install the brake light switch and hook the switch spring.  
Connect the brake pedal to the push rod lower joint.  
Install the joint pin and secure it with a new cotter pin.

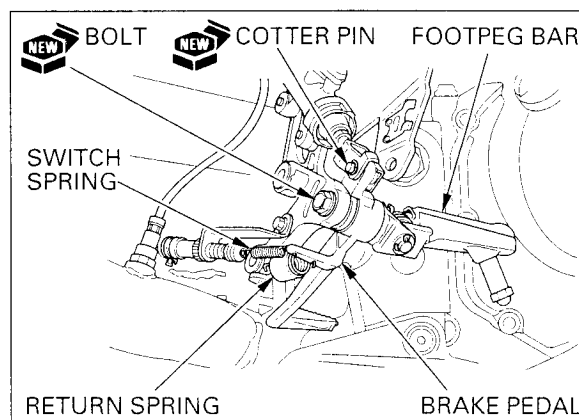




*California type only:* Clamp the O<sub>2</sub> sensor wire to the wire guide behind the right step guard.

Install the right main footpeg bracket assembly onto the lower bracket.

Install and tighten the right main footpeg bracket socket bolts to the specified torque.

**TORQUE:** 39 N·m (4.0 kgf·m , 29 lbf·ft)

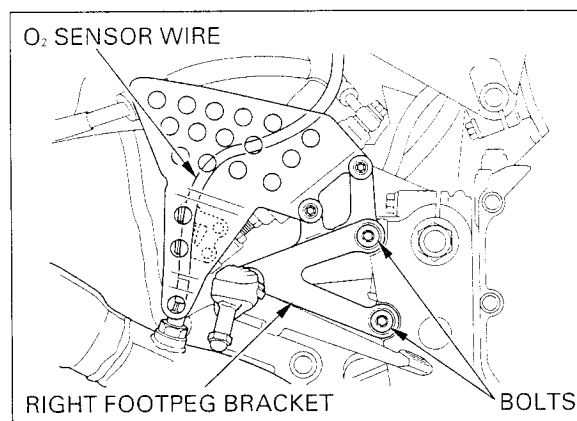

# 16. BATTERY/CHARGING SYSTEM

SYSTEM DIAGRAM	16-0	CHARGING SYSTEM INSPECTION	16-6
SERVICE INFORMATION	16-1	ALTERNATOR CHARGING COIL	16-7
TROUBLESHOOTING	16-3	REGULATOR/RECTIFIER	16-7
BATTERY	16-5		

## SERVICE INFORMATION

### GENERAL

#### ⚠ WARNING

- The battery gives off explosive gases; keep sparks, flames and cigarettes away. Provide adequate ventilation when charging.
- The battery contains sulfuric acid (electrolyte). Contact with skin or eyes may cause severe burns. Wear protective clothing and a face shield.
  - If electrolyte gets on your skin, flush with water.
  - If electrolyte gets in your eyes, flush with water for at least 15 minutes and call a physician immediately.
- Electrolyte is poisonous.
  - If swallowed, drink large quantities of water or milk and call your local Poison Control Center or a physician immediately.

- Always turn off the ignition switch before disconnecting any electrical component.
- Some electrical components may be damaged if terminals or connectors are connected or disconnected while the ignition switch is ON and current is present.
- For extended storage, remove the battery, give it a full charge, and store it in a cool, dry space. For maximum service life, charge the stored battery every two weeks.
- For a battery remaining in a stored motorcycle, disconnect the negative battery cable from the battery terminal.
- The maintenance free battery must be replaced when it reaches the end of its service life.
- The battery can be damaged if overcharged or undercharged, or if left to discharge for long period. These same conditions contribute to shortening the "life span" of the battery. Even under normal use, the performance of the battery deteriorates after 2 — 3 years.
- Battery voltage may recover after battery charging, but under heavy load, battery voltage will drop quickly and eventually die out. For this reason, the charging system is often suspected as the problem. Battery overcharge often results from problems in the battery itself, which may appear to be an overcharging symptom. If one of the battery cells is shorted and battery voltage does not increase, the regulator/rectifier supplies excess voltage to the battery. Under these conditions, the electrolyte level goes down quickly.
- Before troubleshooting the charging system, check for proper use and maintenance of the battery. Check if the battery is frequently under heavy load, such as having the headlight and taillight ON for long periods of time without riding the motorcycle.

16

## BATTERY/CHARGING SYSTEM

- The battery will self-discharge when the motorcycle is not in use. For this reason, charge the battery every two weeks to prevent sulfation from occurring.
- When checking the charging system, always follow the steps in the troubleshooting flow chart (page 16-3).
- For battery charging, do not exceed the charging current and time specified on the battery. Use of excessive current or charging time may damage the battery.

### BATTERY TESTING

Refer to the instruction of the Operation Manual for the recommended battery tester. The recommended battery tester puts a "load" on the battery so that the actual battery condition of the load can be measured.


**Recommended battery tester**      BM-210-AH, BM-210 or BATTERY MATE or equivalent

### SPECIFICATIONS

ITEM			SPECIFICATIONS
Battery	Capacity		12V-8.6 Ah
	Current leakage		0.2 mA max.
	Voltage (20°C/68°F)	Fully charged	13.0 – 13.2 V
		Needs charging	Below 12.3 V
	Charging current	Normal	0.9 A/5 – 10 h
		Quick	4.0 A/0.5 h
Alternator	Capacity		0.421 kW/5,000 rpm
	Charging coil resistance (20°C/68°F)		0.1 – 1.0 $\Omega$


## TROUBLESHOOTING

## BATTERY IS DAMAGED OR WEAK

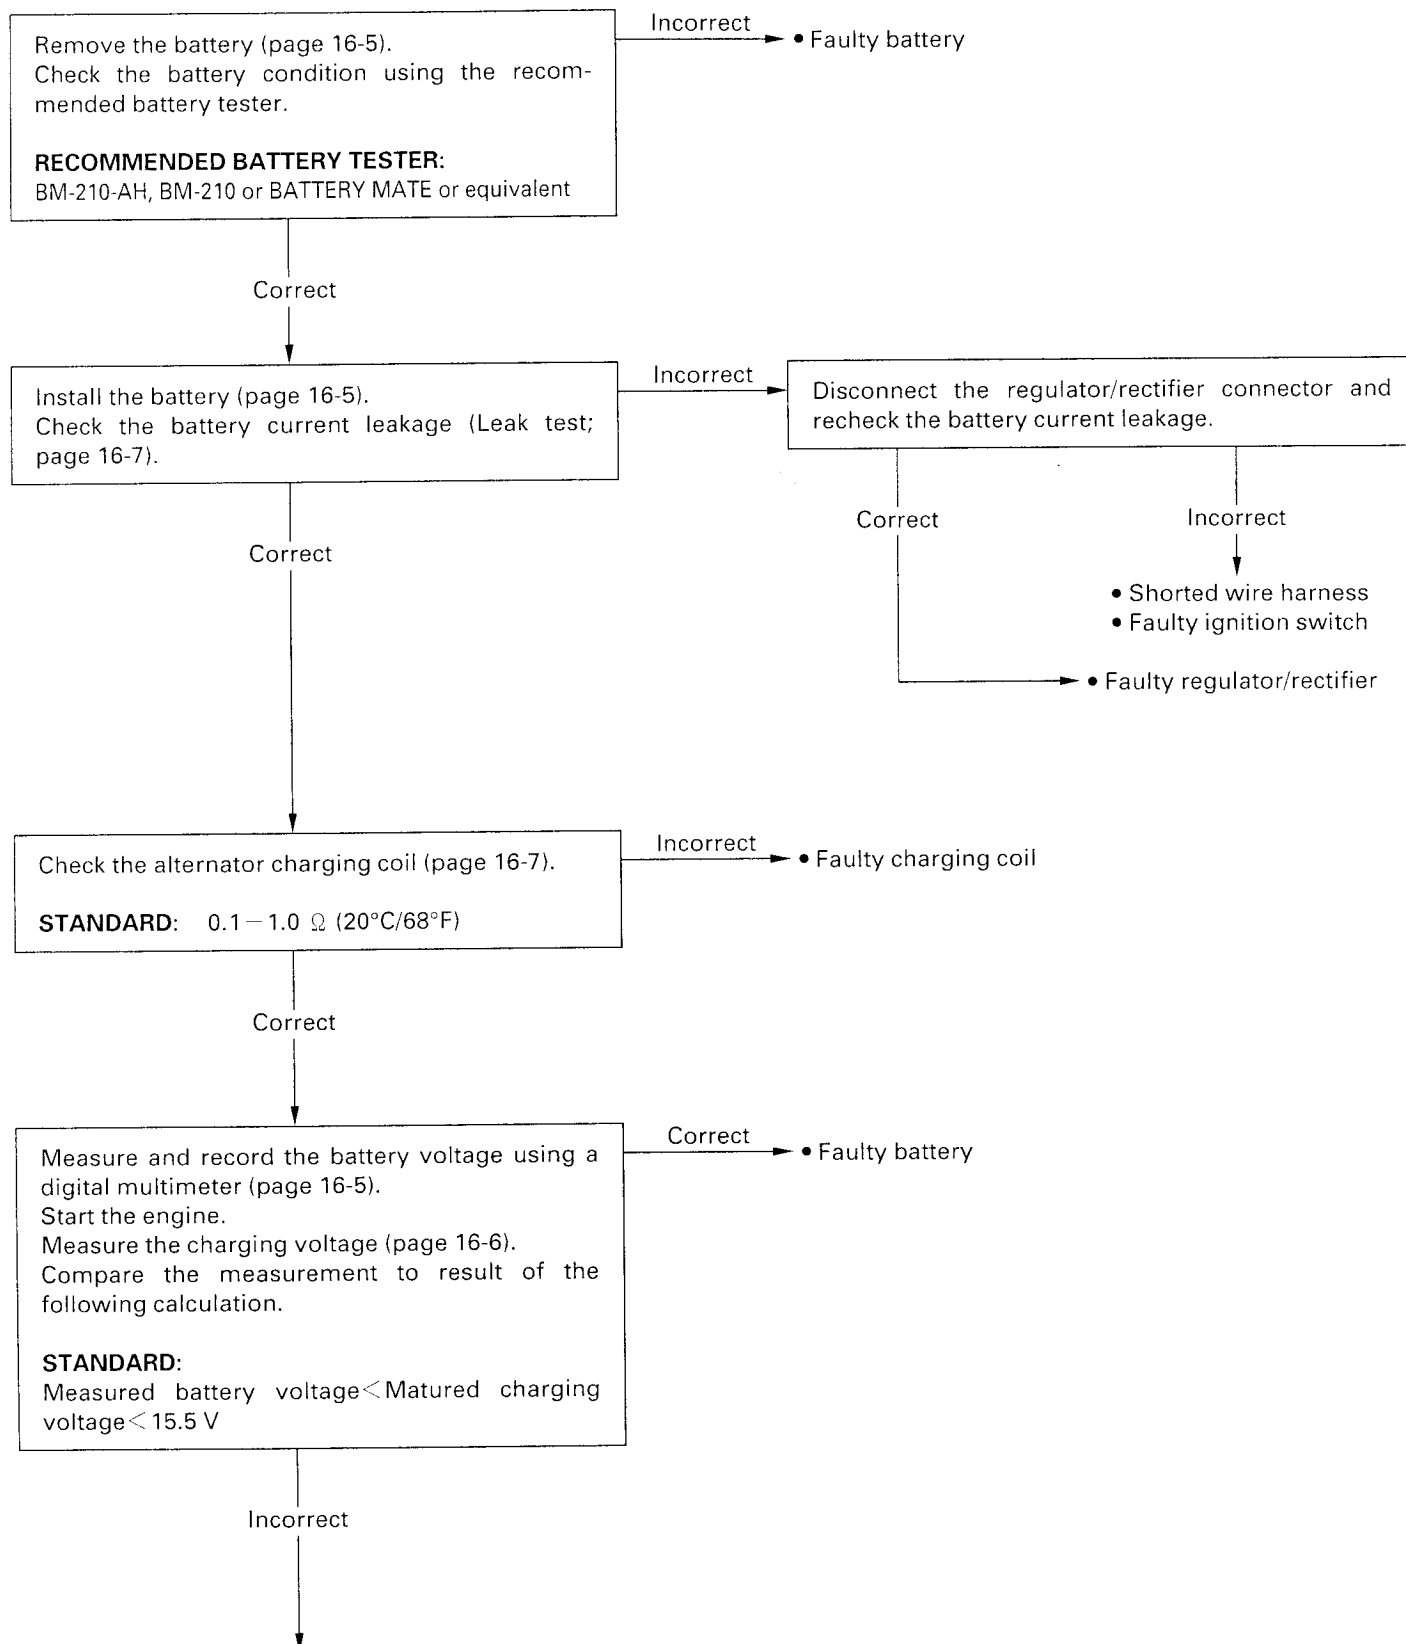

## BATTERY/CHARGING SYSTEM

---

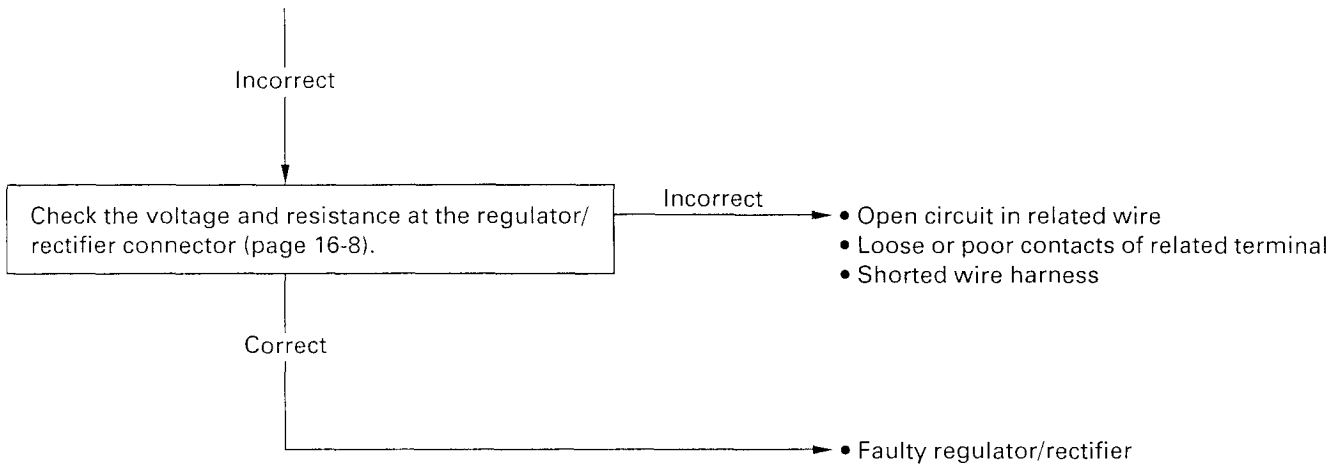



## BATTERY

### REMOVAL/INSTALLATION

*Always turn the ignition switch*

*OFF before removing the battery.*

Remove the seat (page 2-2).


Remove the battery holder band.

Disconnect the negative cable and then the positive cable, and remove the battery.

*Connect the positive terminal first and then the negative cable.*

Install the battery in the reverse order of removal with the proper wiring as shown.

After installing the battery, coat the terminals with clean grease.

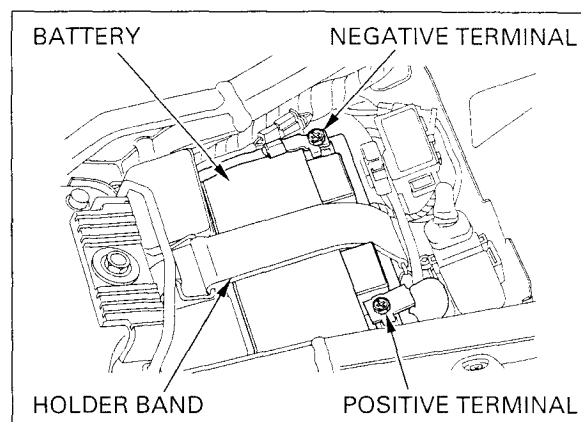

### VOLTAGE INSPECTION

Measure the battery voltage using a digital multimeter.

#### VOLTAGE:


**Fully charged:** 13.0–13.2 V

**Under charged:** Below 12.3 V

#### TOOL:

**Digital multimeter**

Commercially available

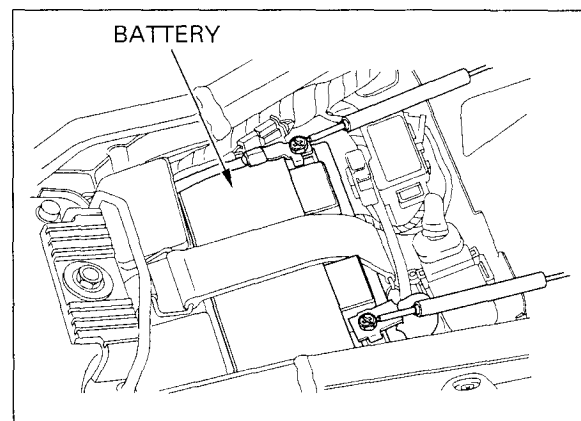

### BATTERY CHARGING


Remove the battery (see above).

*Turn power ON/OFF at the charger, not at the battery terminal.*

Connect the charger positive (+) cable to the battery positive (+) terminal.

Connect the charger negative (–) cable to the battery negative (–) terminal.

- Quick-charging should only be done in an emergency; slow charging is preferred.
- For battery charging, do not exceed the charging current and time specified on the battery. Using excessive current or extending the charging time may damage the battery.

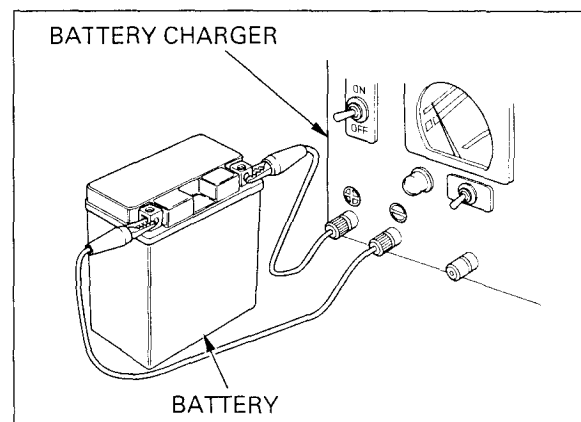



## BATTERY/CHARGING SYSTEM

### CHARGING SYSTEM INSPECTION

#### CURRENT LEAKAGE INSPECTION

Turn the ignition switch off and disconnect the negative battery cable from the battery.


Connect the ammeter (+) probe to the ground cable and the ammeter (–) probe to the battery (–) terminal. With the ignition switch off, check for current leakage.

- When measuring current using a tester, set it to a high range, and then bring the range down to an appropriate level. Current flow higher than the range selected may blow out the fuse in the tester.
- While measuring current, do not turn the ignition on. A sudden surge of current may blow out the fuse in the tester.

**SPECIFIED CURRENT LEAKAGE:** 0.2 mA max.


If current leakage exceeds the specified value, a shorted circuit is likely.

Locate the short by disconnecting connections one by one and measuring the current.

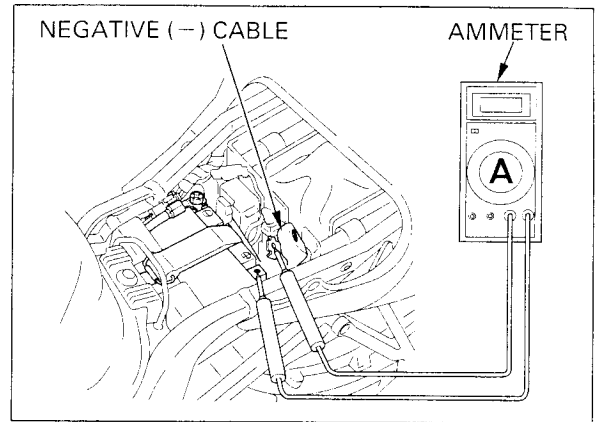

#### CHARGING VOLTAGE INSPECTION

Be sure the battery is in good condition before performing this test.

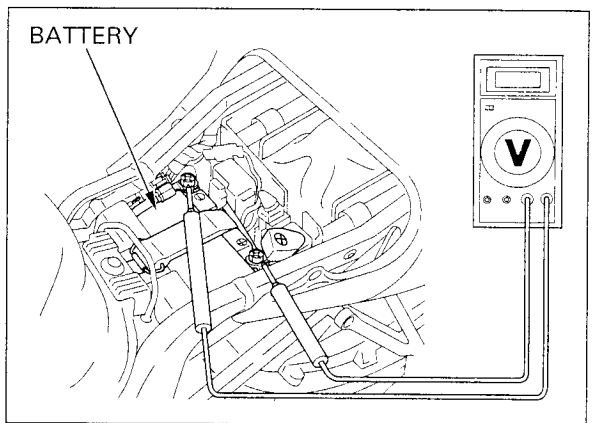

*Do not disconnect the battery or any cable in the charging system without first switching off the ignition switch. Failure to follow this precaution can damage the tester or electrical components.*

Warm up the engine to normal operating temperature.

Stop the engine, and connect the multimeter as shown.

- To prevent a short, make absolutely certain which are the positive and negative terminals or cable.

Restart the engine.

With the headlight on Hi beam, measure the voltage on the multimeter when the engine runs at 5,000 rpm.

**Standard: Measured battery voltage (page 16-5) < Measured charging voltage (see above) < 15.5 V at 5,000 rpm**

## ALTERNATOR CHARGING COIL

*It is not necessary  
to remove the  
stator coil to make  
this test.*

### INSPECTION

Remove the fuel tank rear bracket and ECM cover (page 5-81).

Disconnect the alternator 3P (Natural) connector.

Check the resistance between all three Yellow terminals.



**STANDARD:** 0.1 – 1.0  $\Omega$  (at 20°C/68°F)

Check for continuity between all three Yellow terminals and Ground.

There should be no continuity.

If readings are far beyond the standard, or if any wire has continuity to ground, replace the alternator stator.

Refer to section 10 for stator removal.

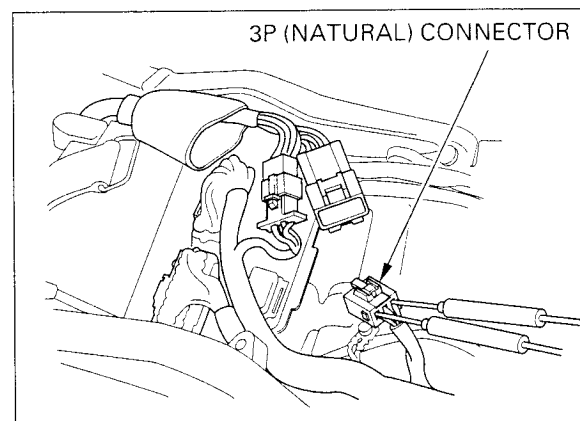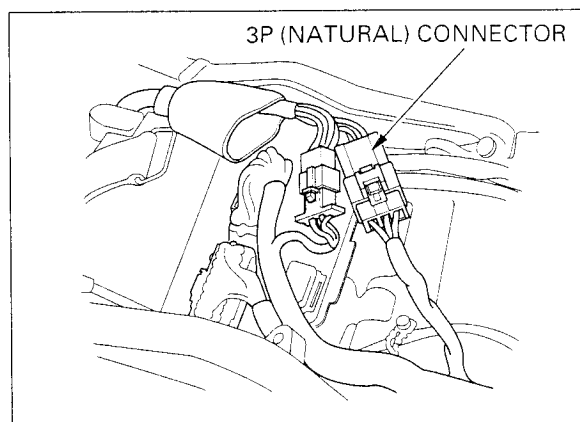


## REGULATOR/RECTIFIER

### SYSTEM INSPECTION

Remove the rear cowl (page 2-2).


Remove the fuel tank rear bracket and ECM cover (page 5-89).

Disconnect the regulator/rectifier connectors, and check it for loose contact or corroded terminals.

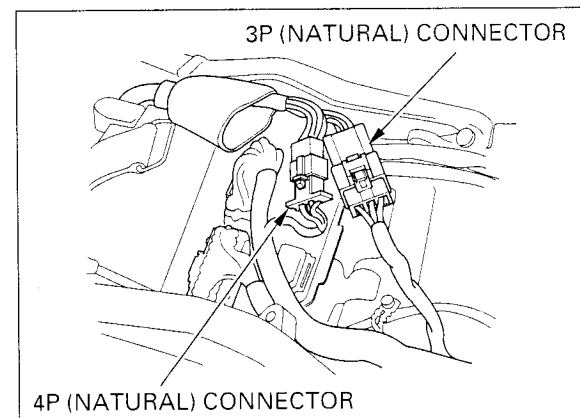

If the regulated voltage reading (see page 16-6) is out of the specification, measure the voltage between connector terminals (wire harness side) as follows:

Item	Terminal	Specification
Battery charging line	Red/White (+) and ground (-)	Battery voltage should register
Charging coil line	Yellow and Yellow	0.1 – 1.0 $\Omega$ (at 20°C/68°F)
Ground line	Green and ground	Continuity should exist

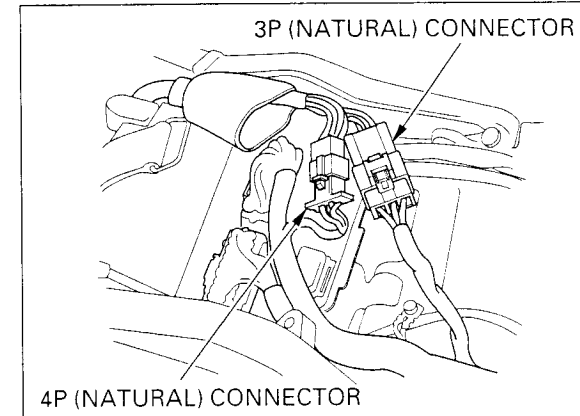


## BATTERY/CHARGING SYSTEM

If all components of the charging system are normal and there are no loose connections at the regulator/rectifier connectors, replace the regulator/rectifier unit.


### REMOVAL/INSTALLATION

Disconnect the alternator 3P (Natural) connector.  
Disconnect the alternator 4P (Natural) connector.

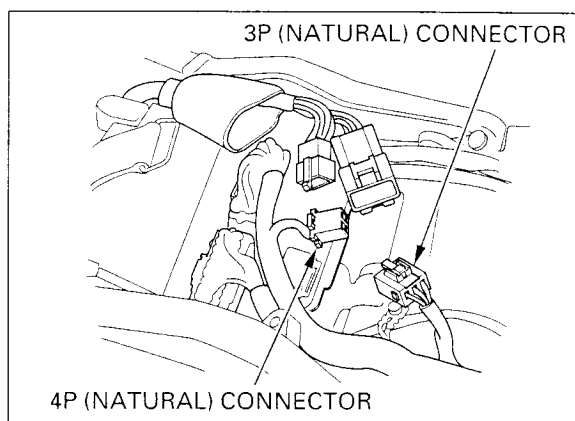

Remove the regulator/rectifier unit mounting SH bolts and regulator/rectifier.

Install the regulator/rectifier unit in the reverse order of removal.

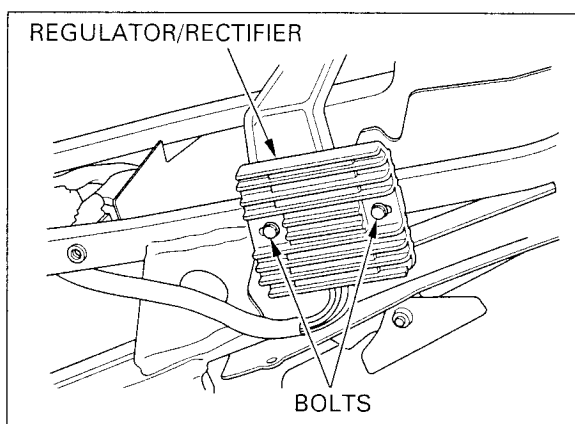



# 17. IGNITION SYSTEM

SYSTEM DIAGRAM	17-0	IGNITION SYSTEM INSPECTION	17-4
SERVICE INFORMATION	17-1	IGNITION PULSE GENERATOR	17-6
TROUBLESHOOTING	17-3	IGNITION TIMING	17-8

## SERVICE INFORMATION

### GENERAL

- Some electrical components may be damaged if terminals or connectors are connected or disconnected while the ignition switch is ON and current is present.
- When servicing the ignition system, always follow the steps in the troubleshooting sequence on page 17-3.
- This motorcycle's Ignition Control Module (ICM) is built into the Engine Control Module (ECM).
- The ignition timing does not normally need to be adjusted since the ECM is factory preset.
- The ECM may be damaged if dropped. Also if the connector is disconnected when current is flowing, the excessive voltage may damage the module. Always turn off the ignition switch before servicing.
- A faulty ignition system is often related to poor connections. Check those connections before proceeding. Make sure the battery is adequately charged. Using the starter motor with a weak battery results in a slower engine cranking speed as well as no spark at the spark plug.
- Use spark plug of the correct heat range. Using spark plug with an incorrect heat range can damage the engine.
- The direct ignition coil that the ignition coil and spark plug cap are integrated, is adopted in this motorcycle.
- Refer to section 5 for Throttle Position (TP) sensor, cam pulse generator and ECM inspection.

### SPECIFICATIONS

ITEM		SPECIFICATIONS
Spark plug	Standard	IUH27D (DENSO)
	Optional	IUH24D (DENSO)
Spark plug gap		0.80 – 0.90 mm (0.031 – 0.035 in)
Ignition coil peak voltage		100 V minimum
Ignition pulse generator peak voltage		0.7 V minimum
Ignition timing ("F" mark)		15° BTDC at idle

## IGNITION SYSTEM

---

### TORQUE VALUES

Timing hole cap	18 N·m (1.8 kgf·m , 13 lbf·ft)	Apply grease to the threads
Spark plug	12 N·m (1.2 kgf·m , 9 lbf·ft)	
Ignition pulse generator rotor special bolt	59 N·m (6.0 kgf·m , 43 lbf·ft)	

### TOOLS

Peak voltage tester (U.S.A. only) or Peak voltage adaptor	07HGJ-0020100 with Commercially available digital multimeter (impedance 10 M $\Omega$ /DCV minum)
--------------------------------------------------------------	---------------------------------------------------------------------------------------------------------

## TROUBLESHOOTING

- Inspect the following before diagnosing the system.
  - Faulty spark plug
  - Loose spark plug cap or spark plug wire connection
  - Water got into the direct ignition coil (leaking the ignition coil secondary voltage)
- If there is no spark at either cylinder, temporarily exchange the direct ignition coil with the other good one and perform the spark test. If there is spark, the exchanged direct ignition coil is faulty.
- "Initial voltage" of the ignition primary coil is the battery voltage with the ignition switch ON and engine stop switch at RUN (The engine is not cranked by the starter motor).

## No spark at all plugs

	Unusual condition	Probable cause (Check in numerical order)
Ignition coil primary voltage	No initial voltage with ignition and engine stop switches ON. (Other electrical components are normal)	1. Faulty engine stop switch. 2. An open circuit in Black/White wire between the direct ignition coil and engine stop switch. 3. Loose or poor connect of the direct ignition coil primary wire terminal, or an open circuit in primary coil (Check at the ECM connector). 4. Faulty ECM (when the initial voltage is normal while disconnecting ECM connector)
	Initial voltage is normal, but it drops down to 2–4 V while cranking the engine.	1. Incorrect peak voltage adaptor connections. 2. Undercharged battery. 3. No voltage between the Black/White (+) and Body ground (–) at the ECM multi-connector or loosen ECM connection. 4. An open circuit or loose connection in Green wire. 5. An open circuit or loose connection in Blue/Black, Yellow/White, Red/Blue and Red/Yellow wires between the direct ignition coils and ECM. 6. Short circuit in ignition primary coil 7. Faulty side stand switch or neutral switch. 8. An open circuit or loose connection in No. 7 related circuit wires. <ul style="list-style-type: none"> <li>• Side stand switch line: Green/White wire</li> <li>• Neutral switch line: Light Green and Light Green/Red wire</li> </ul> 9. Faulty ignition pulse generator (measure the peak voltage). 10. Faulty ECM (when above No. 1–9 are normal).
	Initial voltage is normal, but no peak voltage while cranking the engine.	1. Faulty peak voltage adaptor connections. 2. Faulty peak voltage adaptor. 3. Faulty ECM (when above No. 1, 2 are normal).
	Initial voltage is normal, but peak voltage is lower than standard value.	1. The multimeter impedance is too low; below 10 M $\Omega$ /DCV. 2. Cranking speed is too low (battery under-charged). 3. The sampling timing of the tester and measured pulse were not synchronized (system is normal if measured voltage is over the standard voltage at least once). 4. Faulty ECM (when above No. 1–3 are normal).
	Initial and peak voltage are normal, but does not spark.	1. Faulty spark plug or leaking ignition coil secondary current ampere. 2. Faulty ignition coil (s).
Ignition pulse generator	Peak voltage is lower than standard value.	1. The multimeter impedance is too low; below 10 M $\Omega$ /DCV. 2. Cranking speed is too low (battery under charged). 3. The sampling timing of the tester and measured pulse were not synchronized (system is normal if measured voltage is over the standard voltage at least once). 4. Faulty ECM (when above No. 1–3 are normal).
	No peak voltage.	1. Faulty peak voltage adaptor. 2. Faulty ignition pulse generator.

## IGNITION SYSTEM

### IGNITION SYSTEM INSPECTION

- If there is no spark at any plug, check all connections for loose or poor contact before measuring each peak voltage.
- Use recommended digital multimeter or commercially available digital multimeter with an impedance of 10 M $\Omega$ /DCV minimum.
- The display value differs depending upon the internal impedance of the multimeter.
- If using peak voltage tester (U.S.A. only), follow the manufacturer's instructions.


Connect the peak voltage tester or peak voltage adaptor to the digital multimeter.

#### TOOLS:

**Peak voltage tester (U.S.A. only) or**

**Peak voltage adaptor** 07HGJ-0020100

**with commercially available digital multimeter (impedance 10 M $\Omega$ /DCV minimum)**

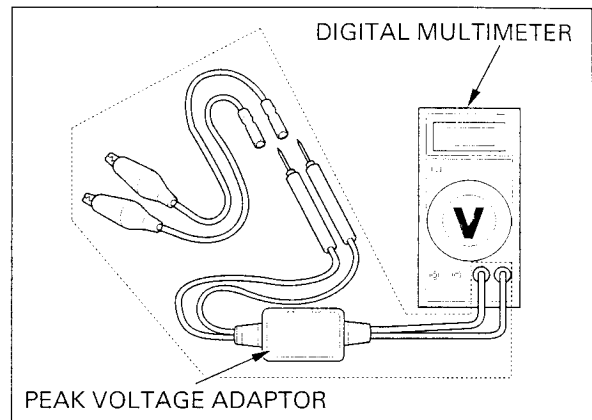

### IGNITION COIL PRIMARY PEAK VOLTAGE


- Check all system connections before inspection. If the system is disconnected, incorrect peak voltage might be measured.
- Check cylinder compression and check that the spark plugs are installed correctly.

Disconnect the direct ignition coils from the spark plug (page 3-6).

Connect the direct ignition coil 2P connectors to the direct ignition coil.

Shift the transmission into neutral.

Connect a known good spark plugs to the direct ignition coils and ground the spark plugs to the cylinder head as done in a spark test.

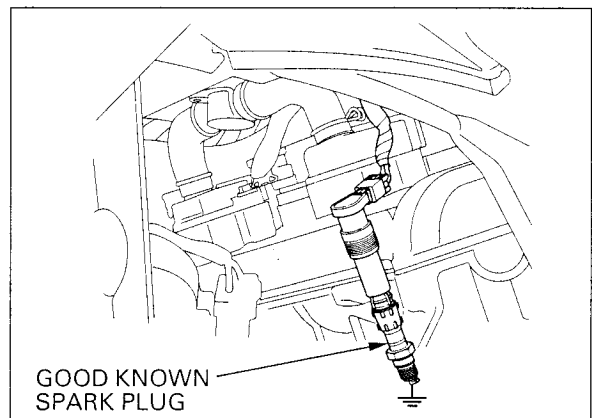

With the ignition coil sub-harness 9P (Black) connector connected, connect the peak voltage adaptor or Imrie tester to the 9P (Black) connector primary wire terminal and ground.

#### CONNECTION:

##### No. 1 coil:

Blue/Black terminal (+) – Body ground (–)

##### No. 2 coil:

Yellow/White terminal (+) – Body ground (–)

##### No. 3 coil:

Red/Blue terminal (+) – Body ground (–)

##### No. 4 coil:

Red/Yellow terminal (+) – Body ground (–)

*Avoid touching the spark plugs and tester probes to prevent electric shock.*

Turn the ignition switch "ON" and engine stop switch to "RUN".

Check for initial voltage at this time.

The battery voltage should be measured.

If the initial voltage cannot be measured, check the power supply circuit (refer to the troubleshooting, page 17-3).

Crank the engine with the starter motor and read ignition coil primary peak voltage.

**PEAK VOLTAGE:** 100 V minimum

If the peak voltage is abnormal, check for an open circuit or poor connection in Yellow/Blue and Blue/Yellow wires.



If no defects are found in the harness, refer to the troubleshooting chart on page 17-3.

#### IGNITION PULSE GENERATOR PEAK VOLTAGE

- Check all system connections before inspection. If the system is disconnected, incorrect peak voltage might be measured.
- Check cylinder compression and check that the spark plugs are installed correctly.

Remove the fuel tank rear bracket and ECM cover (page 5-81).

Disconnect the 22P (Light gray) connector from the ECM.

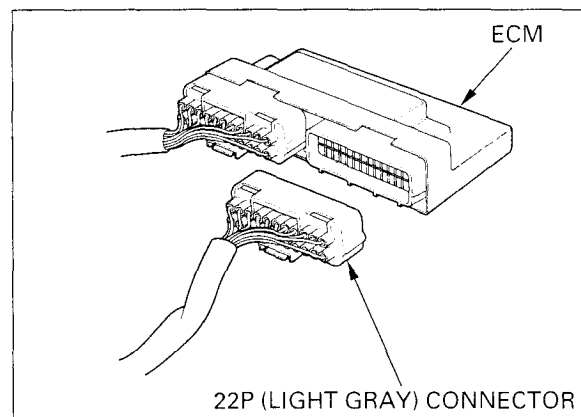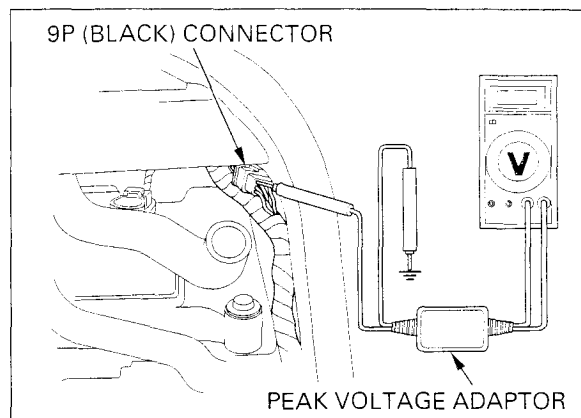



## IGNITION SYSTEM

Connect the peak voltage tester or peak voltage adaptor probes to the connector terminal of the wire harness side and ground.

### TOOLS:

**Peak voltage tester (U.S.A. only) or**  
**Peak voltage adaptor** 07HGJ-0020100  
**with commercially available digital multimeter**  
**(impedance 10 M $\Omega$  /DCV minimum)**

### CONNECTION:

Yellow terminal (+) – Ground (–)

*Avoid touching the spark plugs and tester probes to prevent electric shock.*

Crank the engine with the starter motor and read the peak voltage.

**PEAK VOLTAGE:** 0.7 V minimum



If the peak voltage measured at ECM multi-connector is abnormal, measure the peak voltage at the ignition pulse generator connector.

Open and support the front end of fuel tank (page 3-4).

Disconnect the ignition pulse generator 2P (Red) connector and connect the tester probes to the terminal (Yellow and White/Yellow).

In the same manner as at the ECM connector, measure the peak voltage and compare it to the voltage measured at the ECM connector.


- If the peak voltage measured at the ECM is abnormal and the one measured at the ignition pulse generator is normal, the wire harness has an open circuit or loose connection.
- If both peak voltages measure are abnormal, check each item in the troubleshooting chart. If all items are normal, the ignition pulse generator is faulty.  
 See following steps for ignition pulse generator replacement.

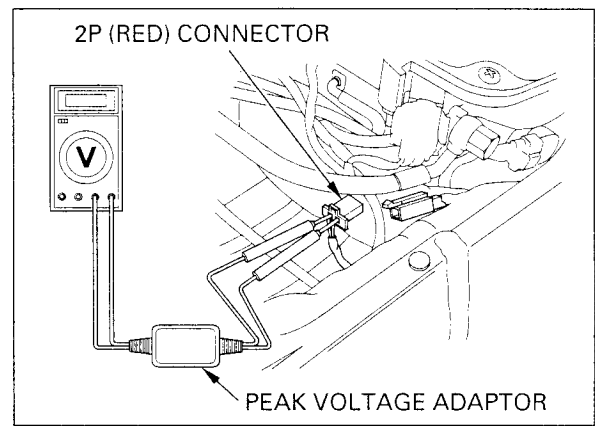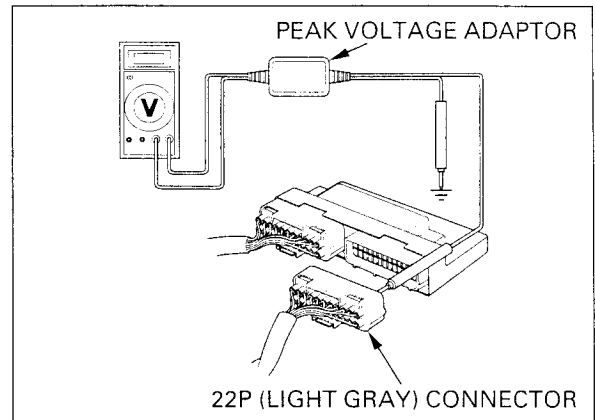

## IGNITION PULSE GENERATOR REMOVAL

Open and support the front end of fuel tank (page 3-4).


Disconnect the ignition pulse generator 2P (Red) connector.

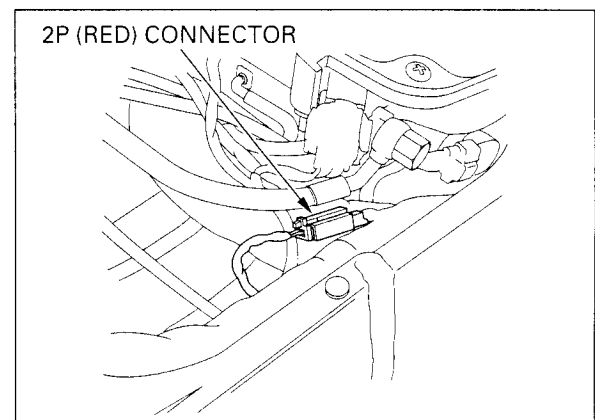

## IGNITION SYSTEM


Remove the right crankcase cover (page 9-3).

Remove the wire grommet from the cover.  
Remove the bolts and ignition pulse generator.

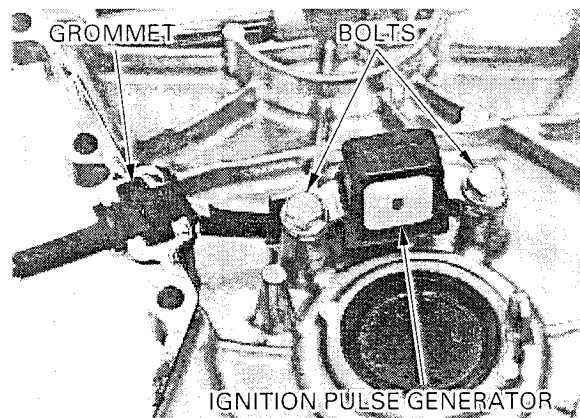


*If the engine is out of the frame, remove the alternator cover (page 10-2) and hold the flywheel with the flywheel holder (07725-0040000), then remove the bolt.*

Shift the transmission into 6th gear and apply rear brake.  
Remove the ignition pulse generator rotor bolt.

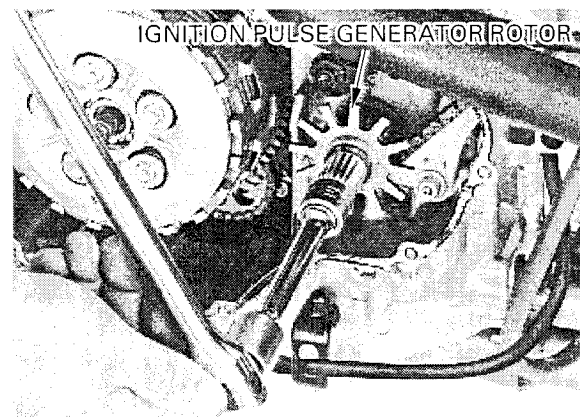


## INSTALLATION

Install the ignition pulse generator rotor by aligning the wide groove with the wide teeth of the crankshaft.

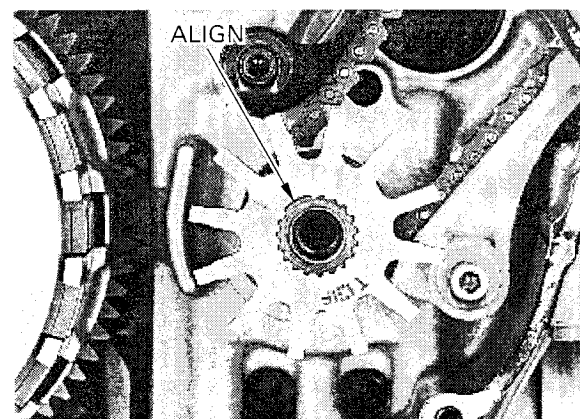

Apply oil to the ignition pulse generator rotor bolt threads, then install the washer and rotor bolt.

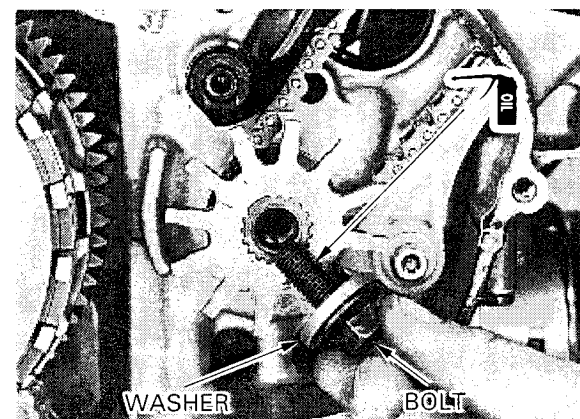


## IGNITION SYSTEM


*If the engine is out of frame, remove the alternator cover (page 10-2) and hold the flywheel with the flywheel holder (07725-0040000), then tighten the bolt.*

Shift the transmission into 6th gear and apply rear brake.  
Tighten the ignition pulse generator rotor bolt to the specified torque.

**TORQUE:** 59 N·m (6.0 kgf·m , 43 lbf·ft)

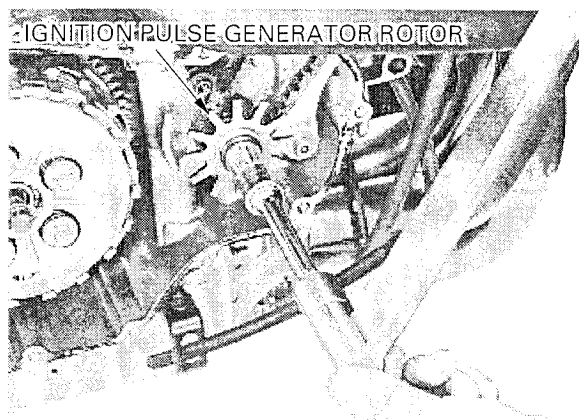


Install the ignition pulse generator into the cover.  
Apply sealant to the wire grommet, then install it into the groove of the cover.  
Install and tighten the ignition pulse generator bolts.

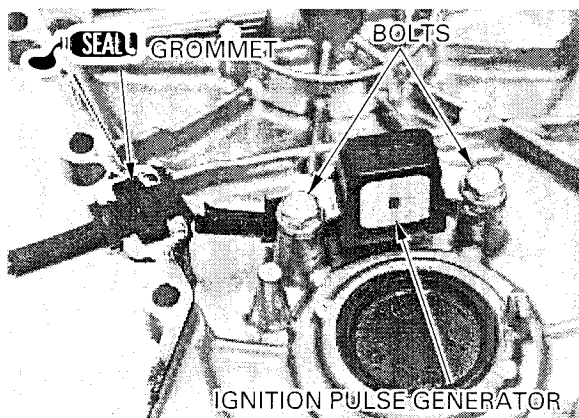

Install the right crankcase cover (page 9-17).


Route the ignition pulse generator wire properly, connect the 2P (Red) connector.

Install the removed parts in the reverse order of removal.

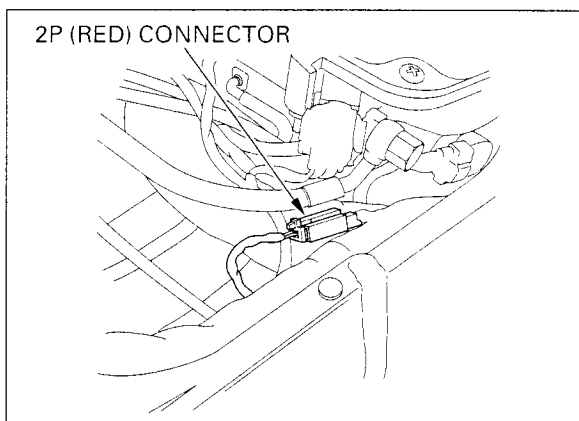

## IGNITION TIMING


Warm up the engine.  
Stop the engine and remove the timing hole cap.

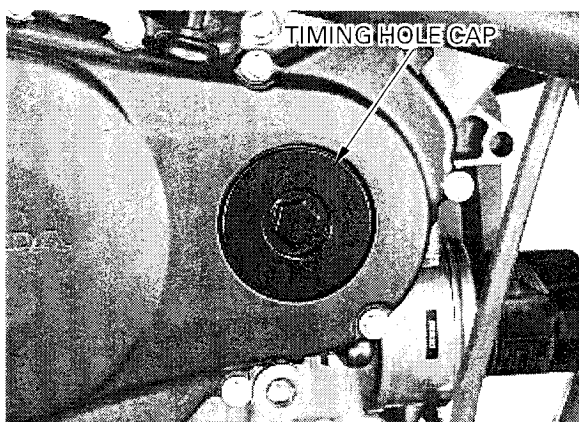



*Read the instructions for timing light operation.*

Connect the timing light to the No. 1 spark plug wire.

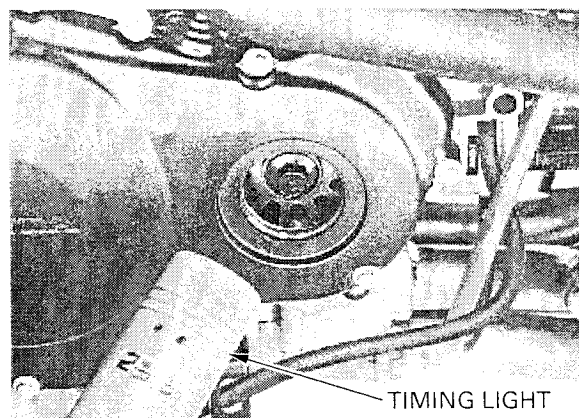


Start the engine and let it idle.

**IDLE SPEED:**  $1,200 \pm 100$  rpm


The ignition timing is correct if the "F" mark aligns with the index mark on the ignition pulse generator rotor cover.

Increase the engine speed by turning the throttle stop screw and make sure the "F" mark begins to move counterclockwise when the engine speed at approximately 1,500 rpm.

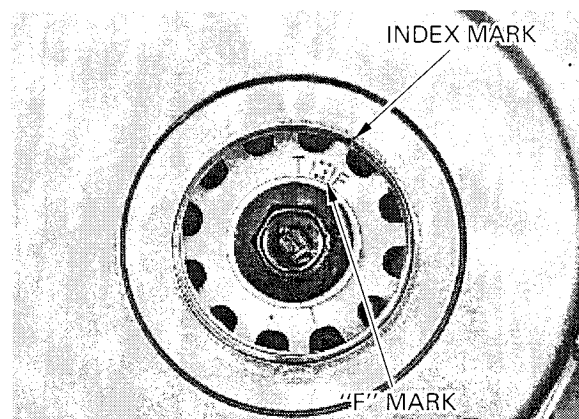


Check the O-ring is in good condition, replace if necessary.

Apply grease to the timing hole cap and install the O-ring and timing hole cap.

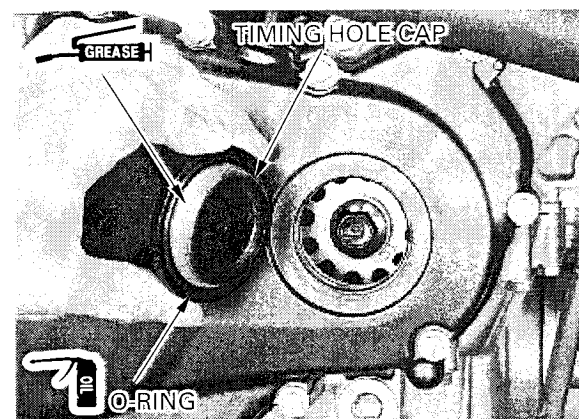

Tighten the timing hole cap to the specified torque.

**TORQUE:** 18 N·m (1.8 kgf·m , 13 lbf·ft)

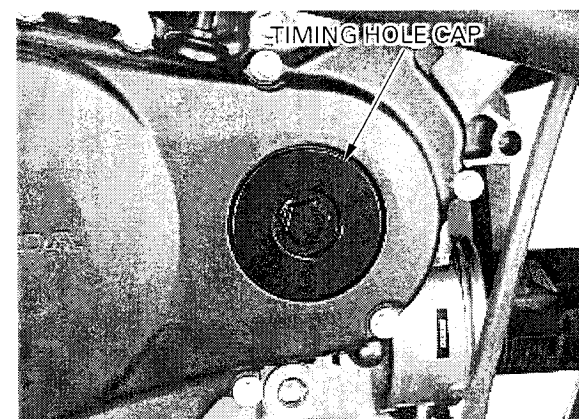

# 18. ELECTRIC STARTER

SYSTEM DIAGRAM	18-0	STARTER MOTOR	18-4
SERVICE INFORMATION	18-1	STARTER RELAY SWITCH	18-10
TROUBLESHOOTING	18-2	DIODE	18-11

## SERVICE INFORMATION

### GENERAL

- The starter motor can be removed with the engine in the frame.
- For the starter drive and driven gear removal/installation, see section 10.

### SPECIFICATION


Unit: mm (in)

ITEM	STANDARD	SERVICE LIMIT
Starter motor brush length	12.0 – 13.0 (0.47 – 0.51)	4.5 (0.18)




**ELECTRIC STARTER****TROUBLESHOOTING****Starter motor does not turn**

- Check for a blown main or sub fuses before servicing.
- Make sure the battery is fully charged and in good condition.

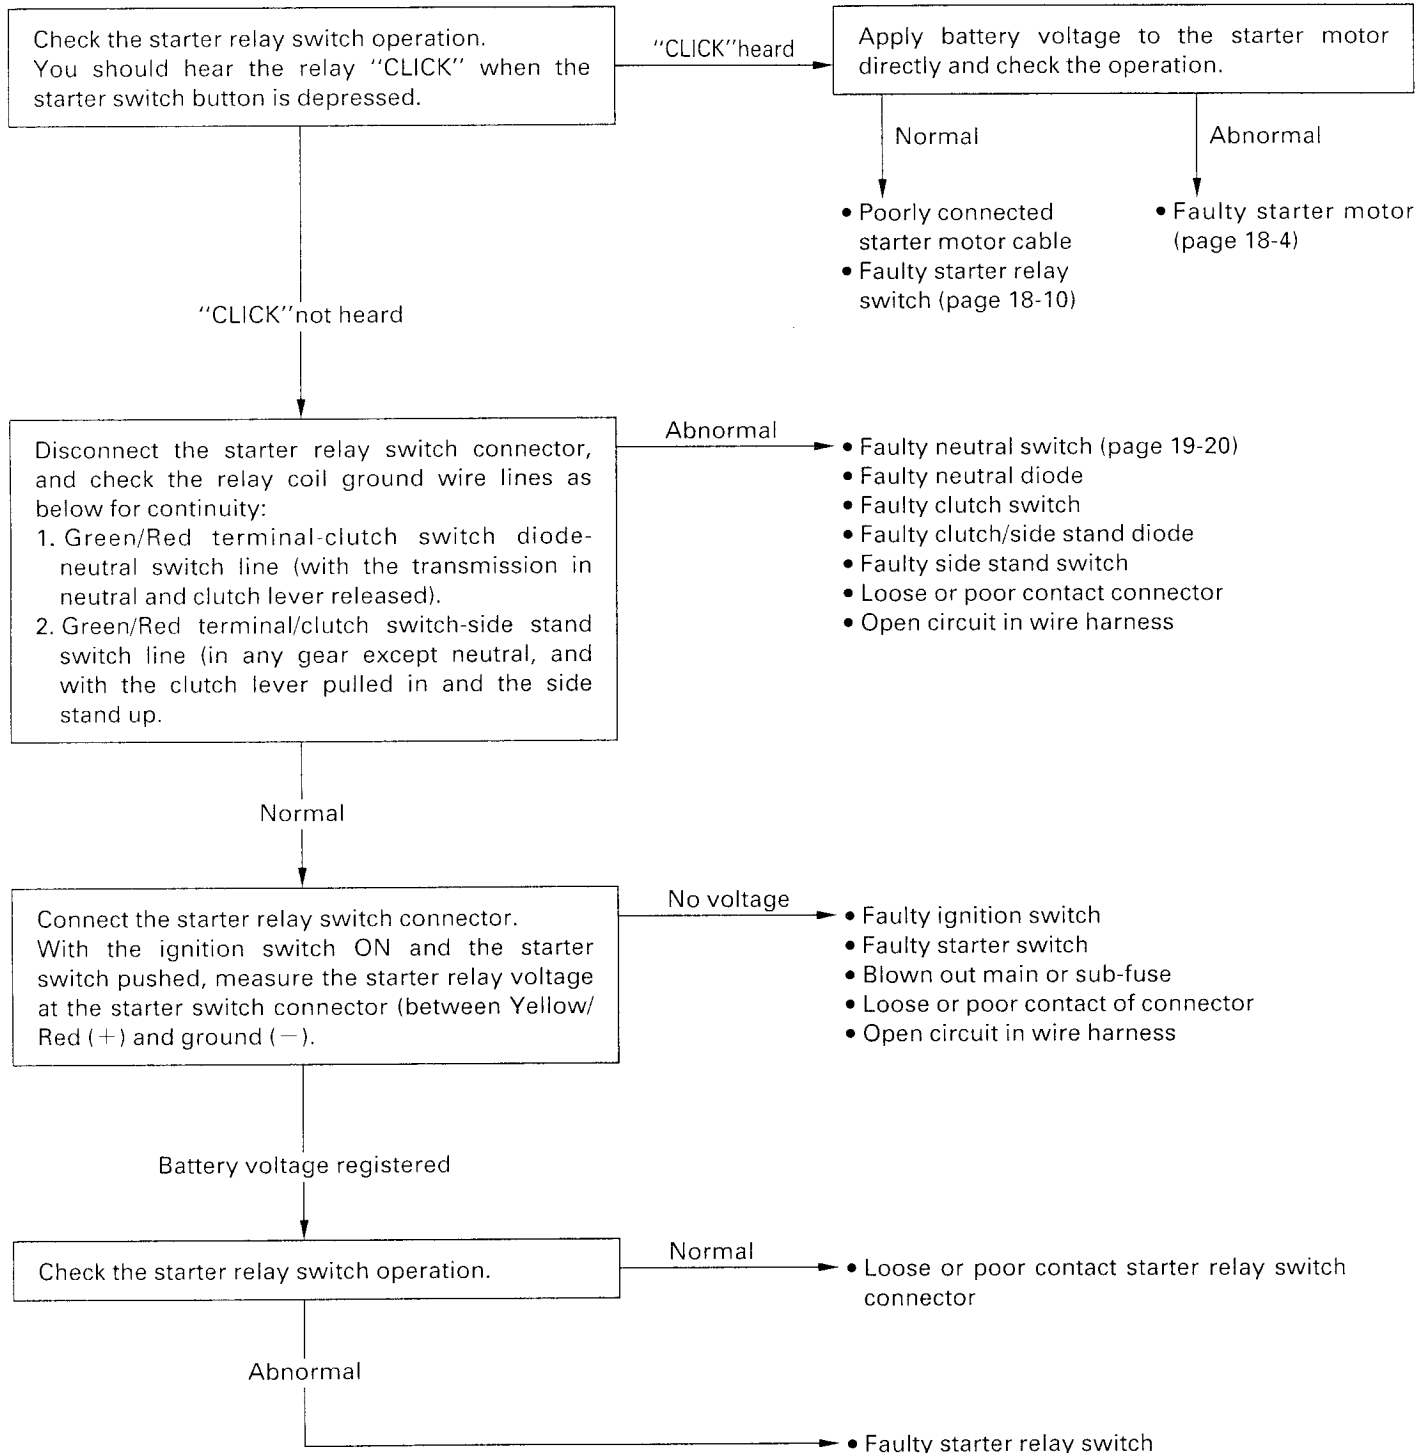

**ELECTRIC STARTER**

The starter motor turns when the transmission is in neutral, but does not turn with the transmission in any position except neutral, with the side stand up and the clutch lever pulled in.

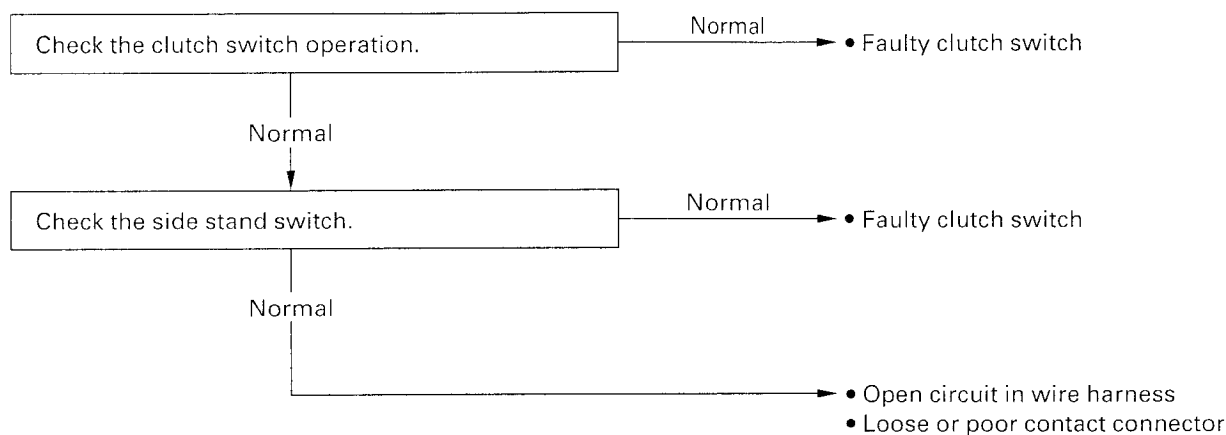**Starter motor turns engine slowly**

- Low battery voltage
- Poorly connected battery terminal cable
- Poorly connected starter motor cable
- Faulty starter motor
- Poor connected battery ground cable

**Starter motor turns, but engine does not turn**

- Starter motor is running backwards
  - Case assembled improperly
  - Terminals connected improperly
- Faulty starter clutch
- Damaged or faulty starter drive gear

**Starter relay switch “Clicks”, but engine does not turn over**

- Crankshaft does not turn due to engine problems

## ELECTRIC STARTER

### STARTER MOTOR


#### REMOVAL

Open and support the front end of fuel tank (page 3-4).

Drain the coolant (page 6-4).

Remove the throttle body (page 5-60).

Remove the thermostat housing (page 6-7).

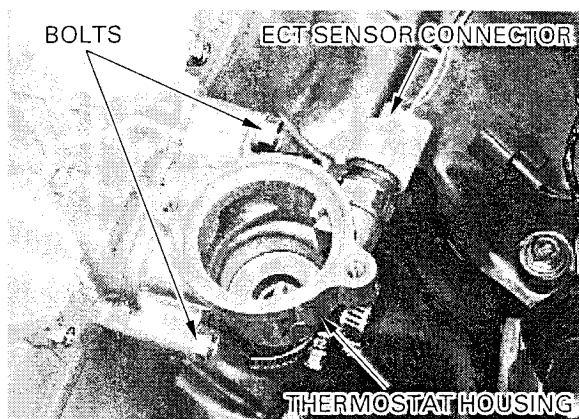


With the ignition switch OFF, remove the negative cable at the battery.

*Be careful not to damage the water hose.*

Remove the nut and the starter motor cable from the starter motor.

Remove the starter motor mounting bolts and ground cable.

Pull the starter motor out of the crankcase.

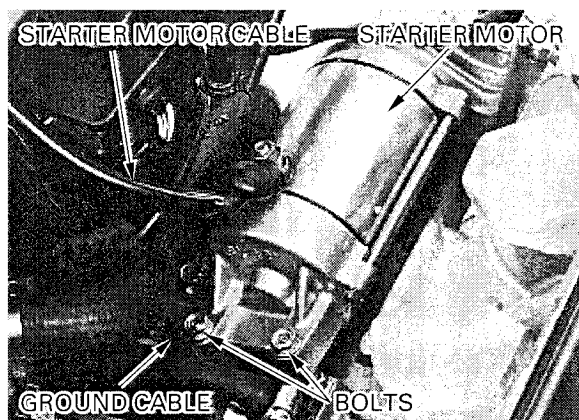



#### DISASSEMBLY

*Record the location and number of shims.*

Remove the following:


– Starter motor case bolts

- Rear cover assembly
- Seal ring
- Shims

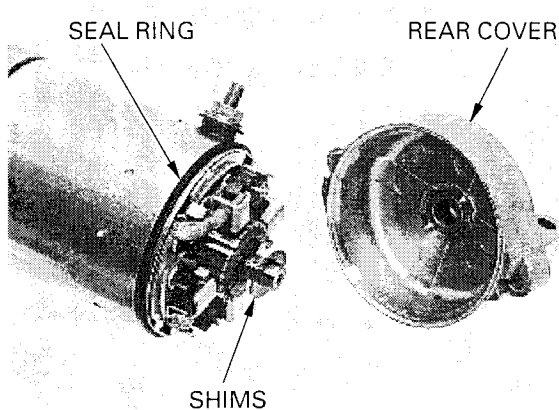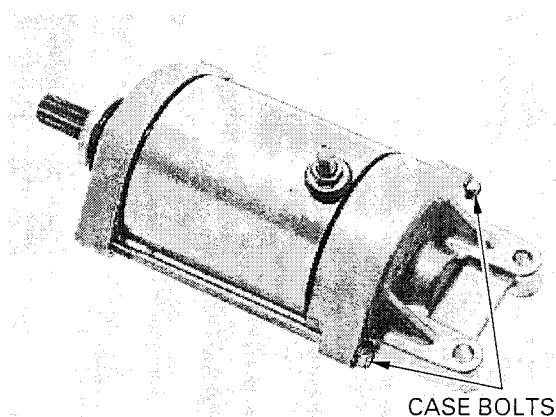


## ELECTRIC STARTER

- Remove the following:
- Front cover assembly
  - Seal ring
  - Lock washer
  - Insulated washer
  - Shims
  - Armature

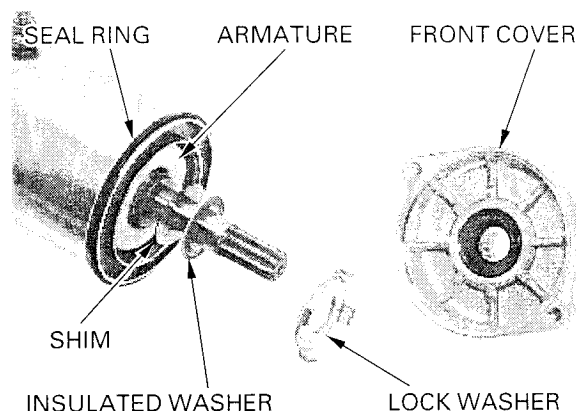


### INSPECTION

Check for continuity between the cable terminal and the brush wire (the indigo colored wire or the insulated brush holder). There should be continuity.

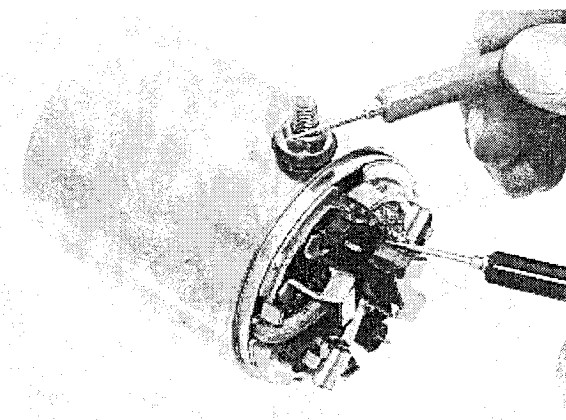


Check for continuity between the motor case and the cable terminal. There should be no continuity.

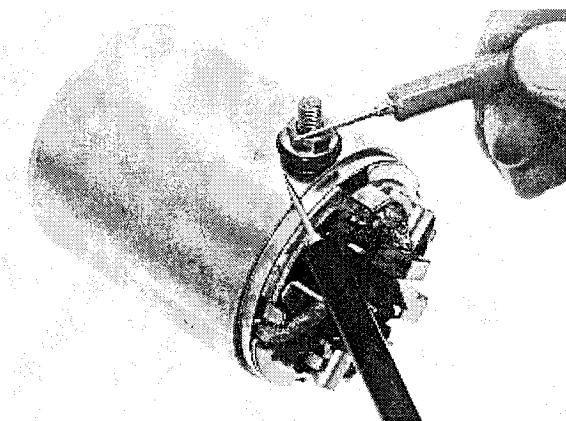

Inspect the brushes for damage and measure the brush length.


**SERVICE LIMIT:** 4.5 mm (0.18 in)

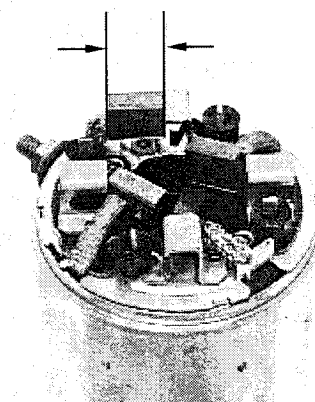


## ELECTRIC STARTER

---

Check the bushing of the rear cover for wear or damage.

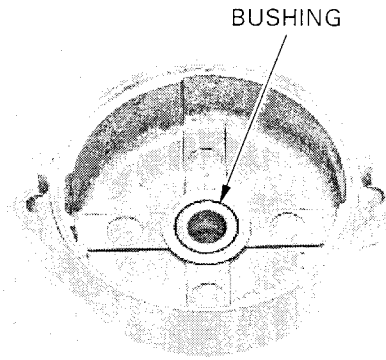


Check the front cover oil seal for fatigue or other damage.  
Check the needle bearing for damage.

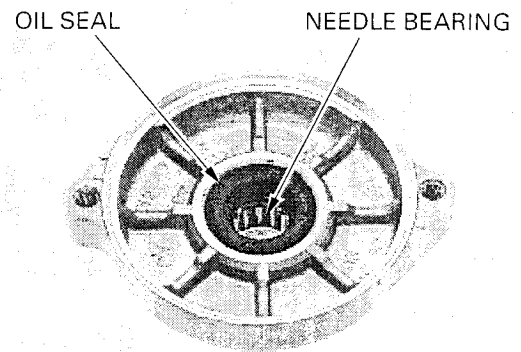


*Do not use emery or sand paper on the commutator.*

Inspect the commutator bars for discoloration. Bars discolored in pairs indicate grounded armature coils, in which case the starter motor must be replaced.

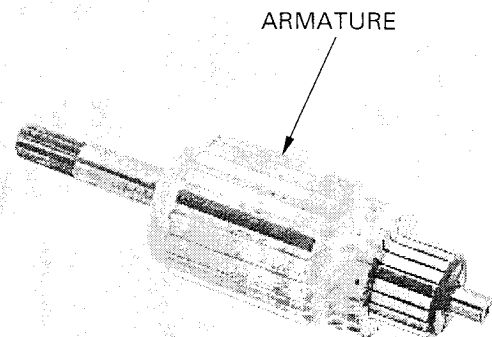


Check for continuity between individual commutator bars; there should be continuity.

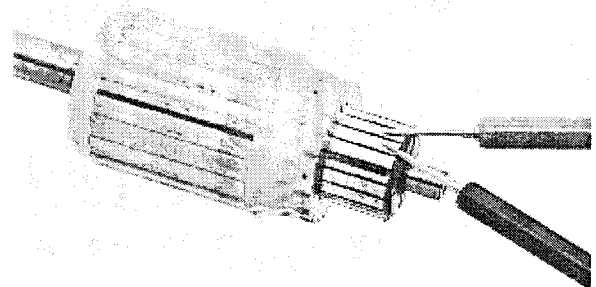




## ELECTRIC STARTER

Also, check for continuity between individual commutator bars and the armature shaft; there should be no continuity.

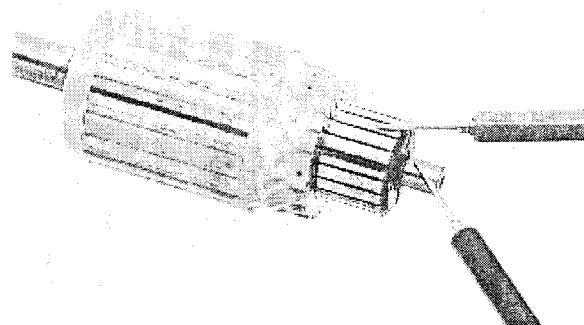


Remove the following:

- Nut
- Washer
- Insulators
- O-ring
- Brush holder assembly
- Brush/terminal

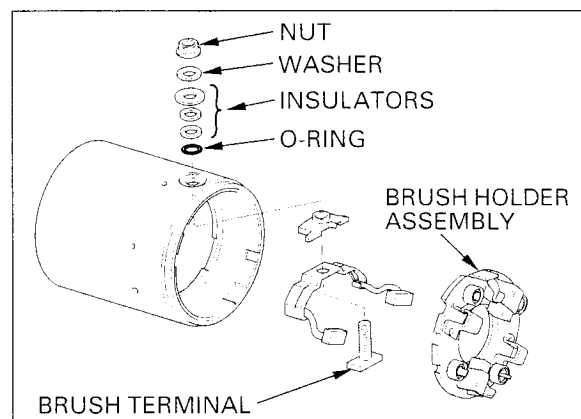


### ASSEMBLY

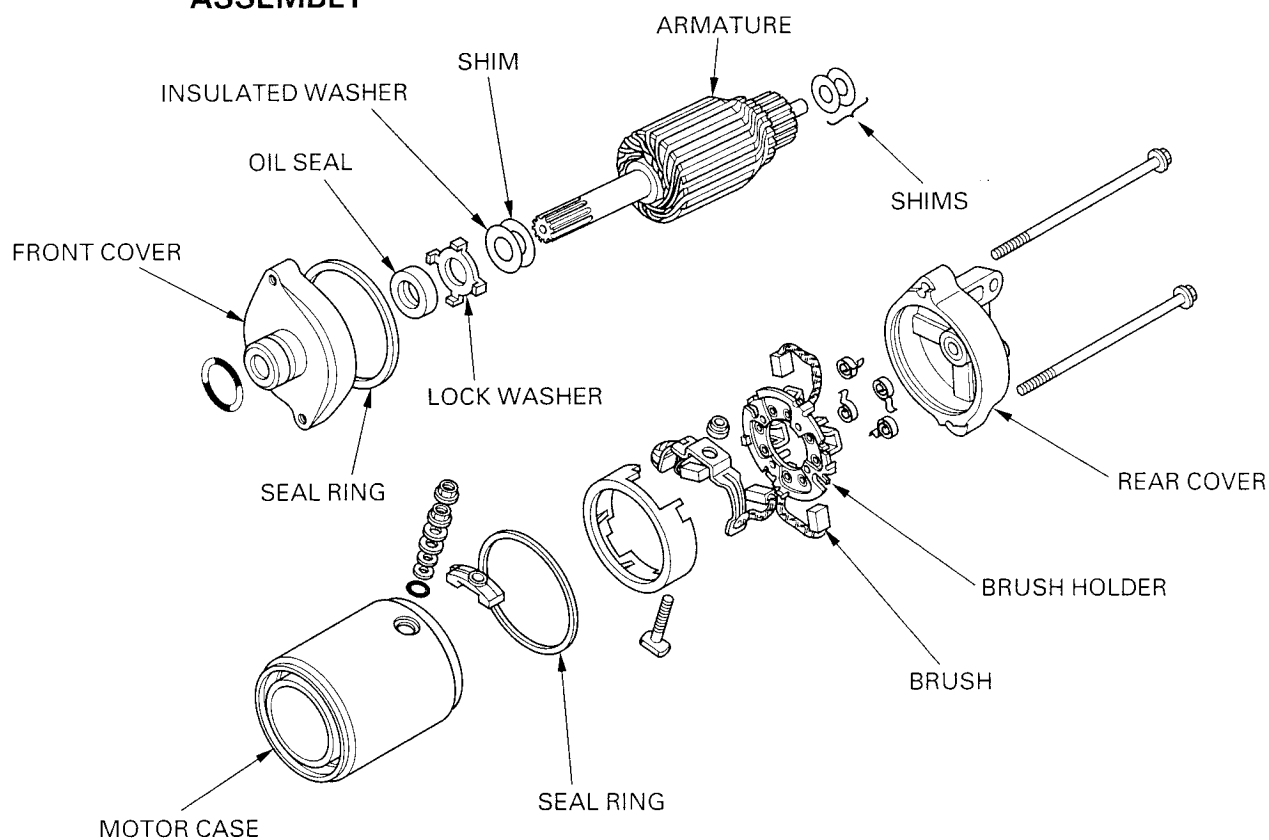

## ELECTRIC STARTER


*Align the terminal holder plate boss with the groove of the motor case.*

Set the brushes on the brush holder.  
Install the brush holder onto the motor case.

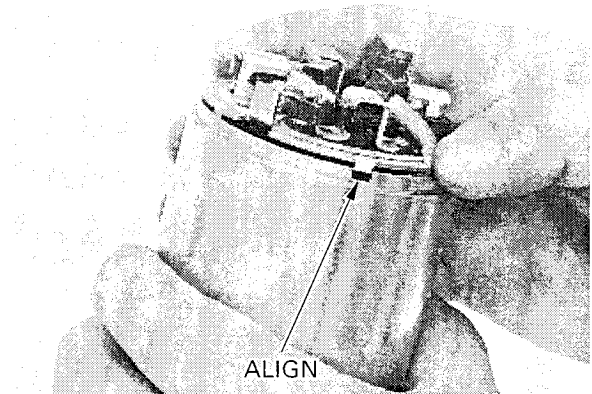


*Install the insulators properly as noted during removal.*

Install the following:  
— O-ring  
— Insulators  
— Washer  
— Nut

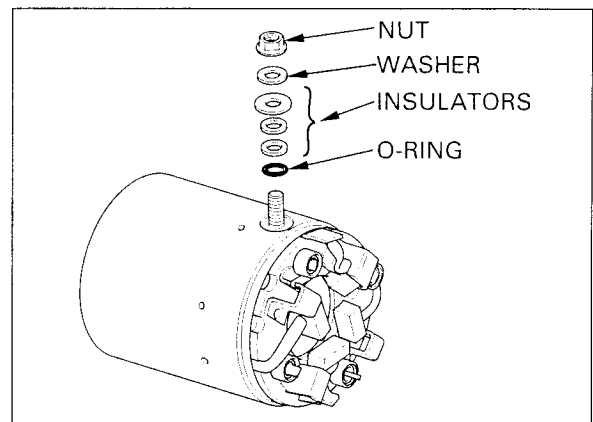


*Install the shims properly as noted during removal.*

Install the armature in the motor case.  
Install the shims on the armature shaft.  
Install the insulated washer and lock washer on the armature shaft.  
Install the seal ring onto the motor case.

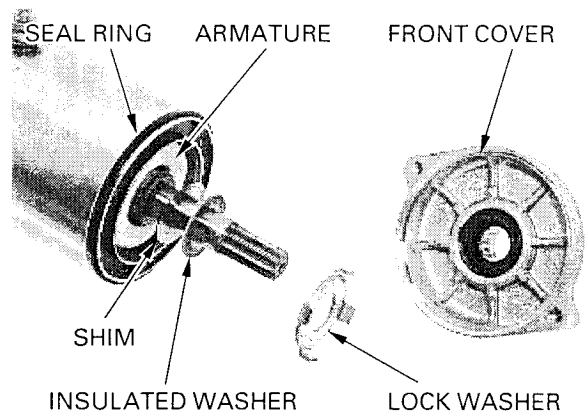


*Install the shims properly as noted during removal.*


Install the seal ring on the motor case.  
Install the shims on the armature shaft.  
Assemble the motor case and rear cover, aligning the brush holder boss with the groove in the rear cover.

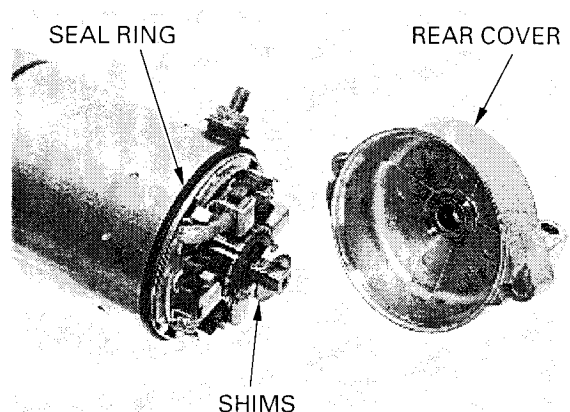

Install the front cover to the motor case.  
Make sure the index lines are aligned.

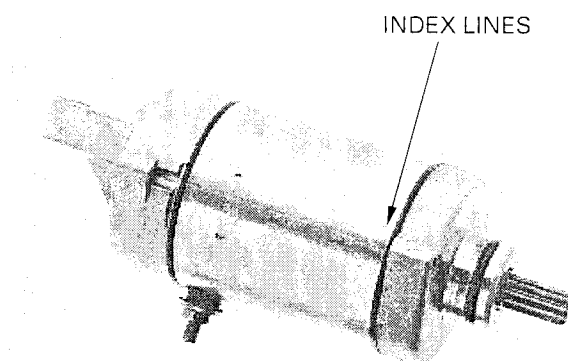


Install and tighten the case bolts securely.

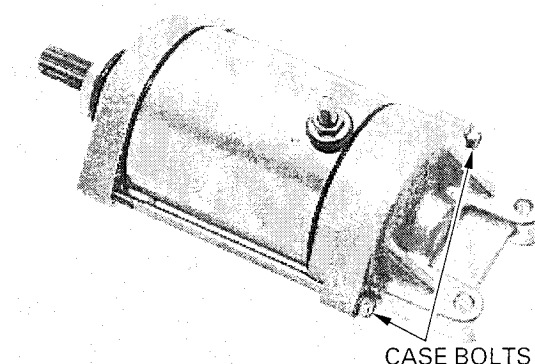

## INSTALLATION


Apply clean engine oil to the new O-ring.  
Install a new O-ring onto the starter motor boss.

Install the starter motor into the crankcase.

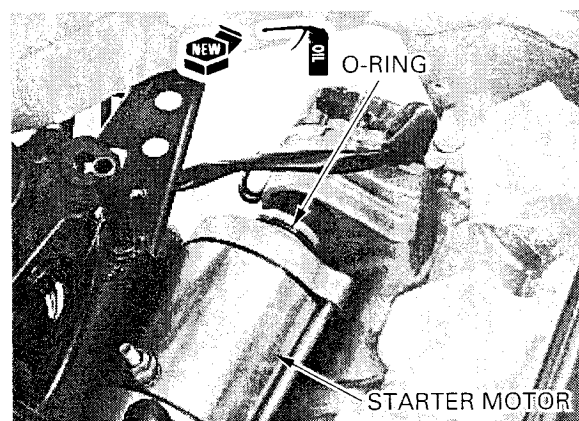

*Be careful not to damage the water hose.*


Route the starter motor cable and ground cable.  
Install the starter motor cables, then tighten the mounting bolts and terminal nut securely.

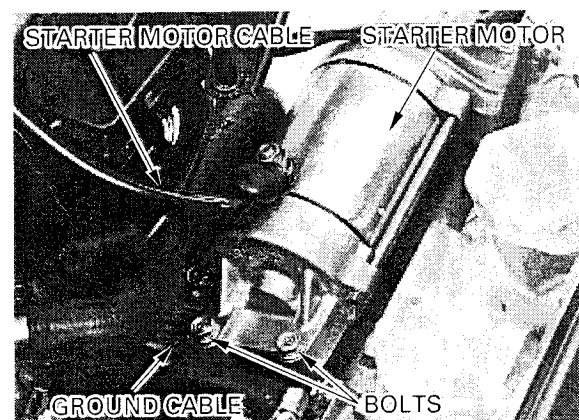

## ELECTRIC STARTER

Install a new O-ring into the thermostat housing groove.

Install the thermostat housing to the cylinder head.

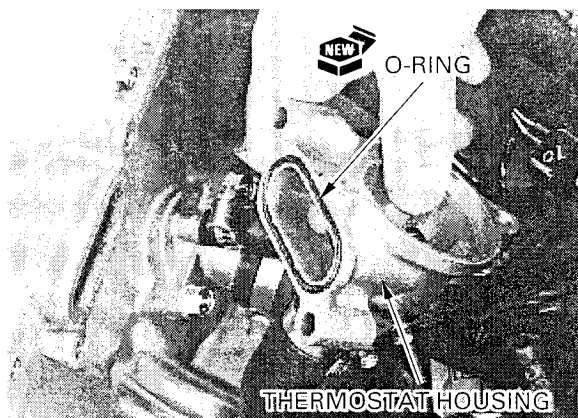


Install and tighten the mounting bolts.

Install the following:

- Thermostat housing/thermostat (page 6-7).
- Throttle body (page 5-63).

Fill the system with the recommended coolant (page 6-4).

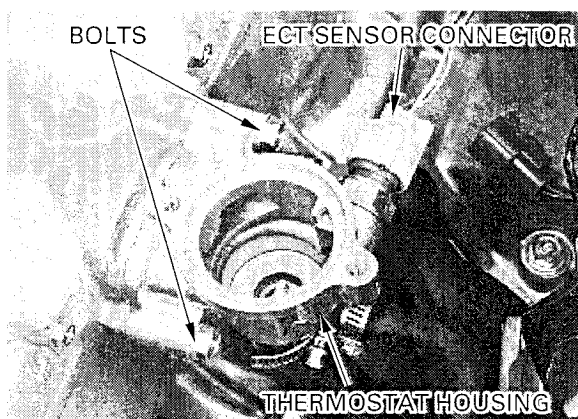

## STARTER RELAY SWITCH

### OPERATION INSPECTION


Remove the seat (page 2-2).

Shift the transmission into neutral.

Turn the ignition switch ON and depress the starter switch button.

The coil is normal if the starter relay switch clicks.

If the switch "CLICK" is not heard, inspect the relay switch using the procedure below.

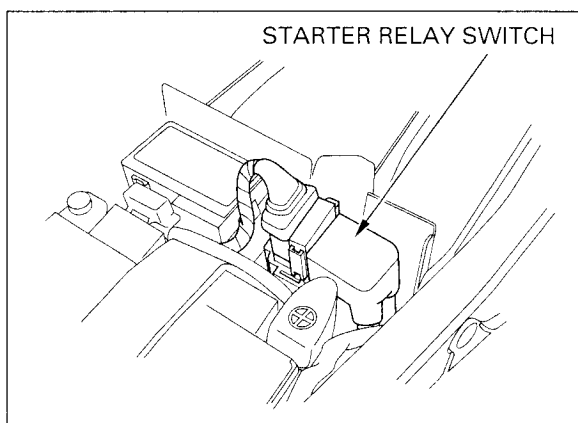


### GROUND LINE INSPECTION

Disconnect the relay connector.

Check for continuity between the Green/Red wire and ground.

If there is continuity when the transmission is in neutral or when the clutch is disengaged and the side stand switch is up, the ground circuit is normal (in neutral, there is a slight resistance due to the diode).

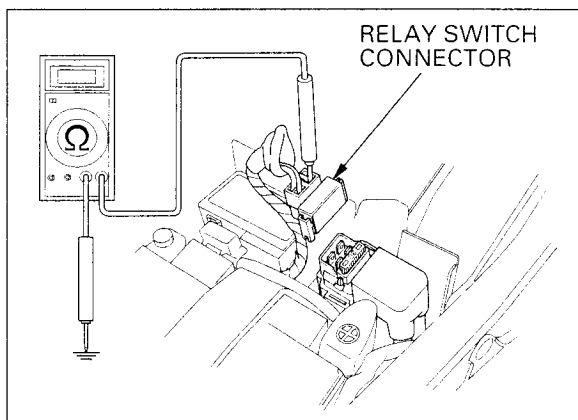




**VOLTAGE INSPECTION**

Connect the starter relay switch connector.  
Shift the transmission into neutral.

Measure the voltage between the Yellow/Red wire (–) and ground at the starter relay switch connector.

There should be battery voltage only when the starter switch button is depressed with the ignition switch is ON.

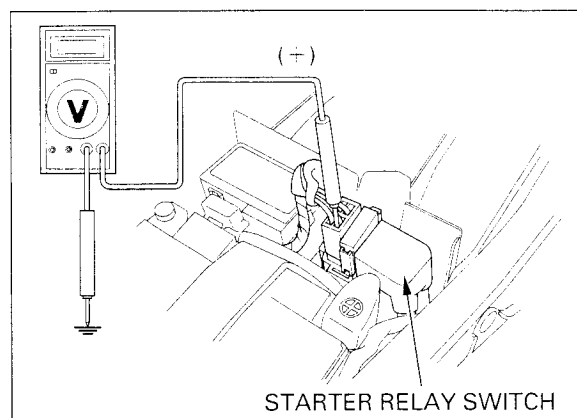**CONTINUITY INSPECTION**


Disconnect the starter relay connector and cables.

Connect an ohmmeter to the starter relay switch large terminals.

Connect a fully charged 12V battery to the starter relay switch connector terminals (Yellow/Red and Green/Red).


Check for continuity between the starter relay switch terminals.

There should be continuity while 12V battery is connected to the starter relay switch connector terminals and should be no continuity when the battery is disconnected.

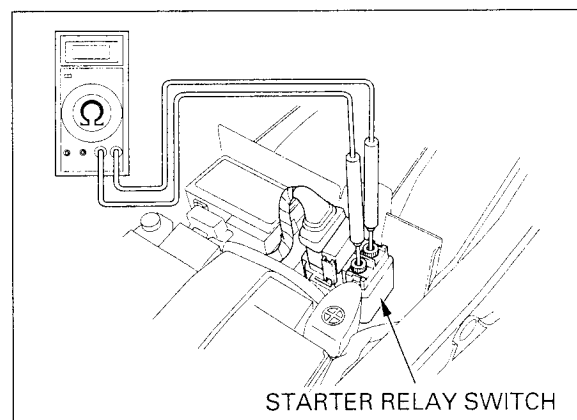**DIODE****REMOVAL**

Remove the seat (page 2-2).

Open the fuse box and remove the diode.

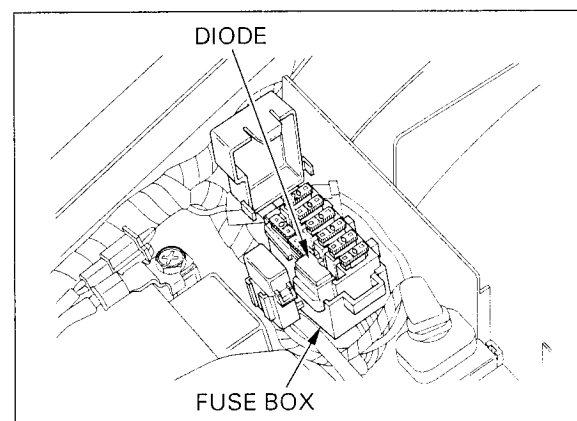**INSPECTION**


Check for continuity with an ohmmeter.

**Normal direction:** Continuity

**Reverse direction:** No continuity

**INSTALLATION**

Install the diode in the reverse order of removal.

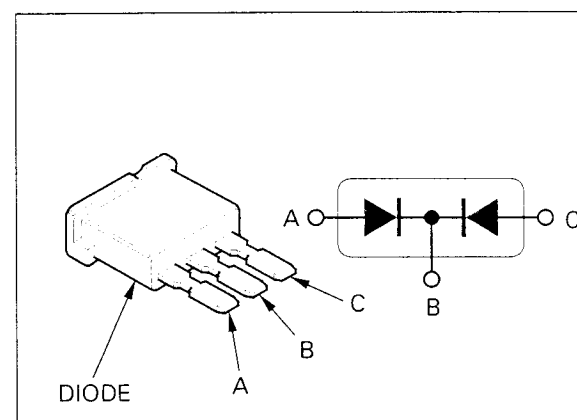



# 19. LIGHTS/METERS/SWITCHES

SYSTEM LOCATION	19-0	COOLING FAN MOTOR SWITCH	19-14
SERVICE INFORMATION	19-1	OIL PRESSURE SWITCH	19-15
TROUBLESHOOTING	19-3	FUEL RESERVE SENSOR	19-17
HEADLIGHT	19-4	IGNITION SWITCH	19-17
TURN SIGNAL	19-6	HANDLEBAR SWITCHES	19-18
TAIL/BRAKE LIGHT	19-7	BRAKE LIGHT SWITCH	19-19
LICENSE LIGHT	19-7	CLUTCH SWITCH	19-20
COMBINATION METER	19-8	NEUTRAL SWITCH	19-20
SPEEDOMETER/VEHICLE SPEED SENSOR	19-10	SIDE STAND SWITCH	19-20
TACHOMETER	19-12	HORN	19-22
COOLANT TEMPERATURE GAUGE/SENSOR	19-13	TURN SIGNAL RELAY	19-22

## SERVICE INFORMATION

### GENERAL

#### NOTICE

*A halogen headlight bulb becomes very hot while the headlight is ON, and remains hot for a while after it is turned OFF. Be sure to let it cool down before servicing.*

- Use an electric heating element to heat the water/coolant mixture for the thermosensor inspection. Keep all flammable materials away from the electric heating element. Wear protective clothing, insulated gloves and eye protection.
- Note the following when replacing the halogen headlight bulb.
  - Wear clean gloves while replacing the bulb. Do not put fingerprints on the headlight bulb, as they may create hot spots on the bulb and cause it to fail.
  - If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol to prevent its early failure.
  - Be sure to install the dust cover after replacing the bulb.
- Check the battery condition before performing any inspection that requires proper battery voltage.
- A continuity test can be made with the switches installed on the motorcycle.
- The following color codes are used throughout this section.

Bu=Blue	G=Green	Lg=Light Green	R=Red
Bl=Black	Gr=Gray	O=Orange	W=White
Br=Brown	Lb=Light Blue	P=Pink	Y=Yellow

**LIGHTS/METERS/SWITCHES****SPECIFICATIONS**

ITEM			SPECIFICATIONS
Bulbs	Headlight	Hi	12V-55W × 2
		Lo	12V-55W
	Brake/tail light		12V-21/5W × 2
	Front turn signal/running light		12V-32/3 cp (23/8 W) × 2
	Rear turn signal light		12V-21W × 2
	Licence light		12V-5W
	Instrument light		LED
	Turn signal indicator		LED × 2
	High beam indicator		LED
	Neutral indicator		LED
	Oil pressure indicator		LED
	Malfunction indicator lamp		LED
	Fuel reserve indicator		LED
Fuse	Main fuse		30A
	PGM-FI fuse		20A
	Sub fuse		20A × 1, 10A × 5
Tachometer peak voltage		10.5 V minimum	
Thermo sensor resistance		80°C	2.1—2.6 kΩ
		120°C	0.65—0.73 kΩ
Fan motor switch	Start to close (ON)		98—102 °C (208—216 °F)
	Stop to open		93—97 °C (199—207 °F)

**TORQUE VALUES**

Ignition switch mounting one-way bolt	26 N·m (2.7 kgf·m , 20 lbf·ft)	
Side stand switch mounting bolt	10 N·m (1.0 kgf·m , 7 lbf·ft)	ALOC bolt
Fan motor switch	18 N·m (1.8 kgf·m , 13 lbf·ft)	Apply sealant to the threads
Coolant temperature/ECT sensor	23 N·m (2.3 kgf·m , 17 lbf·ft)	
Oil pressure switch	12 N·m (1.2 kgf·m , 9 lbf·ft)	Apply sealant to the threads
Oil pressure switch wire terminal screw	2 N·m (0.2 kgf·m , 1.4 lbf·ft)	
Neutral switch	12 N·m (1.2 kgf·m , 9 lbf·ft)	

## TROUBLESHOOTING

### SPEED SENSOR/SPEEDOMETER

The odometer/trip meter operate normally, but the speedometer does not operate


- Faulty speedometer

The speedometer operate normally, but the odometer/trip meter does not operate

- Faulty odometer/trip meter

The speedometer operate is abnormal

- Check for the following before diagnosing.
  - Blown main or sub fuses
  - Loose or corroded terminals of the connectors
  - Discharged battery

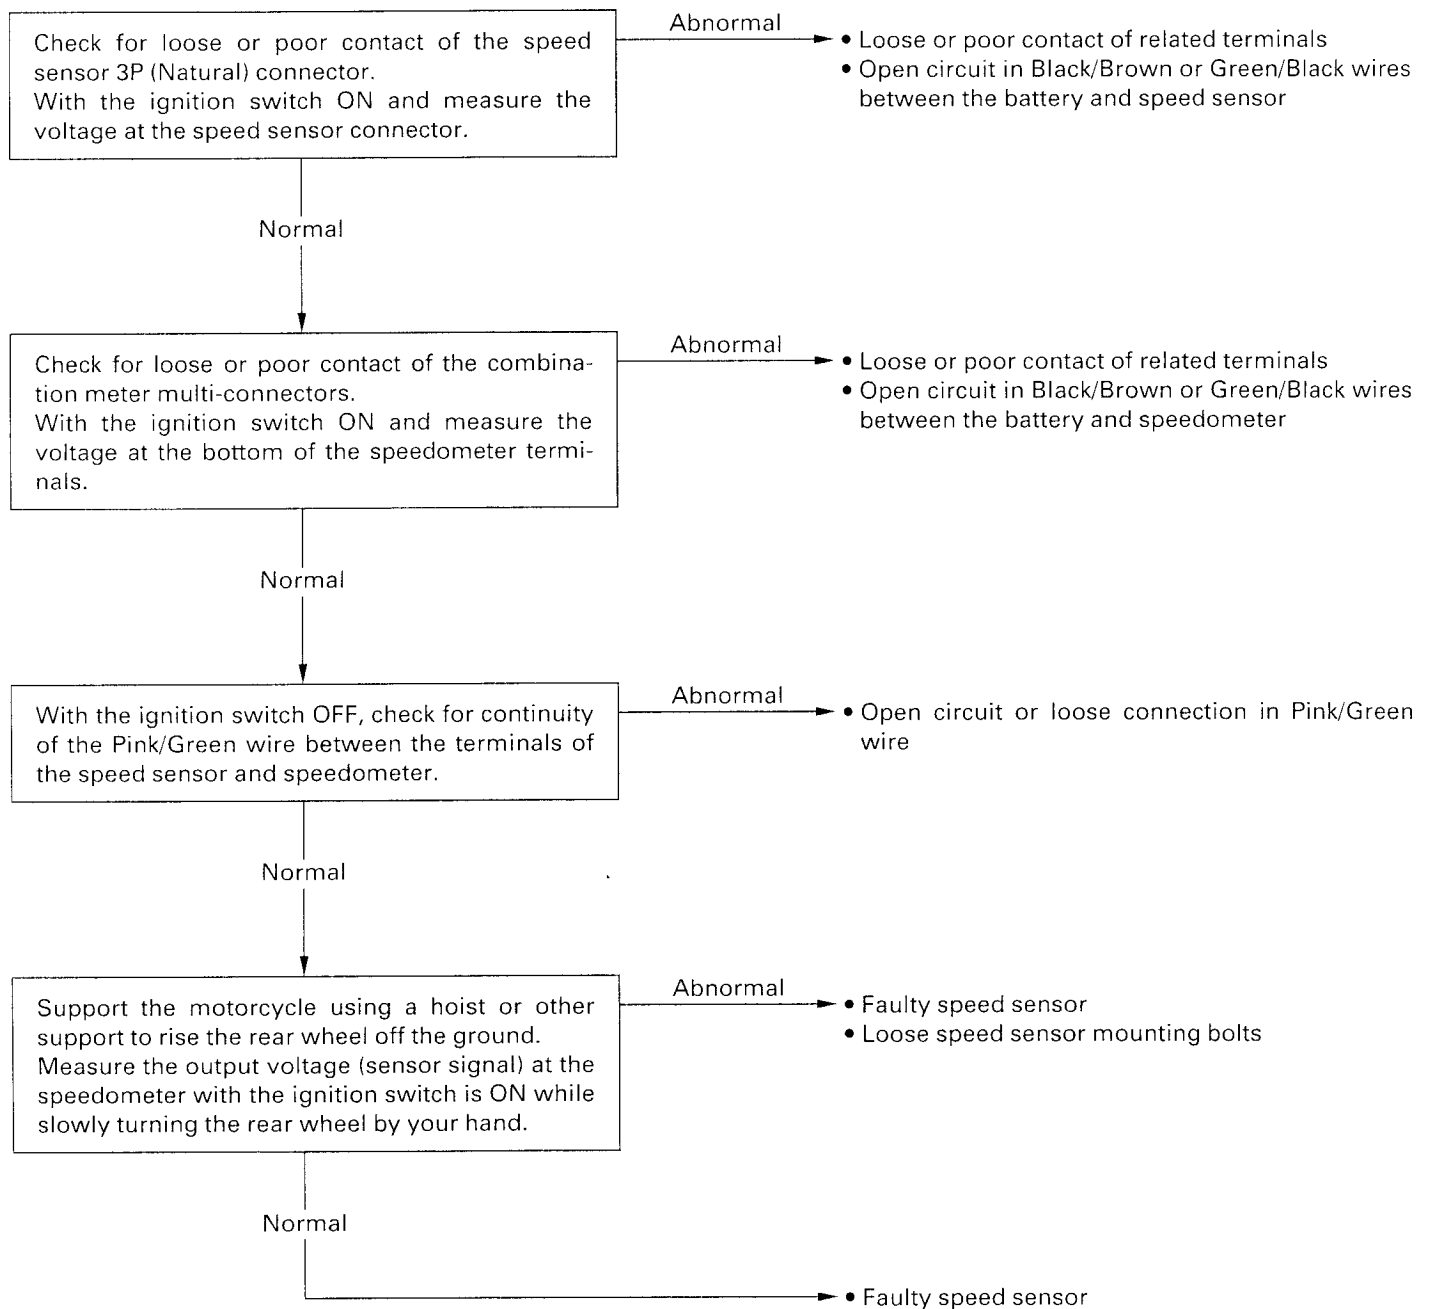


## LIGHTS/METERS/SWITCHES

### HEADLIGHT

#### BULB REPLACEMENT


Disconnect the headlight bulb connectors.  
Remove the dust cover.

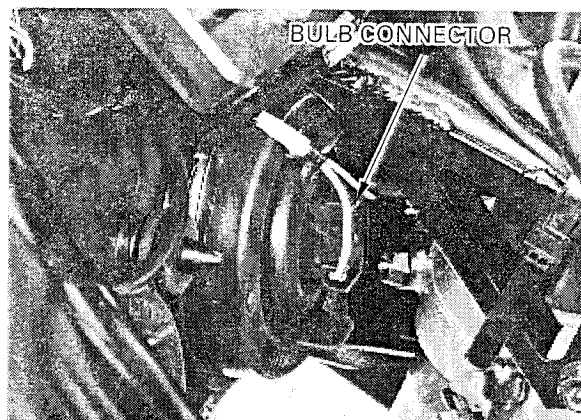

*Avoid touching halogen headlight bulb. Finger prints can create hot spots that cause a bulb to break.*


Unhook the bulb retainer and remove the headlight bulb/socket.

If you touch the bulb with your bare hands, clean it with cloth moistened with denatured alcohol to prevent early bulb failure.

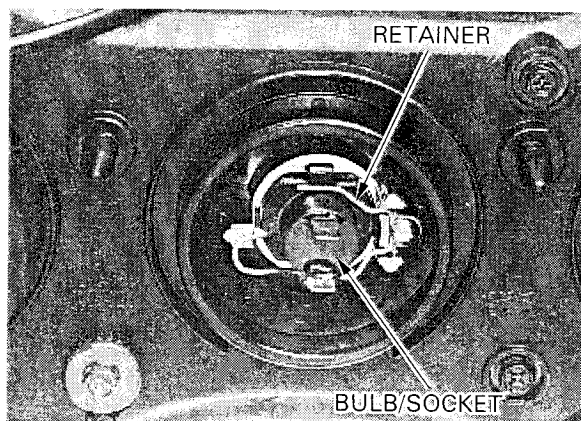


Remove the headlight bulb from the socket.

Install a new bulb into the socket.

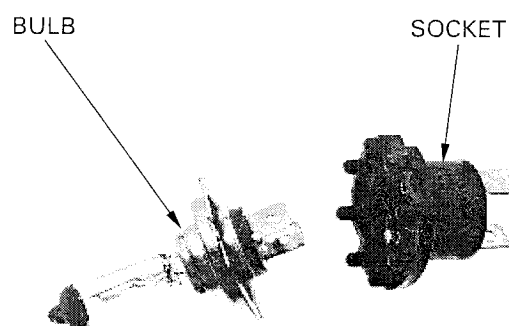


Install the new headlight bulb/socket by aligning its tabs with the groove in the headlight unit.

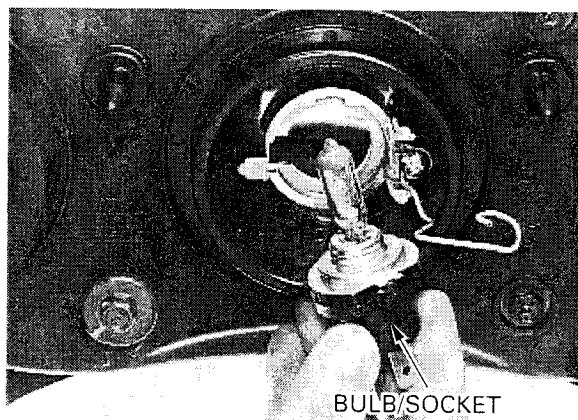




## LIGHTS/METERS/SWITCHES

Hook the bulb retainer into the headlight unit groove.

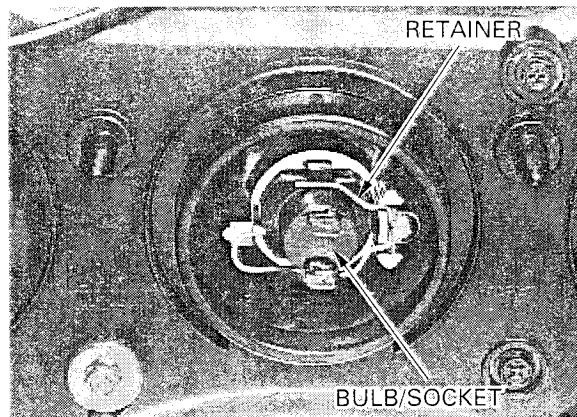


Install the dust cover tightly against the headlight unit with its arrow mark facing up.

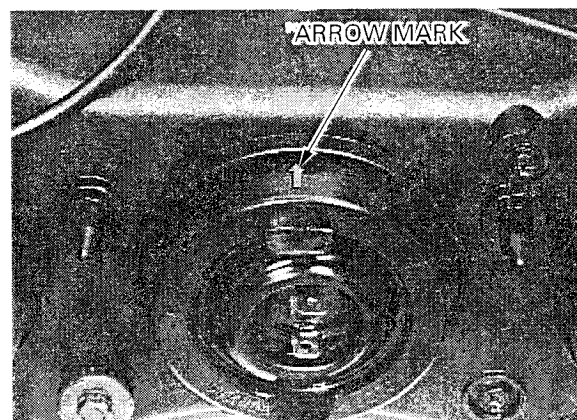

*Connect the white tape connector to the center headlight bulb socket (to beam).*

Connect the headlight connectors.

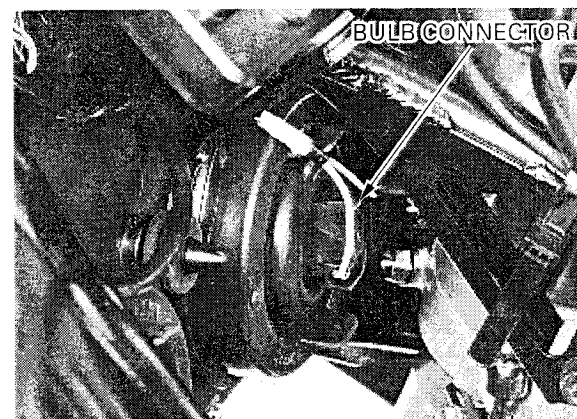


### REMOVAL/INSTALLATION

Remove the upper cowl (page 2-9).

Remove the four bolts and headlight unit.

Install the headlight unit in the reverse order of removal.

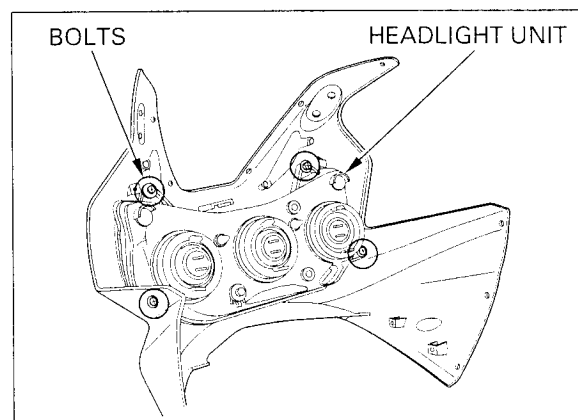




## LIGHTS/METERS/SWITCHES

### TURN SIGNAL


#### BULB REPLACEMENT

Remove the screw and turn signal lens.

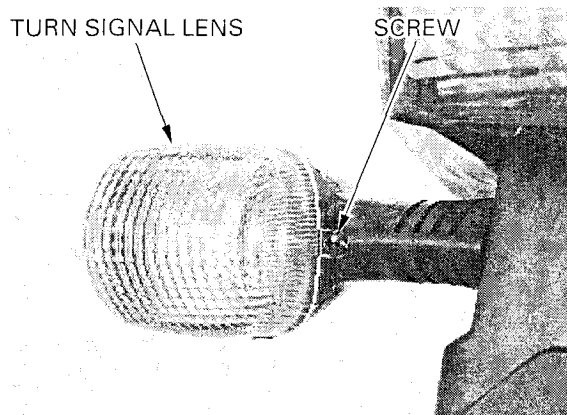

While pushing in, turn the bulb counterclockwise to remove it and replace with a new one.

Install the turn signal lens in the reverse order of removal.

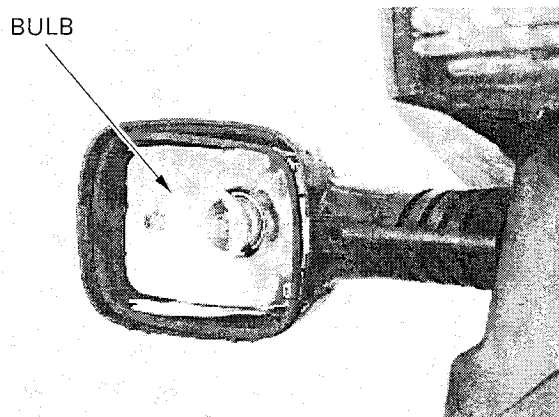


#### REMOVAL/INSTALLATION

For front turn signal unit removal, see upper cowl removal (page 2-9).

For rear turn signal removal, remove the following:  
– Seat/rear cowl (page 2-2)


Disconnect the turn signal connector.

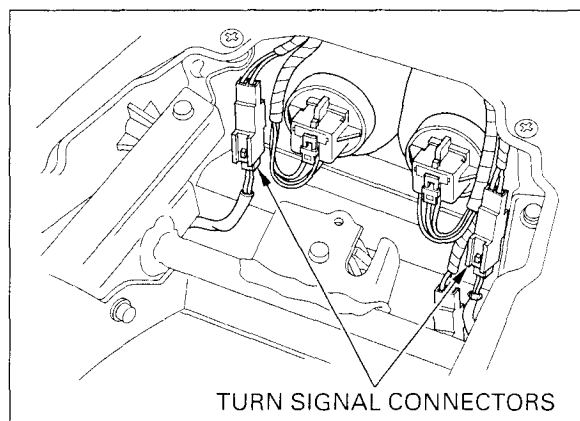

*Route the turn signal wire properly (page 1-24).*

Remove the turn signal mounting nut.  
Release the turn signal wire and remove the turn signal unit.


Install the turn signal unit in the reverse order of removal.

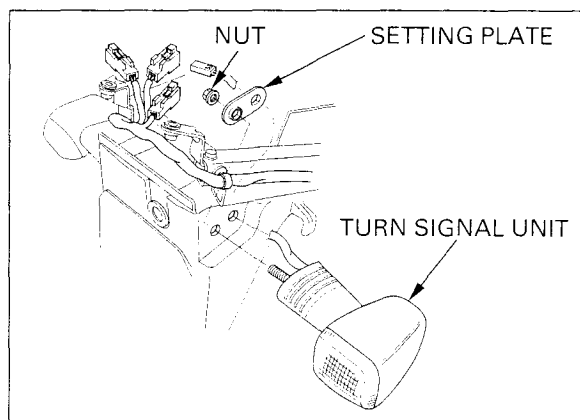

## TAIL/BRAKE LIGHT


### BULB REPLACEMENT

Disconnect the tail/brake light connectors.  
Turn the bulb socket counterclockwise, then remove the bulb socket.

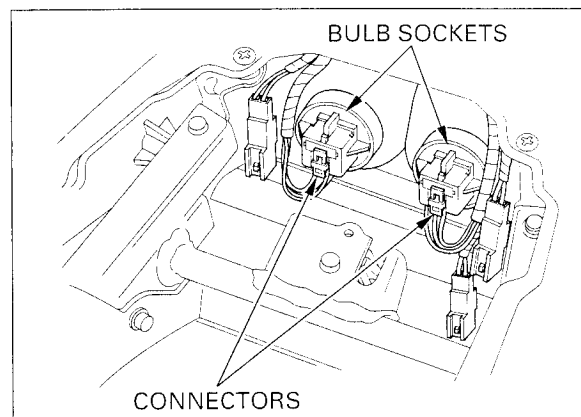

While pushing in, turn the bulbs counterclockwise to remove them and replace with new ones.

Install the tail/brake light sockets in the reverse order of removal.

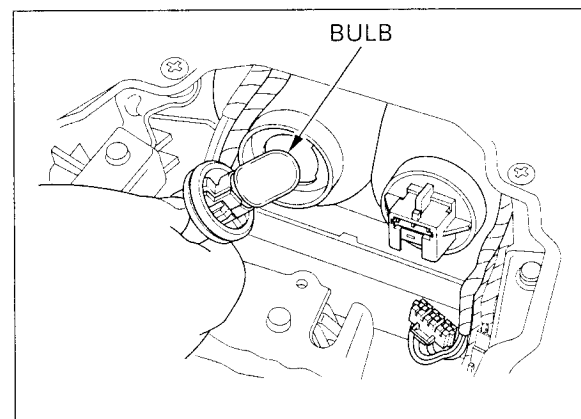


### REMOVAL/INSTALLATION

Remove the rear cowl (page 2-9).

Remove the two screws and tail/brake light unit.

*Align the tail/brake light unit tabs with the bracket holes.*


Installation is in the reverse order of removal.

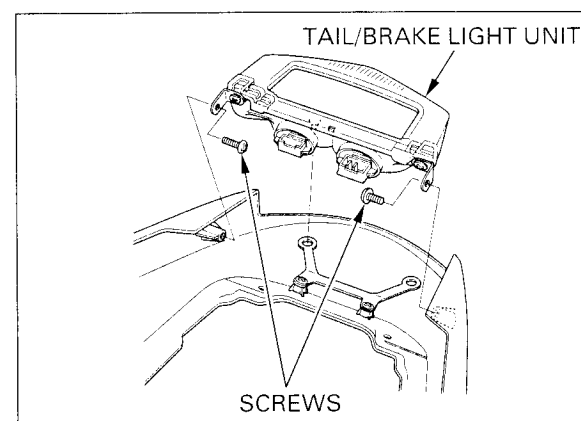

## LICENSE LIGHT

### BULB REPLACEMENT

Remove the license light bracket bolts and the license light assembly.

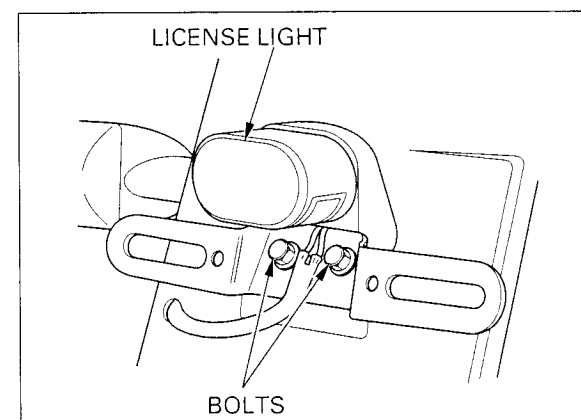


## LIGHTS/METERS/SWITCHES

Remove the screws, license light cover and lens.

While pushing in, turn the bulb counterclockwise to remove it and replace with a new one.

Install the license light assembly in the reverse order of removal.

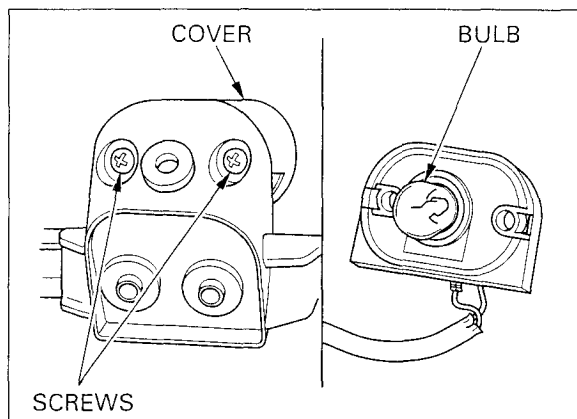


## COMBINATION METER


### REMOVAL

Remove the upper cowl (page 2-9).

Disconnect the combination meter multi-connector.

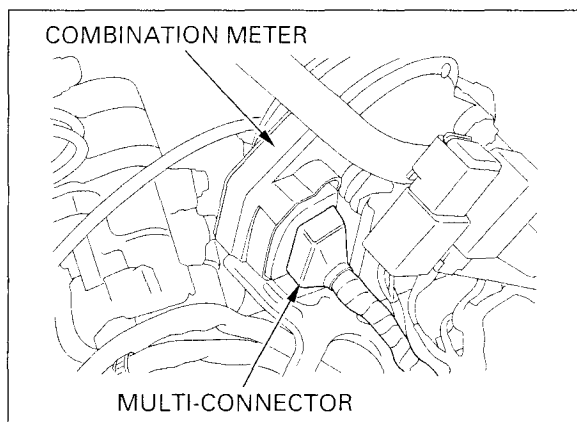


Remove the combination meter mounting bolt. Release the combination meter case bosses from the bracket grommets, then remove the combination meter.

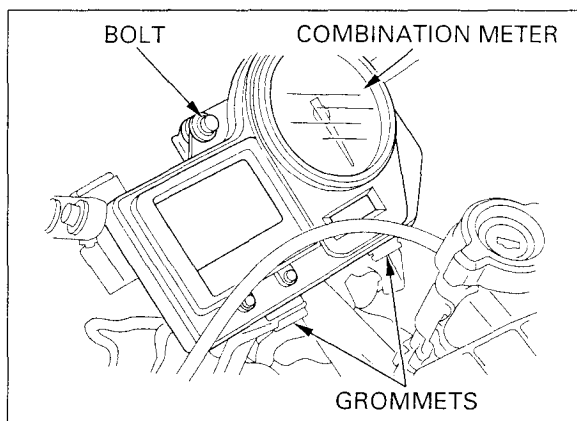

### DISASSEMBLY

Remove the screws and combination meter rear cover.

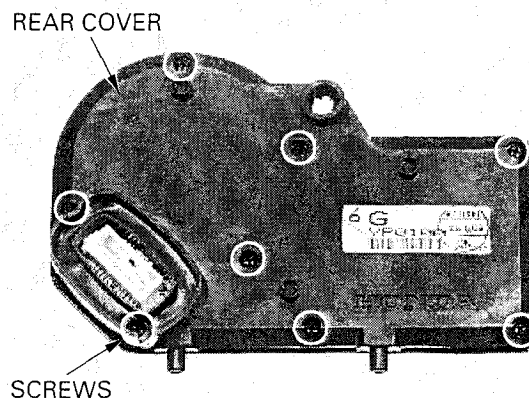


## LIGHTS/METERS/SWITCHES


Remove the combination meter print board assembly from the front cover.

### ASSEMBLY

Install the print board assembly into the front cover.

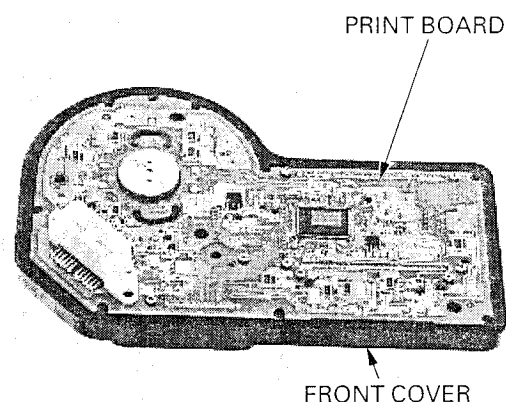

Install the rear cover and tighten the screws securely.

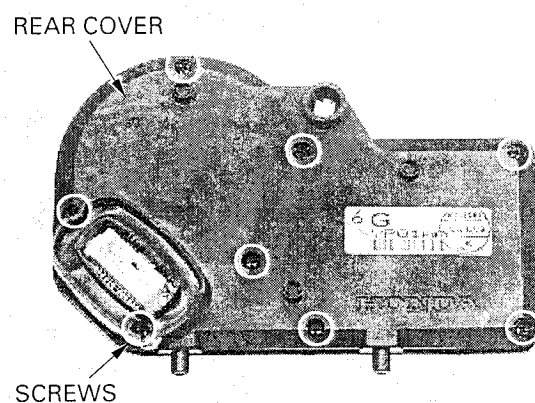


### INSTALLATION

*Align the combination meter case bosses with the grommets on the meter bracket.*


Install the combination meter onto the bracket.

Install and tighten the mounting bolt.

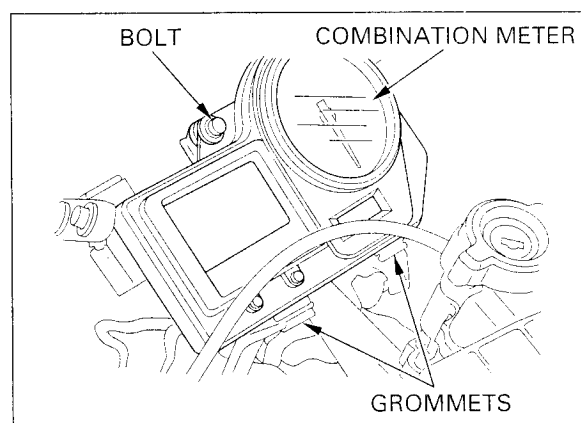

Connect the combination meter multi-connector.

Install the upper cowl (page 2-11).

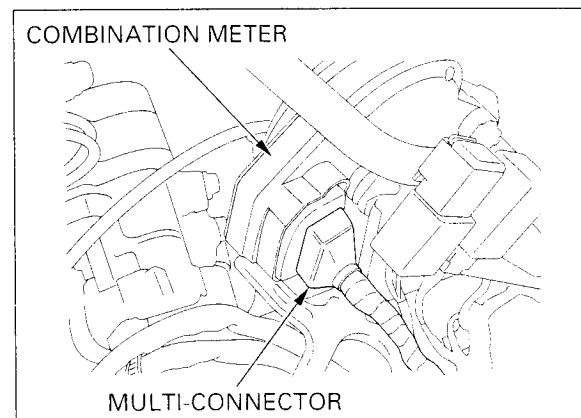

## LIGHTS/METERS/SWITCHES


### SPEEDOMETER/VEHICLE SPEED SENSOR

#### VOLTAGE INSPECTION

Open and support the front end of fuel tank (page 3-4).

Disconnect the speed sensor 3P (Natural) connector and check for loose or poor contact of the connector.

3P (NATURAL) CONNECTOR

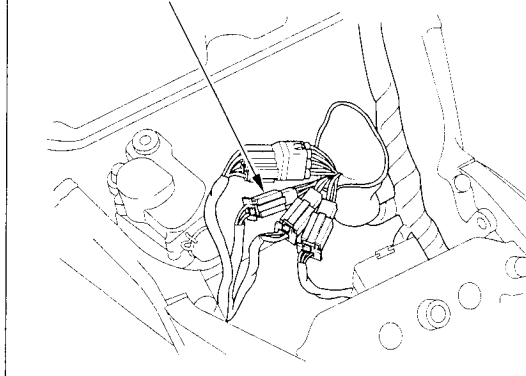


With the ignition switch is ON and measure the voltage at the 3P (Natural) connector of the wire harness side.

**Connection:** Black/Brown (+) – Green/Black (–)

**Standard:** Battery voltage

If there is no voltage, repair or replace the wire harness.

3P (NATURAL) CONNECTOR

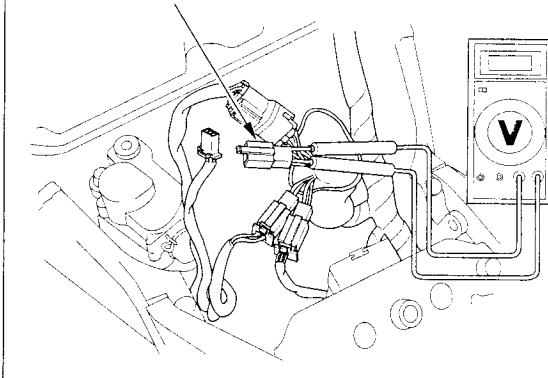

Remove the upper cowl (page 2-9).


Check for loose or poor connection of the combination meter multi-connector.

With the ignition switch is ON and measure the voltage at the multi-connector terminals.

**Connection:** Black/Brown (+) – Green/Black (–)

**Standard:** Battery voltage

If there is no voltage, repair or replace the wire harness.

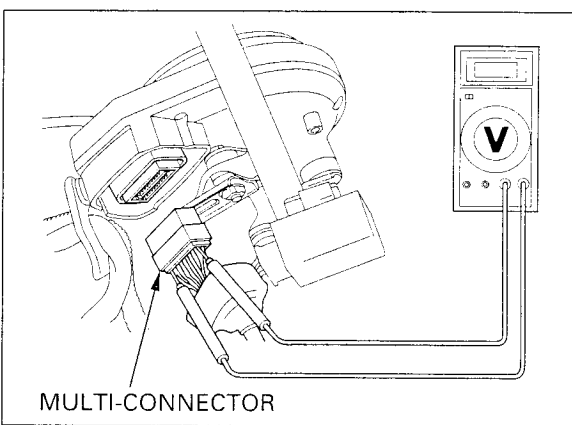


#### OUTPUT SIGNAL INSPECTION

With the ignition switch is OFF, check for continuity of the Pink/Green wire between the speed sensor connector and combination meter multi-connector.

There should be continuity.

If there is no continuity, repair or replace the wire harness.

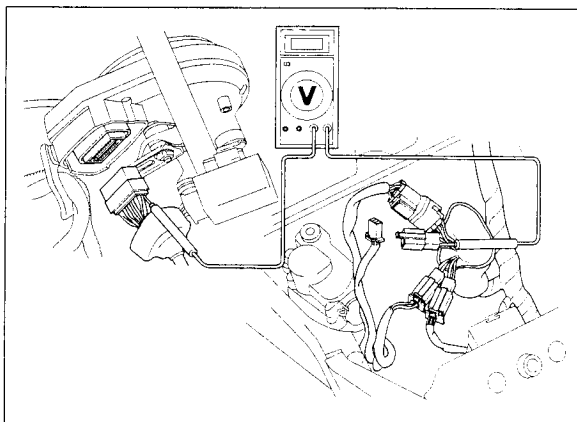



## LIGHTS/METERS/SWITCHES

Support the motorcycle securely and place the rear wheel off the ground.


Shift the transmission into gear.

Connect the speed sensor 3P (Natural) connector. Measure the voltage at the combination meter terminals with the ignition switch is ON while slowly turning the rear wheel by hand.

**CONNECTION:** Pink/Green (+) – Green/Black (–)

**STANDARD:** Repeat 0 to 5 V


If the measurement is out of specification, inspect the open circuit in wire harness.

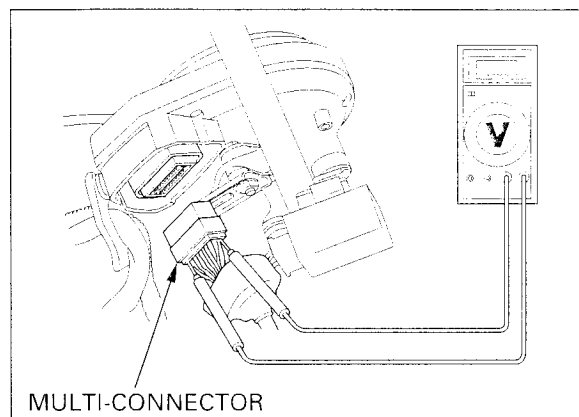


### REMOVAL/INSTALLATION

Open and support the front end of fuel tank (page 3-4).

Disconnect the speed sensor 3P (Natural) connector.

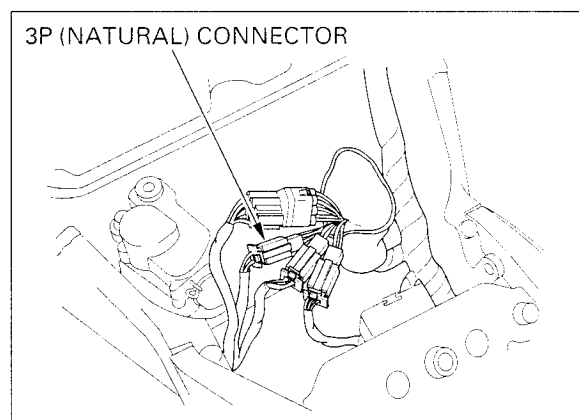


Remove the bolts and speed sensor.

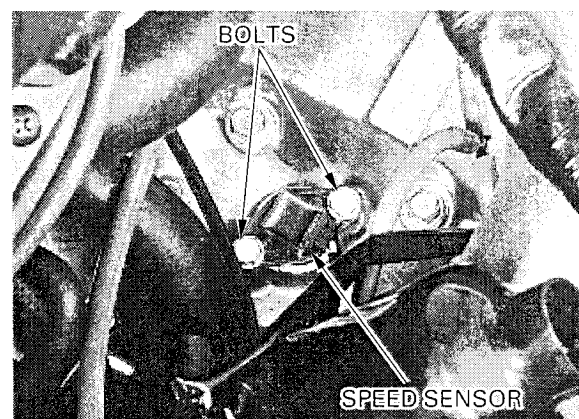


Check the O-ring is in good condition, replace if necessary.

Install the speed sensor into the upper crankcase.

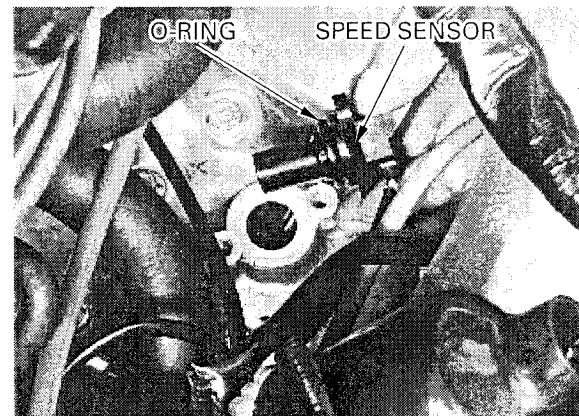


## LIGHTS/METERS/SWITCHES

Install and tighten the mounting bolts securely.

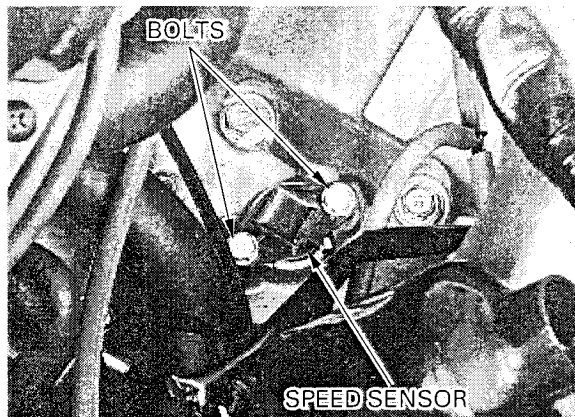

Route the sensor wire.

Connect the speed sensor 3P (Natural) connector.

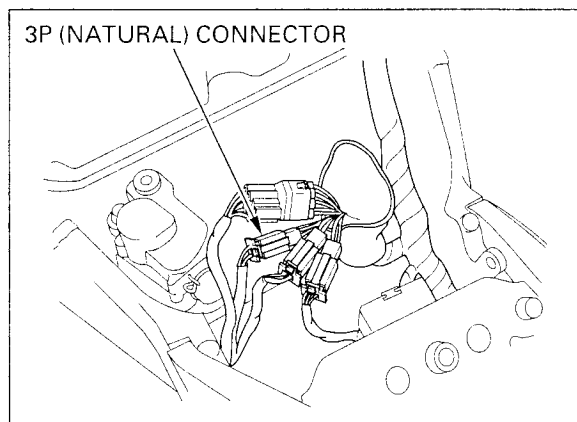

## TACHOMETER

### INSPECTION

Remove the upper cowl (page 2-9).

Check for loose or poor contact terminals of the combination meter multi-connector.

Connect the peak voltage adaptor to the tachometer Black/Yellow terminal and ground.

### TOOLS:

Imrie diagnostic tester (model 625) or  
Peak voltage adaptor 07HGJ-0020100  
with commercially available digital multimeter  
(impedance 10 M $\Omega$  /DCV minimum)


**CONNECTION:** Yellow/Green (+) and Ground (-)

Start the engine and measure the tachometer input peak voltage.

**PEAK VOLTAGE:** 10.5 V minimum

If the value is normal, replace the tachometer.

If the measured value is below 10.5 V, replace the ECM.

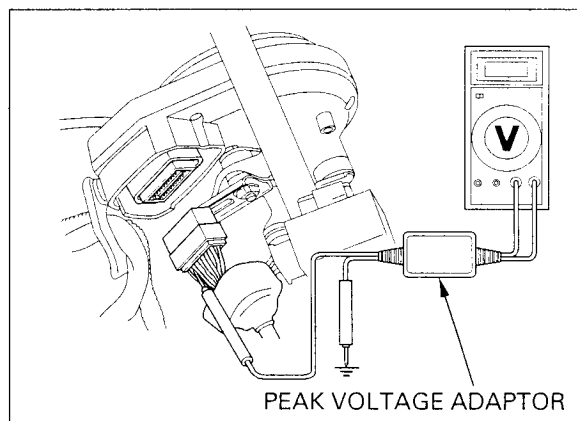


If the value is 0 V, perform the following:  
Remove the ECM cover (page 5-81) and disconnect the ECM multi-connector.

Check for continuity between the tachometer terminal and the ECM multi-connector Yellow/Green terminals.

If there is no continuity, check the wire harness for an open circuit.

If there is continuity, replace the tachometer unit.

For tachometer replacement, see 19-8; combination meter disassembly and assembly.

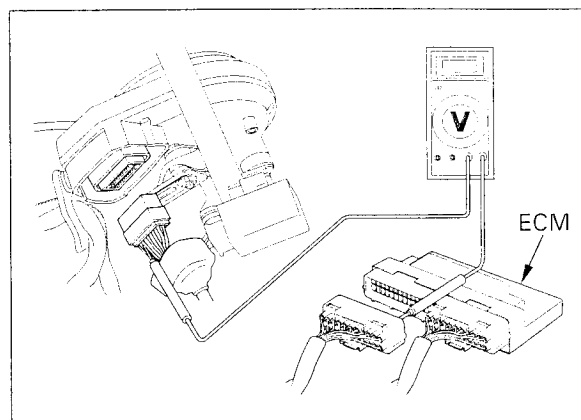


## COOLANT TEMPERATURE GAUGE/SENSOR

### INSPECTION

Open and support the front end of fuel tank (page 3-4).

Disconnect the ECT/thermo sensor wire connector from the sensor.

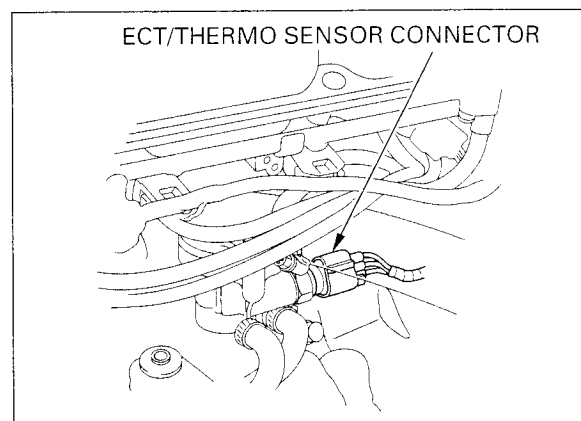



### THERMO SENSOR UNIT INSPECTION

Drain the coolant (page 6-3).

Disconnect the wire connector from the ECT/thermo sensor and remove the sensor.

Suspend the ECM/thermo sensor in a pan of coolant (50–50 mixture) an electric heating element and measure the resistance through the sensor as the coolant heats up.

- Soak the ECT/thermo sensor in coolant up to its threads with at least 40 mm (1.6 in) from the bottom of the pan to the bottom of the sensor.
- Keep the temperature constant for 3 minutes before testing. A sudden change of temperature will result in incorrect readings. Do not let the thermometer or ECT/thermo sensor touch the pan.

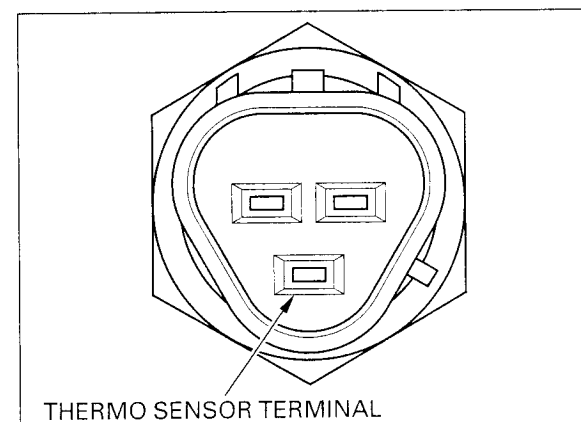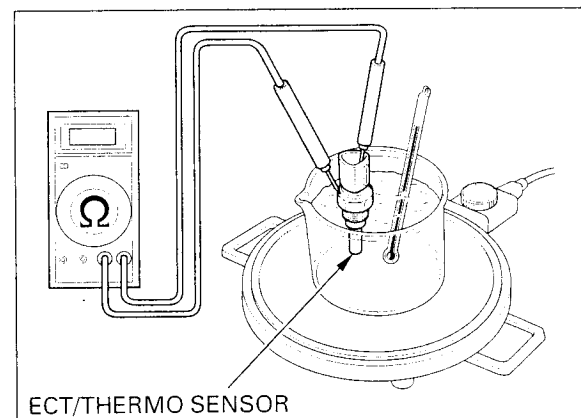

**LIGHTS/METERS/SWITCHES**


Temperature	80°C (68°F)	120°C (248°F)
Resistance	2.1 – 2.6 k $\Omega$	0.65 – 0.73 k $\Omega$

Replace the sensor if it is out of specification by more than 10 % at any temperature listed.

*Always replace the sealing washer with a new one.*


Install and tighten the ECT/thermo sensor to the specified torque.

**TORQUE:** 23 N·m (2.3 kgf·m , 17 lbf·ft)

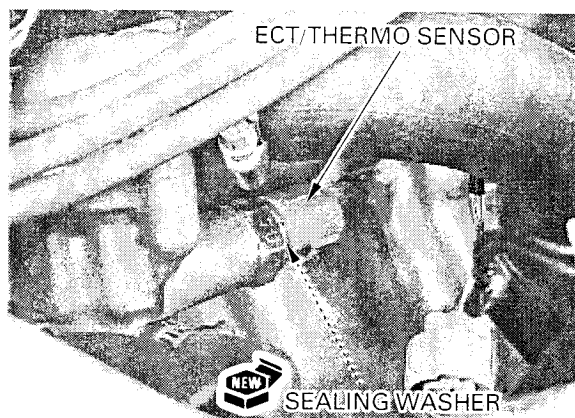

Connect the ECT/thermo sensor connector.

Fill the system and bleed the air (page 6-4).

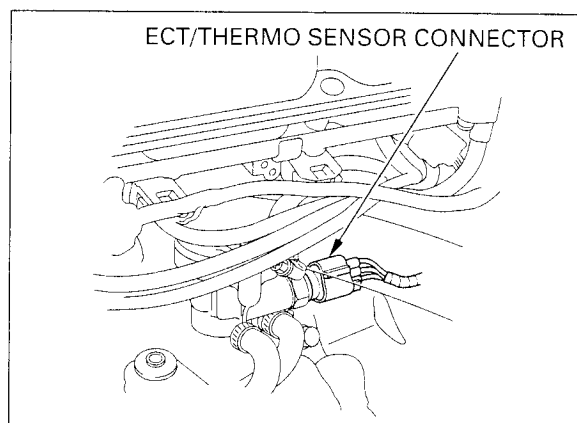**COOLING FAN MOTOR SWITCH****INSPECTION**

Remove the following:

- Seat (page 2-2)
- Middle/lower cowl (page 2-5)

Check for a blown fuse before inspection.

**Fan motor does not stop**

Turn the ignition switch OFF, disconnect the connector from the fan motor switch and turn the ignition switch ON again.

If the fan motor does not stop, check for a shorted wire between the fan motor and switch.

If the fan motor stops, replace the fan motor switch.

**Fan motor does not start**



Before testing, warm up the engine to operating temperature.

Disconnect the connector from the fan motor switch and ground the connector to the body with a jumper wire.

Turn the ignition switch ON and check the fan motor.


If the motor starts, check the connection at the fan motor switch terminal.

It is OK, replace the fan motor switch.

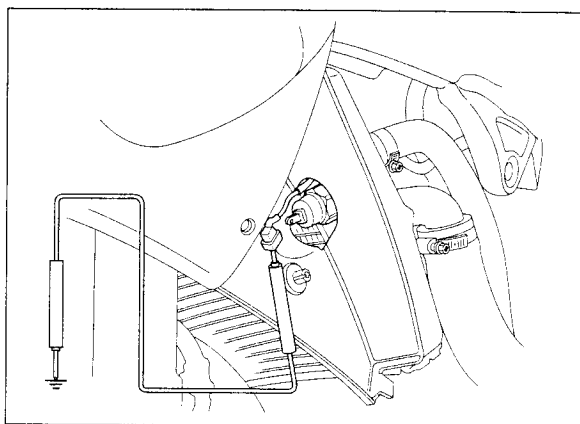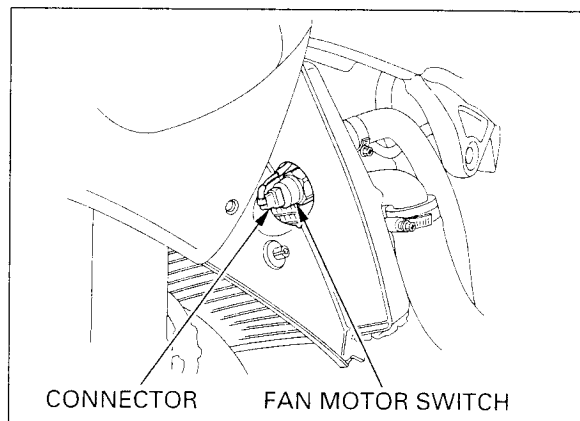



If the motor does not start, check for voltage between the fan motor switch connector and ground. If battery voltage is measured, replace fan motor. If there is no battery voltage, check for poor connection of the connector or broken wire harness.

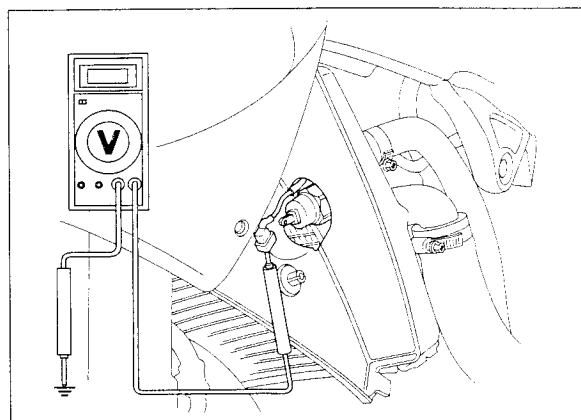


## REMOVAL/INSTALLATION

Disconnect the fan motor switch connector and remove the switch.

Install a new O-ring onto the fan motor switch. Apply sealant to the fan motor switch threads. Install and tighten the fan motor switch.

**TORQUE:** 18 N·m (1.8 kgf·m, 13 lbf·ft)

Install the removed parts in the reverse order of removal.

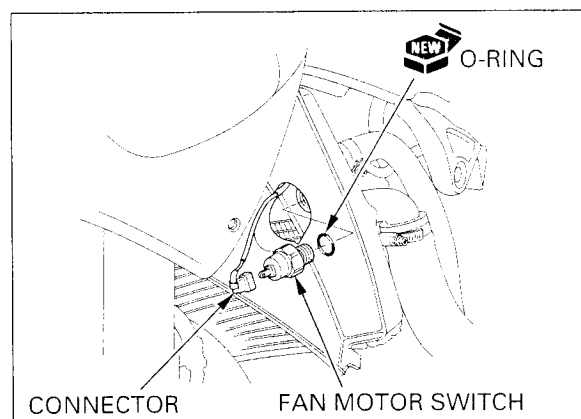


## OIL PRESSURE SWITCH

### INSPECTION


If the oil pressure warning indicator stays on while the engine running, check the engine oil level before inspection.

Make sure that the oil pressure warning indicator came on with the ignition switch ON.

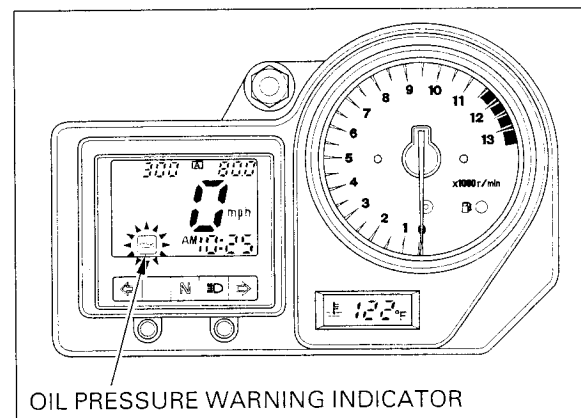

If the indicator does not come on, inspect as follow: Open and support the front end of fuel tank (page 3-4).

Remove the dust cover.  
Remove the screw and oil pressure switch terminal.

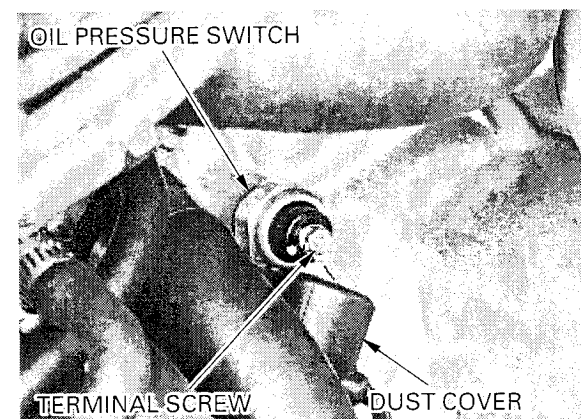



## LIGHTS/METERS/SWITCHES

Short the oil pressure switch wire terminal with the ground using a jumper wire.


The oil pressure warning indicator comes on with the ignition switch in ON.

If the light does not come on, check the sub-fuse (10 A) and wires for a loose connection or an open circuit.

Start the engine and make sure that the light goes out.


If the light does not go out, check the oil pressure (page 4-3).

If the oil pressure is normal, replace the oil pressure switch (see below).

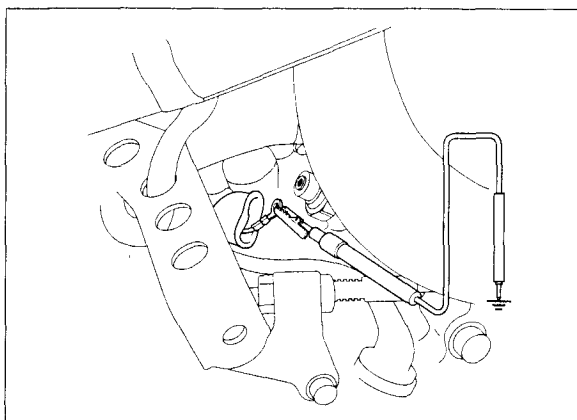


## REMOVAL/INSTALLATION

Remove the boot, terminal screw and wire terminal. Remove the oil pressure switch from the crankcase.

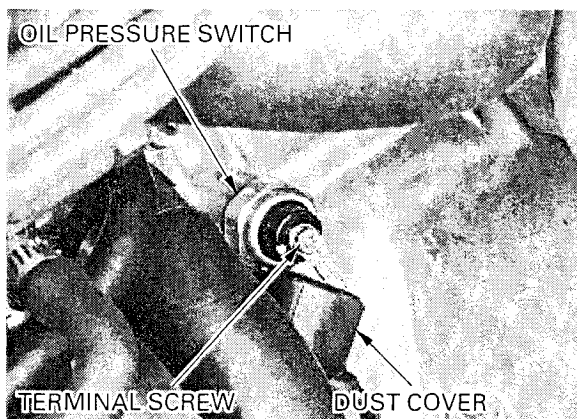

Apply sealant to the oil pressure switch threads as shown.

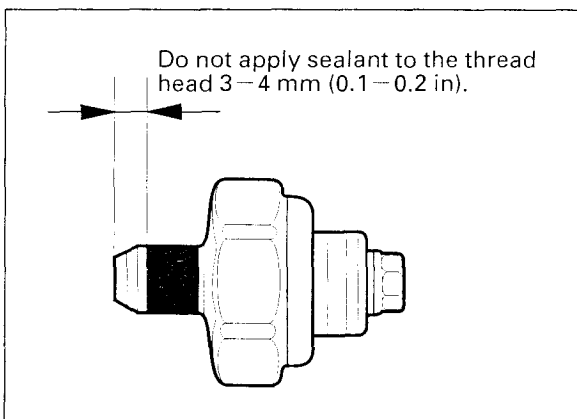


Install the oil pressure switch onto the crankcase, tighten it to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

Connect the oil pressure switch terminal to the switch and tighten the screw to the specified torque.

**TORQUE:** 2 N·m (0.2 kgf·m , 1.4 lbf·ft)

Install the dust cover.

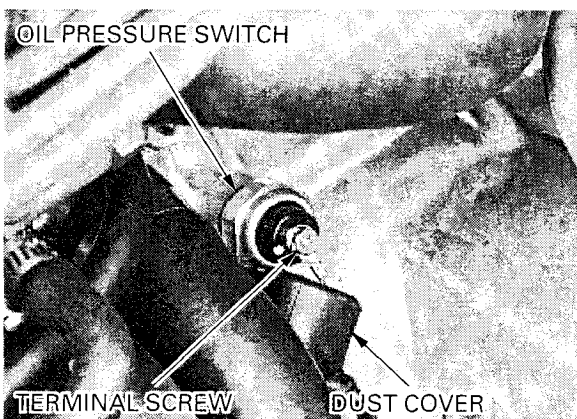

## FUEL RESERVE SENSOR

### INSPECTION

Turn the ignition switch in ON and make sure the fuel reserve indicator comes ON.

If the fuel reserve indicator does not indicate properly, check for the following.



Disconnect the fuel reserve sensor 3P (Black) connector.

Short the wire harness side connector Brown/Black and Green/Black terminals with a jumper wire.

Turn the ignition switch is ON and make sure the fuel reserve indicator comes ON.

If the indicator come ON, replace the fuel pump assembly.

If the indicator still not come ON, check for open or short circuit in wire harness.

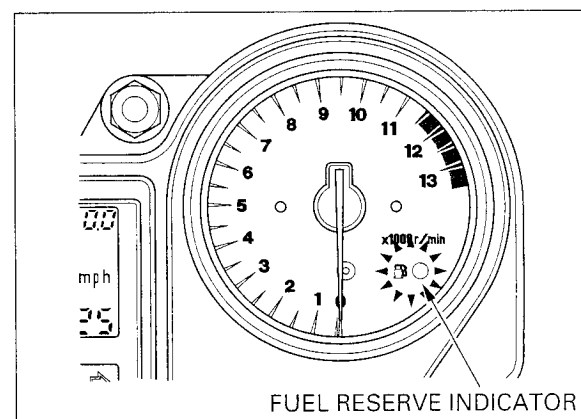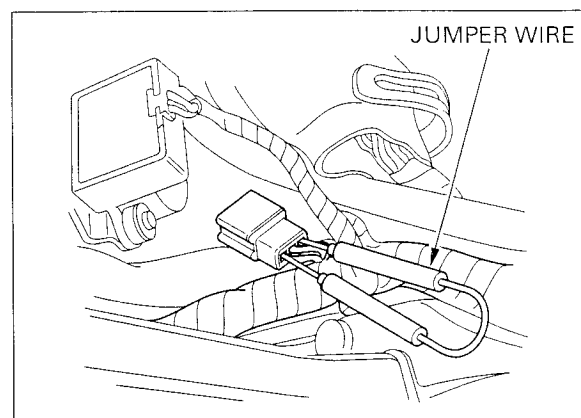

## IGNITION SWITCH

### INSPECTION

Remove the right inner panel (page 2-9).



Disconnect the ignition switch wire 4P (Natural) connectors.

Check for continuity between the wire terminals of the ignition switch connector in each switch position.

Continuity should exist between the color coded wires as follows:

### IGNITION SWITCH

	FAN	IG	BAT1	KEY
ON	○	○	○	KEY ON
OFF				KEY OFF
LOCK				KEY OFF LOCK PIN
COLOR	Bu/O	R/BI	R	—

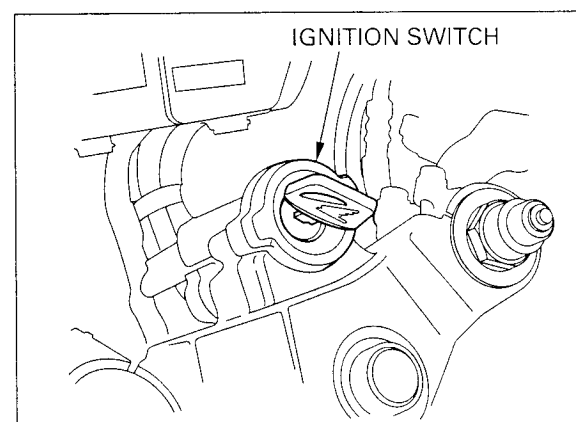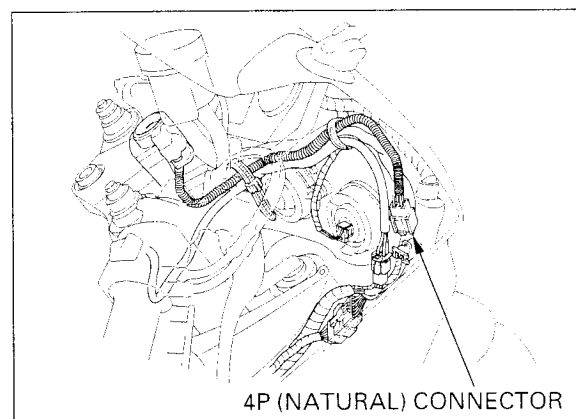


## LIGHTS/METERS/SWITCHES

### REMOVAL/INSTALLATION


Disconnect the ignition switch wire 4P (Natural) connector.  
Remove the wire clamp.

Remove the top bridge (page 13-5).

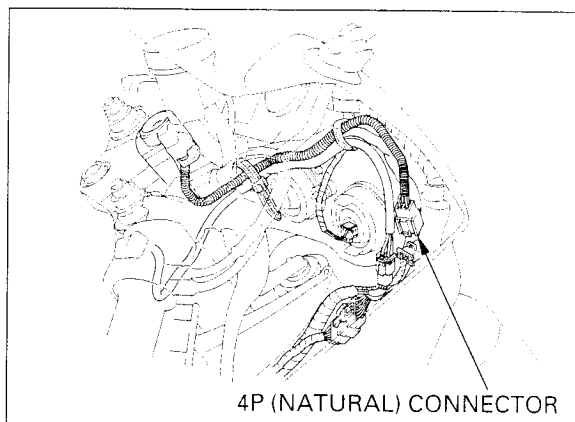

Remove the bolts and ignition switch.

Install the ignition switch in the reverse order of removal.

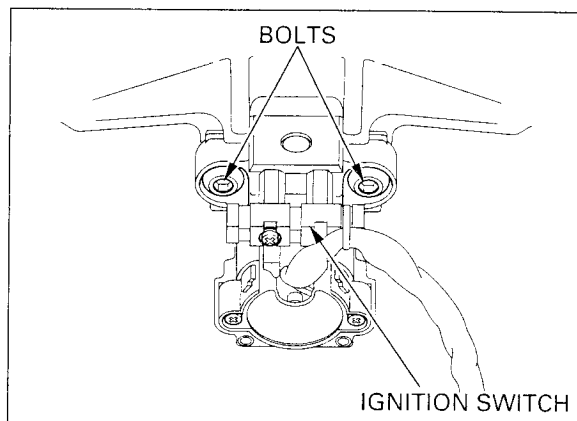

## HANDLEBAR SWITCHES

Disconnect the handlebar switch connectors.


Check for continuity between the wire terminals of the handlebar switch connector.  
Continuity should exist between the color coded wire terminals as follows:

### ENGINE STOP SWITCH

	IG	BAT2
OFF		
RUN	○	○
COLOR	BI	W/BI


### STARTER SWITCH

	ST	IG	BAT3	HL
FREE			○	○
PUSH	○	○		
COLOR	Y/R	BI	BI/Br	Bu/W

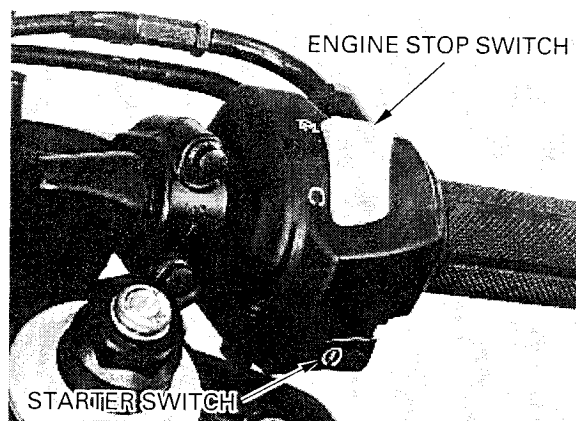

**LIGHTS/METERS/SWITCHES****DIMMER SWITCH**

	HL	Lo	Hi
Lo			
(N)			
Hi	○	—	○
COLOR	W		Bu

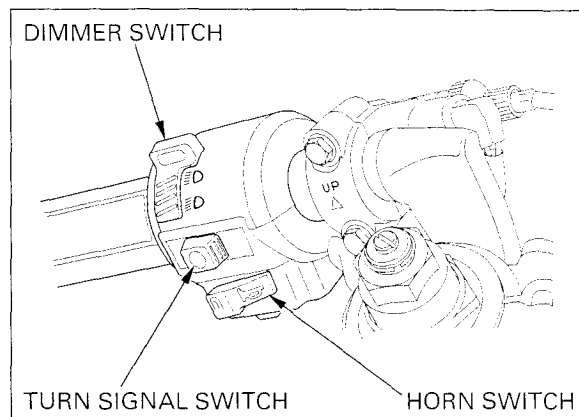**HORN SWITCH**

	Ho	BAT5
FREE		
PUSH	○	○
COLOR	Lg	Bl/Br


**TURN SIGNAL SWITCH**

	W	R	L	BAT5	PR	PL
R	○	○		○		○
N				○	○	○
L	○	○	○	○	○	
COLOR	GR	Lb	O	Bl/Br	Lb/W	O/W

**BRAKE LIGHT SWITCH****FRONT**

Disconnect the front brake light switch connectors and check for continuity between the terminals.


There should be continuity with the brake lever applied, and there should be no continuity with the brake lever is released.

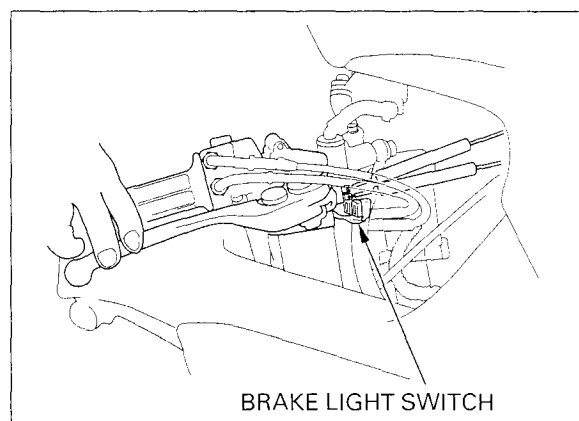**REAR**

Remove the seat (page 2-2).

Disconnect the rear brake light switch connector and check for continuity between the terminals.

There should be continuity with the brake pedal applied, and there should be no continuity with the brake pedal is released.

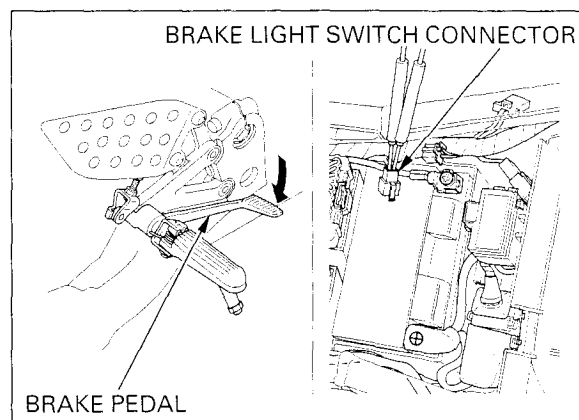


## LIGHTS/METERS/SWITCHES

### CLUTCH SWITCH

Disconnect the clutch switch connectors.

There should be continuity with the clutch lever applied, and there should be no continuity with the clutch lever is released.

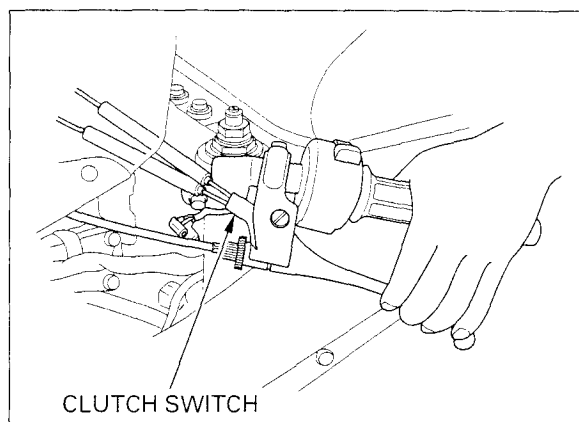


### NEUTRAL SWITCH

Disconnect the neutral switch connector from the switch.

Shift the transmission into neutral and check for continuity between the Light green wire terminal and ground.

There should be continuity with the transmission is in neutral, and no continuity when the transmission is into gear.

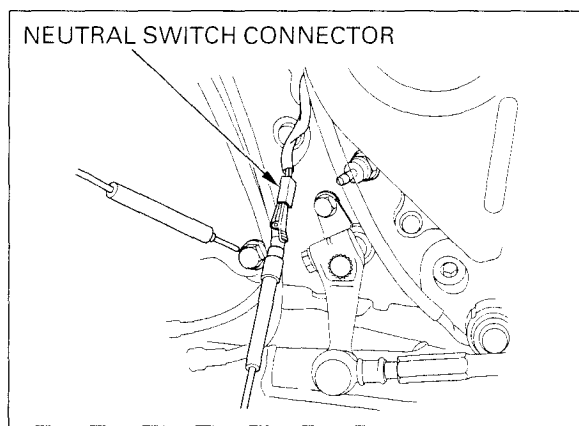


### SIDE STAND SWITCH

#### INSPECTION


Open and support the front end of fuel tank (page 3-4).

Disconnect the side stand switch 3P (Green) connector.

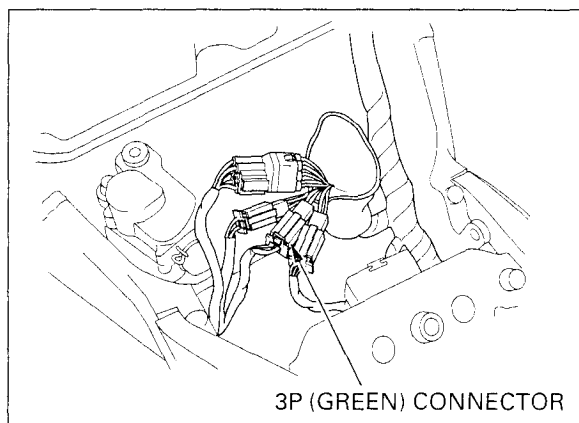

Check for continuity between the wire terminals of the side stand switch connector.

Continuity should exist only when the side stand is UP.

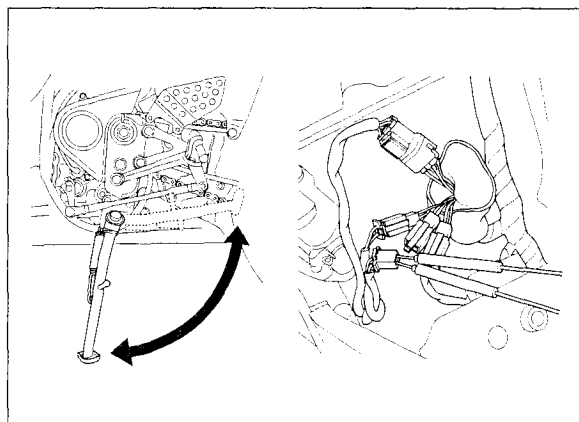




## REMOVAL


Disconnect the side stand switch 3P (Green) connector.

Remove the bolt and side stand switch.

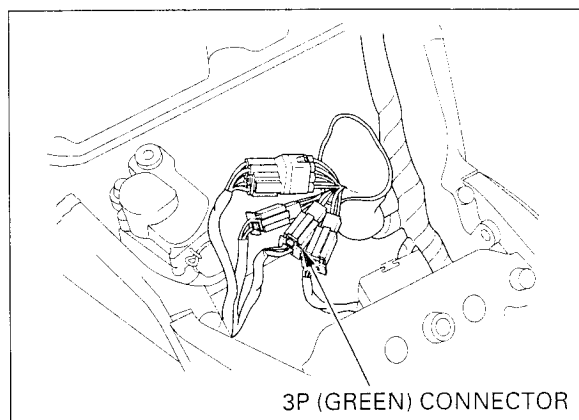


## INSTALLATION

Install the side stand switch by aligning the switch pin with the side stand hole and the switch groove with the return spring holding pin.

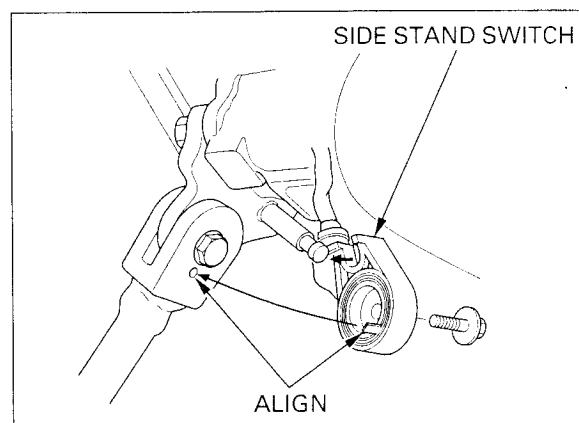


Secure the side stand switch with a new bolt.

**TORQUE:** 10 N·m (1.0 kgf·m , 7 lbf·ft)

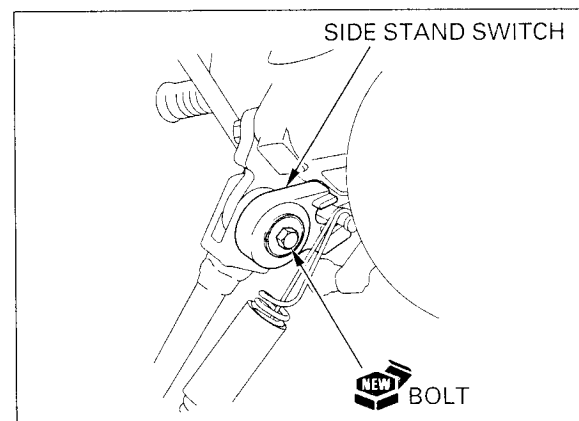

Connect the side stand switch 3P (Green) connector.

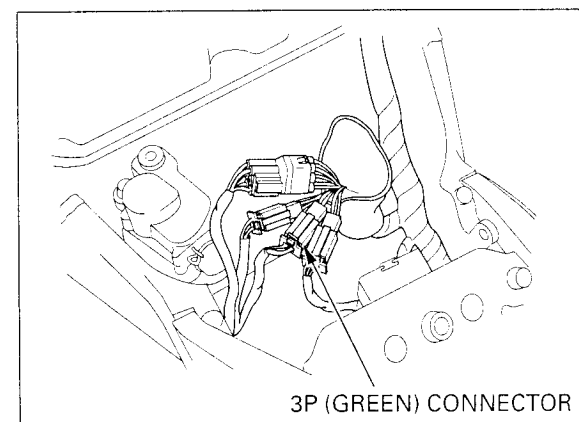


## LIGHTS/METERS/SWITCHES

### HORN

Disconnect the wire connectors from the horn.

Connect the 12 V battery to the horn terminal directly.

The horn is normal if it sounds when the 12 V battery is connected across the horn terminals.

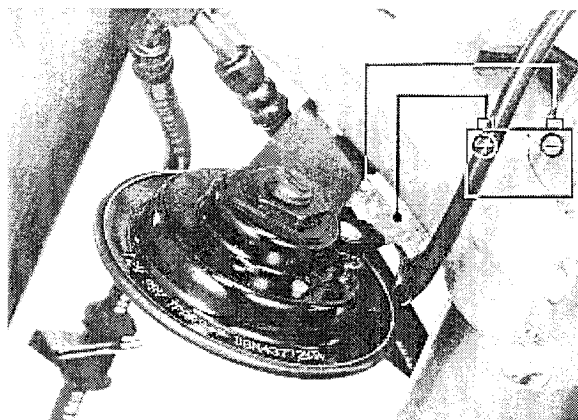

### TURN SIGNAL RELAY

#### INSPECTION


Remove the upper cowl (page 2-9).

Check the following:

- Battery condition
- Burned out bulb or non-specified wattage
- Burned fuse
- Ignition switch and turn signal switch function
- Loose connectors

If the above items are all normal, check the following:

Disconnect the turn signal connectors from the relay.

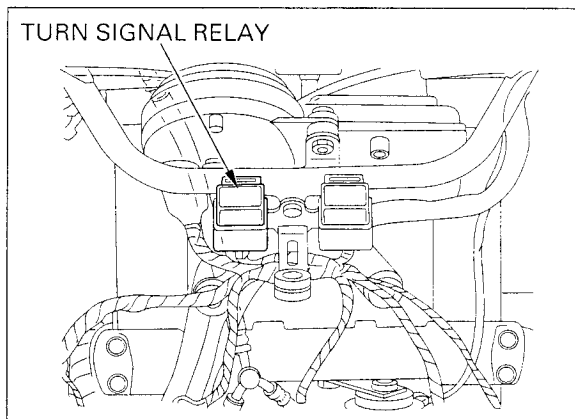

1. Short the black and gray terminals of the turn signal relay connector with a jumper wire. Start the engine and check the turn signal light by turning the switch ON.

Light comes on

Light dose not come on

- Broken wire harness

2. Check for continuity between the green terminal of the relay connector and ground.

Continuity

No continuity

- Faulty turn signal relay.
- Poor connection of the connector.

- Broken ground wire

# 21. TECHNICAL FEATURES

## H-VIX (Honda variable intake exhaust control system)

H-VIX is the new technology to provide high performance in all speed ranges.

This system consists of the variable exhaust control valve, variable intake air control valve and a servo motor.

The servo motor is controlled by the ECM.

Both the variable intake and EGCV (Exhaust Gas Control Valve) are controlled by the same servo motor.

### EGCV CONTROL

Generally, the 180° exhaust collector design is used for high speed setting and the 360° exhaust collector design is used for the low and medium speed settings.

The EGCV has a 180° collector and 360° collector in the same exhaust system.

In the low and middle speed ranges, the exhaust collector is in the 360° position, to produce more engine torque.


In the high speed range, the exhaust collector is in the 180° position to maximize high engine power.

### INTAKE VALVE CONTROL

The intake valve is controlled by the same servo motor used for the EGCV to control intake air volume.

In the low and middle speed ranges, the intake valve is closed and, in combination with the exhaust valve, produces more engine torque.



In the high speed range, the intake valve is opened by the servo motor and maximizes engine power in combination with the exhaust valve.

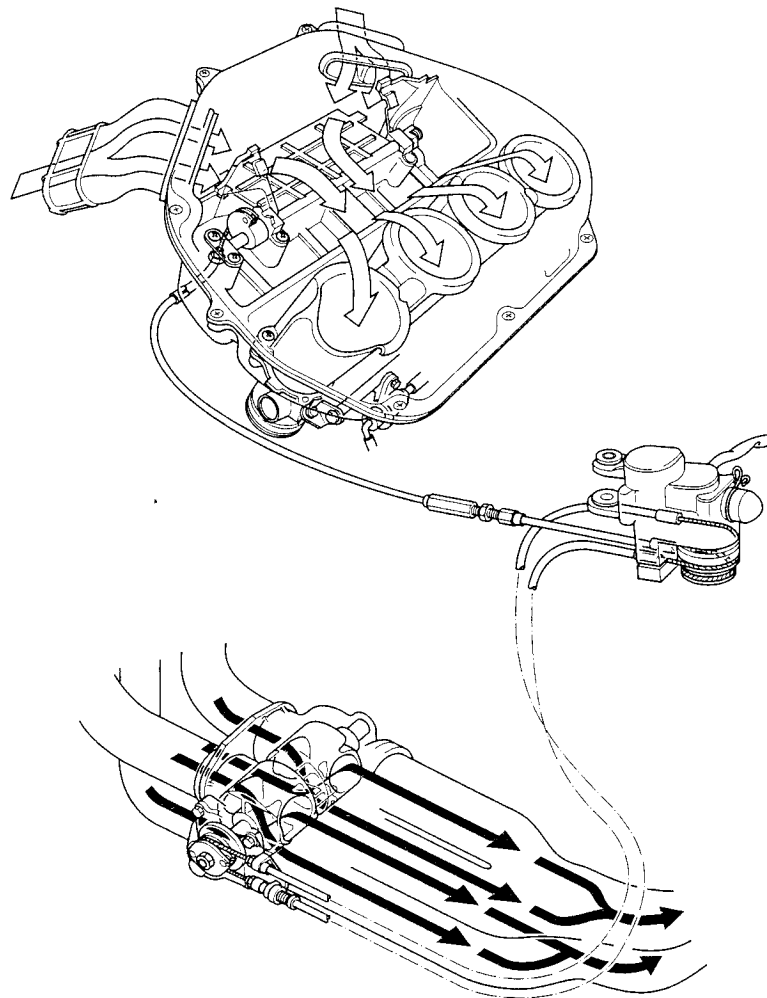

## TECHNICAL FEATURES



When the engine revolutions are below 3,000 rpm, the EGCV pulley is positioned at 90° (facing forward) by the control cables from servo motor.

At this position, the No.1 exhaust pipe gas flows into the No. 2 exhaust pipe, and the No.4 exhaust pipe gas flows into the No.3 exhaust pipe by the EGCV.

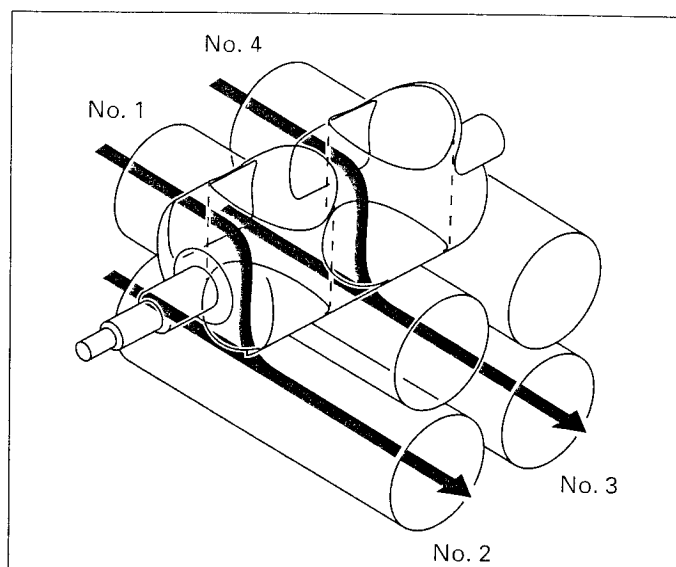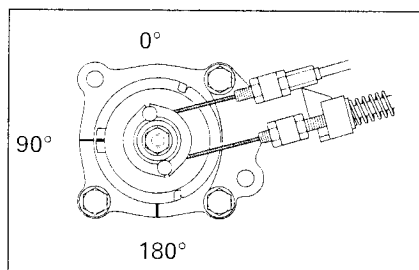



When the engine revolutions increase and pass 8,000 rpm, the EGCV cable pulley is moved to 180° (pulley index line facing down) by the control cables from servo motor.

At this position, the exhaust gases flow directly through the EGCV (360° collector).

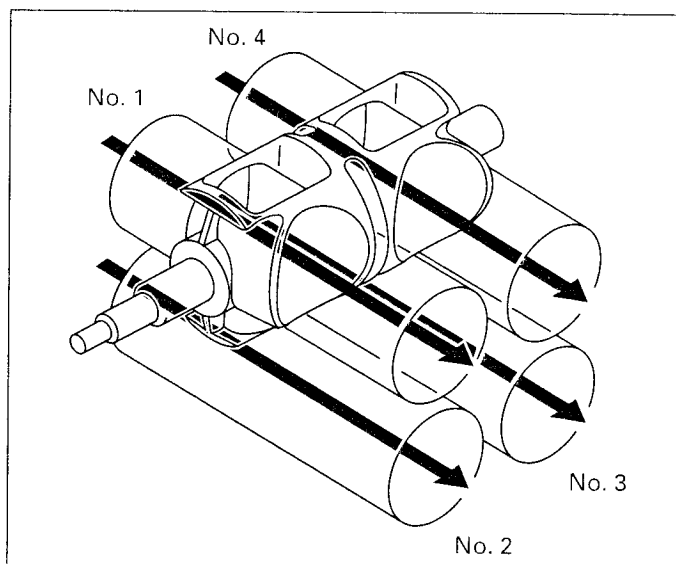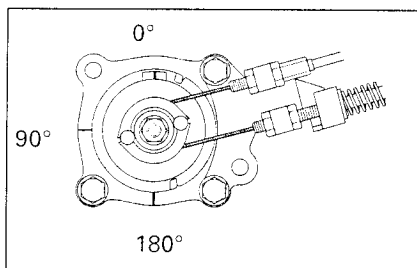


When the engine revolution increase and pass 8,000 rpm, the EGCV cable pulley is moved to 180° (pulley index line facing down) by the control cables from servo motor.


At this position, the No.1 and No.2 and the No.4 and No.3 exhaust pipe gases are crossed by the EGCV (180° collector).

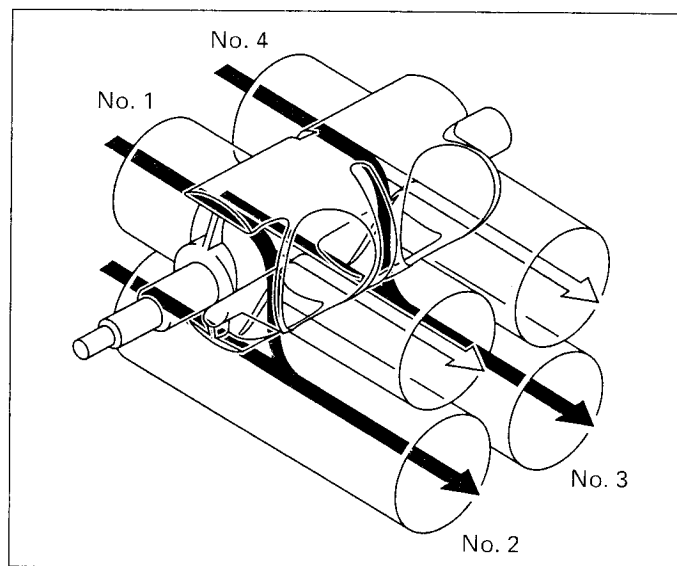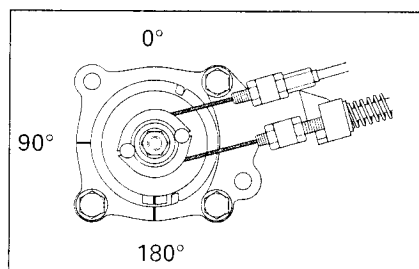


At the same time, the intake flap valve is opened by the control cable from servo motor.

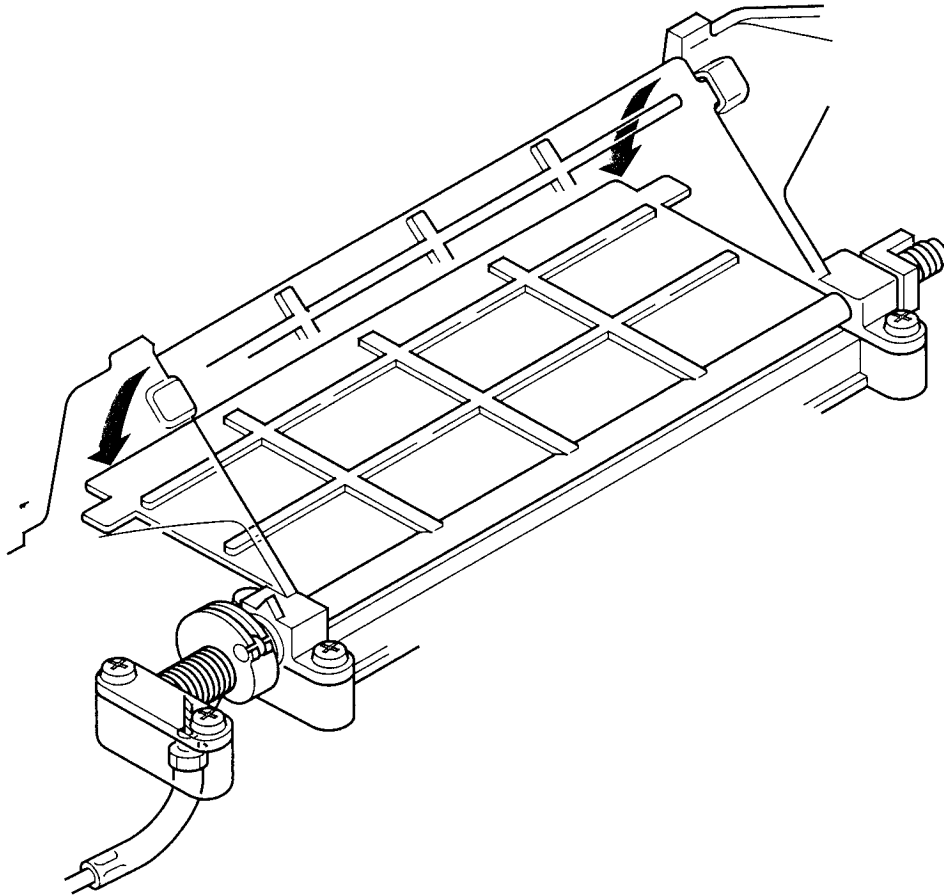

At low and middle speed ranges:

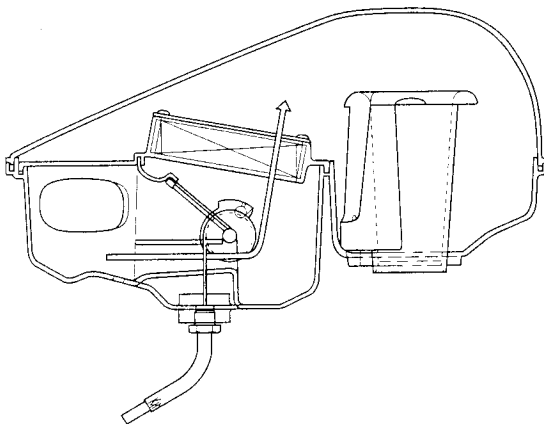

At high speed range:

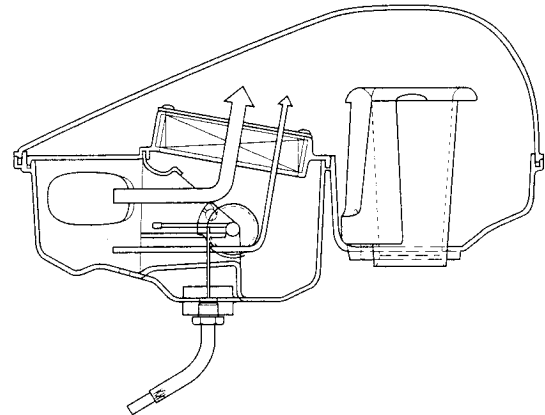






# 22. TROUBLESHOOTING

ENGINE DOES NOT START OR IS HARD TO START	22-1	POOR PERFORMANCE AT HIGH SPEED	22-4
ENGINE LACKS POWER	22-2	POOR HANDLING	22-4
POOR PERFORMANCE AT LOW AND IDLE SPEED	22-3		


## ENGINE DOES NOT START OR IS HARD TO START

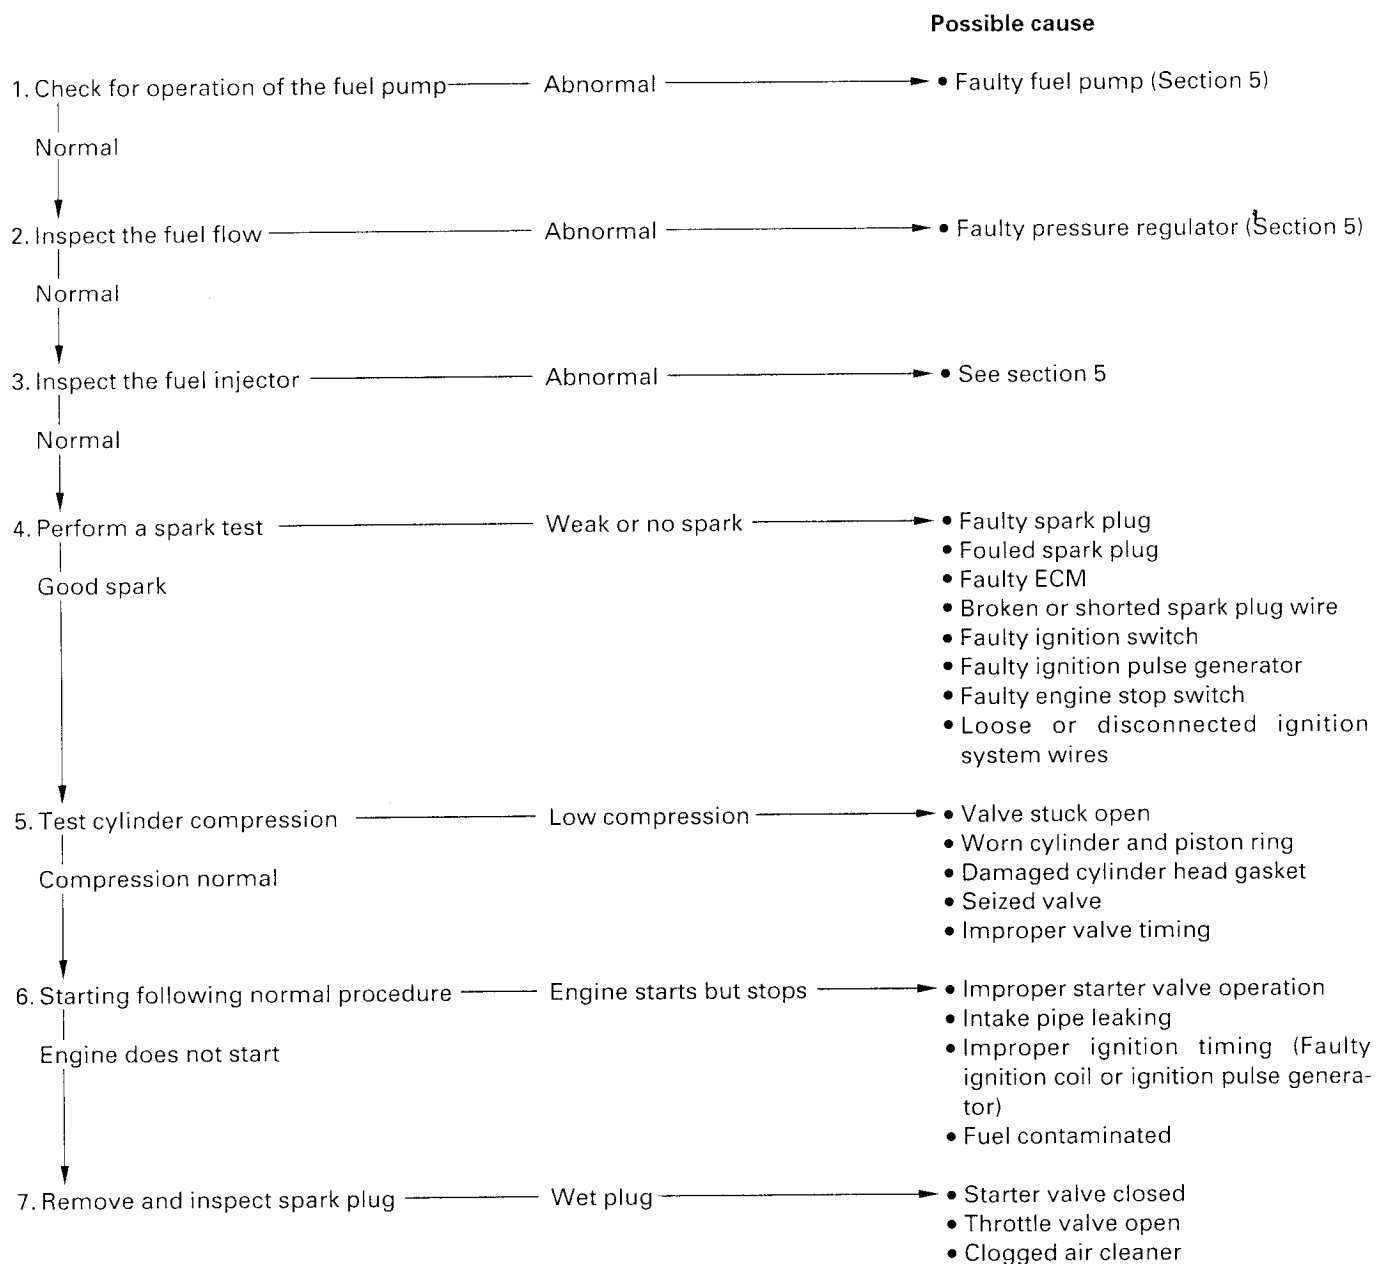

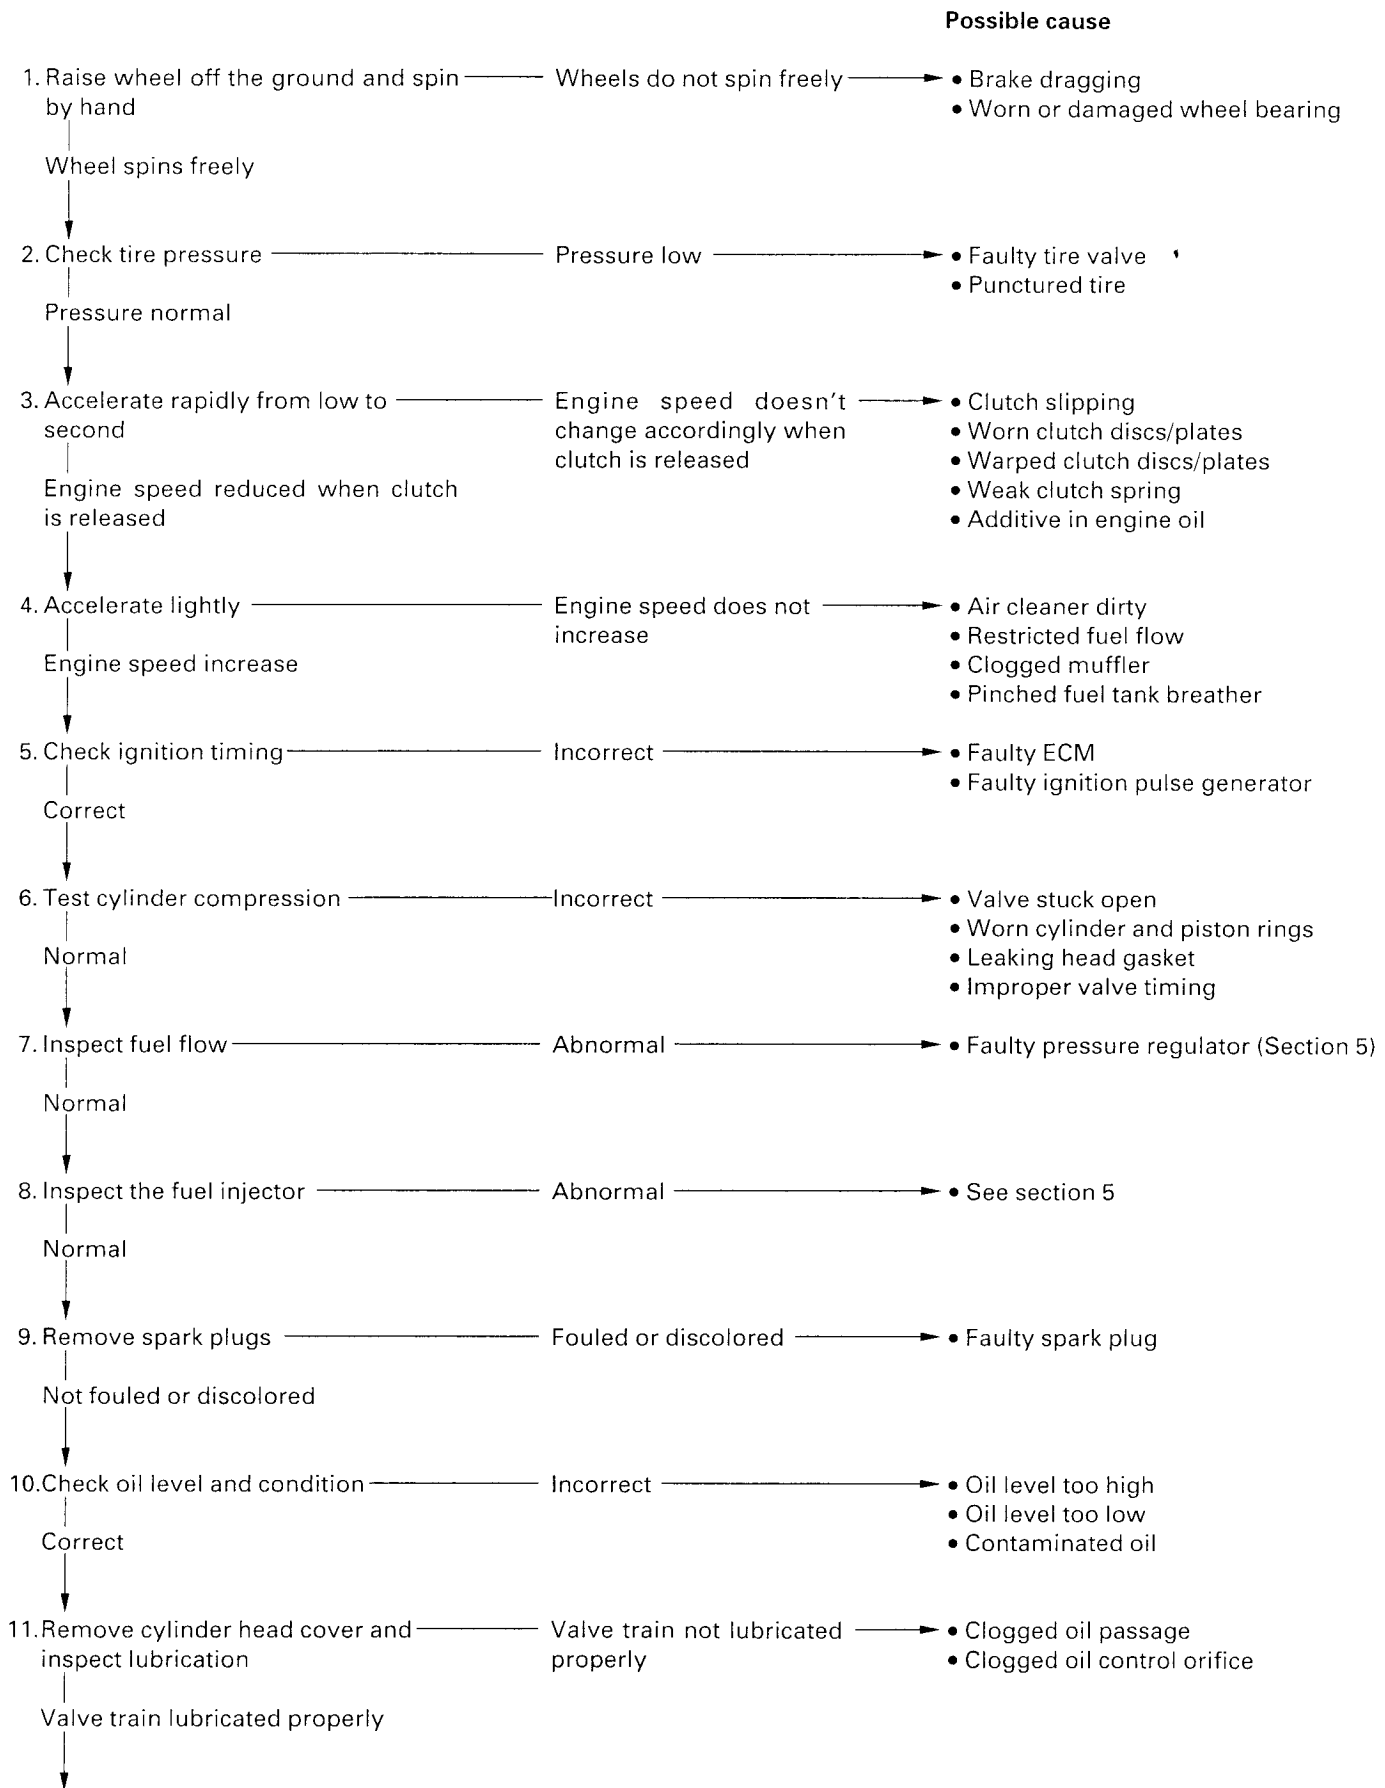**TROUBLESHOOTING****ENGINE LACKS POWER**

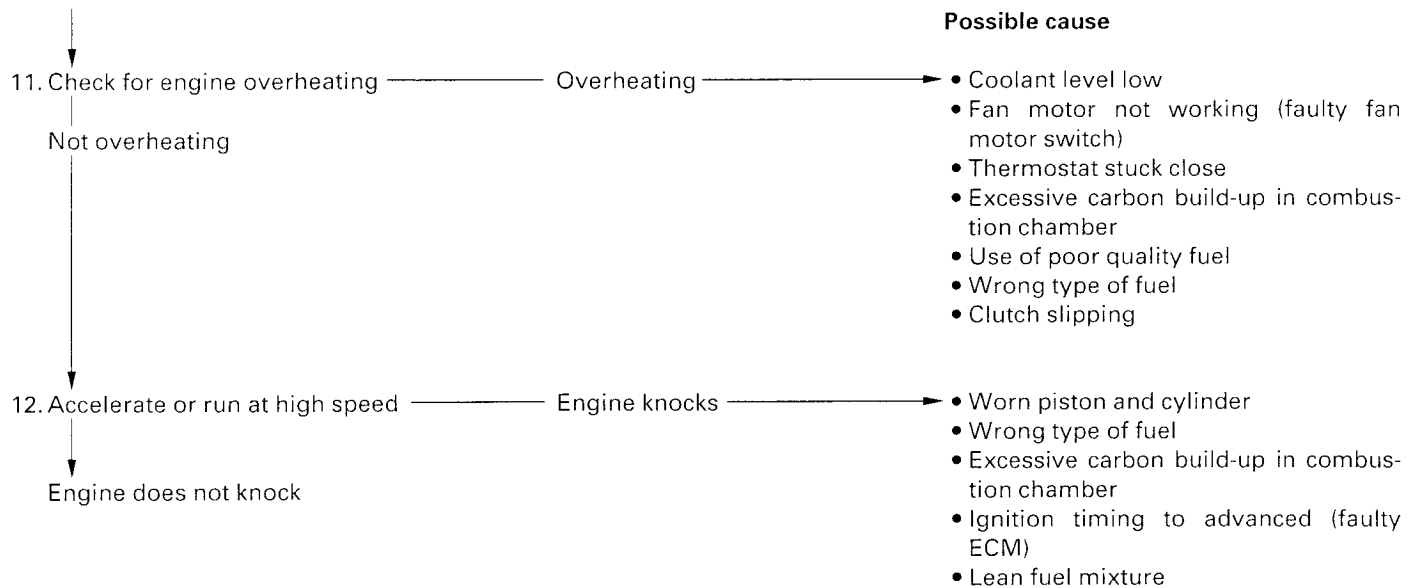


## POOR PERFORMANCE AT LOW AND IDLE SPEED

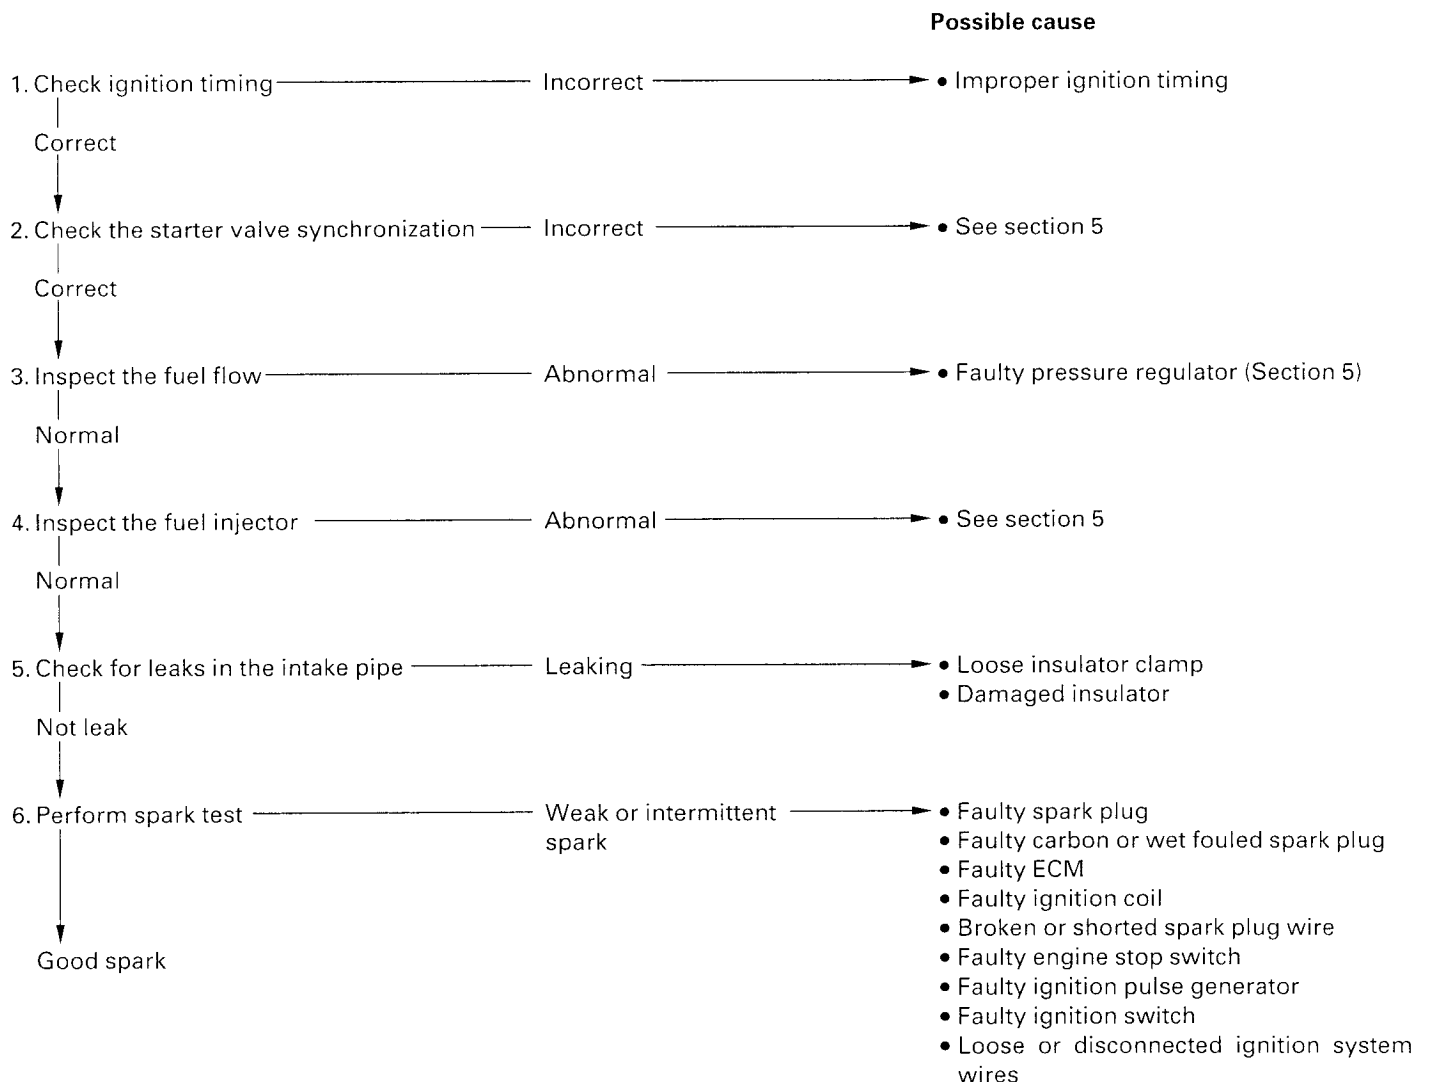

## TROUBLESHOOTING

### POOR PERFORMANCE AT HIGH SPEED

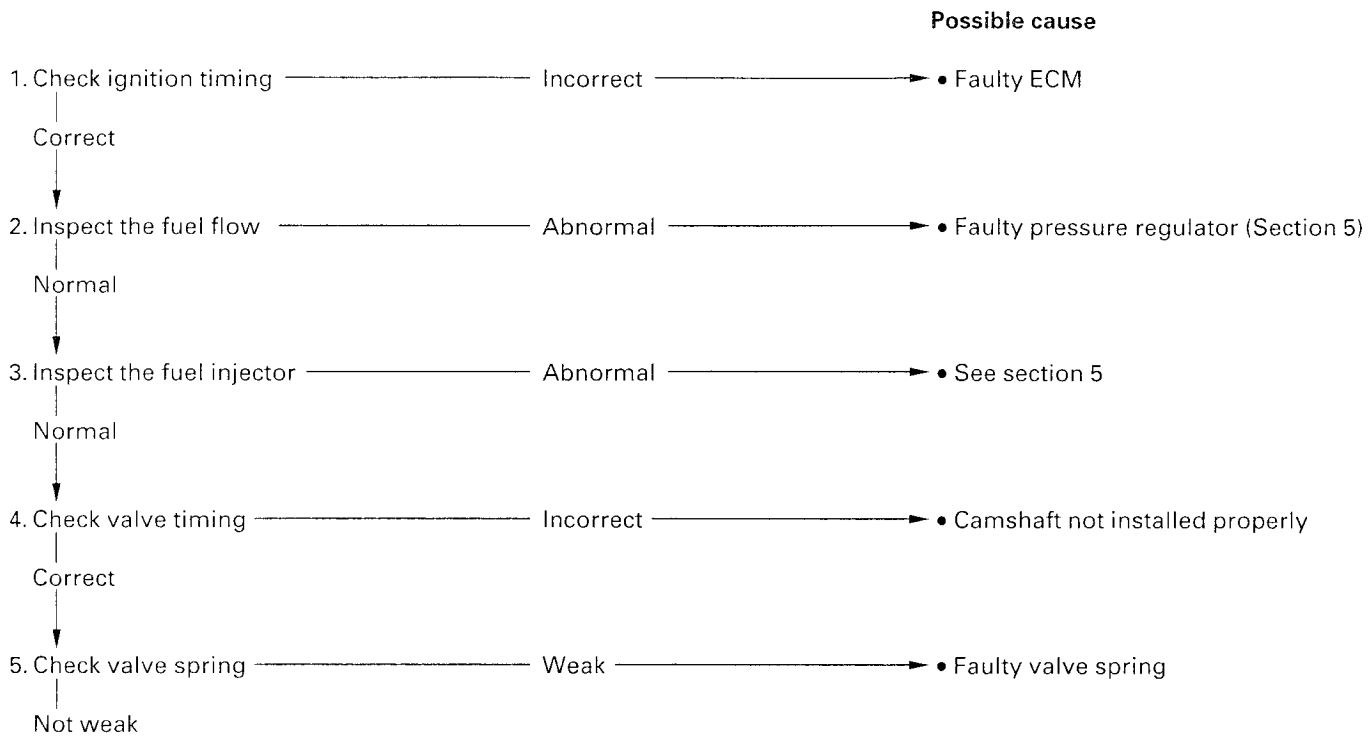

### POOR HANDLING

	Possible cause
1. If steering is heavy	<ul style="list-style-type: none"> <li>• Steering stem adjusting nut too tight</li> <li>• Damaged steering head bearings</li> </ul>
2. If either wheel is wobbling	<ul style="list-style-type: none"> <li>• Excessive wheel bearing play</li> <li>• Bent rim</li> <li>• Improper installed wheel hub</li> <li>• Swingarm pivot bearing excessively worn</li> <li>• Bent frame</li> </ul>
3. If the motorcycle pulled to one side	<ul style="list-style-type: none"> <li>• Faulty shock absorber</li> <li>• Front and rear wheel not aligned</li> <li>• Bent fork</li> <li>• Bent swingarm</li> <li>• Bent axle</li> </ul>